

Warranty

This heating product carries a two (2) year warranty against defects in workmanship and materials.

Care and Maintenance

- Disconnect propane gas tank from appliance before performing any maintenance.
- Store the fire table in a cool dry place away from direct sunlight.
- The propane cylinder must be disconnected and removed from the fire table before the appliance can be stored indoors.
- Make sure both the gas and the fire table are turned off before changing battery. Please refer to the process of installing the battery.
- Use manufacturer approved or supplied replacement parts and accessories only. Otherwise may void the warranty of this product and result in a hazardous condition.
- Keep the fire table free and clear from combustible materials.
- Visually inspect burner from obstructions. Keep fire table free and clear from debris.
- After the burner and lava rocks are completely cooled down, use a soft brush to get rid of the mild stains, loose dirt and soil.
- Cover fire table with PVC cover "G" when not in use.
- Battery Replacement: Use AAA alkaline batteries.

For questions or comments about this product:

Email: customer.service@bondmfg.com or Call toll-free: 1-866-BOND(2663)
between 8:00AM and 5:00PM Pacific Coast time.