 

GRAND RESORT®

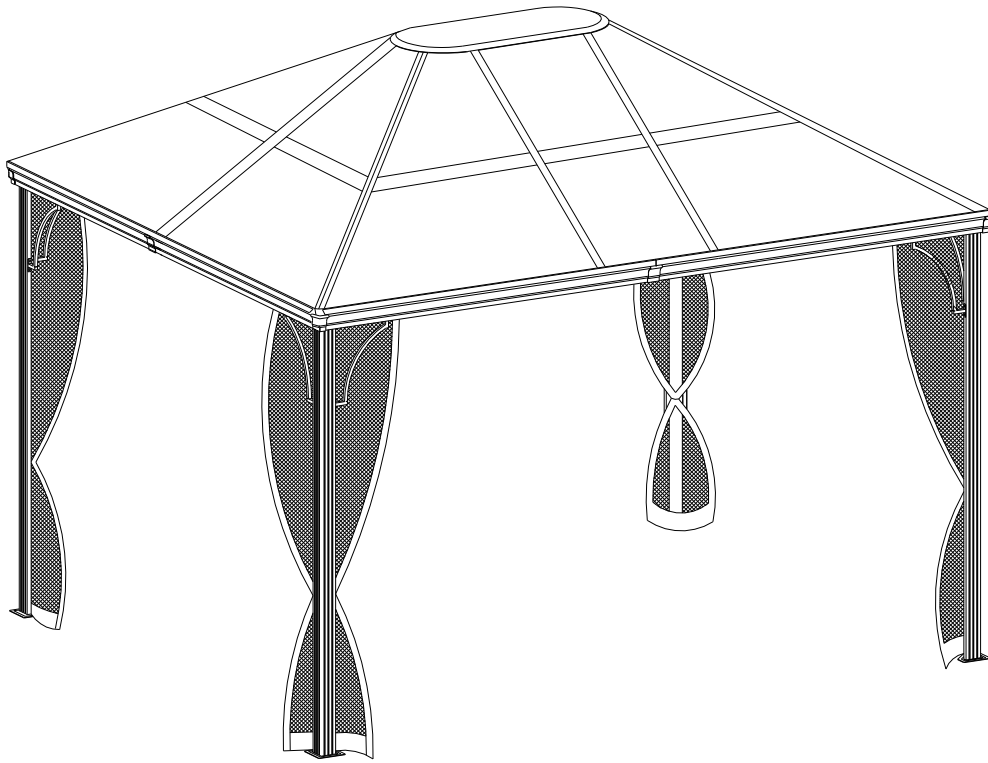

USE AND CARE GUIDE

10' x 12' Hardtop Gazebo with netting

Product Code: D71 M 45844

UPC Code: 841057102930

Date of Purchase: ____/____/____

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor gazebo purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio item. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes your patio gazebo needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents.....	2
Safety Information.....	3
Warranty.....	4
Limited Warranty	4
Exclusions	4
Care and Maintenance.....	4~5
Pre-Assembly.....	5
Planning Assembly.....	5
Hardware Included.....	5
Package Contents.....	6~7
Assembly Instructions.....	7
Customer Service.....	14

Safety Information

WARNING

- ☐ When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
- ☐ Some parts may contain sharp edges, wear protective gloves if necessary. At least three or more people are recommended for safe assembly.
- ☐ Keep all children and pets away from assembly area.
- ☐ Begin assembly not less than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry line or electrical wires.
- ☐ Install on level ground. This gazebo cannot be permanently staked or attached to concrete floor or platform. The provided stakes are for soft ground use only. If assembling on a hard surface like a deck or concrete, other forms of attachment must be used such as expansion bolts that can be purchased locally.
- ☐ This gazebo is intended for decorative and sunshade purposes only and is not meant to withstand inclement weather including high winds, rain and snow. Polycarbonate roof is water resistant, not water proof and may leak during exposure to precipitation.
- ☐ Please lay out all parts before assembling, checking to make sure all parts are there. If any parts are missing, please call 1-866-578-6569 and parts will be expedited to you.
- ☐ KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This Tent meets the flammability requirements of CPAI - 84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.
- ☐ **The roof of unit can withstand up to 600 lbs of snow accumulation. Please sweep the snow in time when the snow depth is more than 10inch.**
- ☐ The PC board has UV protection coating, and the UV resistant is 2500h.

Warranty

5 YEARS WARRANTY FOR FRAME AND FINISH

2 YEARS WARRANTY FOR POLYCARBONATE PANEL

Limited Warranty

The item is warranted to be free from defects in frame & finish for a period of 5 years and Polycarbonate panel for a period of 2 years. However, we don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product. This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item, provided the item is maintained with care and used only for personal, residential purposes.

Exclusions:

It remains the customer's responsibility for freight and packaging charges to and from our service center. Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Care and Maintenance

It is advised that the polycarbonate roof should be removed in the winter for best protection and length of use. Our steel components for garden accessories and furniture are treated with rust inhibiting paint that protects them from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product

to prevent scratching the paint. Should any scratching or damage occur, it is strongly recommended that consumers buy touch up paint prior to the assembly process so that any parts they scratch during assembly are touched up. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if the measure is taken to keep the product from oxidizing. Also the use of wax candle to lubricate the zippers once a year will keep them running smoothly.

 

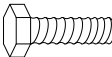 
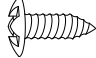 
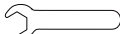 
If this shelter needs repairs, DO NOT RETURNS THE PRODUCT TO SEARS

Pre-Assembly

PLANNING ASSEMBLY





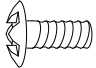



 
 
 
 
 
 
 



To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 150 minutes for four persons to complete all the assembly.

 
 
 
 




 


 
HARDWARE INCLUDED 1

AA	Bolt M6x15	100 PCS	
BB	Flat Washer M6	116 PCS	
CC	Bolt M6x35	16 PCS	
DD	Bolt M5x12	32 PCS	
FF	M6 Wrench	1 PC	

 
Pre-Assembly (continued)

Package contents

Post	A	4	
Stake Slice	B	4	
Long Decorative Groove 1	C1	2	
Long Decorative Groove 2	C2	2	
Short Decorative Groove 1	D1	2	
Short Decorative Groove 2	D2	2	
Corner Beam	E	4	
Middle Beam	F	6	
Decorative Groove Connector	G	4	
Left Slot	H1	4	
Right Slot	H2	4	
Middle Slot	H3	2	
"F" Baffle 1	I1	4	
"F" Baffle 2	I2	4	
"F" Baffle 3	I3	2	
Left Arc Support Bar	J1	4	
Right Arc Support Bar	J2	4	
Corner Support	K	4	

 
Small Roof Cover	L	1	
Roof Connector	M	1	
Hook	N	1	
Post Up Connect Piece	O	4	
Corner Cover	P1	4	
Middle Cover	P2	4	
Upper Closure plate	Q1	4	
Middle Closure plate	Q2	6	
PC Board 1	R1	8	
PC Board 2	R2	8	
PC Board 3	R3	4	
Mosquito Netting	S	1	

Assembly Instructions

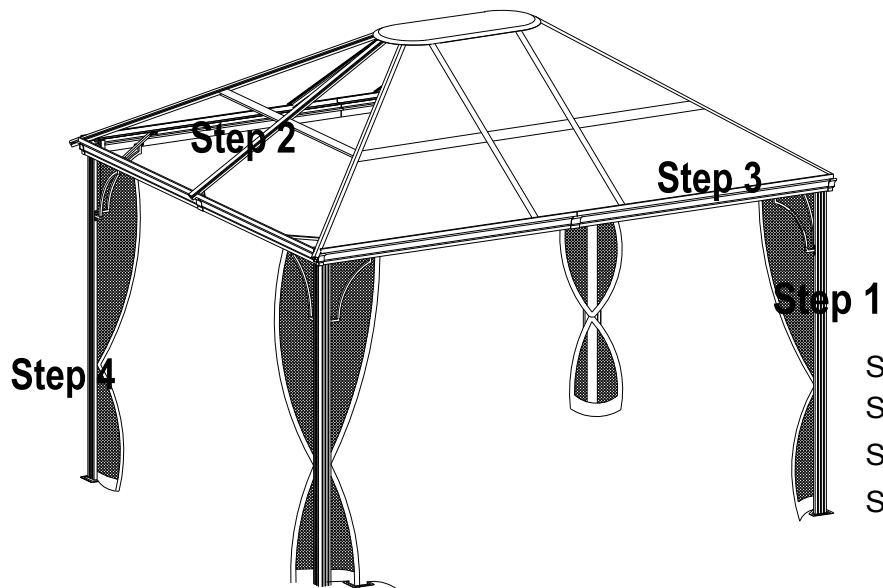

- Step 1 : Assemble the Gazebo Frame
- Step 2 : Assemble the Gazebo Roof
- Step 3 : Assemble the PC Board
- Step 4 : Assemble the netting

Step1:

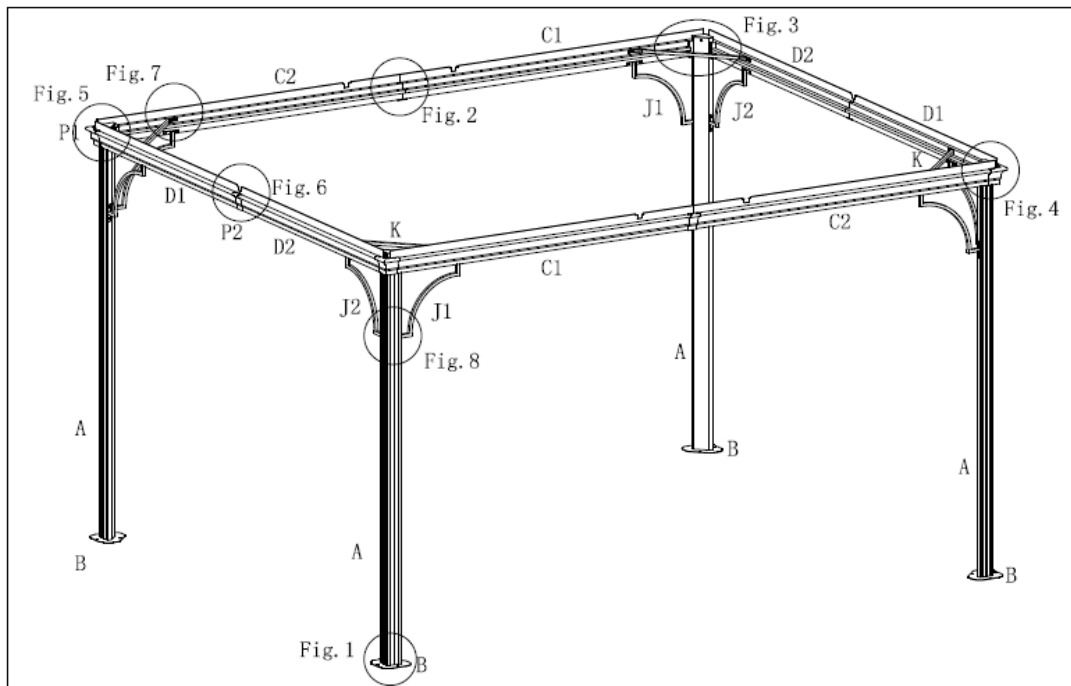

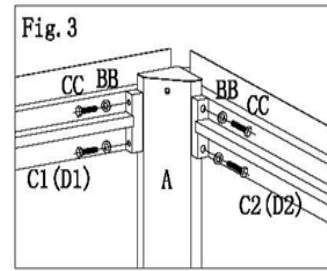 
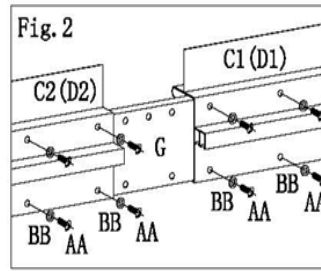 
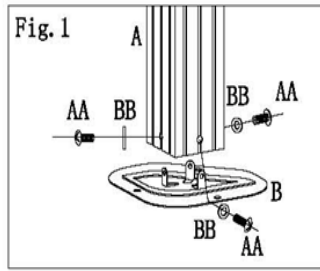 


Fig.1: Attach Stake Slice (B) on Post (A) and fix them tightly by Bolt (AA) and Flat Washer (BB).

Fig.2: Attach Decorative Groove Connector (G) to Decorative Grooves (C1&C2&D1&D2) and fix them tightly by Bolt (AA) and Flat Washer (BB).

Fig.3: Attach Post (A) to Decorative Grooves (C1&C2&D1&D2) and fix them tightly by Bolt (CC) and Flat Washer (BB).

 
 
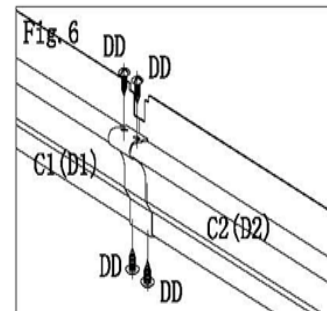 


Fig.4: Attach Decorative Grooves (C1&C2&D1&D2) to Post (A) from the outside and fix them tightly by Bolt (AA) and Flat Washer (BB).

Fig.5: Attach the lower side of corner cover (P1) to decorative grooves (C1, C2 , D1 & D2) using screw (DD)., and fix the up side using screw (DD).

Fig.6: Attach the lower side of corner cover (P2) to decorative grooves (C1, C2, D1 & D2) using screw (DD), and fix the up side using screw (DD).

 
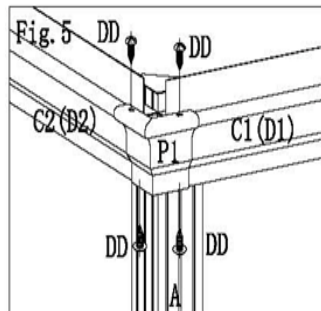 
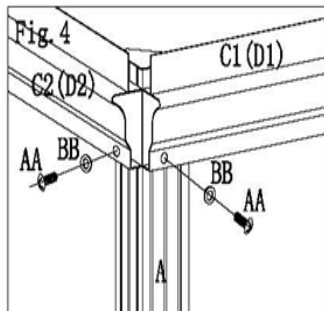 



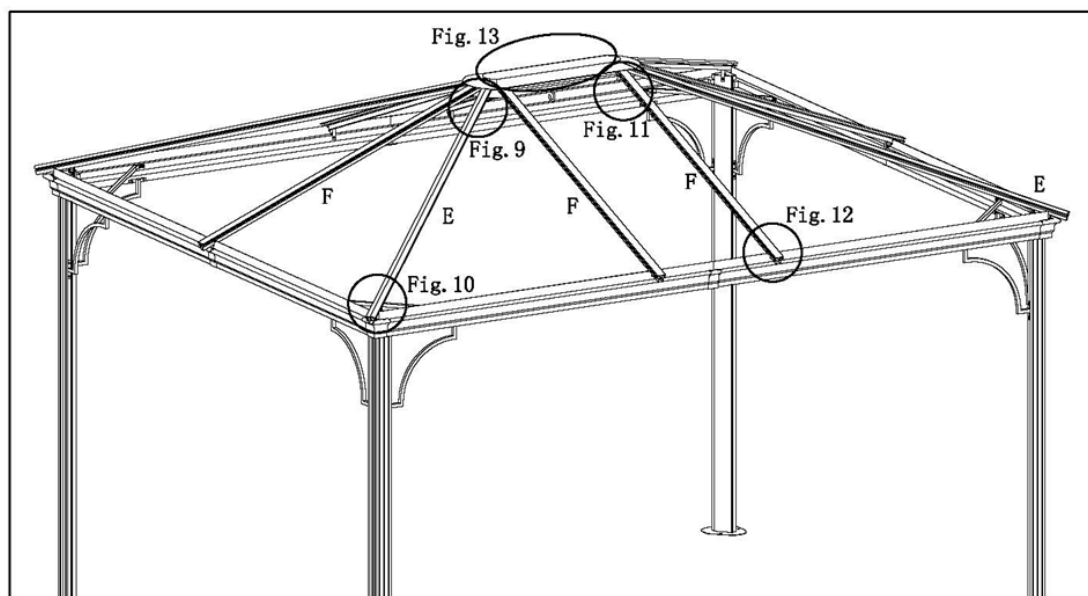 
Fig.7: Use Bolt (AA) and Flat Washer (BB) to lock Corner Support (K) to Short Decorative Groove 1(D2) and Long Decorative Groove 2 (C1).

Fig.8: Use Bolt (AA) and Flat Washer (BB) to lock Left Arc Support Bar (J1) and Right Arc Support Bar (J2) to Long Decorative Groove 1&2 (C1&C2), Short Decorative Groove 1&2 (D1&D2) and Post (A).

HARDWARE INCLUDED 2

AA	Bolt M6x15	22 PCS	
BB	Flat Washer M6	22 PCS	

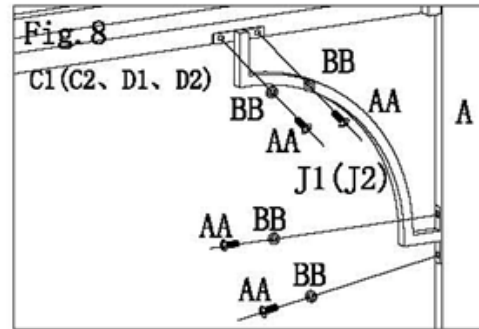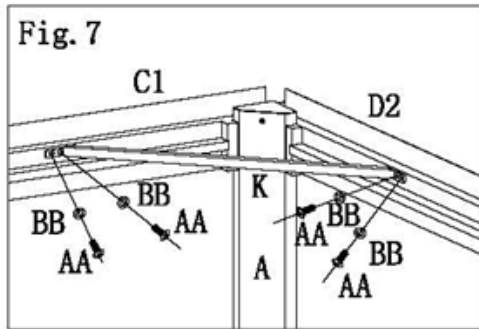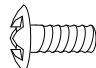Step 2:



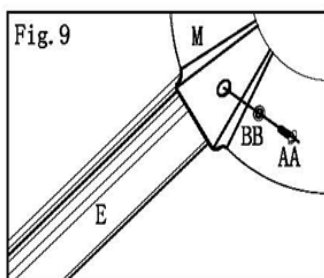 


Fig.9: Use Bolt (AA) and Flat Washer (BB) to lock Corner Beam (E) to Roof Connector (M).

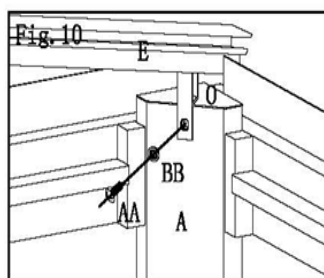 


Fig.10: Firstly to put Post Up Connect Piece (O) on the top of the Post (A), then use Bolt (AA) and Flat Washer (BB) to lock the bottom of Corner Beam (E), Post (A) and Post Up Connect Piece (O) together. Lock them tightly.

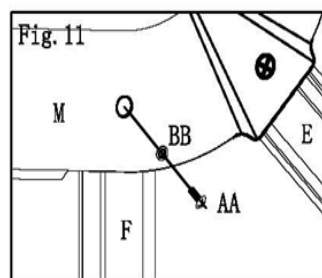 


Fig.11: Use Bolt (AA) and Flat Washer (BB) to lock Middle Beam (F) to Roof Connector (M).

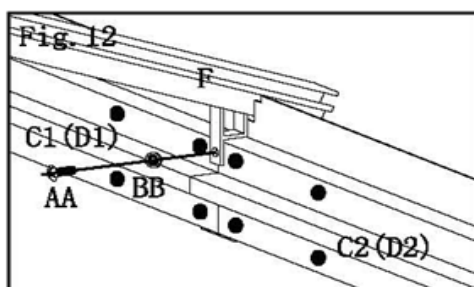 


Fig.12: Use Bolt (AA) and Flat Washer (BB) to lock the bottom of the Middle Beam (F) to the Long Decorative Groove 1&2 (C1&C2) and Short Decorative Groove 1&2 (D1&D2).

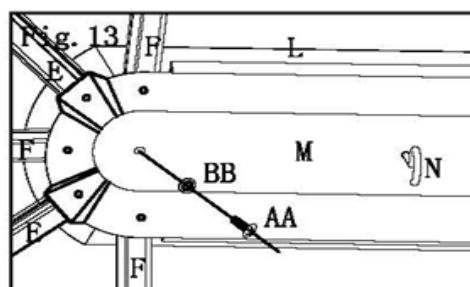 
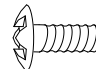 



Fig.13: Put Small Roof Cover (L) on Roof Connector (M) firstly, use Bolt (AA) and Flat Washer (BB) to lock tightly. Then assemble Hook (N) to the Roof Connector (M).

HARDWARE INCLUDED 3

AA	Bolt M6x15	10 PCS	
BB	Flat Washer M6	10 PCS	

Step 3:

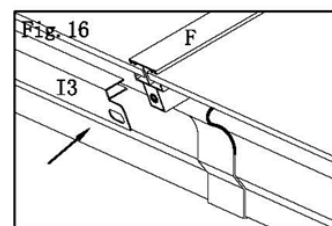 
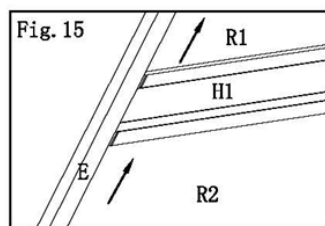 
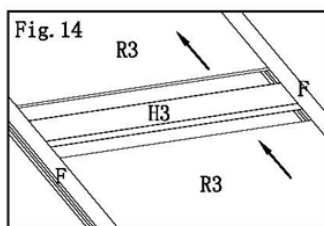 
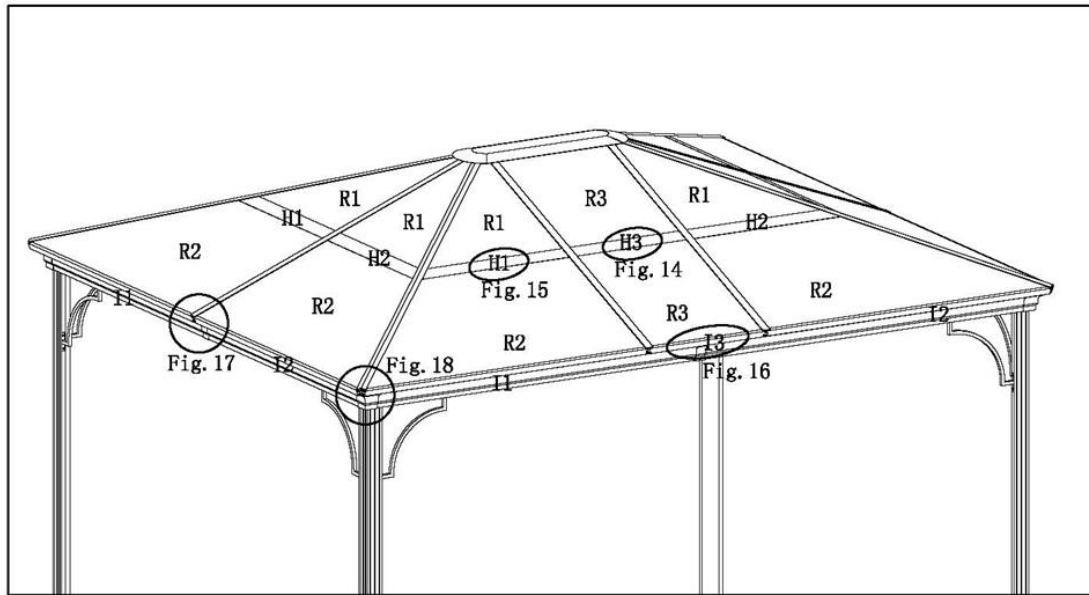 


Fig.14: Insert PC Board 3 (R3) into the Gazebo Top, and then insert Middle Slot (H3) and another PC Board 3 (R3) into the Gazebo Top.

(Note: “on” side is upper side)

Fig.15: Insert PC Board 1 (R1) into the Gazebo Top, and then insert Middle Slot (H1) and another PC Board 2 (R2) into the Gazebo Top.
(Note: “on” side is upper side)

Fig.16: Cover the bottom of PC Boards with “F” Baffle (I3). (Insert “F” Baffle (I1&I2) in the same way, make sense of left and right.)

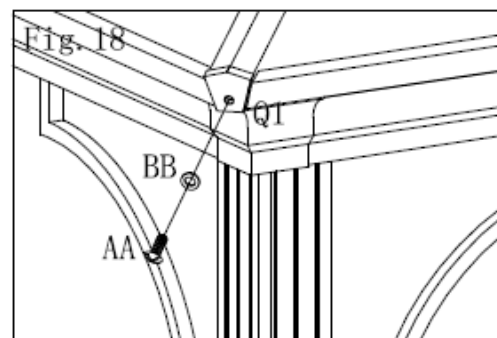 
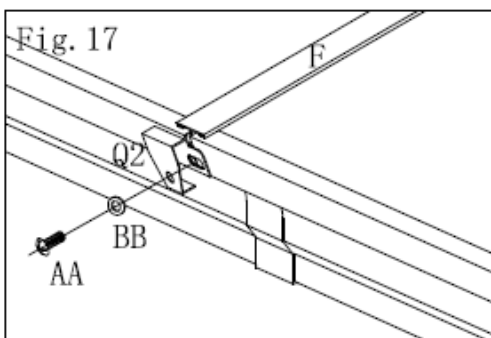 
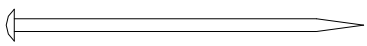 


Fig.17: Insert Middle Closure plate (Q2) into the bottom of Middle Beam (F) by Bolt (AA) and washer (BB)

Fig.18: Insert Corner Closure plate (Q1) into the bottom of Corner Beam (E) by Bolt (AA) and washer (BB)

HARDWARE INCLUDED 4

EE	Φ 8*180mm Stake	12 PCS	
----	-----------------	--------	--

Step 4:

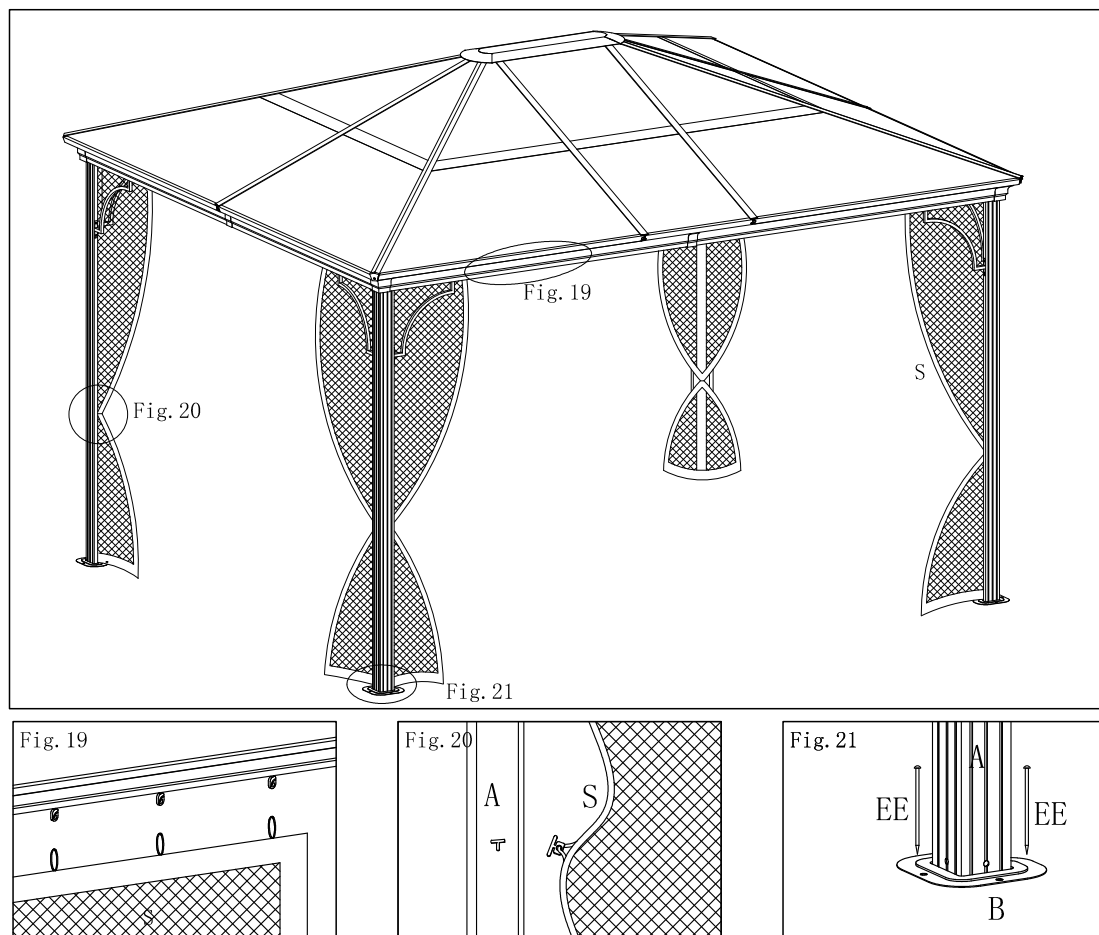 


Fig.19: Use Hook (N) to attach the mosquito netting (S) to the netting tube.

Fig.20: Connect the Hook on the Mosquito Netting (S) to the“ T” shaped hole on the Post.

Fig.21: Fix the Stake Slice (B) on the ground using Stake (EE)

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: sears@sunjoygroup.com or Call toll-free: 1-866-578-6569

Made in / Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com