

35L B/O LED Wreath

WARNING: This is not a toy and is not intended for use by children.

(A) Do not mix old and new batteries.

(B) Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

(C) Do not dispose of the battery in fire as the battery may leak and explode.

(D) Use type “D” batteries.

For Indoor or Outdoor use.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

HOW TO USE:

Step 1: Carefully remove the “Try Me” function button from the battery box and insert the rubber cap into the battery box as shown in Fig. 1.

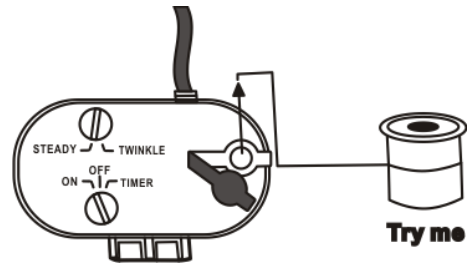


Fig. 1

Step 2: Open the cover of the battery box as shown in Fig.2. Place two new “D” batteries (not included) into the holders according to the “+” and “-” directions.



Fig. 2

Step 3: For manual ON/OFF operation of the lights: Rotate the knob “ON/OFF/TIMER” as shown in Fig.3 to turn on and turn off the lights. There are two lighting patterns for the lights. The 2 lighting options available are Steady and Twinkle – rotate the knob “STEADY/TWINKLE” to choose different functions.

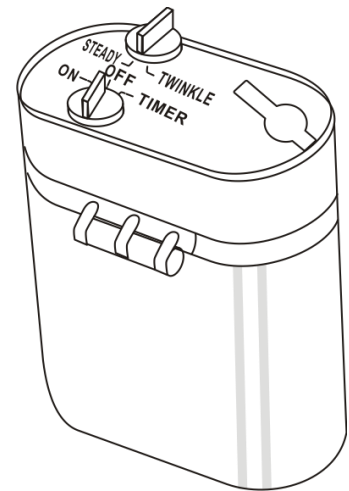


Fig. 3

Step 4: For Timer operation of the lights: Rotate the knob “ON/OFF/TIMER”, then rotate the knob to the place marked “Timer” as shown in Fig.3. The lights will automatically be ON for 6 hours and be OFF for 18 hours. This cycle will occur every day unless the knob “ON/OFF/TIMER” is rotated on “OFF”.

Step 5: Rotate the knob “ON/OFF/TIMER” to the “OFF” function when not in use to conserve battery life.