

REMINGTON®

NOSE, EAR & BROW TRIMMER

NE 3200 & 3700 Series

Use and Care Guide



REFRESH YOUR LOOK

Scan the QR code to check out our weekly man-style tip to keep you looking good! or visit RemingtonProducts.com/ManStyle

Join us for special offers, grooming tips and product news.



@RemReadyMan



[Facebook.com/RemingtonReady](https://www.facebook.com/RemingtonReady)

Register Your New Product Today!

By registering your new Remington® product you will receive these important benefits: Proof of ownership • Product protection • Product registration
• Special offers **Register online at:** www.RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store the appliance in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with damaged or broken cutters, as injury may occur.
- Always remember to turn on the trimmer before you insert it into your nose or ear to avoid painfully snagging hairs.
- Never insert the trimmer more than 1/4" (6mm) into your nose or ear. Foreign objects should not come into contact with your ear drum.

Use & Care

Inserting the Battery

All Remington® Nose and Ear trimmers run on one "AA" ALKALINE battery.

1. To open the battery compartment, turn the base of the unit approximately 1/4 inch counterclockwise and pull it off.
2. Insert the battery into the unit, positive end first.
3. Replace the base and turn it 1/4 inch clockwise to lock it into place.

Battery cautions

- Use of non-alkaline batteries will impair the unit's operating performance.
- Battery should not be left in the unit if the unit is not in use for long periods.
- To prevent battery corrosion, the unit should be stored in a dry environment.
- Dead batteries should be removed immediately and disposed of properly.
- Do not use rechargeable batteries with this appliance. The lower voltage in rechargeable batteries impairs the performance of the cutting unit.

Using the trimmer in the shower

- This appliance allows for use in or out of the shower.
- This appliance can be stored in the shower using the hang loop. It is recommended to dry off excess water and moisture after use.
- The trimmer should not be submerged in water, bath or sink.
- The NE3700 model features a non-slip rubber grip for easier handling in the shower.

Changing the Attachment Heads (if applicable)

Some models have interchangeable attachments. Below is a guide to help select the proper attachment.

NE3200 – Vertical Head

NE3250 – Vertical Head, Rotary Head

NE3700 – Vertical Head, Detail Trimmer

	ROTARY HEAD	VERTICAL HEAD	DETAIL TRIMMER
NOSE	X	X	
EAR	X	X	
EYEBROW		X	
SIDEBURNS		X	X
EDGING		X	X
FACIAL HAIR			X

Using the Eyebrow Comb (if applicable)

Some models include an eyebrow attachment comb that helps you achieve an even cut without completely removing the hair.

1. To use the attachment comb, be sure the unit is in the "off" position.
2. Slide the comb over the trimming blades until it locks into place, making sure the teeth of the comb are facing the same direction as the trimming blade.

Using the Detail Trimmer with Adjustable Comb (if applicable)

NOTE: The 5-length adjustable comb attaches to the detail trimmer head. When first starting, begin with a longer setting then adjust cutting length as desired.

5 Length Adjustable Comb

- 1 – 1 mm (Stubble)
- 2 – 2 mm (Stubble)
- 3 – 3 mm
- 4 – 4 mm
- 5 – 5 mm

1. To attach: Place the adjustable comb on the back of the detail trimmer head aligning the front of the comb with the front of trimmer. Push until the comb locks into place.
2. To remove: Push up on both sides of the adjustable comb.

To change heads:

1. Turn the trimmer off.
2. Detach attachment head by turning it counterclockwise to the unlocked position and pulling it off.
3. Once the previous attachment head is removed, attach the other head by placing it on top of the unit and turning it clockwise to the locked position.

Turning on your trimmer:

The on/off switch is integrated into the battery cap.

1. Rotate the battery cap clockwise to turn on.
2. To turn off, simply rotate the battery cap, counterclockwise, back to the off position.

Cleaning Your Trimmer

Your nose and ear trimmer is designed to give you years of comfortable use. To ensure that you get optimal performance from your trimmer, follow these simple cleaning and lubricating tips:

After each use, brush or blow accumulated hair from the cutting unit. It is recommended to rinse your trimmer after each use to avoid residue build up.

Rinsing Your Trimmer

- Your Remington® trimmer can be rinsed with cool or warm water. While holding trimmer upside down, flush water through washout port. For best results, turn trimmer on while rinsing under water. Shake excess water off trimmer and pat dry with rag.
- If the trimmer needs additional cleaning, the cutting head can be removed by turning it 1/4 inch counterclockwise and pulling it off. Then blow out the accumulated hair or rinse it more thoroughly under running water.
- Afterward, shake excess water from the cutter head, making sure that all parts are held together.
- Replace the head in the same position as it was removed, turning it 1/4 inch clockwise until it locks into place



Lubricating the cutters - Optional

- After rinsing the unit, apply a drop of mineral oil to the cutting teeth.
- Don't apply too much oil, or it may spray.
- Finally, point the trimmer down and away from you, and turn it on. This spreads the oil evenly and expels any excess.

Performance Guarantee

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

Warranty excludes:
■ Cutters

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Performance Guarantee Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington Men's Shave and Groom 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® branded Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington® and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
 2. The following items must be returned to Remington® and postmarked no later than 60 days after purchase of the Remington® branded Men's Shave and Groom product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
 3. In addition, Remington®, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
 4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
 5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
 6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
 7. Please allow 4-6 weeks to receive your refund by check.
- *Applies to US and Canadian customers' returns only.

© Registered Trademark of Spectrum Brands, Inc. (SBI)

Questions or comments: Call 800-736-4648 in U.S. or 800-268-0425 in Canada or visit RemingtonProducts.com

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562
Dist. by: Spectrum Brands Canada, Inc.
131 Saramia Crescent, Vaughan, ON L4K 4P7

© 2014 SBI 1/14 Job #2014-1-6-4

Made in China

T22-0001767