



All products are trademarks of Nostalgia Products LLC.
Worldwide design & utility patented or patents pending.
© 2014 Nostalgia Products LLC.

www.nostalgiaproducts.com

(rev. 12/10/14)



SP660SERIES

Stir-Pop Popcorn Maker
Máquina de Palomitas de Maíz
Éclateur de Maïs

Instructions and Recipes
Instrucciones y Recetas
Instructions et Recettes



Make every day a party!
Visit www.nostalgiaproducts.com for more fun products.

CONTENTS

| | |
|----------------------------------|----|
| IMPORTANT PRECAUTIONS | 3 |
| IMPORTANT SAFEGUARDS | 3 |
| INTRODUCTION | 4 |
| PARTS & ASSEMBLY | 5 |
| HOW TO OPERATE | 6 |
| HELPFUL TIPS | 7 |
| CLEANING & MAINTENANCE | 7 |
| RECIPES | 8 |
| RETURNS & WARRANTY | 10 |

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hz
600 Watts, ETL Approved

THIS PRODUCT IS FOR USE IN 120V AC OUTLET ONLY.

IMPORTANT PRECAUTIONS

1. NEVER immerse in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth to clean the appliance.
4. NEVER use a scouring pad on the appliance.
5. NEVER leave appliance unattended while in use.
6. Unplug unit from outlet when not in use and during cleaning.
7. DO NOT operate this appliance with a damaged cord or plug, or if the appliance ever malfunctions.
8. DO NOT clean any parts of this appliance in a dishwasher.
9. Keep out of reach of children.
10. This appliance is NOT A TOY.
11. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
12. Young children should be supervised while in proximity of the appliance to ensure their safety.
13. DO NOT attempt to repair this appliance yourself.

IMPORTANT SAFEGUARDS



Basic safety precautions should always be followed when using electrical appliances, including the following:

1. **Read all instructions before operating this appliance.**
2. DO NOT touch hot surfaces. Use handles and knobs where provided. Use oven mitts when handling hot surfaces.
3. To protect against electrical shock do not immerse cord, plug or Base in water or other liquids.
4. Unplug from outlet when not in use, before removing parts and before cleaning.
5. DO NOT operate any appliance with a damaged cord or plug, nor if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
6. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
7. Do not attempt to service this appliance yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
9. DO NOT move an appliance containing hot oil or other hot liquids.
10. DO NOT use this appliance on a stove top, under a broiler or in an oven.

11. DO NOT use the appliance for other than its intended use.
12. An appliance that is plugged into an outlet should not be left unattended.
13. Extreme caution must be used when unloading popcorn. Always turn the unit away from you and over a countertop so that residual hot oil or butter running out will not cause burns.
14. Use caution when flipping the unit over, as the base gets extremely hot. It is preferable to wear oven mitts when flipping unit.
15. DO NOT leave appliance plugged in when it is not being used.
16. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
17. Longer detachable power supply cords can be used if care is exercised in their use.
18. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
19. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. **If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.**

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the STIR-POP POPCORN MAKER from Nostalgia™! This unique popper is fun and easy to use. It's a popcorn maker and serving bowl in one! Simply add kernels and flip the switch. In about five minutes, replace the lid, turn unit upside-down and you'll have a bowl full of delicious popcorn. The included measuring spoon allows you to add the perfect amount of kernels for each batch, while the stirrer inside helps prevent popcorn from burning. Add oil, butter or salt to enhance the flavor. Also works great for making kettle corn or roasting nuts.

PARTS & ASSEMBLY

Parts



HOW TO OPERATE

Before first use, clean the Bowl and Lid by removing Lid from Bowl and wiping both with a moist, non-abrasive sponge, towel or cloth. Dry thoroughly with a non-abrasive dry towel.

Remove the Stirring Rod from the Base by turning Center Knob counterclockwise. Wipe the Stirring Rod and Base with a moist, non-abrasive sponge, towel or cloth and then wipe with a non-abrasive dry towel. Replace the Stirring Rod and make sure the rod fits into the notched area around the screw. Secure by turning Center Knob clockwise.

1. First, find a flat surface near an electrical outlet before starting. Make sure your cord is away from any water source. It is acceptable to use an extension cord if needed.
2. Gather your popcorn making supplies: popcorn, seasonings, cooking oil, and measuring spoon for oil.
3. Measure 2 tablespoons of oil and add to the nonstick Base (oil may also be added through ventilation slots while corn kernels are popping).
4. Using the Measuring Cup supplied with your STIR-POP POPCORN MAKER, add up to 6 ounces (3/4 cup) of corn kernels. The Kernel Measuring Cup is 2 ounces, so you may fill the Measuring Cup 3 times and place kernels in the nonstick Base. DO NOT exceed 6 ounces total of popcorn kernels.
5. For every Measuring Cap full of kernels (2 oz.), add 1 tablespoons of oil. For best results, soft-shelled popping corn and vegetable or canola oil is recommended.
6. Always remove Lid while kernels are popping. This will allow steam to vent through the top.
7. Plug in the appliance while switch is flipped to OFF position.
8. Turn appliance ON by flipping the switch on the back of the Base. In no time at all, you will hear the popping begin.
9. Once popping stops, turn unit OFF, then unplug.
10. Secure the Lid to the top of the Bowl.
11. While wearing oven mitts, flip the Bowl over, remove Base and you will have hot, fresh and delicious popcorn ready to serve!

HELPFUL TIPS



NEVER leave the unit unattended while operating.

Smoking

If your STIR-POP POPCORN MAKER begins to smoke during cooking, it may be due to grease build up. In order to reduce smoking, make sure that you clean the nonstick surface of the Base between uses.

Popcorn

For best results, use an all natural soft-shelled popping corn. Organic popping corn is not recommended for use in your STIR-POP POPCORN MAKER as it has a harder husk and will result in more unpopped kernels.

CLEANING & MAINTENANCE

1. Make sure appliance is unplugged and cooled before cleaning.
2. Remove Stirring Rod from Base by unscrewing Center Knob. Wipe with a moist, non-abrasive sponge, towel or cloth and dry.
3. Wash the Bowl and Lid in warm, soapy water with a non-abrasive cloth or sponge. Rinse thoroughly and dry with a non-abrasive towel.
4. Clean the nonstick surface of the Base with a non-abrasive, damp and soapy cloth. Wipe surface until fully clean and then dry with a dry, non-abrasive cloth. NEVER use scouring pad nor abrasive cleaners on the Base, as scratching may occur.
5. Wipe outside of Base with damp cloth and dry.

NOTE: Never place any parts in the dishwasher. Always wash by hand.

RECIPES

The STIR-POP POPCORN MAKER makes hot, fresh popcorn anytime!
Enjoy your freshly popped corn in a variety of ways:

- Add nuts to corn kernels to create a crunchy snack.
- Add sugar, cinnamon and salt to popcorn for a sweet kettle corn taste.
- Flavored popcorn – add seasoning from any gourmet popcorn seasoning kit.
- Try some of these fun recipes:

1 Gallon = 16 Cups

PARMESAN POPCORN

- 1 Gallon of Popped Corn
Pop corn kernels using the STIR-POP POPCORN MAKER as directed on page 6.
- 1 Tsp. Garlic Powder
Combine garlic powder, green onions, cracked pepper, sea salt and parmesan cheese. Set aside.
- 3 Green Onions, finely chopped
In a large mixing bowl, drizzle hot olive oil over popcorn.
- ½ Tsp. Cracked Pepper
Toss until well coated.
- 1 Tsp. Sea Salt
Slowly add in dry ingredients while continuously stirring popcorn until well coated.
- 1 Cup Parmesan Cheese, grated (more or less to taste)
You may also shake the dry ingredients over popcorn in a large paper or muslin bag.
- 3 Tbsp. Olive Oil, heated

TRADITIONAL POPCORN BALLS

- ½ Cup Popcorn, unpopped
Pop corn kernels using the STIR-POP POPCORN MAKER as directed on page 6.
- ½ Cup Corn Syrup
Mix corn syrup, sugar and salt together in pot and dissolve over medium heat for about 3 minutes.
- ½ Cup Granulated Sugar
Add popcorn to pot, stirring and tossing consistently until popcorn is evenly coated at low heat.
- ½ Tsp. Salt
Remove from heat.
- 1 Stick of Butter, softened
Use softened butter to form balls while popcorn mixture is still warm.

Wrap individual balls in plastic wrap, tie and store at room temperature.

CHUNKY MONKEY

- 1 Gallon of Popped Corn
Pop corn kernels using the STIR-POP POPCORN MAKER as directed on page 6.
- 1 (12-oz.) Bag Semi-Sweet Chocolate Chips
Melt chocolate chips and peanut butter morsels over stove, as packaging recommends.
- 1 (12-oz.) Bag Peanut Butter Morsels
Line cookie sheet with wax paper.
Toss together popcorn and banana chips.
- 1 (4.2-oz) Bag Banana Chips, broken into small pieces
Spread popcorn and banana chip mixture evenly over cookie sheet.
- 1 (11-oz.) Bag Peanuts
Drizzle melted chocolate and peanut butter mixture over popcorn and banana chips.
Sprinkle peanuts over chocolate and peanut butter mixture.
Allow to cool.
When chocolate and peanut butter has hardened, break up the Chunky Monkey into pieces.
Can be stored in plastic freezer bags.

POPCORN PEPPERMINT BARK

- 1 Gallon of Popped Corn
Pop corn kernels using the STIR-POP POPCORN MAKER as directed on page 6.
- 1 (12-oz.) Bag Semi-Sweet or Dark Chocolate Chips
Melt chocolate chips over stove, as packaging recommends.
Line cookie sheet with wax paper.
- 1¼ Cup Peppermint Sticks, crushed
Spread popcorn evenly over cookie sheet.
Drizzle melted chocolate over popcorn.
Sprinkle crushed peppermints over chocolate.
Allow to cool.
When chocolate has hardened, break up Popcorn Peppermint Bark into pieces.
Can be stored in plastic freezer bags.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

STIR-POP POPCORN MAKER / SP660SERIES

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgiaproducts.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaproducts.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

Product Warranty Terms

Nostalgia Products LLC (the "Company") hereby warrants that for a period of one (1) year from the date of original purchase, this product will be free of defects in material and workmanship under normal home use, provided that the product is operated and maintained in accordance with the operating instructions. As the sole and exclusive remedy under this warranty, the Company will at its discretion either repair or replace the product found to be defective, or issue a refund on the product during the warranty period. This warranty is only available to the original retail purchaser of the product from the date of initial retail purchase, and is only valid with the original sales receipt, as proof of purchase date is required to obtain warranty benefits. All warranty claims must be brought to the attention of the Company within the warranty period and no later than 30 days of the failure to perform. This warranty does not cover normal wear or damage caused by shipping, mishandling, misuse, accident, alteration, improper replacement parts, or other than ordinary household use. You may be required to return the product (with shipping prepaid by you) for inspection and evaluation. Return shipping costs are not refundable. The Company is not responsible for returns damaged or lost in transit. Unless otherwise specifically permitted by the operating instructions, this warranty applies to indoor household use only. In order to obtain service under this warranty, please contact the Company at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaproducts.com. Warranty valid only in USA and Canada.

This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose, which are hereby excluded to the extent permitted by law. In no event shall the Company be liable for any indirect, incidental, consequential, or special damages arising out of or in connection with this product or the use thereof. Some states, provinces or jurisdictions do not permit the exclusion or limitation of incidental or consequential damages, so the foregoing exclusion or limitation may not apply to you.

This warranty does not apply to re-manufactured merchandise.

Please read the operating instructions carefully. Failure to comply with the operating instructions will void this warranty.

For more information, visit us online at www.nostalgiaproducts.com.

Like us on Facebook at www.facebook.com/NostalgiaElectrics.

Follow our boards on Pinterest at www.pinterest.com/nostalgiaelctrx.

Tweet along with us on Twitter at www.twitter.com/NostalgiaElctrx.