




## **30" ELECTRIC DOUBLE OVEN RANGE**

### **MODELS:**

WGE745C0FE00 (Black Ice)  
WGE745C0FH00 (White Ice)  
WGE745C0FS00 (Stainless)


# COOKTOP PARTS

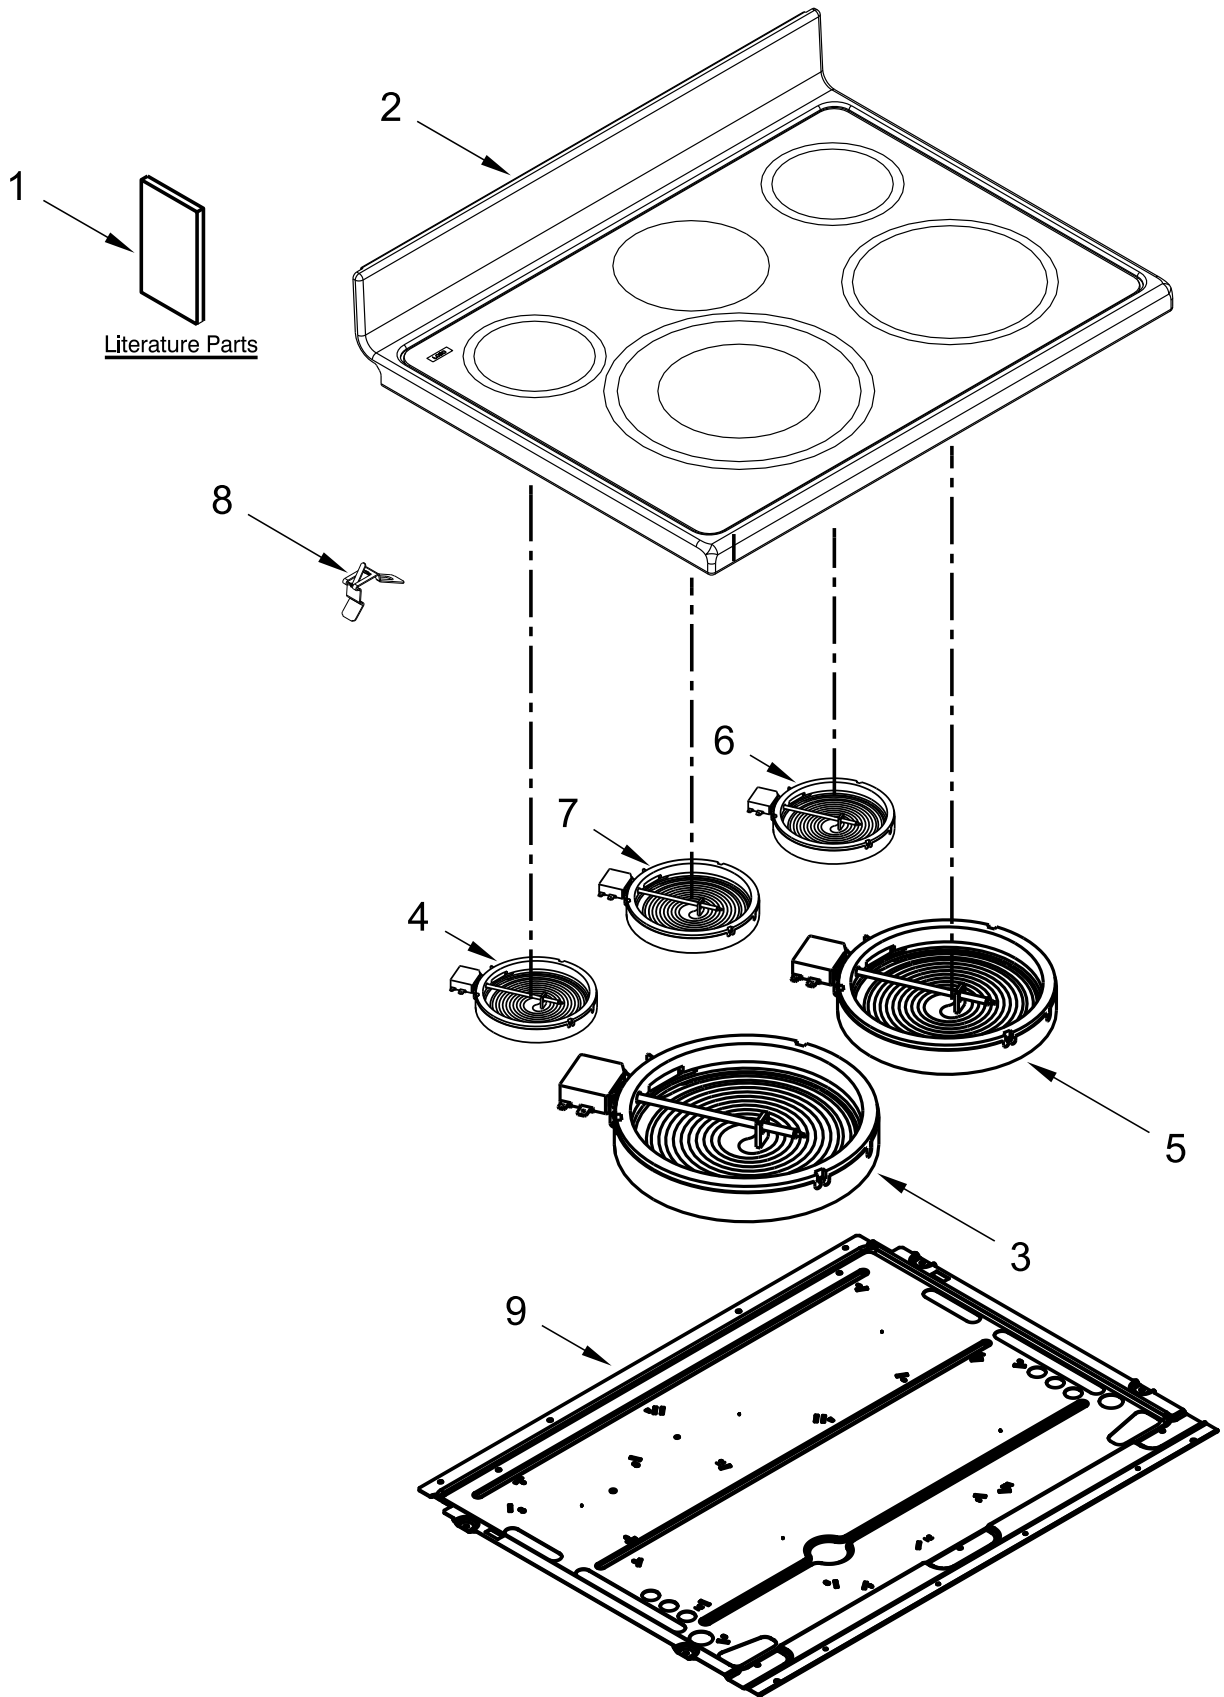

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W10342780	Element (1300W Dual) (Left Rear)	9	W10260946	Support, Element Following Parts Not Illustrated
	W10575959	Instructions, Installation					W10829583	Harness, Main
	W10841341	Guide, Use & Care	5	W10275048	Element (3000W/1400W Dual) (Right Front)		W10829585	Harness, Infinite Switch (Left)
	W10647745	Sheet, Tech	6	8273994	Element (1200W) (Right Rear)		W10406501	Harness, Infinite Switch (Right)
	9762761	Tips, Safe Cooking (English)	7	9762851	Element, Warm Zone (120V) (Center Rear)		W10409840	Harness, EOL (MRC)
	W10065852	Tips, Safe Cooking (French)	8	W10225448	Spring, Element		W10829584	Harness, Cooktop
2		Cooktop					W10745683	Harness, Sensor & Locks
	W10828383	Black					7101P027-60	Screw, Ground
	W10828384	White					8019P013-60	Clip, Wire Lock
3	W10187839	Element (3000W Triple) (Left Front)					7401P157-60	Block, Bare Wire Adapter


# CONTROL PANEL PARTS

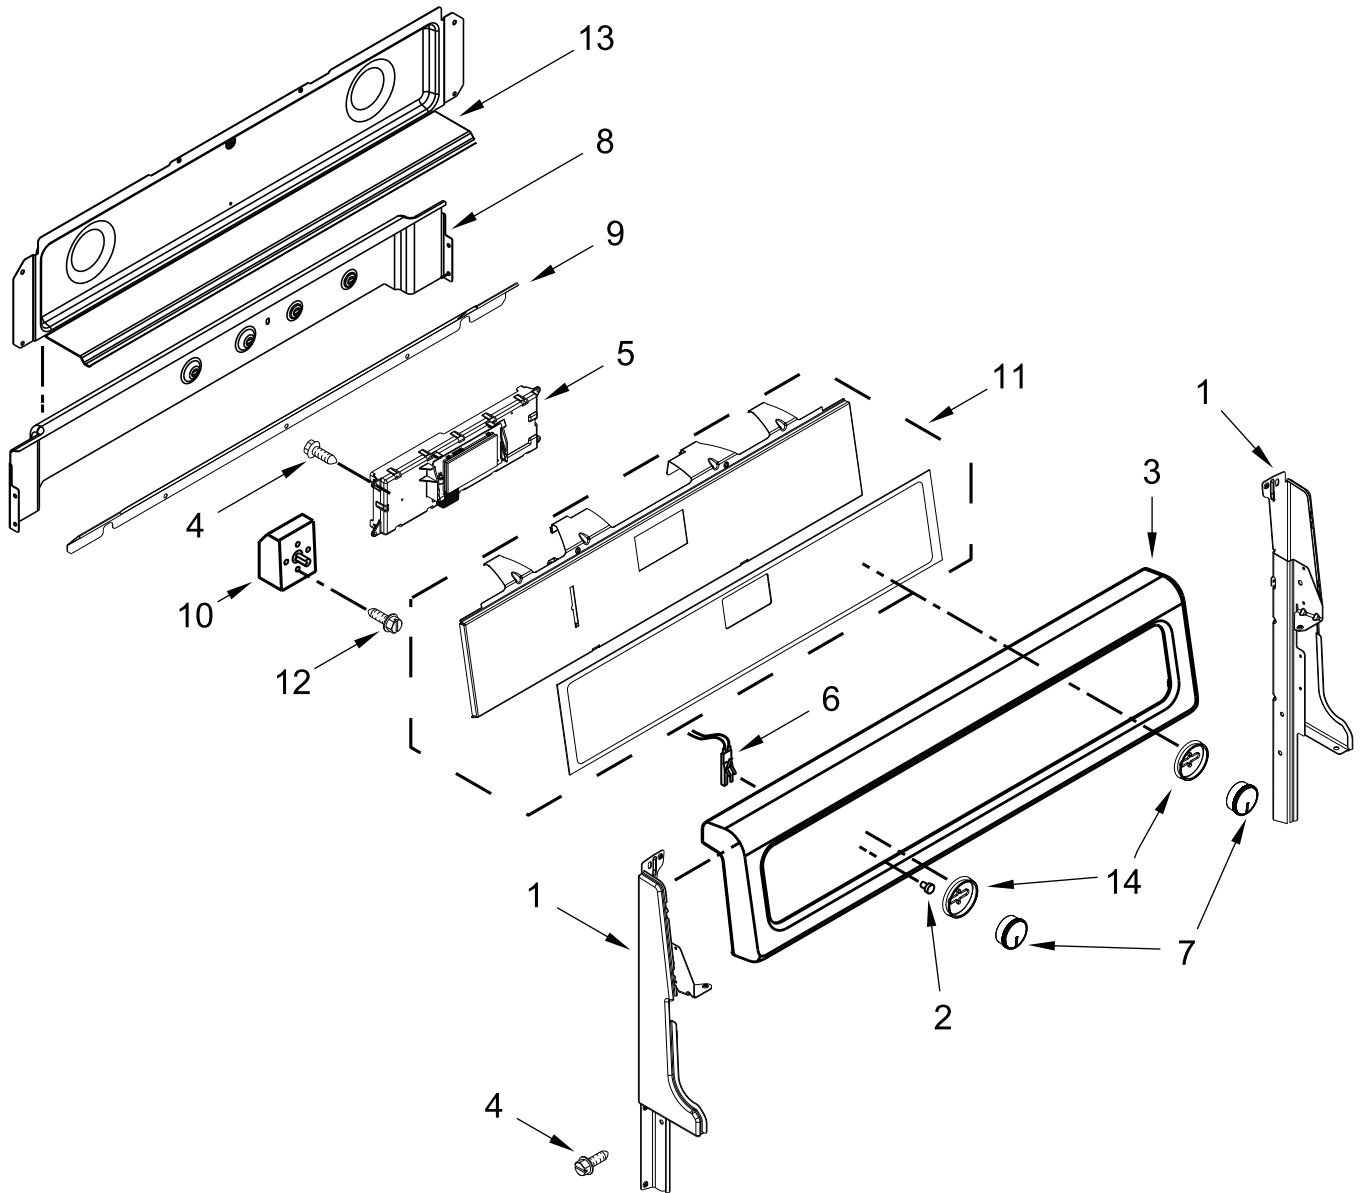

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard	7		Knob	11		Assembly, Membrane (Including Bracket)
	W10319109	Black (Left)		W10850040	Chrome		W10826679	Black
	W10319110	White (Left)	8	W10278697	Shield, Vent		W10826680	White
	W10319111	Black (Right)	9	W10299338	Shield, Wire Cover		W10840439	Stainless
	W10319112	White (Right)	10	W10437097	Switch, Infinite (Left Front)	12	7101P309-60	Screw
2	3196068	Lens, Indicator		W10441696	Switch, Infinite (Right Front)	13	W10776098	Cover, Backguard
3		Console		W10437094	Switch, Infinite (Left Rear)	14	W10850042	Bezel
	W10318551	Black		7403P373-60	Switch, Infinite (Right Rear)			
	W10318552	White						
	W10318550	Stainless						
4	7101P500-60	Screw						
5	W10828145	Control, Electronic						
6	7407P136-60	Light, Indicator						


# CHASSIS PARTS

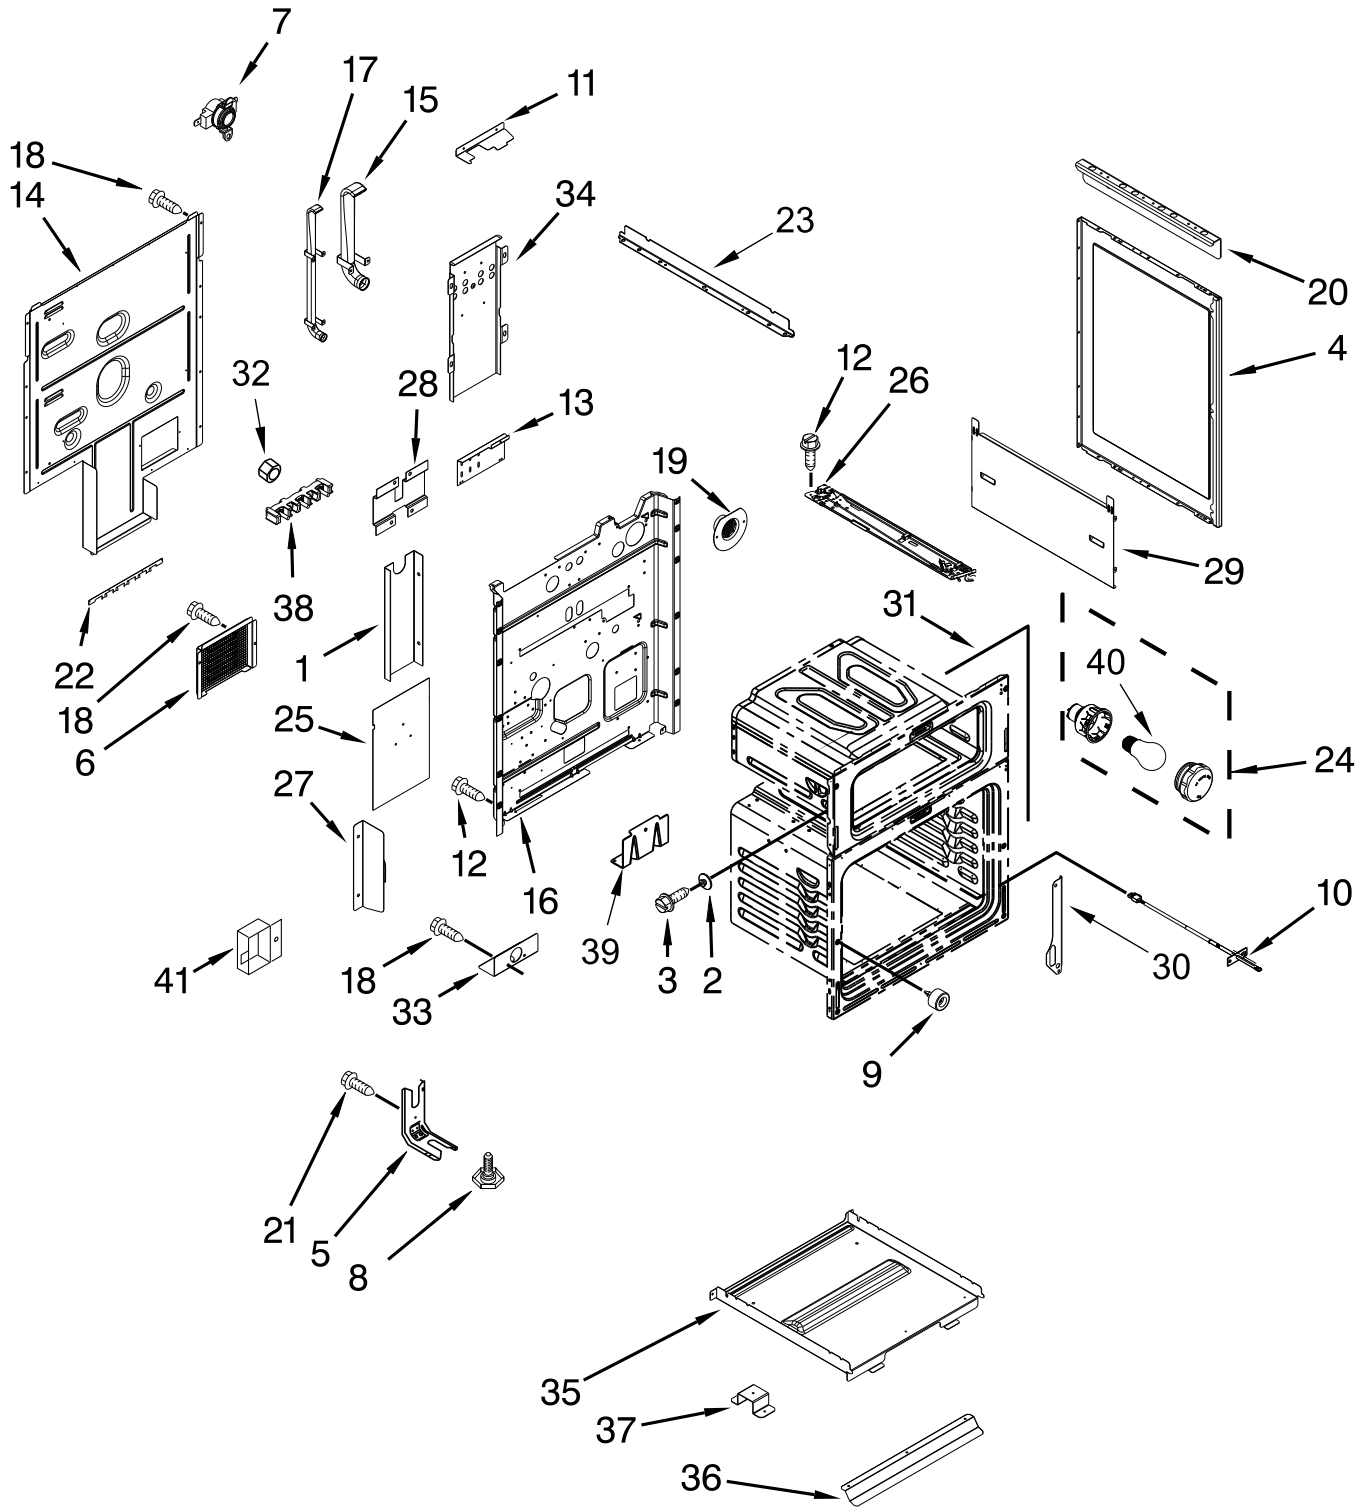

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10332459	Shield, Heat	20	W10319087	Bracket, U Channel	35	W10548601	Pan, Element
2	W10237689	Spacer, Side Panel	21	7101P485-60	Screw, Anti-Tip Kit	36	W10253470	Bracket, Retaining
3	W10267456	Screw, Shoulder	22	8036P012-60	Shield, Power Cord	37	W10260545	Clip, Retaining
4		Panel, Side	23	W10357697	Bracket, Side Panel	38	7401P039-60	Block, Terminal
	W10668723	Black	24	W10454648	Assembly, Light	39	W10260703	Support, Lower Oven
	W10668724	White	25	W10311987	Shield, Cord (Right)	40	311255	Bulb, Oven Light
5	3801F656-51	Bracket, Anti-Tip	26	W10683517	Lock, Rear Mount	41	8285593	Cover, Connector
6	W10312612	Cover, Access (Terminal Block)	27	W10268560	Cover, Wire Lower			INSULATION
7	7403P899-60	Switch, High Limit	28	7003P104-60	Insulator, Heat Shield	W10271637		Insulation, Floor
8	7101P507-60	Foot, Leveler	29	W10538516	Shield, Side Insulation	W10308393		Insulation, Wrapper
9	W10105790	Bumper & Screw	30	W10410463	Cover, Hinge (Left)	W10322111		Insulation, Back
10	7430P044-60	Sensor, Oven		W10410461	Cover, Hinge (Right)	W10204079		Insulation, Middle
11	W10268559	Cover, Lower Wire	31	W10337392	Gasket, Oven Door	W10204085		Insulation, Main Front Strip
12	7101P426-60	Screw			(Upper)	W10272326		Insulation, Hidden Bake Pouch
13	W10332449	Shield, Cord		W10269069	Gasket, Oven Door			
14	W10261386	Cover, Main Wire			(Lower)			
15	W10337391	Tube, Vent (Upper)	32	3400029	Nut			
16	W10668730	Back, Main	33	W10190166	Bracket, Power Supply			
17	W10323793	Tube, Vent (Lower)	34	W10261388	Bracket, Terminal			
18	7101P338-60	Screw						
19	W10322408	Adapter, Vent Tube						


# INTERNAL OVEN PARTS

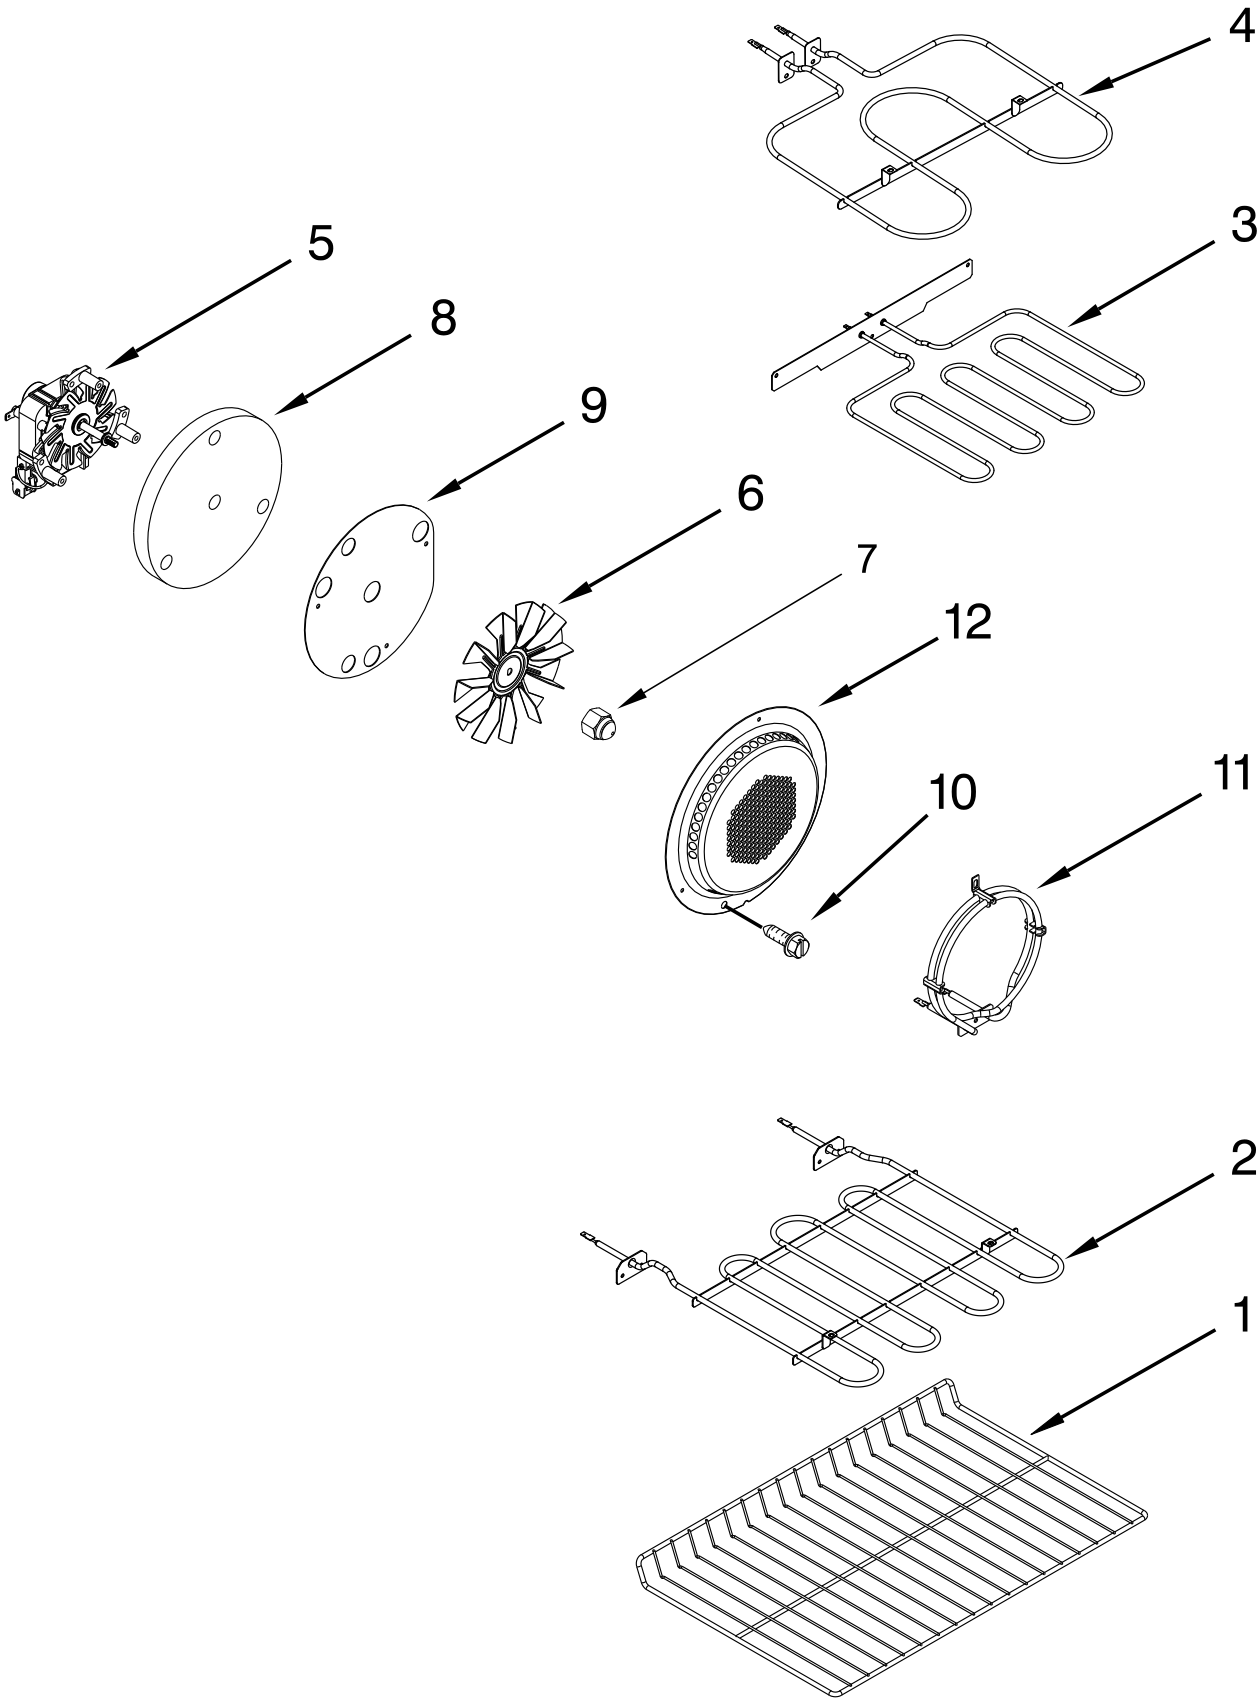

# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10179152	Rack, Oven	5	W10631505	Fan, Convection	11	W10271639	Element, Convection (240VAC)
2	W10611615	Element, Broil (Lower)	6	W10631503	Blade, Fan	12	4448988	Cover, Fan
3	W10249981	Element, Bake (Upper & Lower)	7	W10631504	Nut, Acorn			
4	W10249977	Element, Broil (Upper)	8	W10274268	Insulation, Convection Motor			
			9	W10339476	Plate, Insulation			
			10	4449154	Screw			


# UPPER DOOR PARTS

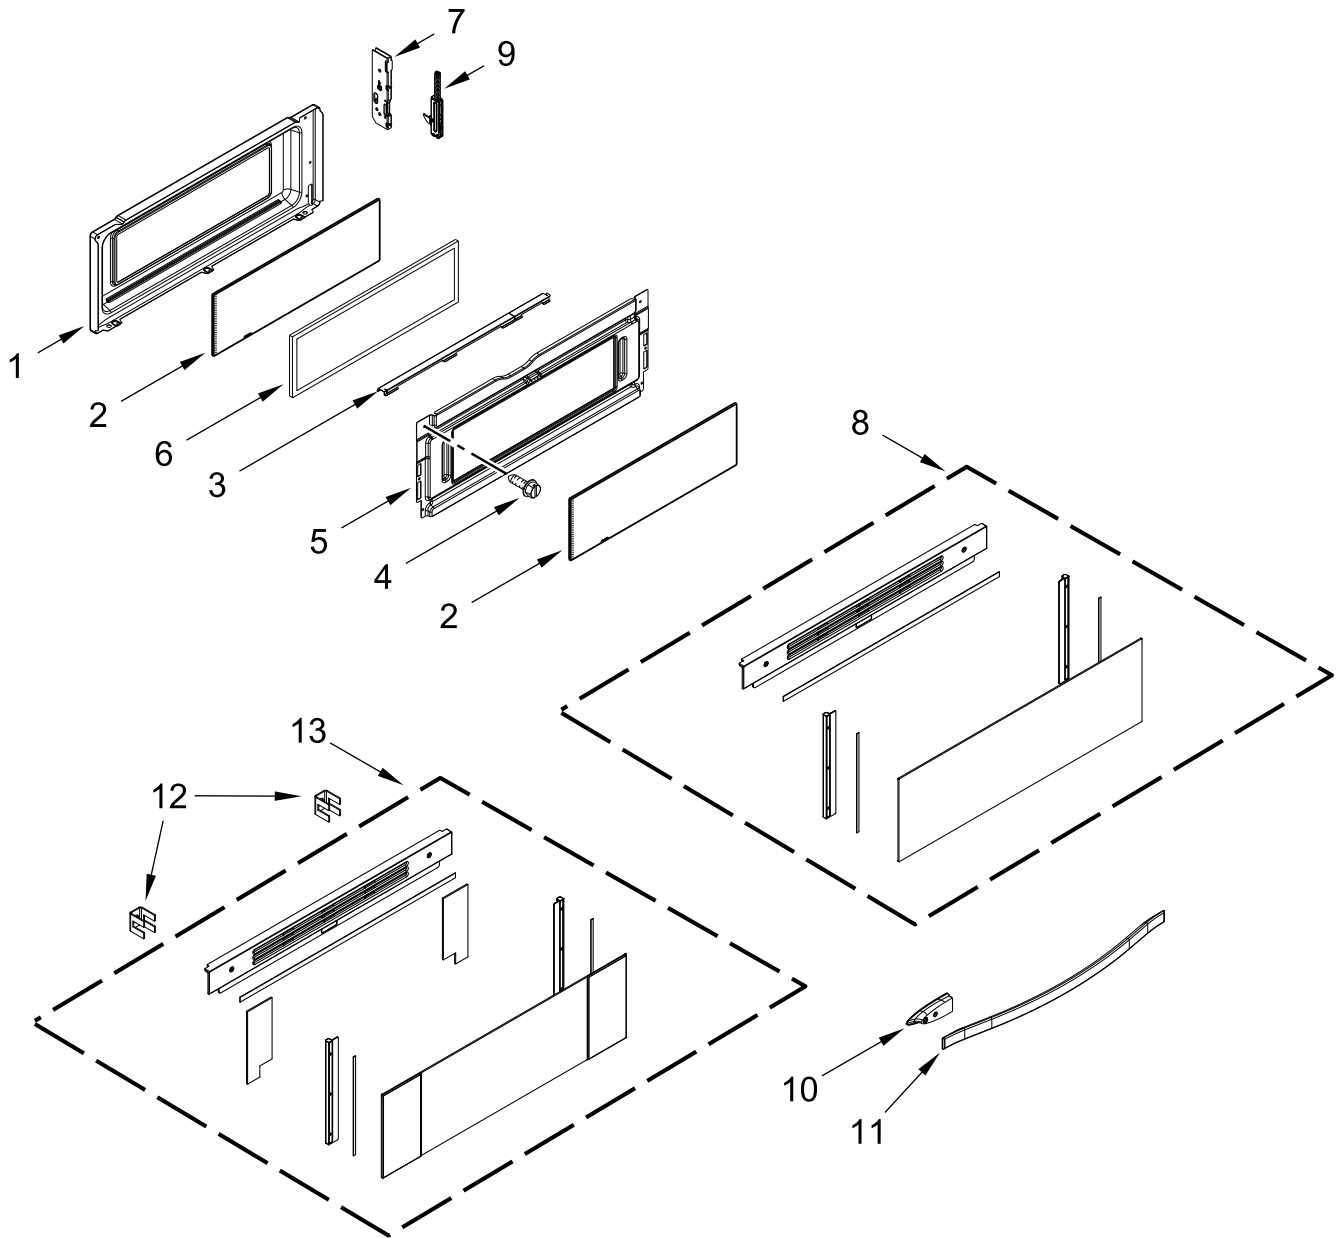

# UPPER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10485720	Lining, Door	9	W10485733	Hinge, Door (Left)	13		Assembly, Door
2	W10272707	Glass, Inner		W10485732	Hinge, Door (Right)		W10845034	Stainless
3	W10272708	Frame, Glass	10		Standoff, Handle			
4	W10292297	Screw		W10410341	Black			
5	W10485723	Retainer, Insulation		W10429492	White			
6	W10321271	Insulation, Door	11		Handle, Door			
7	W10289077	Receiver, Hinge		W10254687	Stainless			
8		Assembly, Door	12	W10575917	Spacer, Vent Trim			
	W10675404	Black Ice			(Stainless Models Only)			
	W10675403	White Ice						

# LOWER DOOR PARTS

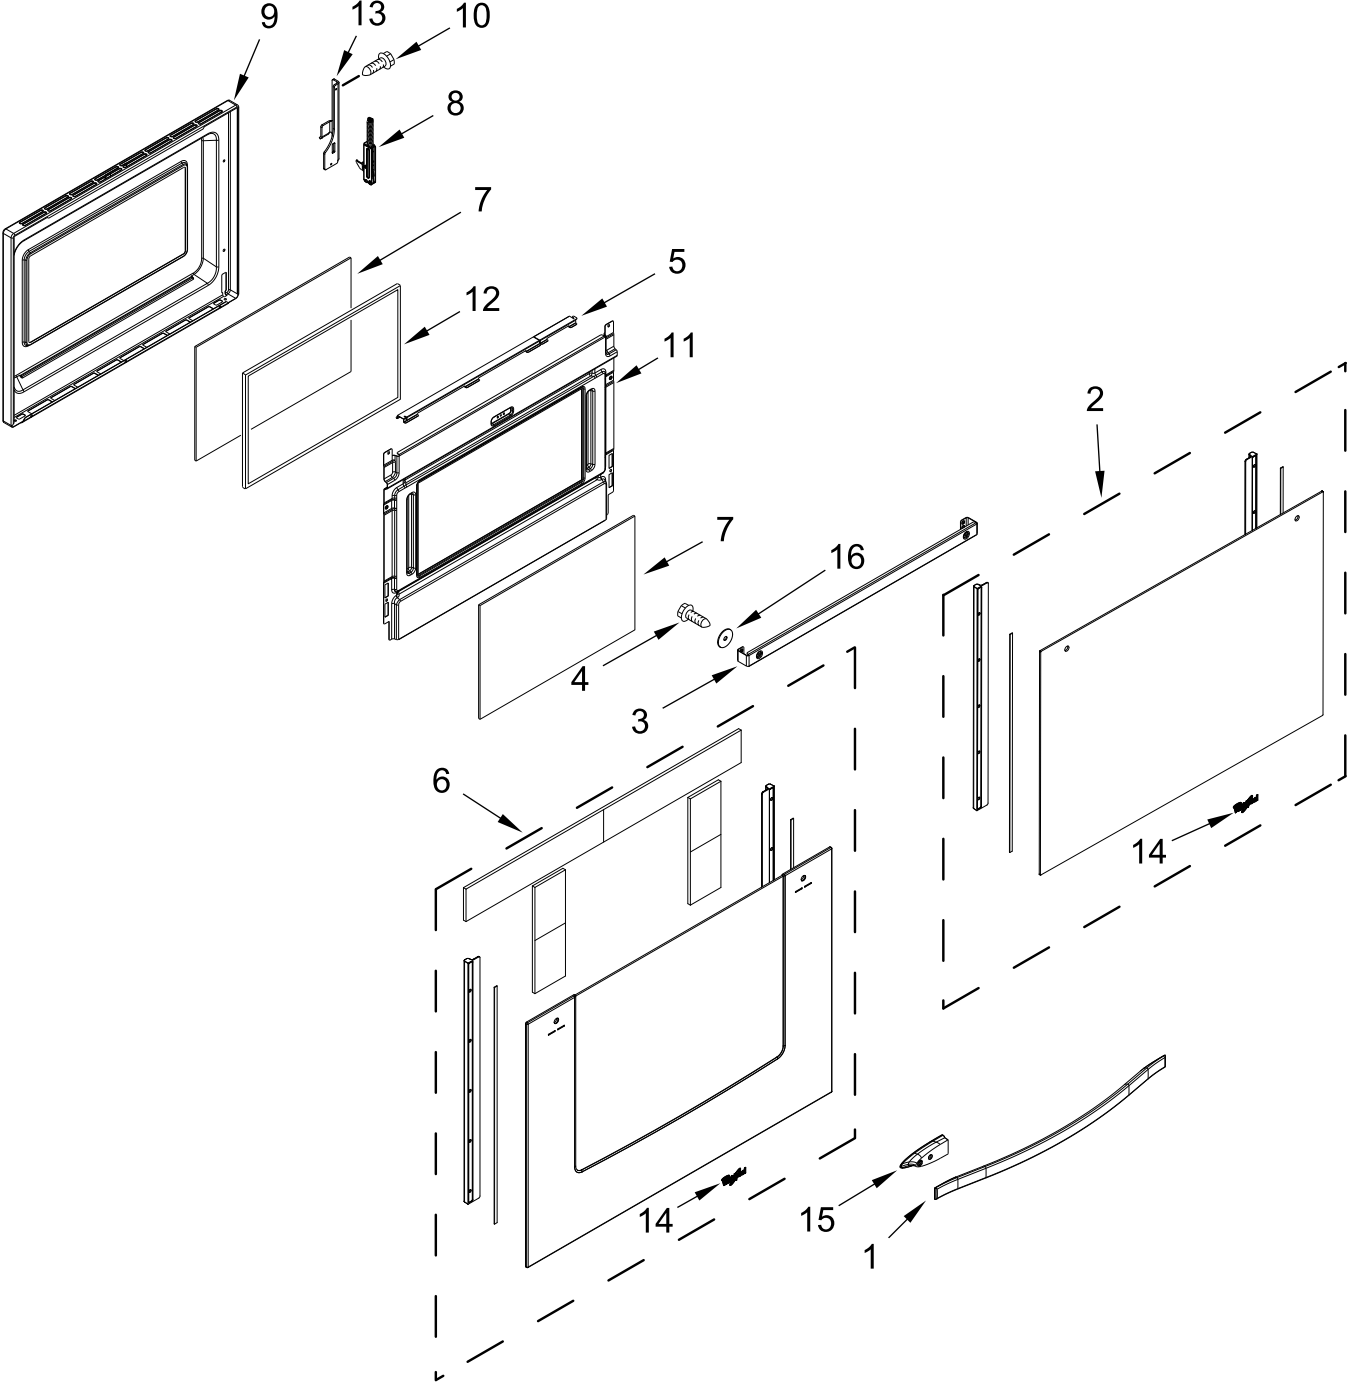

# LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Door	6		Assembly, Door	13	W10272329	Receiver (Left)
	W10254687	Stainless		W10845037	Stainless		W10272328	Receiver (Right)
2		Assembly, Door	7	9757706	Glass, Inner	14		Badge
	W10675400	Black Ice	8	W10335434	Hinge, Door (Left)		W10481433	Grey
	W10675399	White Ice		W10335433	Hinge, Door (Right)		W10481434	White
3	W10294695	Bracket, Handle	9	W10272698	Lining, Door	15		Standoff, Handle
	W10575689	Bracket, Handle (Stainless Models Only)	10	4449040	Screw		W10410341	Black
4	W10317886	Screw	11	W10340464	Retainer, Insulation		W10429492	White
5	W10272594	Frame, Glass	12	W10321285	Insulation, Door	16	7109P084-60	Washer, Fiber

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## PAINT, SPRAY

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit/Bisque
	285006	Black
	350956	Almond
	350938	Gray Primer
	350942	White Primer

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## ACCESSORIES

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance
	W10355049	Wipes, Stainless Steel Cleaning