

CINEMATIX™



9" Portable DVD Player



USER GUIDE



**DIGITAL
REASURES**

Read this instruction manual carefully before connecting or operating the appliance and keep it for future reference.

PACKAGE CONTENTS:



Main Unit



Remote Control



AV Cable



Car Adaptor



2x Headphones



Carry Bag



AC Adaptor

User Guide

Warning

To prevent fire or shock hazard, DO NOT expose this appliance to rain or moisture.

High Voltage Warning

Dangerous high voltages are present inside this enclosure. To avoid electric shock, DO NOT open the cabinet; refer servicing to qualified personnel only.

Laser

This player is classified as a CLASS 1 laser product. To prevent direct exposure to the laser beam, do not try to open the appliance. Do not attempt to dismantle the appliance. You may become exposed to invisible laser radiation if the product is open or the interlock is failed or defeated. Avoid direct exposure to beam.

Instruction Manual

1. To ensure the proper operation, all the safety and operating instructions should be read carefully before connection and operation.
2. Retain instructions — Keep this manual in a safe place for further reference.
3. All warnings on the product and in the instruction manual should be adhered to.
4. All operating and use instructions should be followed.

Safety Caution

1. The appliance is intended for household use only, and not for commercial or industrial use.
2. This appliance should not be exposed to dripping or splashing water and no object filled with liquids such as vases should not be placed on the appliance. Dry location use only.
3. Do not expose the appliance, batteries or discs to extreme temperatures, excessive moisture, rain or sand. Never use this device in high temperature or in high humidity. The best operating temperature is between 5°C-40°C.
4. No naked flame sources such as lighted candles should be placed on the appliance.



5. Do not place the unit on an unstable surface to prevent it from falling. Do not place the unit on top of any other appliance.
6. Do not place the appliance on or near a hot gas flame, electric element, and heaters or in areas subjected to direct sunlight.
7. Place the appliance where there is good air ventilation. Any ventilation holes should not be impeded by covering with items, such as newspaper, tablecloths, curtains etc.
8. Don't put the device near a magnetic field, e.g. speaker. The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by switching it off from the mains outlet and then switching it back on after several minutes.
9. Do not operate the player if it is not working normally or has been damaged in any way. Turn the unit off, unplug it from the power source and consult service personnel. Do not attempt to service this unit yourself.
10. Do not listen to headphones at high volumes. The excessive sound pressure from headphones can cause hearing loss.
11. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Power Supply

1. Do not operate the product with wet hands. Doing so may cause electric shock.
2. Always turn the power off and remove the adaptor from the outlet when the appliance is not to be used for a longer period of time and before cleaning.
3. Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
4. Do not let the power cord hang over the edge of a table or bench top or touch any hot surface. Do not operate the appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, do not attempt to repair or disassemble the appliance by yourself. Contact qualified service personnel if you need help.

Operation and Position

1. Do not connect accessories, which are not defined by the manufacturer to the player.
2. Do not increase the volume when the player is just playing at very quiet sections of a movie. This could damage the speaker if very loud passages suddenly follow.
3. Press the player's buttons gently. Pressing them or the screen too hard can damage the player.
4. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating and malfunction, and these openings must not be blocked or covered.
5. Do not drop the unit or expose this product to harsh impacts. This is a sophisticated electronic device that cannot withstand shock from drops.

6. Protect the player against weather high temperature and humidity. Do not use the player in an extremely dry environment, as this can lead to static discharge, which can damage the player.
7. Keep the appliance away from rain and any moisture.
8. Keep the player clean and never store it next to a heat source or in dirty, humid or wet places. Do not expose the player and the remote control to direct sunlight.
9. Ensure that your earphones are inserted into the player before it is switched on. Inserting them afterwards can potentially damage the earphones and the player.
10. Keep “Earbud” earphones out of reach of small children. “Earbud” earphones may be swallowed if they are placed in mouth.

Caution: Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Service and Maintenance



1. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
2. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the AC adaptor or Car adaptor is damaged.
 - b. If liquid has been spilled, or objects have fallen into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e. If the product has been dropped or damaged in any way, and when the product exhibits a distinct change in performance, this indicates a need for service.

Cleaning and Care

1. Always turn the power off and unplug it from the outlet before cleaning.
2. **NEVER** spray or pour liquids directly on the screen or plastic casing, and clean with a dry towel only.
3. **DO NOT** clean the unit with strong chemical agents or abrasive cleaners.
4. **DO NOT** allow residue or liquids to enter any part of the appliance as this may create a risk of electrocution.
5. Be sure to remove the disc from the player before moving the unit.

Disc Requirements

This DVD player supports playback of the following:

Type	Disc Mar	Content Type	Disc Size	Max Playback Time
DVD-Video Discs		Audio+Video (Moving Picture)	12cm	133min (SS-SL)
				242min (SS-DL)
				266min (DS-SL)
				484min (DS-DL)
Audio Compact Discs (CDs)		Audio	12cm	74min

This unit can play CD/VCD/DVD/MP3/WMA/AVI/MPEG. This unit does not support discs which are not listed above (e.g., PC CD-ROM, CD EXTRA, CD-G, CD-I, ETC.)


Connecting

1. Ensure that the player and other external equipment to be connected is switched off before commencing connection.
2. Read the instructions carefully before connecting other external equipment.
3. Ensure that you observe the color coding when connecting audio/video cables.

Connecting External TV

Your player comes equipped with an AV output jack. Use this feature to connect the player's signal to external equipment (e.g. TV, monitor) etc. Please refer to the image as below to connect them;

1. Connect the 3.5mm—RCA Cable to the AV Output on the unit and the audio/video inputs on the Television (Red to Red, White to White, and Yellow to Yellow).
2. Turn the unit on by switching the Power Button to the On position.
3. Change the television to the correct audio/video input setting.
4. Audio and the video played through the unit will now be seen and heard on the connected television.

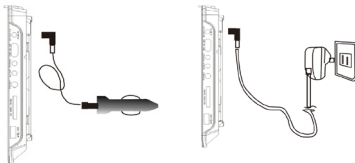

Connecting Headphones

Two stereo headphone jacks have been provided on the player for private listening. To use the jacks, plug in the headphones with a stereo mini-jack 3.5mm plug into one of the headphone jacks and adjust the volume to a comfortable listening level.

Note:

When headphones or earphones are connected to the earphone jack, the main speakers will be automatically muted.

2. Be sure that your player is set at a low volume level before connecting the headphones.
3. Increase the volume gradually for comfortable listening.

Caution

Listening at high volumes for a long period could cause hearing loss.

Connecting Power Supply

AC Operation

Before connecting the supplied AC adaptor to the wall outlet, ensure that all other connections have been made.

Insert the small plug of the supplied AC adaptor firmly into the DC IN9V-12V jack on the right side of the player, and then insert the adaptor into an available AC 100-240V-50-60Hz wall outlet.

Warning

Only use the supplied adaptor. Failure to do so may cause a fire or damage to the player. Never make or change any connections with power switched on.

Caution

- **Do not** connect the adaptor to a power outlet other than which is indicated here and on the label as this may result in the risk of fire or electric shock.
- **Do not** handle the plug of adaptor with wet hands. Doing so may cause electric shock.

Car Adaptor Connection

Before connecting the supplied car adaptor, ensure that all other connections have been made. Insert the small plug of the supplied car adaptor firmly into the DC IN9V-12V jack on the right side of the player, and then insert the other end into the Cigarette lighter socket.

Warning

- Disconnect this car power adaptor when the unit is not in use for a long period of time.
- **Do not** plug the car adaptor to any DC24V cigarette lighter. Only a DC12V cigarette lighter socket can be used. Connecting the car adaptor to a power supply with a different voltage can damage the unit.
- The Car adaptor is for in-car use only.

Battery Operation

The unit has built-in rechargeable battery. Fully charge the built-in battery before using it for the first time. It takes about four hours to fully charge the battery when the player is not in use. Once charged, disconnect the AC adaptor, and then switch on the player. The unit will operate on Battery Pack. The unit offers four hours playback time on a full charge. The playback time may vary depending on discs and the volume level.

Note: The player will operate on battery power when the AC/Car adaptor is connected.

Charging the Battery Pack

To charge the built-in battery, just connect the adaptor to the player and a specified wall outlet. The built-in battery can be charged whether the unit is operating or powered off, and the Charge indicator will be red when charging. The indicator will change to green when the battery is fully charged.

The built-in rechargeable battery can be used for approximately 300 charge-cycles without any noticeable change in performance.

When the built-in battery power is low, the empty battery icon will appear on the screen and indicate the player will automatically turn off, you will need to connect the AC adaptor for power at this time.


Note

- Only use the AC adaptor and Car adaptor supplied.
- Never dispose the battery in fire.
- Do not use the unit in high temperature or near heat sources.
- Danger of explosion exists if the battery is incorrectly replaced. Replace only with the same or equivalent type. Refer servicing to qualified service

personnel only.

- While using the built-in battery, the environmental temperature should be 5°C to 35°C.
- To get the longest service life of the built-in battery, charge in an environment without excessive heat.
- The built-in battery in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble or incinerate the battery or put it in an environment above 65°C.

DVD Player View

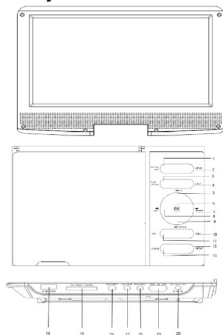

1. TFT ON/OFF
2. MENU
3. PLAY/PAUSE
4. STOP
5. PREVIOUS KEY/UP
6. ENTER/OK KEY
7. FAST FORWARD/RIGHT
8. FAST BACKWARD/LEFT
9. NEXT KEY/DOWN
10. VOL + KEY
11. VOL - KEY
12. SETUP KEY
13. DVD/USB/SD SELECT KEY
14. USB PORT
15. SD/MMC CARD PORT
16. 3.5MM HEADPHONE 1 JACK
17. AV OUT JACK
18. 3.5MM HEADPHONE 2 JACK
19. POWER ON/OFF
20. DC IN 9-12 V JACK

 
In DVD mode, press the DVD/USB/CARD key repeatedly to switch between the DVD, USB or SD/MMC mode if the disc, USB device and memory card are all available.

Remote Control

Preparing the Remote Control

The remote control requires on CR2025 type 3V lithium battery. To extend the battery life of the original battery, a small plastic spacer tab has been inserted between the battery and the battery terminal. In order to get your remote control working you must pull the tab from the battery compartment. Place the remote control on an even surface and insert the supplied button cell into the remote control as follows.

1. Push the button towards left.
2. Pull the battery loader out.
3. Insert the battery into the receptacle, making sure the polarity matches the marks inside the component.
4. Replace the battery compartment cover of remote control.



Cell Data

Battery type: 1x CR2025, 3 V

Service life: approximately one-year (for normal use and room temperature)

Using Of Remote Control

Point the remote control towards the sensor window on the main unit when operating. The remote control works best at a distance less than 5 m and at

at an angle of up to 30 degrees to the front of the unit. Remote requires line-of-sight to work, ensure no objects are between remote and infrared sensor. Do not place the remote control in direct sunlight. If the remote control fails to work even when it is operated near the player, replace the battery.

Notes on Batteries

If the remote control is not used for an extended period of time, please remove the battery from the compartment.

Do not heat batteries or dispose of them in fires.

Do not dismantle, deform or modify batteries.

Remote Control Buttons



1. **MUTE:** Press key to mute the audio of the player. Press it again to activate the sound.
2. **0-9 Number Keys:** Use the Numeric buttons to input a DVD chapter or CD track (invalid for some discs) and press PLAY/PAUSE button to confirm.
3. **Goto:** Press to go to a specific time index/title/chapter.
4. **Setup:** Press it to go to the Setup menu directly in any time(except the AV mode)
5. **DIRECTION BUTTON:** Press direction buttons (up/down/left/right) to move the cursor in the menu upward, downward, to the left, or to the right, respectively.
6. **RETURN:** During DVD play, press this key, to main menu
7. **PLAY/PAUSE / ENTER:** Press to play or pause the audio/ movie playback. Confirms the selection or press it to select the file to play.
8. **STOP:** Short press to stop the audio/video/photo playback.
9. **Fast Forward / Fast Rewind:** Skips forward, consecutive short presses to go to 5-level speed (X2->X4->X8->X16->X32 ->PLAY);

10. **USB/CARD:** Press the key to switch between DVD, CARD and USB modes.
11. **SLOW:** Press to select the different Slow motion. First press and hold the button to select the 1/2 speed; follow the same action to select the different 1/4 speed; 1/8 speed; 1/16 speed; and normal speed to go to the 'PLAY' status.
12. **ZOOM:** For the DVD disc, short press to access the zoom function. You can select the 2X, 3X, 4X, 1/2, 1/3, 1/4. For the photo disc, press it to switch between the zoom 100%, 125%, 150%, 200%, 75%, 50% and normal status.
13. **SUBTITLE:** Short press changes subtitle mode.
14. **DISPLAY:** During play press DISPLAY, TFT panel will display the title/track number of playing disc.
15. **TFT ON/OFF:** Press to switch on/off the TFT LCD panel.
16. **PROGRAM:** Press to program a loaded disc to play chapters and titles or tracks in a specified order.
17. **N/P:** Press this button to switch the system of the DVD Player (AUTO, PAL or NTSC).
18. **ANGLE:** Press and hold to access different viewing angles on supported DVDs.
19. **TITLE:** Press to view the title menu on a loaded DVD.
20. **PBC:** During VCD/SVCD play back, press PBC to select mode of play back PBC ON, PBC OFF.
21. **MENU:** Press to view the main menu on a loaded DVD.
22. **LANGUAGE:** Press to change the language when playing discs supported with multi-languages.
23. **REPEAT:** Press repeatedly to cycle through repeat options for the loaded disc.
24. **A-B REPEAT:** Marks a section to be repeated.
25. **VOLUME +/-:** Press to adjust the volume.
26. **PREV/NEXT:** Press to play previous chapter/title/track. Press to play next chapter/title/track.
27. **R/L:** When playing back a CD, this button cycles through and mono(left channel), and mono(right channel) playback.

Basic Operation

Depending on the discs, some operations may be different or restricted. Do not put any objects other than disc in the disc tray. Doing so may cause the player to malfunction.

Note:

- If a “Ø” mark appears on the screen when a button is pressed, it means the function is not available at the moment on the current disc or at the current section.
- Depending on the conditions of the recording equipment or the CD-R/ RW (or DVD ±R/RW, MP3, Picture CD) disc itself, some discs cannot be played on this player due to the configuration and characteristics of the disc, or due to the condition of recording and authorized software that was use.

Disc Error Messages

If there is a problem with the format of the loaded disc, then the disc cannot be played correctly.

- The region code of the disc does not match the player’s region code.
- The parental rating level of the disc is higher than the parental rating level setting of the player. The player will not play the disc.
- Bad/No disc: The player is equipped with automatic disc quality detection software. If the player detects a disc that is damaged or has a format problem, it may play the disc at a lower quality or stop playing completely, depending on how serious the damage is.

Note: DVD disc production quality may vary and some discs may deviate from the industry standard. Some incorrectly formatted discs may still play, however, the playback and operational quality of the disc may be substandard.

Playable Discs

This player will play CD, VCD, DVD etc. discs.

Note: If you have trouble with playing a certain disc, remove the disc and try a different one. Improper, formatted discs will not play on this player.

Turn On/ Off the Player

Slide the Power switch on the right side of the player to “ON” position to turn on the player after connecting the mains power supply. Slide the Power switch on the player to “OFF” position to turn off the player completely.

Note: If the player will not be in use for a long period of time, slide Power switch to the “OFF” position and unplug the portable DVD player from the power source.

Selecting the Different Mode (DVD/USB/CARD)

When the playback is in the stop mode; press the USB/CARD button on the remote control or the unit to select DVD or USB or SD play mode if certain discs or memory devices are connected. When a USB mass storage device is simultaneously inserted, the USB device will be recognized.

Playing discs

1. Slide the Power switch on the player to “ON” position to turn on the player.
2. Open the disc cover and insert a playable DVD or CD disc, Make sure

- the label side is facing up, and then close disc cover.
3. The player will scan the disc, and then playback will start automatically. If a disc menu appears on the screen, see “Using the disc menu” for details.
 4. If the disc is locked by parental controls, you must enter your password (see “SYSTEM SETUP” section for details).
 5. During the playback, press the STOP button to stop playback.
 6. Sliding the Power switch on the player to “OFF” position will turn off the player.
 7. Press the MENU button on the remote control to activate or deactivate the PBC function. PBC playback allows you to play Video CDs (VCD version 2.0 only) interactively.
 8. Press the MUTE button on the remote control to turn on or off the sound.
 9. Press the Go To button on the remote control to select the play time
 10. Short press the LANGUAGE button on the remote control to select the audio soundtrack languages; (on DVDs recorded with this multiple languages, some recorded DVD may not have this function). Press the ANGLE button to use the picture angle while playing a DVD disc that has been made with multiple angles. Only DVDs shot with multi-angle scenes have this function.
 11. Press the REPEAT/PROG on the remote control button to re-setup the playing order.

Using the Disc Menu

Depending on the disc, a disc menu may appear on the screen once you load the disc.

1. From the file/ folder list menu, use the Direction buttons (UP/DOWN) to select the desired playable file and press the **ENTER** button to start playback.
2. If the desired file is saved in a folder, press Direction buttons (UP/ DOWN) to select the saved folder and press the **ENTER** button to open the folder.

Return to the Root Menu or Title Menu

During the disc playback, press the MENU button to return to the disc’s root menu or title menu (depending on the disc). For MP3 DVD. Picture discs, press it to go to the file or folder list after pressing the **MENU** or stop button. Use Direction buttons (UP/DOWN/LEFT/RIGHT) or Numeric buttons to select a play option. Press the ENTER button to confirm and start playback.

Play/Pause the Playback (DVDNCD/CD/MP3)

During the playback, press the **PLAY/PAUSE** button on the remote control to pause the playback. Press it again to resume playback.

Volume Control

Press the **VOL+/-** button on the player or the remote control to increase or decrease the volume level. To switch off the volume temporarily press the **MUTE** button on the remote control. Playback will continue without sound. Press it again or press the volume button to activate sound.

Selecting a Track/Chapter/Title (DVD/ VCD/ CD)

Press the PREVIOUS **I ▶▶** or NEXT **◀◀ I** to skip to the previous or next title/ chapter/ track.

Stop Playback (DVD/ VCD/ CD)

During playback, press **STOP** button to stop playing the disc.

Fast Forward / Fast Backward Searching (DVD/ VCD/ CD/ MP3)

During playback, press **▶▶** or **◀◀** button on the remote control repeatedly until the desired speed is reached for fast searching within a track/chapter/title (forward or backward). Press the **PLAY/PAUSE** button will enter normal playback directly.

2X → 4X → 8X → 16X → 32X → Normal

Note: The function is invalid on some discs. Not support the photo playback.

Slow Motion Playback (DVD, SVCD, VCD)

Press the **SLOW** button on the remote during playback. Press the button again on the remote to play at the next speed. Slow Motion Playback has five speeds: 1/2, 1/4, 1/8, 1/16, and normal. Press the **PLAY/PAUSE** button to resume normal playback.

Repeat A-B (DVD/ VCD/ CD/ MP3) Playback

Using this feature to repeat the playback of a specific section of a track/ chapter (loop).

Press the Repeat A-B button on the remote to set the desired start point of the section to be repeated.

Press the Repeat A-B button on the remote again to set the desired end point of the section to be repeated.

The section "A-B" will now be played repeatedly as a loop.

Press the **Repeat A-B** button a third time to cancel the repeat A-B feature and resume normal playback.

Repeat Playback (DVDNCD/CD/ MP3/ Xvid Disc)

You can play a chapter/ title/ all/ track on a disc repeatedly. Press Repeat button on the remote control repeatedly during playback to select a desired repeat mode. Depending on the kind of disc (DVD, VCD, CD, MP3 or Video photo discs), you have different repeat options.

Program Playback

For DVDNCD Disc

- During playback, press the **PROG** during the playback mode.
- Use navigation buttons to scroll through the different fields. Use numeric keypad to enter valid title/chapter number. Maximum of 20 sequences can be programmed.
- Select Play and the press **ENTER** to start playback.
- To clear the whole program, select Stop and press **ENTER**.

Note: MPEG4 program playback is not supported

Zoom (DVD/ VCD)

Press the **ZOOM** button on the remote control repeatedly to change the video image during playback.

- During DVD, VCD playback, each successive press of **ZOOM** will change the level of magnification. While at ZOOM 2X, 3X, 4X, 1/2, 1/3 and 1/4 and normal; use the **Direction buttons (UP/ DOWN/ LEFT/ RIGHT)** on remote control or the unit to view specific sections when the photo is magnified (2X, 3X, 4X, 1/2, 1/3 and 1/4 mode can be operated).

During the sideshow mode of the JPEG CD or JPEG file in the USB device, press the **ZOOM** button on the remote control to Zoom in or Zoom out the photo. Press the **ZOOM** button repeatedly to select the zoom level, the screen shows the zoom level, includes the 100%, 125%, 150%, 200%, 75% and 50%. When a picture is magnified, you can press the **Direction buttons (UP/DOWN/ LEFT/ RIGHT)** on the remote control to view other panel parts of the magnified picture.

Note: Zoom may not work on some discs. The picture quality decreases as the picture size increases.

Selecting Subtitle Languages (DVD)

While playing a DVD disc that has been mastered with multiple subtitles, press the Subtitle button repeatedly to select the desired language of the viewable subtitle. Note: Only DVDs recorded with multi-language subtitles have this function.

Changing the Audio Soundtrack Languages (DVD)

Press the Language button on the remote control repeatedly during playback to select different audio languages.

Note: Only DVDs recorded with multiple soundtrack languages have this function. Some recorded DVD disc or video files without this function.

Changing the Audio Channel (CD/MP3NCD)

Press the Language button repeatedly during playback to select available audio channels provided by the disc (Left Mono, Right Mono, Mix-Mono or Stereo).

Information Display

During playback, press the **DISPLAY** button repeatedly to show the disc playback information on the screen (video format, time, title and chapter etc.)

Note: Depending on the type of disc (DVD, VCD, CD or Data discs), different information will be shown on display.

Numeric Buttons

Use the Numeric buttons to input a DVD chapter, VCD or CD track (invalid for some discs) and press the ENTER button to confirm.

Select "1-9", press the numeric button directly;

Select "10-99", press the "10+" button to select the number by tens. Press the numbers directly to select the number on unit digit.

Using the search feature (DVDNCD/CD)

Note: The function is invalid on some discs.

1. Playing DVD Disc

Search by title, chapter or time: Stops the playback at a specific point, pressing the **GOTO** button will open the search window.

Use navigation buttons to select a search option:

- Title: Enter the title number using the numeric keypad.
- Chapter: Enter the chapter number using the numeric keypad.
- Disc Time: Use navigation buttons to select a field (minutes, seconds). Use the numeric keypad to enter the field values.

2. Playing VCD Disc

- Disc Time: Use navigation buttons to select a field (minutes, seconds). Use the numeric keypad to enter the field values.

Use the numeric keypad to enter the field values.

- Track: Enter the track number using the numeric keypad.

3. Playing CD Disc

Use navigation buttons to select a search option:

- Disc Time: Use navigation buttons to select a field (minutes, seconds).
Use the numeric keypad to enter the field values.
- Track: Enter the track number using the numeric keypad.

MP3/WMA/MP4 Playing




MP3/WMA/DIVX disc has a directory structure as shown in the picture. Press the Direction key to choose the root directory and then press the **ENTER** button to enter into the sub-directory. Press the Direction key to choose the desired track and then press the **ENTER** button to enjoy the music or movie.

If you want to return to the upper menu, press the Direction key to choose the icon and press the ENTER button.

Photo/picture CD Playback

The PICTURE CD disc has such a directory structure as shown in the following picture.

 

Press Direction key to choose the desired picture and then press the ENTER button to enter into the sub directory. Press Direction key to choose the desired picture and then press the ENTER button on the remote control to view the picture. Press Menu if you want to return to the menu. During the playback, press the stop key to go to the thumbnail mode, use the direction key to select the Menu icon to for instructions on viewing features.


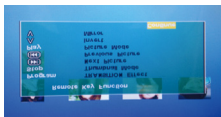


Image Rotation

During picture play, press the Direction key to rotate the picture.

Connect to USB

You can play or view the supported data files, such as the MP3/WMA, Video files in AVI (MPEG4)Xvid and JPEG photos. Insert the USB device into the USB port on the right side of your portable DVD player. The portable DVD player supports USB devices up to 8GB. (Note: Not all USB devices can be read well, which may result in playback issues.)

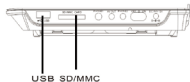

When the disc playback is in stop mode, press the source button on the unit or the remote control, and then press the direction button UP/DOWN to select the USB, and press enter. Then select the file you want to play by pressing the direction button.

USB Interface

All functions are the same as playing a disc.

Note: The USB IN port is compatible with flash drives. It is not warranted the compatibility with MP3 players using proprietary software.

Connect to SD/MMC Memory Card

1. Plug a SD and MMC card into the SD/MMC Memory Slot.
2. Switch unit Card Mode by pressing the USB/CARD button
3. Use the Directional buttons to select videos or image. Press the Enter button to play.
4. The portable DVD player supports the Memory Card up to 8GB.

Note: Please be sure you don't insert the card incorrectly or it may become damaged. Always stop the playback or change to other mode before removing the USB/memory card device.

Rotate the Screen

The screen can be rotated right 90 degrees and rotated left 180 degrees, when it is rotated left 180 degrees, it can be pressed down and turn into tablet mode.




Installing DVD Player on a Vehicle's Seat Installation Using the Supplied Carry Bag

1. Unfold the carry bag, and place the DVD player on the bag beneath the elastic straps.

Ensure that the player's corners are secured by the elastic straps. Ensure that the center strap is across the face of the DVD Player.

2. Secure the upper portion of the carry bag to the headrest support bars using the headrest strap. Adjust the headrest strap until the bag is firmly secured.


3. Secure the lower portion of the carry bag to the vehicle seat-back using the seat-back strap. Adjust the seat-back strap until the bag is firmly

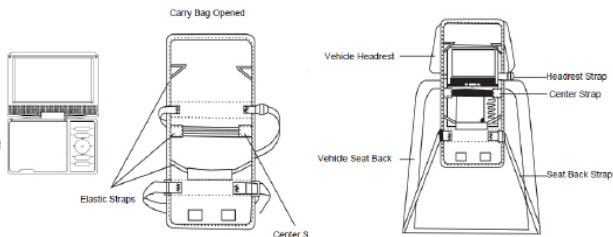

System Setup

To access the setup menu, press the setup button on the remote control. You will be given four sub menu options to choose from. Each option is described below. Use the arrow keys to navigate between the options.


General

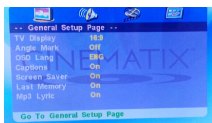

The general menu allows you to modify basic setting such as language.

The general options are as follows:

- TV Display: Adjust the screen aspect ration between 4:3 Pan Scan/4:3 Letter Box/16:9
- Angle Icon: Displays a mark on the screen when multiple angles are available.
- OSD Language: Allows you to change the menu language.
- Screen Saver: Displays a screen saver when the portable DVD player is on but not used for a period of time.
- Last memory: Reverts back to the same spot on a DVD if the portable DVD is turned off in the middle of a program.

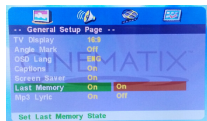

- MP3 Lyric: Set MP3 Lyric Mode on or off

If you want to show the Lyrics of two songs, please load the Lyrics and the music as the same name in the USB or Memory card before performing this function. Choose MP3 file, for example "love music. mp3". Download the corresponding lyrics with extension ".lrc" from the Internet or create it with Lyric file editor (not included).

Rename the lyrics file. Make sure that the lyrics filename is the same as the music file name. For example "love music.lrc"

Audio

The Audio menu allows you to change the audio setup of the Cinematix DVD.



- **Speaker**

Downmix: Set downmix to LT/RT, Stereo or V SURR

Post DRC: Set Post DRC to on, off, or auto.

(Post DRC reduces the volume, guaranteeing that the volume is below the maximum output of the speaker "On" reduces all volume beyond the maximum output of the speaker. "Auto" reduces the maximum output of the speaker. "Off" reduces the maximum output of the speaker.)

The video menu allows you to change the display properties of the Cinematix DVD.



- **Quality**

Sharpness: Adjusts the screen sharpness between LOW/MID/HIGH

Brightness: Adjusts the screen brightness

Contrast: Adjusts the screen contrast

Gamma: Adjusts the screen gamma

Hue: Adjusts the screen hue


Saturation: Adjusts the screen saturation

- **Panel Quality:** Setup the video quality

- **Panel Display:** Setup panel display to 16:9 or 4:3

Preference

The preference menu option allows you to adjust the default DVD disc setting. (The setting is only available when no media is inside the unit.)

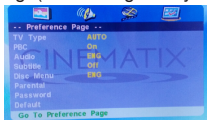

- **TV Type:** Set TV Type to PAL, AUTO, or NTSC

- **PBC:** Set PBC to on or off

- **Audio:** Set the default audio language

- **Subtitle:** Set the subtitle language

- Disc Menu: Set the subtitle language
- Parental: Set a maximum rating for discs that can be played without a password
- Password: Set a parental lock password (The default password is 0000)
- Default: Return the portable DVD to factory default

Troubleshooting

Carry out the problem-solving measures described in the following section before contacting Customer Support. Do not attempt to repair the DVD player by yourself. Turn off the DVD player as soon as you suspect a malfunction. Unplug the power plug and check whether the DVD player is unusually warm or whether smoke is rising from it.

Other possible causes:

Static discharges or other external interferences can cause the DVD player to malfunction. When this happens, disconnect the power plug from the main socket and plug it back in. If the problem persists, disconnect the device from main power and contact Customer Service or a repair shop.

Problem	Possible Cause	Remedy
The DVD player does not work	Disc cover not closed	Close disc cover
	No disc inserted	Insert disc
	Disc inserted the wrong way	Insert disc with label facing up
	Disc dirty or deformed	Clean disc, or insert another disc
	Regional code of the player does not match the regional code of the DVD	Use DVD with corresponding regional code
	Moisture on lens	Remove disc and turn off DVD player for at least two hours
No sound	Device not properly connected	Check connections and connect device correctly
	Headphones connected (speaker off)	Unplug the headphones
	DVD sound settings incorrect	Check sound settings and reset if necessary
No Video	TV screen is off or in the incorrect video mode	Turn on LCD screen and/or set correct video mode
Poor video and/or audio quality	Disc dirty or deformed	Clean disc or insert another disc
Repeated playback	Loop mode is switched on	Exit the loop mode
	Disc dirty or deformed	Clean disc or insert another disc
Remote control does not work	Obstacle between remote control and DVD player	Remove obstacle
	Remote control not pointed at DVD player	Point remote control directly at DVD player
	Remote control battery inserted the wrong way	Check the battery's polarity and, if necessary, insert battery correctly
	Battery too low or completely discharged	Insert new battery

Specifications

Power Adaptor:	AC Adaptor Input Power: AC 100-240V 50/60Hz Output: DC 12V 1.0A (AC Adaptor Terminal)
Power Supply:	DC 9V-12V 1.0A
Play Mode:	NTSC/PAL/AUTO
Disc Mode:	DVD, VCD, CD, MP3, CD-R, CD-RW, JPEG, DVD+ -R/W, MPEG4, etc.
Video S/N Ratio:	≥ 65db
AV Out Resolution:	≥ 500 lines
Frequency Response:	fs96KHz/24bit
Audio S/N Ratio:	≥ 90db
Dynamic Range:	≥ 80db
Distortion:	< 0.01%
D/A Converter	6KHz/24bit
Headphone Jack	3.5mm
AV Out Jack	3.5mm
TV Aspect Ratio	4:3/16:9
Device Display	9 inch

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: a) Reorient or relocate the receiving antenna b) Increase the separation between the equipment and receiver c) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected d) Consult the dealer or an experienced radio/TV technician for help.

Note 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

One (1) Year Limited Warranty

PC Treasures, LLC warrants this product to be free from defects in materials and workmanship. This warranty covers the original purchaser only, and is not transferable to anyone who subsequently buys, leases, or otherwise obtains this product from you. Your One Year Limited Warranty begins on the date of purchase. Your original purchase invoice or sales receipt, showing date of purchase, is your proof of warranty period. The duration of this warranty does not extend beyond the initial period of coverage should any repairs or replacements be made or performed.

This warranty does not extend to any product not purchased from PC Treasures, LLC, or an authorized PC Treasures, LLC reseller. This warranty does not extend to product that has been damaged or rendered defective as a result of use for which the product is not intended, is contrary to instructions provided in the user guide, as a result of the use of parts not manufactured or sold by PC Treasures, LLC, or due to any misuse, abuse, negligence, modification, or improper packing when returning product to PC Treasures, LLC.

EXCEPT FOR THE WARRANTY SET FORTH HEREIN, PC TREASURES, LLC DISCLAIMS ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY APPLICABLE LAW ARE LIMITED TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL PC TREASURES, LLC BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF BUSINESS, PROFITS, DATA OR USE, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT. YOU AGREE THAT REPAIR, AND (UPON AVAILABILITY) REPLACEMENT, AS APPLICABLE, UNDER THE WARRANTY SERVICES DESCRIBED HEREIN IS YOUR SOLE AND EXCLUSIVE REMEDY WITH RESPECT TO ANY BREACH OF THE PC TREASURES, LLC LIMITED WARRANTY SET FORTH HEREIN.

How Do I Obtain Warranty Service?

In the event that you require warranty service, please email warranty+cinematix@pctreasures.com or call (248) 236-0061, at which time a PC Treasures technician will attempt to resolve any issues. If unable to resolve your issue, you will be issued an RMA # to authorize the return of the item for repair or replacement. All charges incurred while returning product, including postage, duties, export taxes, and customs duties, are the responsibility of purchaser, and purchaser assumes all risk of loss during shipment.

Models Covered Under This Warranty: 70164, 70165, 70166, 70167, 70168, 70169, 70170, and 70171



Digital Treasures is a Division of PC Treasures, LLC, 3720 Lapeer Rd., Auburn Hills, MI 48326
Designed and packaged in the U.S.A. Made in China.

PC Treasures and the Cinematix logo are trademarks or registered trademarks of PC Treasures, LLC. All rights reserved. © 2015 PC Treasures, LLC

Cinematix Man 6-25