

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER—Any appliance is electrically live even when the switch is off.

- To reduce the risk of death by electric shock:
1. **Always unplug appliance immediately after using.**
 2. Do not use while bathing or in a shower.
 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
 4. Do not place in, or drop into water or other liquids.
 5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**
5. Keep the cord away from heated surfaces. **Do not pull, twist, or wrap cord around appliance, even during storage.**
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate appliance.
11. This curling iron is hot when in use. Do not let heated surfaces touch eyes or skin.
12. **Do not place the heated curling iron directly on any surface or on the appliance power cord while it is hot or plugged in.**
13. Do not touch hot surface of the appliance; use handles or cool tip.
14. Before plugging in, read the information about dual voltage in the Operating Instructions section of this manual.
15. Do not use a voltage converter with this product.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This curling appliance is intended for household use. Use on Alternating Current (50/60 hertz) only. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE
This curling iron has dual voltage. It will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

GETTING STARTED
The iron's 25 temperature settings and Instant Heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting on high. You can vary the iron's temperature according to your particular need!

SUPER STYLING GUIDE
Your best looks begin with a good haircut that's well maintained. Always treat hair well with superior quality shampoos, conditioners, and finishing products.

MULTI-LAYER TECHNOLOGY
The barrel of your curling iron has a multi-layer coating of steel, copper, nickel and chromium that retains heat and provides even heat distribution. The chromium surface smoothes and protects hair.

- CURLING BASICS**
1. Plug the curling iron cord into a standard household electrical outlet (120/240V). **Never leave your curling iron on and unattended.** However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes.
 2. Section dry hair evenly, and comb each section before winding. Pressing the spoon clip curl release, place curling iron midway up the hair section, then spread hair evenly between spoon and barrel. Release spoon clip curl release to hold hair in place. Gently slide curling iron down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl.
 - Remember, always place the spoon above the hair strand when making a curl you want rolled under; place the spoon under the hair strand when making a flip style.
 3. Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp. Hold in place for 8 to 12 seconds, depending on the texture and length of your hair. For tighter, bouncier curls, roll less hair. For looser, free-flowing curls, roll more hair.
 4. To remove curling iron, unwind the hair and press the spoon clip curl release. To set the curl, do not comb or brush hair until it cools.
 5. To achieve faster styling results, these units feature a unique, optional Turbo Heat® burst. Press the Turbo Heat® button to deliver up to 20°C/36°F more heat for maximum styling performance.

USING INSTANT HEAT, THE 25 VARIABLE TEMPERATURE SETTINGS AND HEAT RECOVERY SYSTEM
This styling iron features Conair's Instant Heat technology. It heats up to the temperature you've selected for your hair type.

This Instant Heat technology includes 25 variable temperature settings for every type of hair, from the finest to the curliest and most resistant. Select the temperature range that's suitable for your hair type to help you create the look you want.

Temperature Setting Guide	
Temp. Control	Hair Type
Low 1–8	Delicate, thin, easy-to-curl hair
Medium 9–14	Average to thick or treated hair
Med-High 15–20	Thick or wavy hair
High 21–25	Hard-to-curl hair
Turbo Heat®	Up to 20°C/36°F burst of heat for difficult styling spots

And that's not all. Conair's professional salon standards of engineering provide you with a Uniform Heat Recovery System that maintains the curling iron at constant temperatures.

There is a constant surge of power to ensure that heat is continuously delivered for optimal styling results, unlike other units which lose heat during use. This recovery system provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

GET TO KNOW YOUR CURLING IRON



WARNING: The iron's barrel will get very hot within a few seconds and should not be placed in contact with skin after the curling iron is turned on.

**INSTANT HEAT IRONS ARE AVAILABLE
IN THE FOLLOWING SIZES:**

Curling Irons

1/2 in. (13mm)

Model CD80WCSR

3/4 in. (19mm)

Model CD81WCSR

1 in. (25mm)

Model CD87WCSR

1 1/4 in. (32mm)

Model CD82WCSR

1 1/2 in. (38mm)

Model CD89WCSR

USER MAINTENANCE

Your curling iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the curling iron from the power source, let it cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the curling iron, allow it to cool, and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION


NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the curling iron. Damage will occur at the high flex point of entry into the curling iron, causing it to rupture and short-circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance should be disconnected, allowed to cool, and stored in a safe, dry location out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

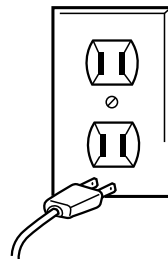

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at:
www.conair.com/registration



Service Center

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2015 Conair Corporation
150 Milford Road
East Windsor, NJ 08520
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

14PA007724

IB-13199

**HOT STICKS®
INSTANT
HEAT**



Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®

Models CD81WCSRW, CD82WCSRW