

Mr. Christmas®

 
INSTRUCTION MANUAL

MUSICAL CARTOON LASER™

MR. CHRISTMAS PRESENTS
Musical Cartoon Laser™

WARNINGS

MR. CHRISTMAS INC.
MODEL : MUSICAL CARTOON LASER
MODEL NO. : 60527
RATINGAC 120V~ 60Hz 47W

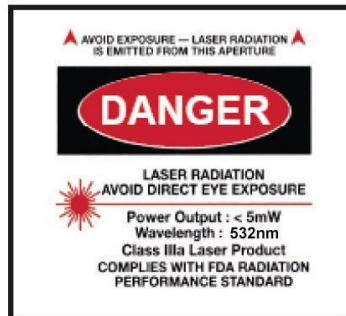

- When using this MUSICAL CARTOON LASER™, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.
- Follow the instructions on the DANGER label on the MUSICAL CARTOON LASER™.
- The MUSICAL CARTOON LASER™ uses a laser light beam. Only a qualified service person should remove the cover or attempt to service this device, due to possible eye injury.
- Never point the MUSICAL CARTOON LASER™ beam at anyone.
- Never look directly into the MUSICAL CARTOON LASER™ beam.
- Keep the MUSICAL CARTOON LASER™ away from children.

SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

WARNING: THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED.

DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL. PLEASE ADHERE TO THE FOLLOWING:

- A. Read Instructions** - All safety and operating instructions should be read before the item is operated. Please adhere to the instructions and warnings for your safety.
- B. Heat** - The item should be situated away from heat sources such as radiators, hairdryers, heat registers, stoves or other appliances that produce heat.
- C.** Do not let lamps rest of the supply cord or on any wire.
- D. Power Sources** - The item should be connected to a power supply only like the one that is provided with the item.
 - 1) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
 - 2) Do not hang ornaments or other objects from cord.
 - 3) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
 - 4) Unplug the product when leaving the house, retiring at night or if left unattended.
 - 5) This item has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. Do not alter or replace the plug.
- E. Damage Requiring Service** – Refer all servicing to a qualified service personnel. Have a qualified service personnel service this item when:
 - 1) The power-supply cord or plug has been damaged.
 - 2) Objects have fallen.
 - 3) All troubleshooting techniques have been tried and the item will not work or has stopped working.
 - 4) The item has been dropped or the enclosure damaged.
- F.** This seasonal use product is not intended for permanent installation or use.
- G.** To avoid risk of fire, burns, personal injury and electrical shock this item should not be played with or placed where small children can reach it.
- H.** Do not use this product for other than its intended use.
- I.** Do not cover the product with cloth, paper or any material not part of the product when in use.

SAVE THESE INSTRUCTIONS.

TABLE OF CONTENTS


1. DESCRIPTION	1
2. INSTALLATION	3
3. OPERATION	2
4. CARE INSTRUCTIONS	3
5. SONG LIST	3
6. RATINGS	3
7. TROUBLESHOOTING	4
8. WARRANTY	4
9. FEDERAL COMMUNICATIONS COMMISSION CODE, PART 15	5

I. DESCRIPTION


Thank you for purchasing the **Musical Cartoon Laser™**. This product features innovative new technology for seasonal decorating: an advanced laser cartoon plays to the music of 15 Christmas Carols and 3 other festive holiday songs for New Year's, Halloween and Birthday celebrations. The unit is designed for outdoor use. Your Musical Cartoon Laser will impress the whole neighborhood!

II. INSTALLATION

 
1. Gently remove the unit from the packaging.
2. Secure the unit on the included ground stake according to the following diagram:

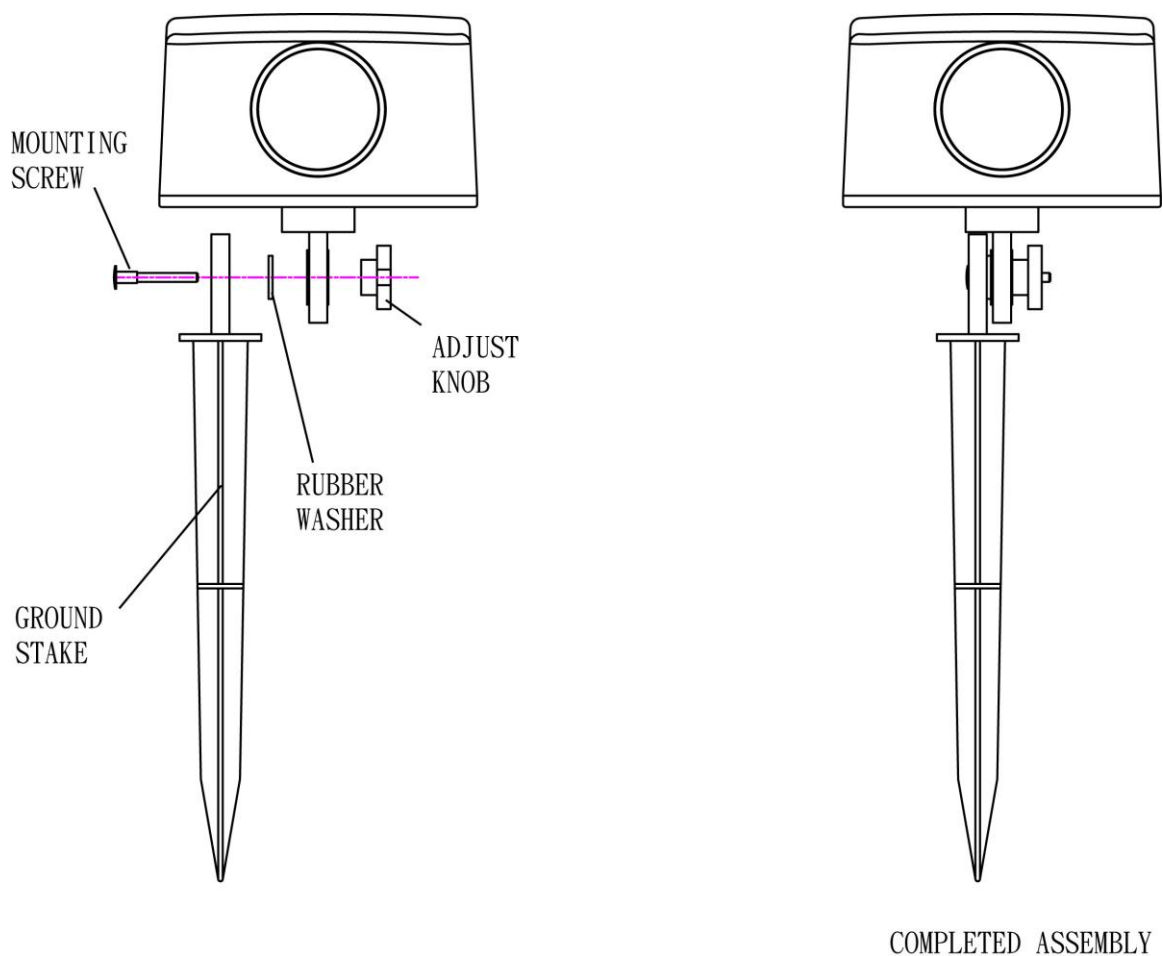

3. Push the stake to the ground, and ensure the unit is stable.
4. Adjust the angle and height of the unit to a desired projecting position by loosening, adjusting the unit and securing the adjusting knob. (See figure on following page.)

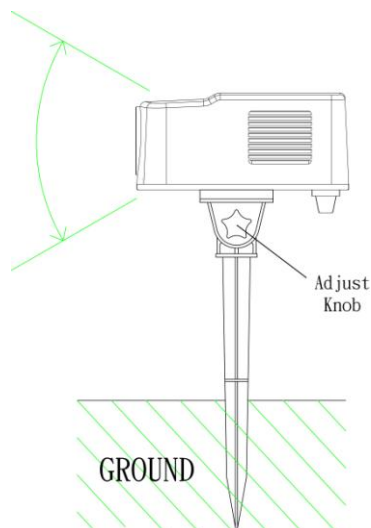

III. OPERATION

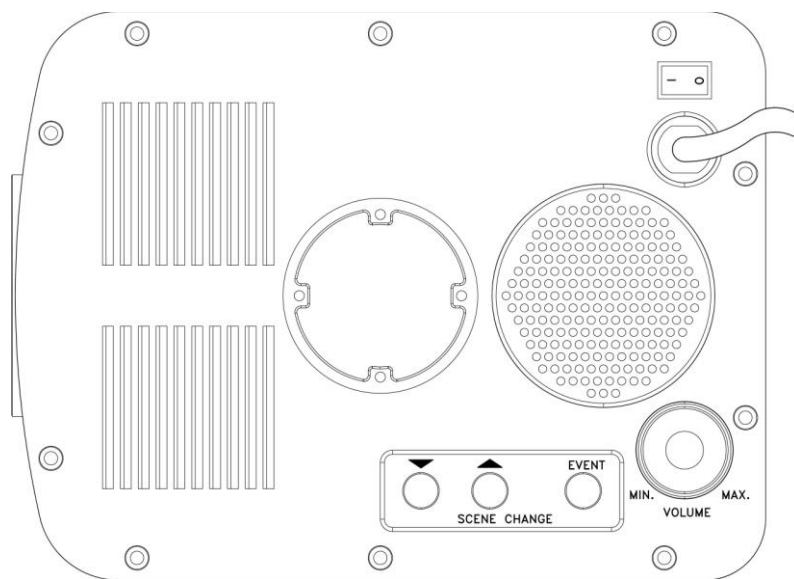

1. Adjust the positioning of the unit on the stand so that the show is aimed at your desired projection surface.
2. Once the unit is plugged in, turn the POWER switch to the ON position.
3. When the POWER switch is in the ON position, the unit will begin automatically and play continuously.
4. Use the VOLUME dial to adjust the volume of the music.
5. Use the SCENE CHANGE buttons to move among the Christmas carols.
6. Press the EVENT button to switch from Christmas to a different holiday: New Year's, Halloween, and Birthday.

IV. CARE INSTRUCTIONS

1. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks in enclosure, loose connections or exposed wire.
2. When storing the product, carefully remove the product from the current location, including trees, branches or bushes, to avoid any undue strain or stress on the conductors, connections and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
4. If necessary, clean product by wiping with a soft, dry cloth.

V. SONG LIST

1. Joy to the World
2. Here Comes Santa Claus
3. Jingle Bells
4. Deck the Halls
5. God Rest Ye Merry Gentlemen
6. We Wsh You a Merry Christmas
7. O Christmas Tree
8. Jolly Old St Nicholas
9. Hark! The Herald Angels Sing
10. O Little Town of Bethlehem
11. Here We Come A-Caroling
12. Dance of the Sugar Plum Fairy
13. Let it Snow
14. Walking in a Winter Winterland
15. Santa Claus is Coming to Town
16. Halloween Medley
17. Auld Lang Syne
18. Happy Birthday

VI. RATINGS

Electrical Rating:

AC 120V ~ 60Hz, 47 Watts Max.

Laser Output Rating:

Wavelength- 532nm, Output Power < 5mW

VII. TROUBLESHOOTING

Problem	Likely Cause	Solution
No laser show and no music	No power	Make sure the main power cord is plugged into a working outlet
	Unit needs to be reset	Turn main power OFF, then ON
No laser, but music plays	Projection surface is too dark or there is too much ambient light	Effect is best achieved at night on a light projection surface
	Laser is aimed incorrectly	Re-adjust the unit so that it faces the projection surface
No music is heard, but laser is playing	Volume is too low	Adjust the volume dial on the control panel toward MAX position
Unit is tilting downward without user interaction	Unit is loose on ground stake	Adjust the unit to desired position and tighten the adjust knob to secure

For more information about this product, please call 1-800-467-9627, or visit our website

www.mrchristmas.com. We will be happy to help you!

VIII. WARRANTY

The following is only applicable to customers in the USA:

Mr. Christmas warrants to the original consumer / purchaser of the **MUSICAL CARTOON LASER™** that it will be free from defects in material and workmanship for a period of 90 days from the date of purchase. Any liability of Mr. Christmas under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer / purchaser and a description of the defect. Please call warranty service at 1-800-467-9627 for a claim number and instructions on how and where to return the item.

Mr. Christmas shall not be liable for any other damages or loss. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the limitation or exclusion may not be applicable to certain consumers / purchasers.

This warranty does not cover defects caused by damage in transit, abuse, accident, negligence or repairs made by others. This warranty gives the consumer/purchaser specific legal rights. The consumer/purchaser may also have other rights which vary from state to state.

IX. Federal Communications Commission Code, Part 15

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna
- 2) Increase the separation between the equipment and the receiver
- 3) Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- 4) Consult the dealer or an experienced radio / TV technician for help

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ACTUAL PRODUCT MAY VARY SLIGHTLY FROM PHOTOGRAPHS / DRAWINGS IN THE INSTRUCTION MANUAL

MUSICAL CARTOON LASERTM

© Mr. Christmas Inc.
5841 East Shelby Drive
Memphis, TN 38141
Phone: 1-800-467-9627

Made in China

Mr. Christmas, LTD. / Mr. Christmas, INC.

Date of first issue: 03/05/2014

<http://www.mrchristmas.com>