



---

# OWNER'S MANUAL

## BARREL GRILL

Product code: 0-01798745-4

UPC code: 0 45774 87859 2

Date of purchase: \_\_\_\_/\_\_\_\_/\_\_\_\_

# BBQ-PRO Charcoal Grill Assembly Instructions

## Tips and Features for safety and ease of use

Verify that all parts are included with your grill before beginning assembly by checking the Parts List inside. If all parts are not included, please e-mail us at [service@nanshanint.com](mailto:service@nanshanint.com) or call us toll free 1-877-998-1697 from 9:00 AM to 5:00 PM EST Monday to Friday for assistance.

**USE DIAGRAM(S) PROVIDED FOR ASSEMBLY.** Leave nuts half-tightened on the grill during assembly until unit is completely assembled, then finish tightening nuts. Must tighten all of nuts before using this item.

### SAFETY GUIDELINES



#### 1. This grill is intended for **HOUSEHOLD OUTDOOR USE**



**ONLY.** Do not attempt to use grill in enclosed areas or under an overhead cover of any kind, including a tent or patio cover.

Never use the grill with its back and sides closer than 36 inches to any combustible wall or surface.

2. Place your grill outdoors on a firm, level surface. Do not use this grill on a surface that will burn or melt, such as a plastic or artificial surface or wood table. Keep grill away from wooden fences, overhanging trees, or other flammable objects before adding and lighting charcoal.
3. **DO NOT USE GASOLINE, ALCOHOL OR KEROSENE IN THIS GRILL.** Use only commercial charcoal lighter fluid with charcoal briquettes or pre-soaked charcoal briquettes. Prepare charcoal according to the product's instructions. Do not exceed 5 lbs of charcoal briquettes in this grill per use.
4. After lighting charcoal, do not leave grill unattended.
5. Remember to keep children and pets away from lit grill at all times.
6. To avoid harm to people, pets, or property, do not move the grill once the charcoal has been lit.
7. Once coals are lit, the grill and surrounding surfaces become very hot. Use proper outdoor cooking mitts and utensils, and avoid skin contact with all hot surfaces on grill.
8. To extinguish charcoal after cooking, douse coals with sand or spray with a fine mist of water.
9. After your grill has cooled, remove ashes from the catcher and cover, store the grill when not in use.



	<b>WARNING</b>	
<b>CALIFORNIA PROPOSITION 65</b>		
1. Combustion by-products produced when using this product contain chemicals known to the State of California to cause cancer, birth defects, and other reproductive harm.		
2. This product contains chemicals, including lead and lead compounds, known to the State of California to cause cancer, birth defects or other reproductive harm.		
<b><i>Wash your hands after handling this product.</i></b>		

	<b>WARNING</b>	
<ul style="list-style-type: none"><li>• Read and follow all Safety, Assembly, and Use and Care Instructions in this Guide before assembling and cooking with this grill.</li><li>• Failure to follow all instructions in this Use and Care Guide may lead to fire or explosion, which could result in property damage, personal injury or death.</li></ul>		

 

 



 




# BBQ-PRO Charcoal Grill Assembly Instructions

## Tools needed for assembly:

Screwdriver (not provided)

Open end wrench (not provided)

## **HARDWARE PACK LIST**


A: (5pcs) M6x10 Philips Head Screw		F: (19pcs) M6 Lock Nut	
B: (2pcs) M6 Carriage Bolt		G: (2pcs) M4 Lock Nut	
C: (12pcs) M6x40 Philips Head Screw		H: (1pc) M6 Cap Nut	
D: (2pcs) M6x50 Philips Head Screw		I: (1pc) Wing Nut	
E: (2pcs) R Cotter Pin		J: (1pc) M10 Fiber Washer	
		K: (1pc) Spring	

PARTS LIST: To purchase replacement parts, call 1-877-998-1697


<p><b>1.Bottom Rack (1)</b></p>  <p>300621N</p>	<p><b>2.Wheels (2)</b></p>  <p>300639N</p>	<p><b>3.Thermometer (1)</b></p>  <p>300605N</p>
<p><b>4.Side Shelf Bracket Long(2)</b></p>  <p>300633N</p>	<p><b>5.Elbow Leg (2)</b></p>  <p>300640N</p>	<p><b>6.Short Leg (2)</b></p>  <p>300642N</p>
<p><b>7.Long Leg (2)</b></p>  <p>300641N</p>	<p><b>8.Axle (1)</b></p>  <p>300638N</p>	<p><b>9.Side Shelf (1)</b></p>  <p>300620N</p>
<p><b>10.Handle (1)</b></p>  <p>300627N</p>	<p><b>11.Bottom Bowl (1)</b></p>  <p>210355N</p>	<p><b>12.Charcoal Grid (1)</b></p>  <p>300622N</p>
<p><b>13.Smoke Stack (1)</b></p>  <p>300624N</p>	<p><b>14.Side Shelf Bracket Short (2)</b></p>  <p>300636N</p>	<p><b>15.Leg Bracket (2)</b></p>  <p>300632N</p>
<p><b>16.Smoke Stack Cap (1)</b></p>  <p>300635N</p>	<p><b>17.Leg Bowl (2)</b></p>  <p>300634N</p>	<p><b>18.Lid (1)</b></p>  <p>200472N</p>
<p><b>19.Cooking Grid (3)</b></p>  <p>300631N</p>	<p><b>20.Brand (1)</b></p>  <p>300618N</p>	<p><b>21.Air Vent (1)</b></p>  <p>300623N</p>
<p><b>22.Axle Cap (2)</b></p>  <p>300643N</p>		

## BBQ-PRO Charcoal Grill Assembly Instructions


STEP 1: Pay close attention to when assembling grill legs. Left leg (6) is shorter to accommodate wheels.  
Insert left short leg (6) and right long leg (7) into elbow leg (5) as shown.  
Insert the leg bowl (17) to the bottom of legs (7).  
Note: Please note to keep the holes on elbow legs(5) facing inward for installing bottom bowls in later steps.

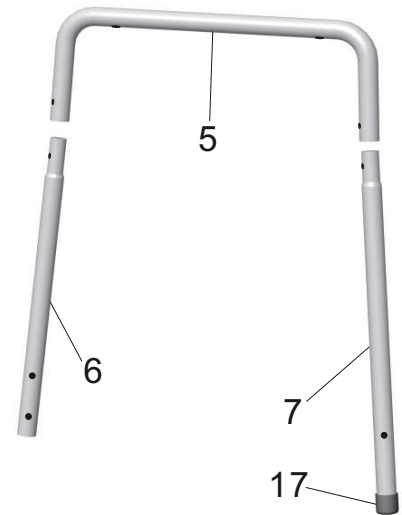

STEP 2: Attach leg bracket (15) to short leg (6) as shown using M6\*40 Philips head screw (C) and M6 nut (F).  
Repeat Step 2 on opposite side.  
Do not fully tighten screws at this time.

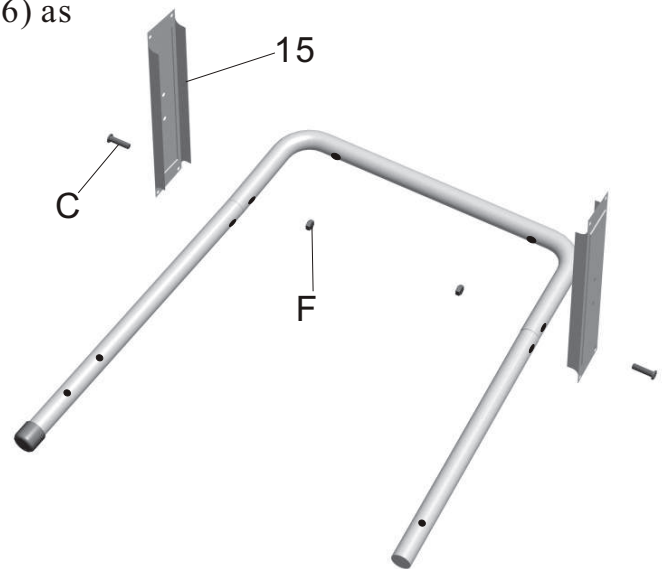

STEP 3: Pay close attention to when assembling grill legs. Left leg (6) is shorter to accommodate wheels.  
Insert left short leg (6) and right long leg (7) into elbow leg (5) as shown.

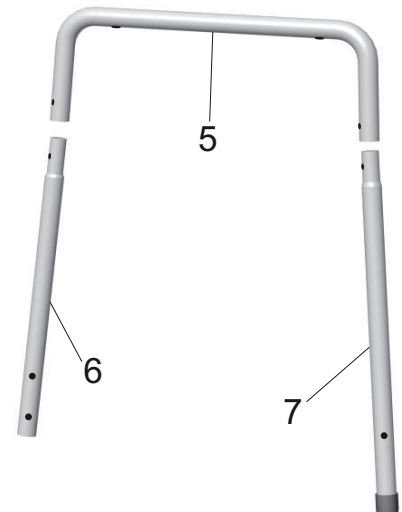


## BBQ-PRO Charcoal Grill Assembly Instructions


STEP 4: Helper is needed for this step.  
Insert bottom rack (1) into holes of  
assembled grill as shown.



STEP 5: Attach leg bracket to short leg as shown  
using M6\*40 Philips head screw (C)  
and M6 nut (F).  
Repeat step 5 on opposite side.  
Do not fully tighten screws at this time.

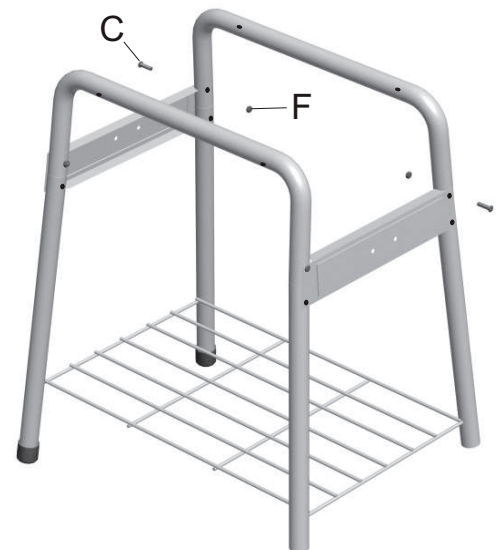

STEP 6: Insert axle (8) through holes on short legs.  
Slide wheel (2) onto axle and secure using  
R cotter pin (E). Snap axle cap (22) onto end of  
wheel assembly as shown.  
Repeat step on opposite side for remaining wheel.  
Note: Please make sure the side of the wheels with  
3 holes is facing outwards.

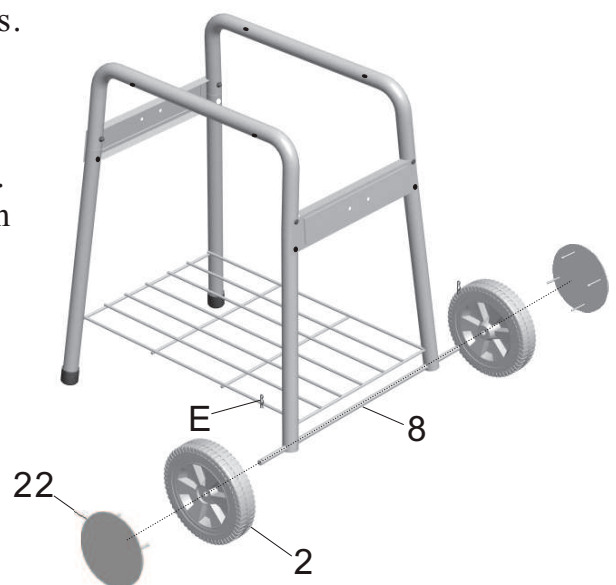


## BBQ-PRO Charcoal Grill Assembly Instructions

STEP 7: Place bottom bowl (11) onto assembled legs with smoker box opening on the same side as the front short leg.

Tightly secure bottom bowl to elbow leg using M6\*40 Philips head screws (C) and M6 nuts (F).


Do not fully tighten screws at this time.

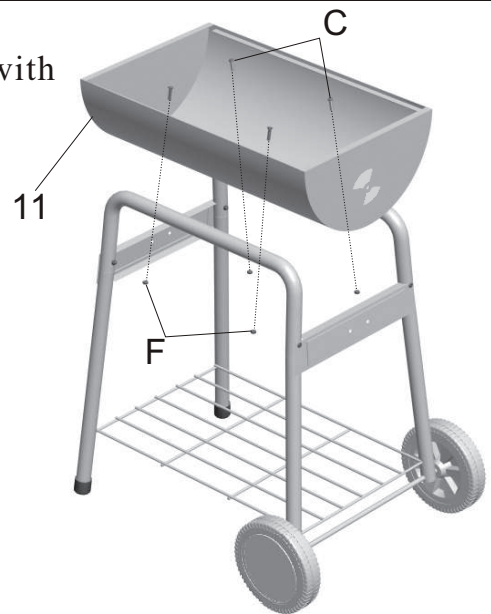

Helper is needed for this step.



STEP 8: Align holes on assembled side shelf (9) with holes on bottom bowl as shown.

Insert M6\*50 Philips head screws (D) through holes on bottom bowl and side shelf bracket short (14) into side shelf (9). Secure using M6 nuts (F) as shown.

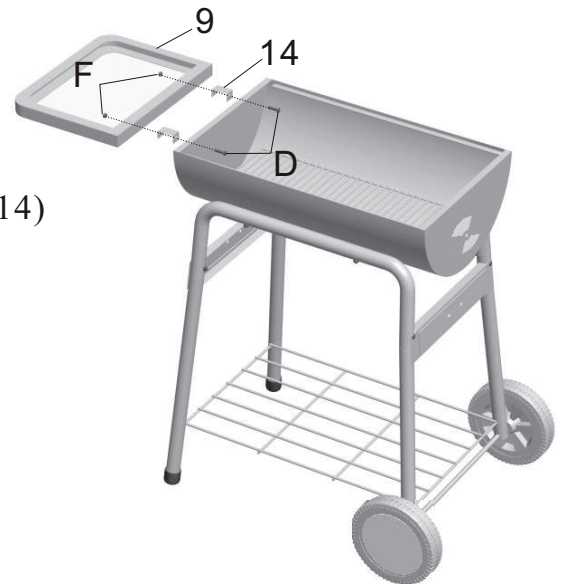


STEP 9: Attach side shelf brackets long (4) to below holes in leg brackets as shown in illustration and using M6\*40 Philips head screws (C). Secure using M6 nuts (F).

Attach side shelf brackets long (4) to side shelf using M6\*10 Philips head screws (A).

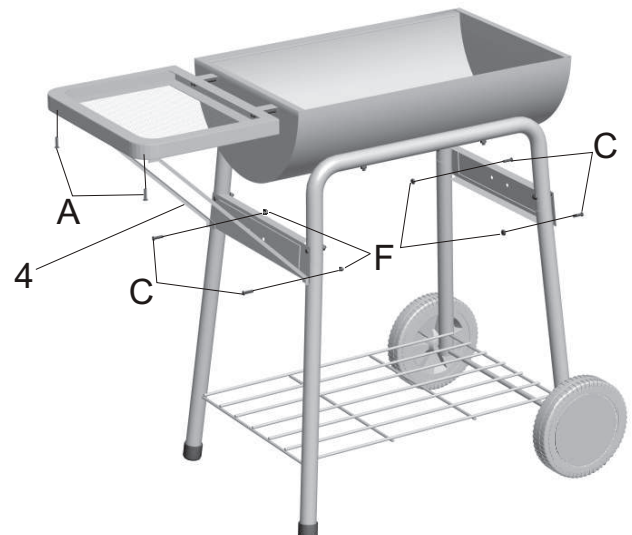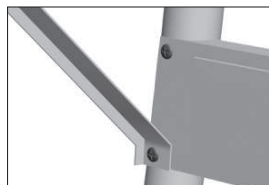

## BBQ-PRO Charcoal Grill Assembly Instructions

STEP 10: Do not over tighten. Air vent should move freely.  
Attach air vent (21) to bottom bowl using M6\*10 screw (A)  
and M6 nut (F) as shown.  
Attach brand (20) to grill lid (18) by inserting 2 M4 nut (G).

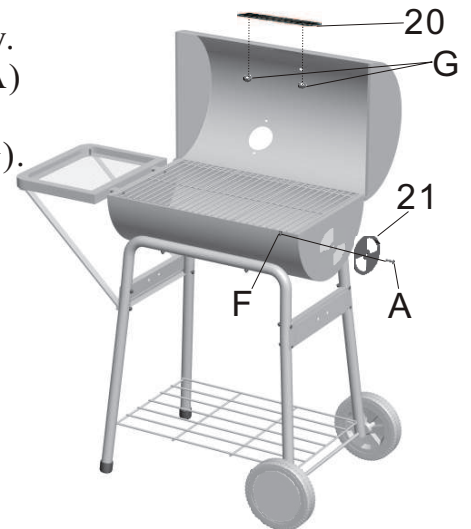

STEP 11: Align grill lid (18) with bottom bowl as shown.  
Secure grill lid (18) to bottom bowl using M6 Carriage  
Bolt (B).





STEP 12: Attach handle (10) to grill lid using M6 nut (F).



## BBQ-PRO Charcoal Grill Assembly Instructions

STEP 13: Attach smoke stack (13) to grill lid and secure with M6\*10 Philips head screws (A) and M6 nuts (F) as shown.

Note that the smoke stack is inserted from inside the grill lid.

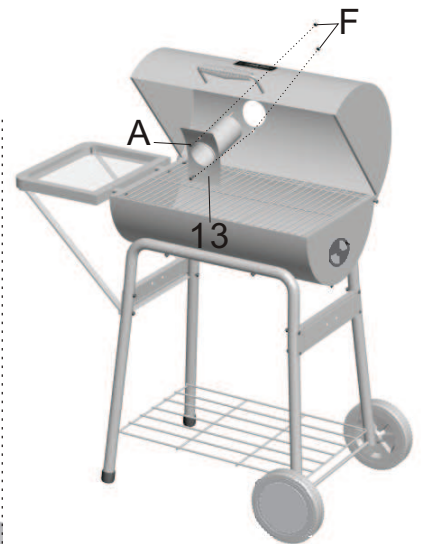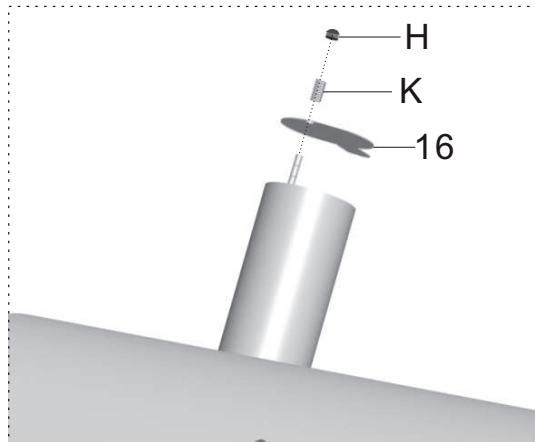

STEP 14: Insert thermometer (3) through slotted hole in grill lid. Secure thermometer (3) to lid with wing nut (I) and M10 washer (J).



STEP 15: Insert cooking grid (19) and charcoal grid (12) into bottom bowl.



# BBQ-PRO Charcoal Grill Assembly Instructions

## Grilling Instructions and Tips:

1. Preheat the cooking grid for 5-10 minutes.
2. Before heating grid, lightly coat cooking grid with cooking oil to prevent food from sticking.
3. Your grill is equipped with a lid vent to vary the cooking heat. Grasp vent lever with gloved hand or metal pliers and rotate vent to increase openings to raise heat. Decrease vent openings to lower heat.
4. The ash catcher on this grill is equipped with a damper door on each side to vary cooking heat. Use metal pliers to grasp damper door tab and slide the door to increase hole openings to raise heat. Decrease openings to lower heat.

**WARNING:** To avoid injury, DO NOT touch lid vent or damper with bare hands unless grill is completely cool. Use gloved hand or metal pliers to adjust lid vent openings. Use metal pliers to adjust damper openings.

## Maintenance And Storage:

Allow ashes and coals to completely cool before moving your grill. Always empty ashes and charcoal before storing. Allow grill to cool completely before cleaning. Clean with hot, soapy water and rinse completely. Use a wire brush if necessary on cooking grid.

**WARNING:** To ensure that it is safe to eat, food must be cooked to the minimum internal temperatures listed in the table below.

USDA* Recommended Safe Minimum Internal Temperatures	
Beef, Veal, Lamb and Pork: Whole Cuts**	145° F
Fish	145° F
Beef, Veal, Lamb and Pork: Ground	160° F
Egg Dishes	160° F
Turkey, Chicken & Duck: Whole, Pieces & Ground	165° F

\*United States Department of Agriculture.

\*\*Allow meat to rest three minutes before carving or consuming.

### 90 Day Limited Warranty

If this BBQ-Pro product fails due to a defect in material or workmanship within 90 days from the date of purchase, return it to any Kmart store or other BBQ-Pro outlet in the United States with your proof of purchase for free replacement.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Kmart Corporation, Hoffman Estates, IL 60179

For further information, contact the manufacturer, toll free at 1-877-998-1697.

For All Questions/ Comments, Missing/ Defective Parts Requests:

- Please Contact By:

1. [service@nanshanint.com](mailto:service@nanshanint.com)
2. Call toll-free # 1-877-998-1697 from 9:00 AM to 5:00 PM EST  
Monday to Friday
3. Fax # 1- 905-754-3898

With the following Required Customer Purchased Information:

1. Complete Name
2. Email address & phone #
3. Item #/Description - Product Code #, KSN #, UPC Code # - From Front cover of Instruction Manual
4. Part description with part # - From Part List in Instruction Manual, plus # of pcs
5. Copy of receipt
6. Mailing address



Made in / Hecho en CHINA  
Distributed by Kmart Corporation, Hoffman Estates, IL 60179

**See our extensive assortment of outdoor living products  
on-line at [www.sears.com](http://www.sears.com) and [www.kmart.com](http://www.kmart.com)**