

Pure Fun Kids' Jumper Model No. 9001KJ Owner's Manual

Please read all the instructions before using this product.

Consult a physician before beginning any exercise program or strenuous activity.



Do not allow more than one person on this product at any time.

Children must be supervised by an adult at all times.

ADULT ASSEMBLY REQUIRED.





This product is not suitable for children under 3 years of age. It contains small parts which may cause choking.

Age Recommendation:

3 - 8 YRS

Pure Fun is a Trademark of Pure Global Brands, Inc.



For special offers and to ensure warranty protection, register your product at: www.pureglobalbrands.com

OWNERS MANUAL CUSTOMER SERVICE INFORMATION

Thank you for purchasing our **Pure Fun™ Kids' Jumper**.

At Pure Global Brands, we want all of our customers to be completely satisfied with their purchase. Please take time to review the contents of the product you have received to make sure that all of the parts are included. If you find that any parts are missing or damaged, we will happily provide replacement parts at no charge within 30 days of purchase. Please keep in mind that for select damaged part replacement requests, we will require a photo for submission to our quality control office.

To order these parts, or if you have any other questions or concerns about this Pure Global product, please e-mail the Pure Global Brands, Inc. customer service department at: customerservice@puregbi.com or contact us at 1-866-498-5269.

You can also visit our website at: www.pureglobalbrands.com

If you request replacement parts, please be sure to include the following information in your correspondence:

YOUR NAME
YOUR SHIPPING ADDRESS
YOUR EMAIL ADDRESS
RETAILER WHERE YOU PURCHASED PRODUCT
DATE OF PURCHASE
ORDER # (IF AVAILABLE)
PRODUCT MODEL #: 9001KJ
SERIAL #
PRODUCT NAME: Kids' Jumper
PART # (located in this manual)
QUANTITY NEEDED
PICTURE OF DAMAGED PART(s) – SUBMIT VIA Email, Fax, or Mail

Again, thank you for purchasing a Pure Global Brands product.

Sincerely, Customer Service Pure Global Brands, Inc. 1-866-498-5269

LIMITED WARRANTY

Pure Global Brands, Inc. warrants this product to be free from defects in workmanship and materials under normal use and conditions for the duration of the period outlined below FROM THE DATE OF ORIGINAL PURCHASE. This Limited Warranty is not transferrable and is available only for the original purchaser of the Product.


The various components of this equipment are warranted against defects and workmanship for the following time period(s):

• 90-Days

All warranty coverage extends only to the original retail purchaser from the date of purchase. Pure Fun's obligation under this Warranty is limited to replacing or repairing, at Pure Fun's option, the product at one of its authorized service centers. All products for which a warranty claim is made must be received by Pure Fun at one of its authorized service centers and accompanied by sufficient proof of purchase (photocopy of the original store receipt, indicating the date of purchase). All freight and handling fees are the responsibility of the consumer to pay, both to and from Pure Fun. All warranty claims must be preauthorized by Pure Fun. Preauthorization can be obtained by calling 866-498-5269. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage, or repairs not provided by a Pure Fun authorized service center or for products used for commercial or rental purposes. This warranty does not cover ordinary wear and tear, weathering, failure to follow directions, improper installation, improper maintenance or acts of Nature (such as damage caused by wind, lightning, snow, water or ice). Weather damage, damage caused by unauthorized repair work or damage caused by improper use of the products are not covered by the product warranty. No other Warranty beyond that specifically set forth above is authorized by Pure Fun.

PURE FUN IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THE WARRANTY EXTENDED HERE-UNDER IS IN LIEU OF ALL OTHER WARRANTIES AND PURE FUN SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.

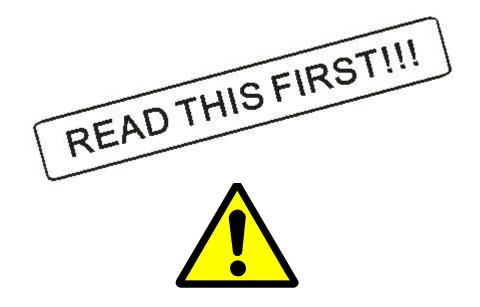

WARNING CHOKING HAZARD – Small parts NOT for children under 3 years.

Warning

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risks of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

WARNING IMPORTANT – PLEASE READ!

Please visit: **www.pureglobalbrands.com** for any important product information updates and/or additional safety warnings before assembling or using this product. Use search word: **9001KJ**

WARNINGS - GENERAL SAFETY ADVICE

Please read these instructions in their entirety before use and retain for future reference.

Ensure that this product has been assembled correctly per the instructions in this manual. This manual is designed to help you assemble, adjust, maintain and use the product. It contains important information regarding your child's safety and use of this equipment.

- This unit must be assembled and disassembled by ADULTS ONLY.
- Children must be supervised at all times when using this equipment. **DO NOT** leave children unattended at any time.
- Children **MUST NEVER** use the trampoline unless supervised by a responsible adult with knowledge of trampoline use.
- This trampoline is suitable for use by most children 3 TO 8 YEARS OF AGE.
- DO NOT exceed the MAXIMUM WEIGHT limit of 75lbs (35kgs) regardless of age.
- This trampoline is NOT for adult use.
- The trampoline handle is only intended to assist your child with controlling their bounce and maintaining their balance on the mat. The handle should NOT be used for any other purpose or as a climbing feature.
- This trampoline is only designed for normal residential indoor use. It is NOT intended for commercial applications and/or in public areas such as schools, parks, nurseries, day schools, day cares, etc. For INDOOR USE ONLY: Your trampoline should be placed at a safe distance from any obstructions, stairways, windows, furniture, appliances, etc.
- **DO NOT** allow more than one person on the trampoline at a time.
- **DO NOT** wear glasses or helmets when using the trampoline.
- **DO NOT** fall or bounce on your knees -- this can cause injury.
- **DO NOT** somersault this can cause serious injury.
- **DO NOT** allow other persons to go under, sit, stand or lie on or near the frame pads or mat while the trampoline is in use.
- **NEVER** store items or playthings under the trampoline.
- **ALWAYS** secure this trampoline against unauthorized and/or unsupervised use.
- **DO NOT** use or allow use of the trampoline under the influence of any substance or medication which may impair the supervisor's or jumper's judgement and/or coordination.
- Mount and dismount the trampoline with care as injury may result.
- **ALWAYS** remove jewelry, belt buckles or any other sharp objects before using the trampoline.
- **ALWAYS** jump in the middle of the trampoline bed.
- ALWAYS wear socks when using the trampoline.
- **NEVER** wear footwear (e.g. shoes) when using the trampoline.
- Before using this product, inspect and replace any worn, defective or missing parts. Although the pad, foam and mat are made to take a lot of wear, over time these parts may need to be replaced. It is important to check the trampoline periodically to ensure the frame is steady and all parts are in good condition.
- Please read and refer to other warnings and use information in the trampoline instructions before use.
- Please read and refer to other warnings and use information in the Safe Play Tips before use.
- Dispose of all packaging materials safely and per local ordinance.

Maintenance Tips

If the paint is chipped, we recommend you lightly rub the damaged area and cover using a non-toxic enamel paint.

9001KJ Parts List

Please retain this information for future reference. A wrench (included) is required for assembly.


Ref	Description	Illustration	Qty
A	Jumping Mat		1
В	Frame Leg with square holes		2
С	Frame Leg with round holes		2
D	Handle Arch	3	2
E	Frame Leg Foams		4
F	Long Bolts	3	4
G	Short Bolts		4
Н	Nut		8
ı	Washer	0	8
J	Spacer	(0000)	6
К	Wrench	2	1

ASSEMBLY INSTRUCTIONS

BEFORE YOU START:

- · Please read all instructions carefully.
- Please dispose of all packing material carefully and keep it away from children.
- Please read the SAFE PLAY TIPS near the end of this instruction booklet prior to using the trampoline.
- Ensure you have all of the parts listed on the Parts List. If any parts are missing please contact customer service.
- Take a few minutes to familiarize yourself with the contents and instructions before attempting assembly.
- When you are ready to start, make sure that you have the correct tools at hand, and adequate space for assembly.
- Adult Assembly Required.

Step 1: Find a clear area with appropriate space, then lay out the trampoline frame parts as shown below. Make sure to match Part B to B, Part C to C and Part D to D.

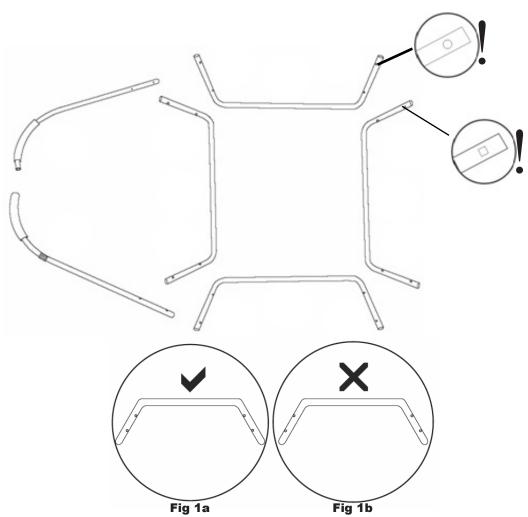


*Match the holes to what you see in Fig 1a. The holes must be on the inside


Step 2: Unfold the mat and slide the 4 Frame Leg Foams in between the pre-sewn loops that are surrounding the mat. If needed, see Fig. 2 for clarification.

*The warning label should be facing upward.

Fig. 2

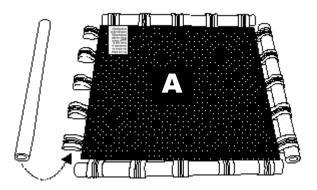

Step 3: Slide the Frame Legs into the Frame Leg Foam. Make sure you keep the Frame Legs in the same order which was detailed in Step 1.

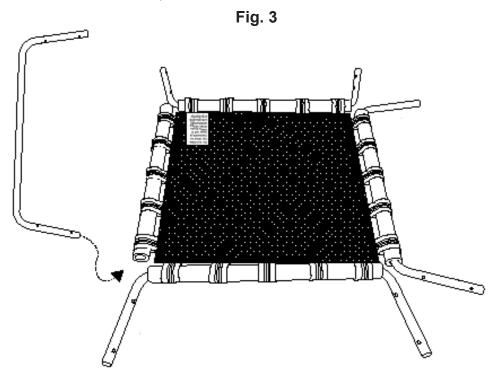


Step 4: Assemble the handle by affixing the handle legs together to form an arch. Make sure the locking snap pin fits securely into the hole. DO NOT insert bolts into the rear legs on the trampoline until the Handle has been secured.

Place the handle arch in between the Frame Legs. Make sure that each of these is separated with 2 spacers.


NOTE: DO NOT FULLY TIGHTEN THESE NUTS BEFORE ALL FRAME LEGS ARE ASSEMBLED IN STEP 6.

As shown in Fig 4, insert the Long Bolts through the square shaped holes and tighten using a washer and nut. Repeat this step for the other end of the handle arch, again ensuring that 2 spacers are used.

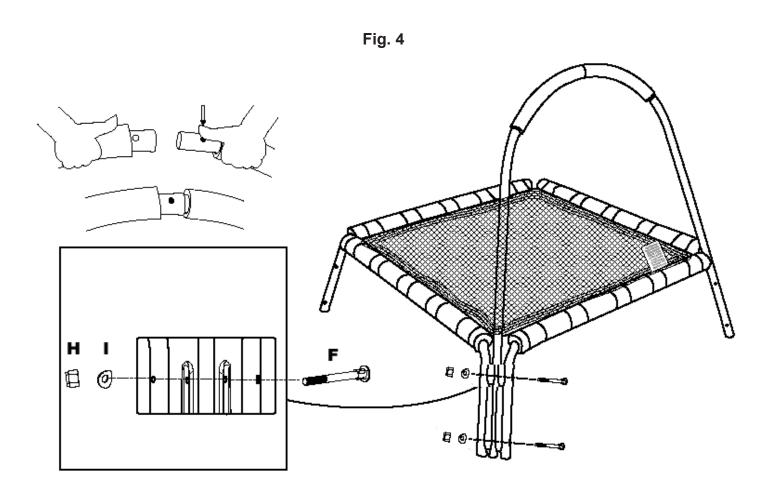


Step 5: To secure the Frame Legs together, place a spacer between each of the frame legs. Next, insert a shorter bolt into each of the square shaped holes, passing through both the spacer and the hole on the next frame leg. Tighten using a washer and nut. Repeat this for the remaining frame legs as detailed in Fig 5. NOTE: DO NOT FULLY TIGHTEN THE NUTS.

The trampoline must be on flat, level ground and the mat and leg structure is fully centered and squared. Once this is done, fully tighten each nut and bolt. Make sure you remember to tighten the nuts and bolts from Step 4 before proceeding.

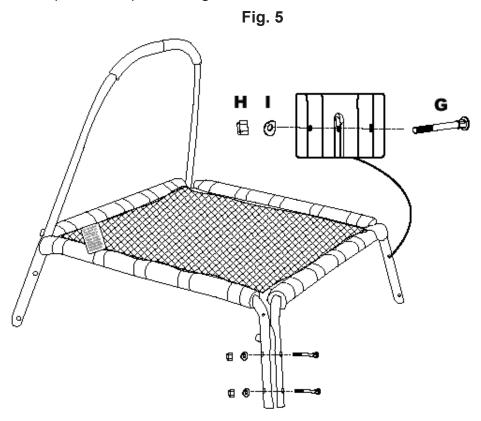

Step 6: If the trampoline is not flat (meaning either leg cannot touch the ground), then there is too much tension on the fittings of the tubes. Press the trampoline diagonally, or bend a bit of the leg that doesn't touch the ground – this will make the trampoline stand completely flat. (See Fig. 6a and Fig. 6b)

Ensure all the nuts and bolts are secure before use.

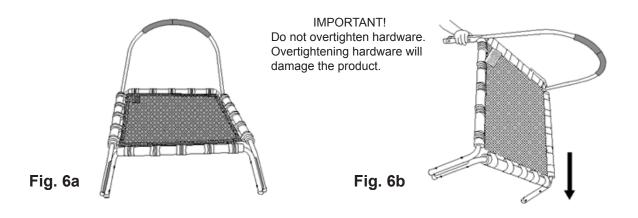

CARE AND MAINTENANCE

Your trampoline is designed to be very low maintenance.

- If any part of the trampoline requires cleaning, simply wipe with a damp cloth. (Do not jump on the trampoline after cleaning until completely dry).
- If the paint is chipped, we recommend you lightly rub the damaged area and cover using a non-toxic enamel paint.

IMPORTANT: While no regular maintenance is required, you must inspect the trampoline before each use and replace any worn, defective or missing parts. The following conditions could represent potential hazards: missing, improperly positioned, or insecurely attached frame padding; punctures, frays, tears, or holes worn in the bed or frame padding; deterioration in the stitching or fabric of the bed or frame padding; a bent or broken frame; a sagging jump mat; sharp protrusions on the frame or suspension system. Cease using trampoline immediately and secure it against unauthorized use if any of these conditions are present.

SAFE PLAY TIPS

- ALWAYS supervise your children while they are playing on or around the trampoline.
- The unit is NEVER to be used by more than one child at a time.
- The trampoline is designed so the child can bounce and balance on the mat. Successfully meeting this challenge builds children's confidence as well as helping muscular development and coordination. Confidence depends on success so it is important to allow your children to learn at their own pace, giving them a helping hand when necessary.
- NEVER allow your child to attempt somersaults or flips on this trampoline as it is not designed for such play features.
- The trampoline should NOT be used in conjunction with, or attached to any other play equipment.
- The trampoline handle is only intended to assist your child with controlling their bounce and maintaining their balance on the mat. NEVER allow a child to use the handle for any other purpose or as a climbing feature.
- This trampoline is NOT intended to be used by adults.
- Children are NOT to stand or sit on the edge of the trampoline.
- Children are NOT to perform knee or drop bounces on the trampoline.
- ALWAYS secure the trampoline when not in use to prevent unauthorized and/or unsupervised use.
- NEVER store items, playthings, or allow pets or other children to crawl under the Jump Mat at any time.

FREQUENTLY ASKED QUESTIONS

Question: "The foam padding or mat is damaged, what should I do?"

Answer: IF YOU ARE STILL WITHIN YOUR WARRANTY PERIOD (90-DAYS FROM INITIAL PURCHASE) YOU SHOULD CONTACT CUSTOMER SERVICE (info below). YOU CAN ALSO PURCHASE REPLACEMENT PADDING AND MATS AT: http://www.pureglobalbrands.com

Question: "I had a part missing from my box" or "something was damaged in shipping, can you send it to me?"

Answer: IF IT HAS BEEN 30 DAYS OR LESS FROM THE DATE OF YOUR INITIAL PURCHASE, YOU CAN CONTACT CUSTOMER SERVICE (info below) FOR A REPLACEMENT PART TO BE ISSUED.

CUSTOMER SERVICE CONTACT INFO: Email: customerservice@puregbi.com Telephone: 866-498-5269 Fax: 561-833-1996