

GARDEN PLAYHOUSE

(MODEL # WP-518S)



FOR RESIDENTIAL USE ONLY



WARNING

- Carefully read and understand the entire manual before assembling and using this product.
- This product is intended for use by children from ages 3 to 8.
- Do not allow more than 4 children to use at the same time. Maximum user weight is 100lbs (45kg), with combined weight not to exceed 400 lbs (180kg)
- Assembly requires at least TWO adults.
- Always inspect product thoroughly before each use..

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

DO NOT RETURN TO THE STORE

**For customer service, please call 1-866-370-2131 Monday-Friday 9am-5pm Eastern Time
or visit our website at www.sportspowerltd.net**

SPORTSPOWER LTD

FLAT M, 3/FLOOR, KAISER ESTATE PHASE 3, 11 HOK YUEN STREET, HUNG HOM, KOWLOON, HK

US Toll Free Number 1-800-497-6106

IMPORTANT INFORMATION

Important –Please read these instructions fully before assembly or use.

Dear Valued Customer

Congratulations on your wood playhouse purchase! Please read and completely understand the contents of this owner's manual. This manual contains specific safety instructions that must be followed to prevent injuries and ensure proper maintenance.

This equipment is for residential use only. This play set is NOT intended for public or commercial use. The warranty will be voided if the play set is used in a commercial application.

The product is designed for use by children between the ages of 3-8. Children must NOT play on this set until it is properly assembled and inspected by an adult. Adult supervision is required at all times while children are playing on the equipment. Do not allow children under six (6) years old to be near during the assembly of this product due to choking hazards of small parts.

The equipment must be installed on level ground. Uneven ground must be leveled prior to installation. Installation on sloping or uneven ground will put stress on the joints, causing the unit to become loose and unstable which may result in serious injuries. You must ensure there are no obstructions or structures (e.g. electrical wires, branches, house, fence, garage, etc) within six (6) feet from the equipment.

The U.S. Consumer Product Safety Commission's Outdoor Home Playground Safety Handbook recommends to install and maintain the playground equipment over at least 9 inches of wood chips, mulch or shredded rubber (for equipment up to 8 feet high) or sand or pea gravel (for equipment no more than 5 feet high) as shock absorbing material. Dirt and grass, which are the most prevalent surfaces under home playground equipment, do not adequately protect children from serious head injuries. Install protective surfacing at least six feet in all directions from play equipment. Do not install your play set over hard surface, e.g. asphalt, concrete, packed earth, tile or brick floor. Do not allow children to use the product during windy or wet weather conditions.

Please thoroughly read and follow the instructions in this Owner's Manual to ensure proper and enjoyable play for your children. The equipment must be checked before each use and maintained regularly. This includes, but is not limited to inspecting the play set for cracks, excess wear, missing parts, loose connections, and for overall integrity. When the set shows any signs of weakness or damage, you must stop using the play set immediately, properly store the set or restrict access by users until the condition is resolved.

Your product is warranted against defects in material and workmanship. Extended warranty is also offered to those customers registering their products at www.sportspowerltd.net within 14 days from the date of purchase. Please refer to our warranty policy at the back of this manual for details.

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR PRODUCT, DO NOT RETURN TO THE STORE
For customer service, please call 1-866-370-2131 Monday-Friday 9:00am-5:00pm Eastern Time or visit
www.sportspowerltd.net

Safety Information	2-6
Parts	11-14
Assembly Instructions	16-28
Warranty	29-30





SAFETY INFORMATION

Important –Please read these instructions fully before assembly or use.

BEFORE YOU BEGIN: Carefully read all instructions in this manual before assembling and using this product. The unit must be assembled by adults. Heavy duty working gloves must be worn to avoid injuries during assembly.



WARNING

READ ALL INSTRUCTIONS BEFORE ASSEMBLY OR USING THIS EQUIPMENT

Observing the following statements and warnings reduces the likelihood of serious or fatal injury.

AGE AND WEIGHT LIMIT

- This product is designed to be used by up to four (4) children between the ages of 3 to 8. Maximum user weight is 100 pounds (45.4kg) each with a combined maximum weight of 400 pounds (180kg.)
- The play set is designed for children over three (3) years of age. Use by smaller children can result in entrapment and serious injury.



WARNING

- On-site adult supervision is required at all times for children of all ages.
- Do not allow use by children with any physical condition that may affect his/her ability to use this equipment safely.
- Children must NOT play on this set until it is properly assembled and inspected by an adult.
- ALWAYS prevent access and secure from any unauthorized use when there is no adult supervision.
- DO NOT allow pets or other animals near the equipment to prevent damage or injuries.
- You MUST read and follow all instructions in this manual before installing or attempting to use the Wood Play Set.
- Do not allow children to wear inappropriate items, such as but not limited to: loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.
- Owners shall be responsible for maintaining the legibility of the warning labels.
- You must instruct children not to walk close to, in front of, behind, or between moving items.
- You must instruct children to remove their bike or other sports helmet before playing on the playground equipment.
- You must dress children with full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip flops, and sandals.

WEATHER CONDITIONS

- Use the play set only when the parts are clean and dry. If the equipment is wet, the user could slip and suffer injuries.
- Please be aware of weather conditions when using the equipment. If it is too windy, users could lose control and suffer injuries. The playground equipment must be properly stored away or restricted from use during inclement weather such as heavy winds or severe weather storms.
- Failure to follow these important requirements may result in the warranty being voided and/or safety violations that may possibly result in an injury. Please watch your children carefully during the installation and assembly of the Wood Play set to avoid injury.
- Please also pay close attention to the periodic maintenance that is required to keep you Wood Play Set in a safe condition for maximum enjoyment of backyard fun!



SAFETY INFORMATION

Important –Please read these instructions fully before assembly or use.



WARNING

BEFORE YOU BEGIN ASSEMBLY:

- Take a complete inventory of components using the parts list.
- Sort and lay out the wood pieces. Some wooden components may twist or warp in the carton after packaging. Usually, these parts straighten out when assembled. You may also see some cracking of the grain. This is normal
- Sort all hardware according to size. Do not worry if extra hardware is included.

Find a suitable play location.

- You **MUST** install the Wood Play Set on level ground. Uneven ground must be leveled prior to installation. The manufacturer cannot assume responsibility for any failure from incorrect installation. Installing on sloping ground will put stress on all the joints, which will cause the set to become loose and unstable.
- Find a location where the equipment can be placed more than 6 feet from any structure or obstruction (ex: electrical wires, branches, house, fence, garage) The safe play area refers to a zone extending 6' beyond the gym set on all sides, including the space above the gym set.
- The safe play area must be free of all structures, landscaping, trees and branches, rocks, wires and other obstacles to safe play. Children can be seriously injured running into these obstacles.
- Remove any rocks or any jagged or sharp object that could endanger your children's' safety.
- Remove all tripping hazards from the safe play area. Tripping hazards include but are not limited to: roots, stumps, rocks, landscaping, sprinkler heads, railroad ties, plumbing, and electrical connections.
- **DO NOT** install your gym set over gravel, asphalt, packed earth or any other hard surface. Please refer to CPSC's publication on "Playground Safety" for recommended ground covers (extracts from this publication are included in later pages).

DISPOSAL INSTRUCTIONS

- Please use care when disassembling the equipment. Wear heavy duty working gloves to avoid injuries.
- Fully disassemble the entire unit before disposal. Do not leave partially disassembled equipment parts in areas accessible by children. Do not let children play with any disassembled parts destined for disposal.



WARNING

READ ALL INSTRUCTIONS BEFORE ASSEMBLYING OR USING THIS EQUIPMENT

INSPECTION PRIOR TO EACH USE OR DAILY INSPECTION

- **DO NOT** use the equipment if any bolts or nuts are missing or loose. **ALWAYS** check to ensure the equipment and all parts are well secured and stable before each use.
- **ALWAYS** clear the play area of any rocks, sharp objects, or any materials that could be potentially hazardous to users.
- **DO NOT** attach items to the equipment that are not specifically designed for use with the equipment, including, but not limited to, jump ropes, clothesline, pet leashes, cables and chains as they may cause choke hazards.



SAFETY INFORMATION

Important –Please read these instructions fully before assembly or use.

- The materials used in your product are subject to normal wear. Gradual deterioration of the material will occur, the speed of which will depend on the level of exposure to UV rays, airborne pollution, outdoor weather conditions such as rain and wind and the amount of use. You must inspect the equipment prior to every use. This includes, but is not limited to inspecting the set for cracks, excess wear, missing parts, loose connections, and for overall integrity. When the set shows any signs of weakness, you must stop using the play set immediately, properly store the set or restrict access by users until the condition is resolved.

When conducting inspections, it is recommended that you use the Outdoor Home Playground Safety Checklist published by the US Consumer Product Safety Commission, a copy of which is contained in this user manual.

IMPORTANT INFORMATION

Important –Please read these instructions fully before assembly or use.

The following guidelines are extracts from the Consumer Product Safety Commission Outdoor Home Playground Safety Handbook. It is recommended that you read the entire handbook and take necessary precautions to prevent serious injuries to your children, including:

CHOOSING A SITE

- When you choose a home playground, a location away from roads and driveways and readily visible from inside the home and patios or porches, is important.
- Create a site free of obstacles that could cause injuries-such as low overhanging tree branches, overhead wires, tree stumps and/or roots, large rocks, bricks and concrete.
- Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains. Some sites may need regrading to improve drainage or to reduce the slope.
- Locate play set at least 6 feet from any structure or obstacles, such as a house, fence, sheds, trees or poles. Swings should be further away from structures to the front and rear of the swings-a distance equal to twice the height of the top bar from which the swing is suspended.
- Locate bare metal platforms and slides out of direct sunlight to reduce the likelihood of serious burns. A slide that faces north will receive the least direct sunlight.

SELECT PROTECTIVE SURFACING

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play set. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing.

Loose-Fill Materials

- Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber(EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9-inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9-inch depth.
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

IMPORTANT INFORMATION

Important –Please read these instructions fully before assembly or use.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles

You may be interested in using surfacing other than loose-fill materials-like rubber tiles or poured-in-place surfaces.

- Installations of these surfaces generally require a professional and are not “do-it-yourself” projects
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacture for a report showing that the product has been tested to the following safety standard: ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height-vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below-of your play equipment.
- Check the protective surfacing frequently for wear.

Placement

- Proper placement and maintenance of protective surfacing is essential. Be sure to:
- Extend surfacing at least 6 feet from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.

CARE AND MAINTENANCE CHECKLIST

AT THE BEGINNING OF EACH PLAY SEASON:

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables and chains for wear, rust or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a non-lead paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as needed.

TWICE A MONTH DURING PLAY SEASON:

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges and corners. Replace if they are loose, cracked or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as needed.

ONCE A MONTH DURING PLAY SEASON:

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables and chains for wear, rust or other deterioration. Replace as needed.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as needed.

AT THE END OF EACH PLAY SEASON:

- At the end of each play season or when the temperature drops below 32 degrees F (0 degrees C).
- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as needed.

As a general rule, maintenance should be performed at any time it is deemed necessary.

DISPOSAL INSTRUCTIONS

- ◆ Please use care when disassembling the equipment, when it is no longer in operational condition. Wear heavy duty working gloves to avoid injuries.
- ◆ Fully disassemble the entire swing and slide sets before disposal. Do not leave partially disassembled parts in areas accessible by children.
- ◆ Should you wish to recycle the steel tubing, please take the frame to your local recycling center.
- ◆ All plastic parts can be recycled, take it to your local recycling center. Do not let children play with any disassembled parts meant for disposal, such as chains, slide, tubing, bolts, nuts, screws, etc.

OUTDOOR HOME PLAYGROUND SAFETY CHECKLIST

Use this to help make your home playground a safe place to play!


Outdoor Home Playground Safety Checklist

Use this to help make your home playground a safe place to play!

Supervision	Be sure to always supervise children on play equipment.
Surfacing	<p>Install a protective surface under and around play equipment to reduce the likelihood of serious head injuries.</p> <p>For most play equipment, install protective surfacing 6 feet in all directions beyond the equipment.</p> <p>For swings, extend protective surfacing in front and back of the swing to a distance that is twice the height of the bar from which the swing is suspended.</p> <p>For tire swings, install protective surfacing outward from the swing equal to the suspension chain plus 6 feet.</p>
Types of Surfacing	<p>Carpeting and thin mats are not adequate as protective surfacing. Maintain at least 9 inches of loose-fill material (see page 6) or use an ASTM F1292 rated material at the depth required for the equipment height.</p> <p>Use wood mulch/chips, shredded rubber mulch, or engineered wood fiber for equipment up to 8 feet high.</p> <p>Use sand, pea gravel, or mulch products listed above for play equipment up to 5 feet high; or</p> <p>Use surface mats tested to provide impact protection equal to or greater than the height of the play equipment.</p>
Equipment Maintenance	Periodically check nuts, bolts, caps, swing seats, suspension ropes, chains, and cables and replace as necessary. Maintain loose-fill surfacing and surface mats.
Opening	Eliminate openings that can trap a child's head or neck, such as openings in guardrails or ladders. Openings should be smaller than 3 1/2 inches to prevent entry of a small child's body, or larger than 9 inches to allow a child's head and body to slide completely through.
Ropes	Never attach jump ropes, clotheslines, pet leashes, or cords of any kind to play equipment. Anchor any climbing ropes at both ends. Remove drawstrings from children's clothes. Children can strangle on these.
Anchors	Bury or cover anchors with adequate surfacing material to prevent tripping. Play equipment should not tip over.
Guardrails or Barriers	Make sure that platforms and ramps over 30 inches high have guardrails or barriers to prevent falls.
Repair	Repair sharp points or edges on equipment that can cause injuries.
Upkeep of Hardware	Replace missing hardware, eliminate protruding bolts, and close "S" hooks that can cause injuries.

Tools Required for Assembly (NOT INCLUDED)

These are the tools that are generally required for installation

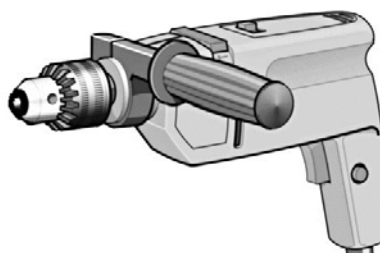


Electric Drill



Phillips Head Screw Drive
 $\frac{3}{16}$ " bit




Ladder or Step Tool

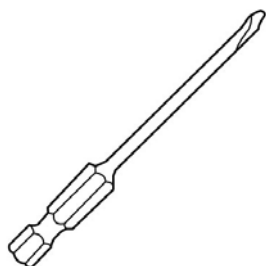

Phillips Head Screwdriver





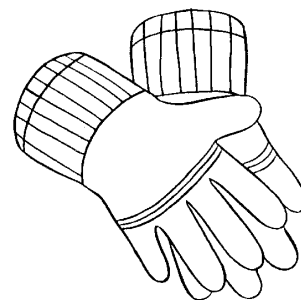

Tape Measure










Working Gloves






WOOD PART LIST

NO.	QTY	PHOTO
1	1	
2	1	
3	1	
4	1	


WOOD PART LIST

NO.	QTY	PHOTO
5	2	
6	2	
7	3	
8	1	
9	1	
10	2	
11	2	

WOOD PART LIST

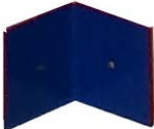NO.	QTY	PHOTO
12	1	
13	1	
13A	1	
14	1	
U32	2	

 HARDWARE PART LIST



S6 M4x35mm 24pcs



S10 M4x25mm Deck Screw 8pcs



S7 M4x45mm Deck Screw 22pcs



S5:M4*28MM 21pcs



V8 – 4PCS



V9 – 4PCS



**B1 - 4pcs
5/16 x 28mm**

IMPORTANT!!!

Please do not over-tighten the screws until the entire play set is completely assembled.

Screws should be tightened just enough to hold the parts together initially. Once the whole unit is assembled, you must go back and tighten all screws and inspect for stability before allowing children to use the play set.

All wood parts are labeled with the part number and holes are pre-drilled for easier installation.

STEP 1

Assembly Instructions

Wood Boards Needed:

Part No.	Quantity
1	1set
2	1set
3	1set
4	1set


Hardware Needed:

Part No.	Quantity
S7	16pcs

INSTALL WALL PANELS OF PLAYHOUSE


Connect 2 to 1 using S7(4).

Connect 4 to 1 using S7(4).

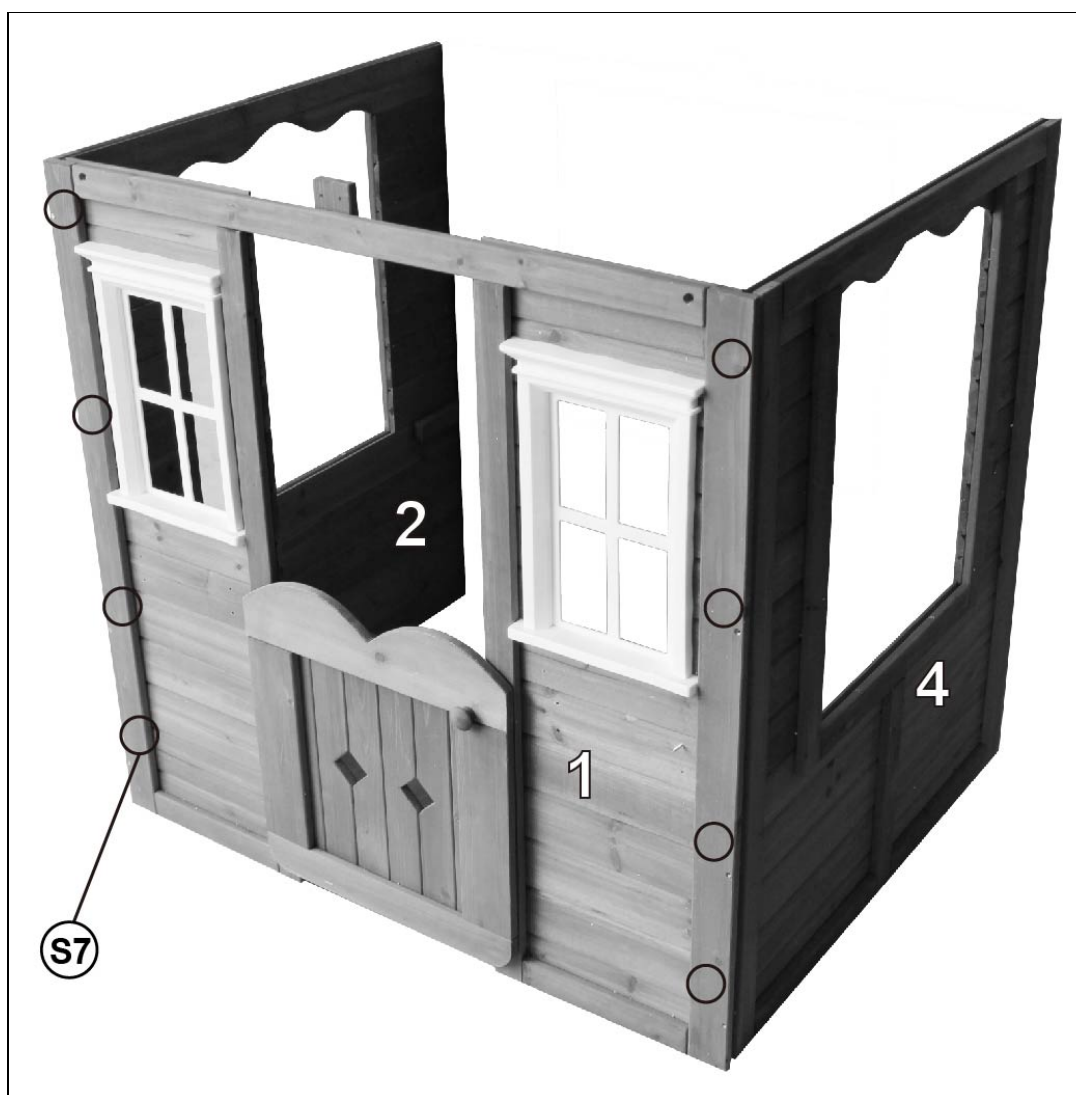

Assembly Instructions

Connect 2 to 3 using S7(4).
Connect 4 to 3 using S7(4).

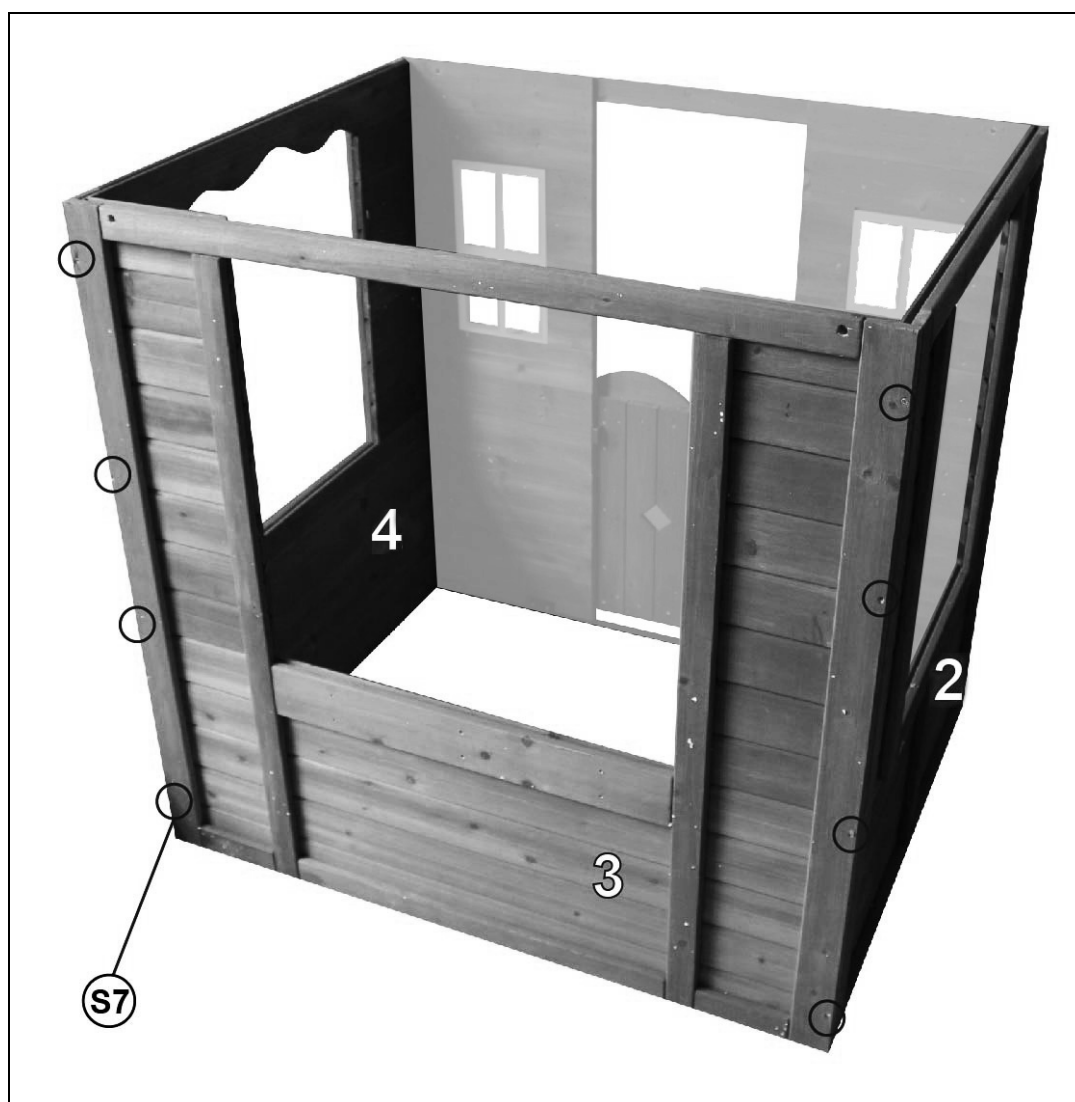

STEP 2

Assembly Instructions

Wood Boards Needed:


Part No.	Quantity
5	2sets

Hardware Needed:

Part No.	Quantity
B1	4pcs
V8	4pcs
V9	4pcs
S5	4Pcs

Connect 5 to 1 using B1, V8, V9(2SET).


Connect 5 to 3 using B1, V8, V9(2SET).

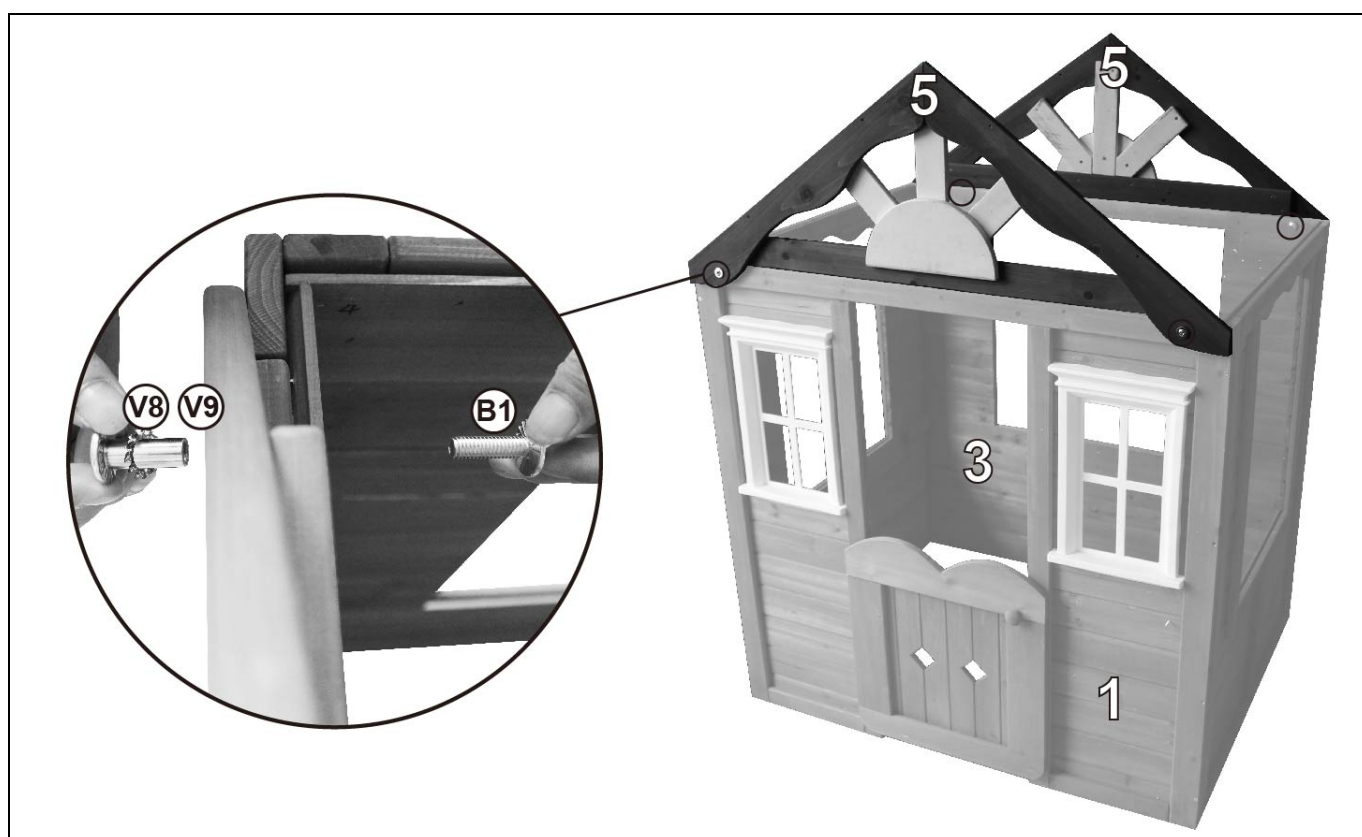

Assembly Instructions

Connect 1 to 5 using S5(2).

Connect 3 to 5 using S5(2).

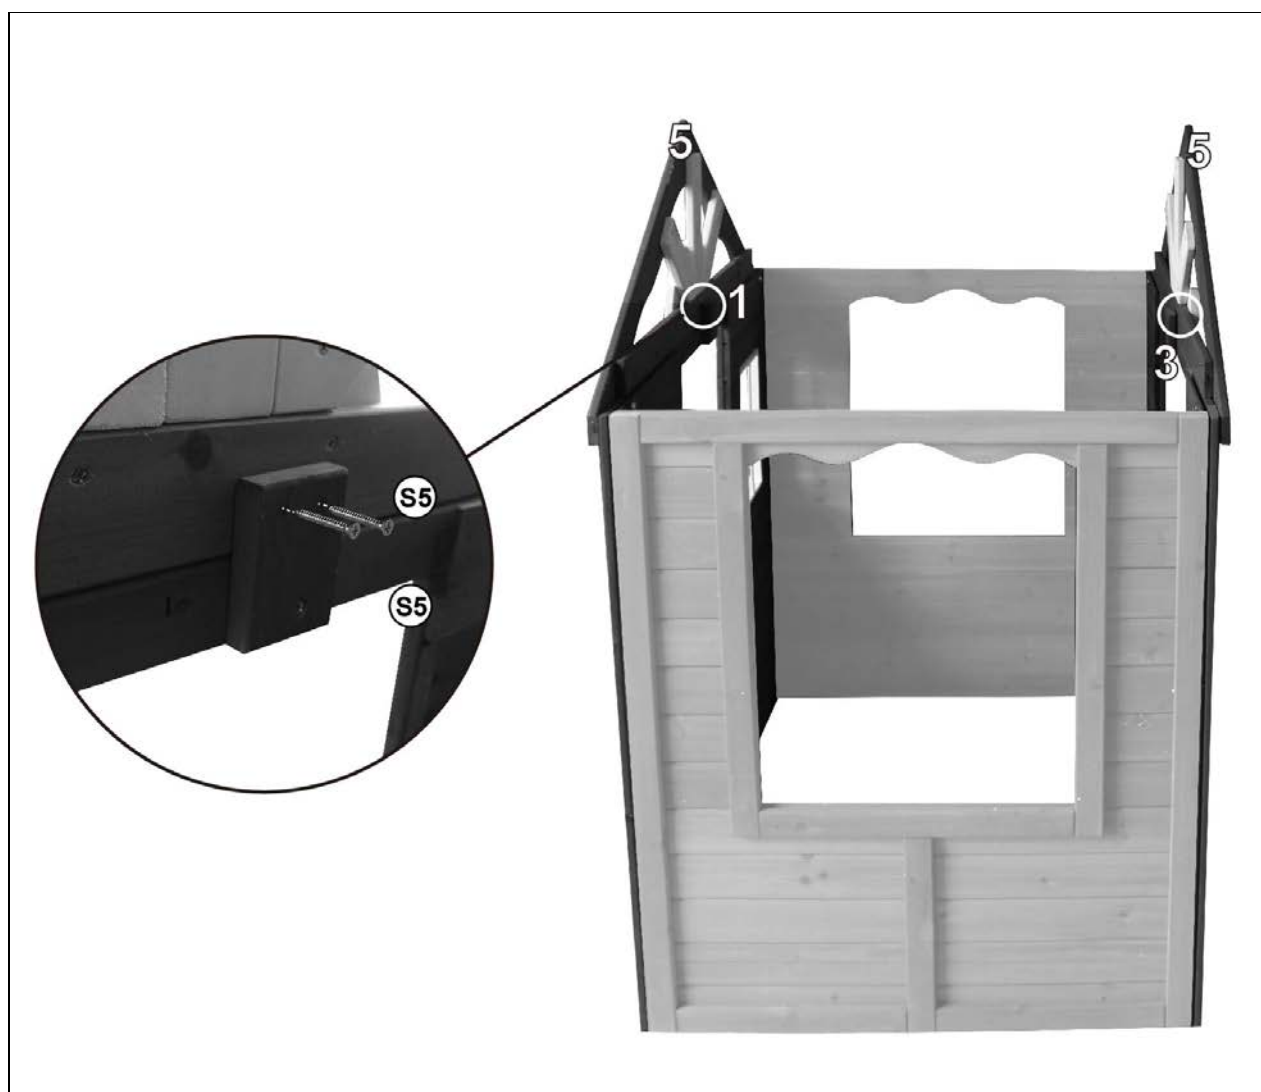

STEP 3

Assembly Instructions


Wood Boards Needed:

Part No.	Quantity
6	2sets
7	3pcs
8	1pc
9	1pc
10	2pcs

Hardware Needed:


Part No.	Quantity
S5	17pcs
S6	4pcs
S7	6pcs

Connect 6 to 1 using S5(8).

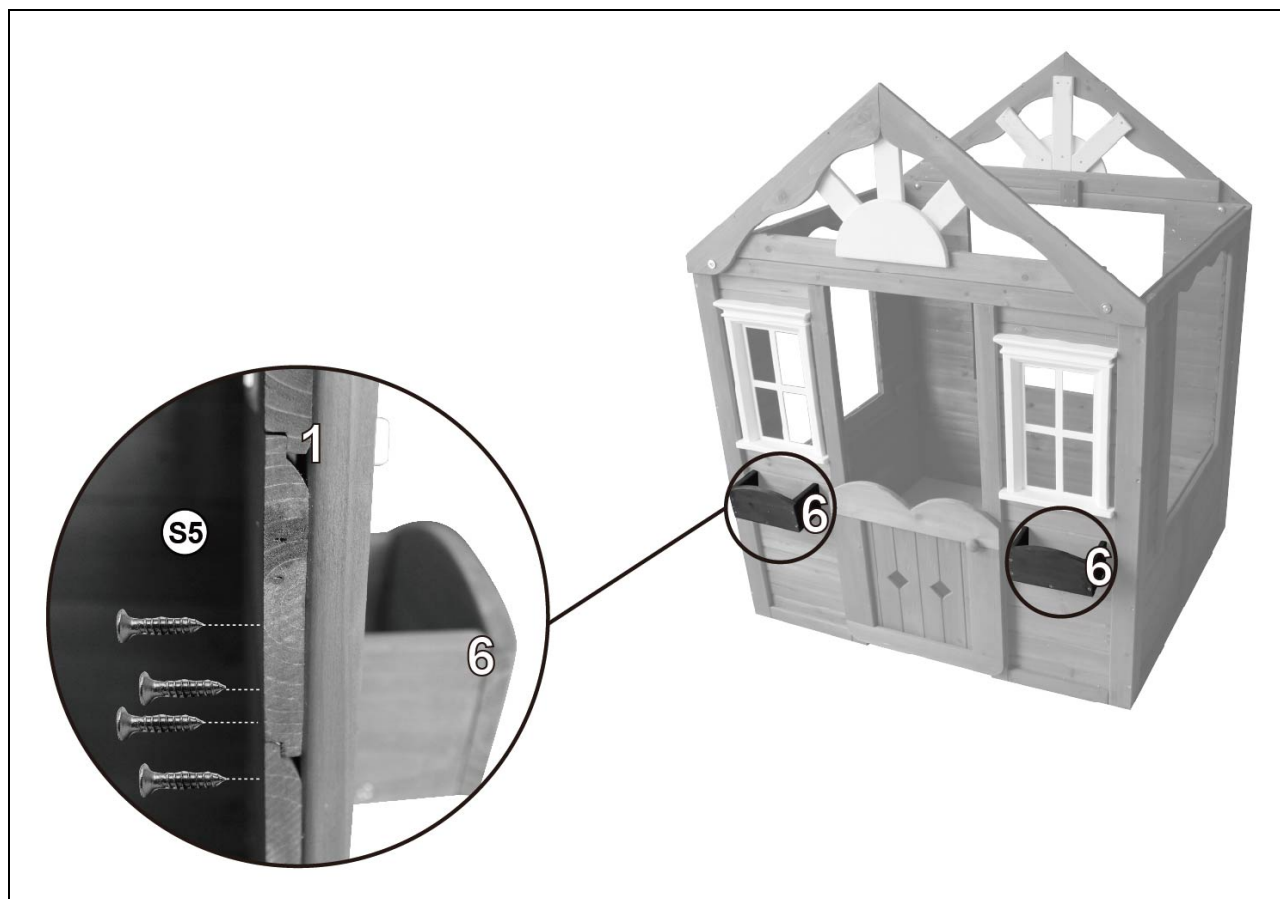


Assembly Instructions

Connect 7 to 3 using S7(6) as show.

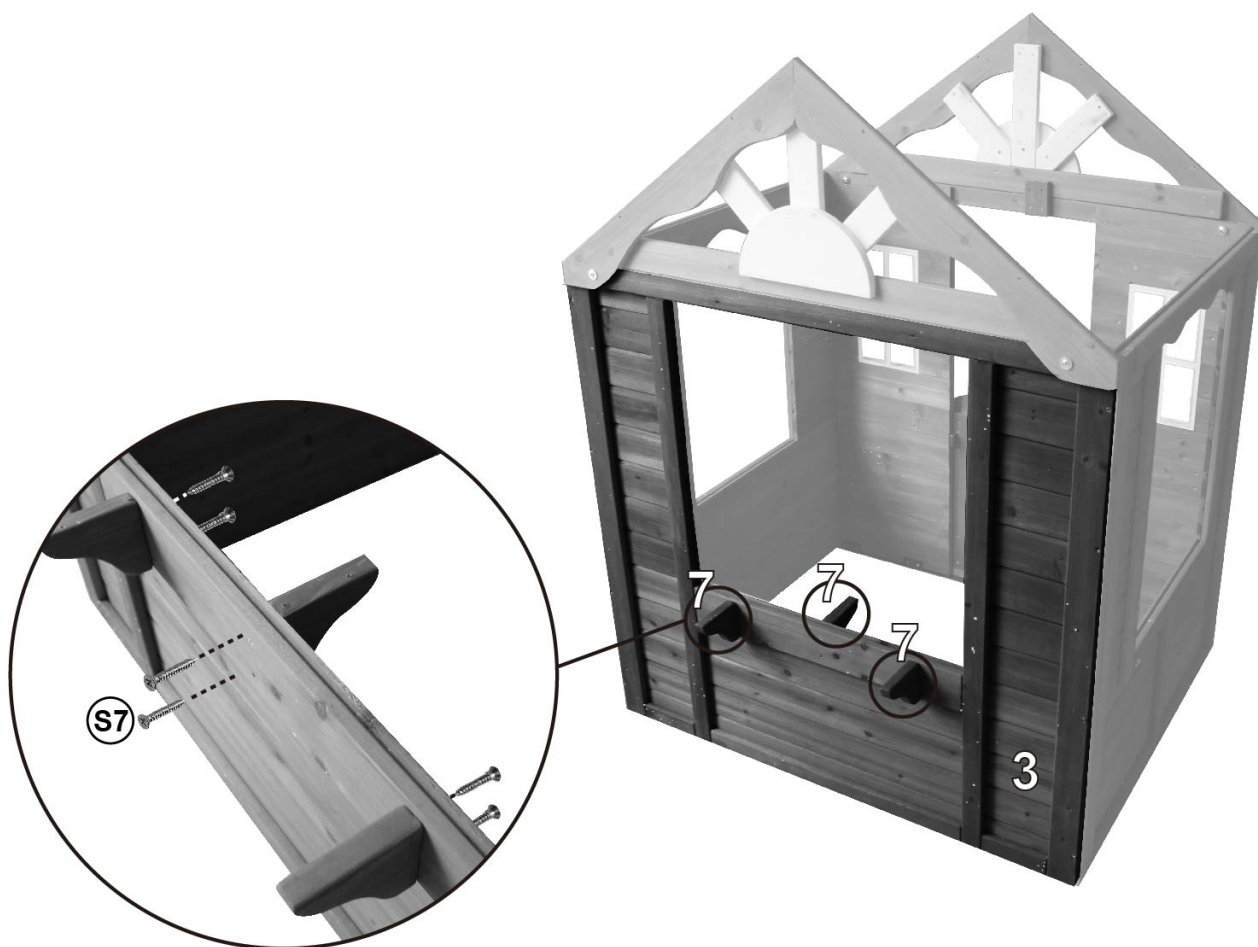


Assembly Instructions

Connect 8 to 2,4 and 7 using S5(5) as show.
Connect 9 to 7 using S5(4) as show.

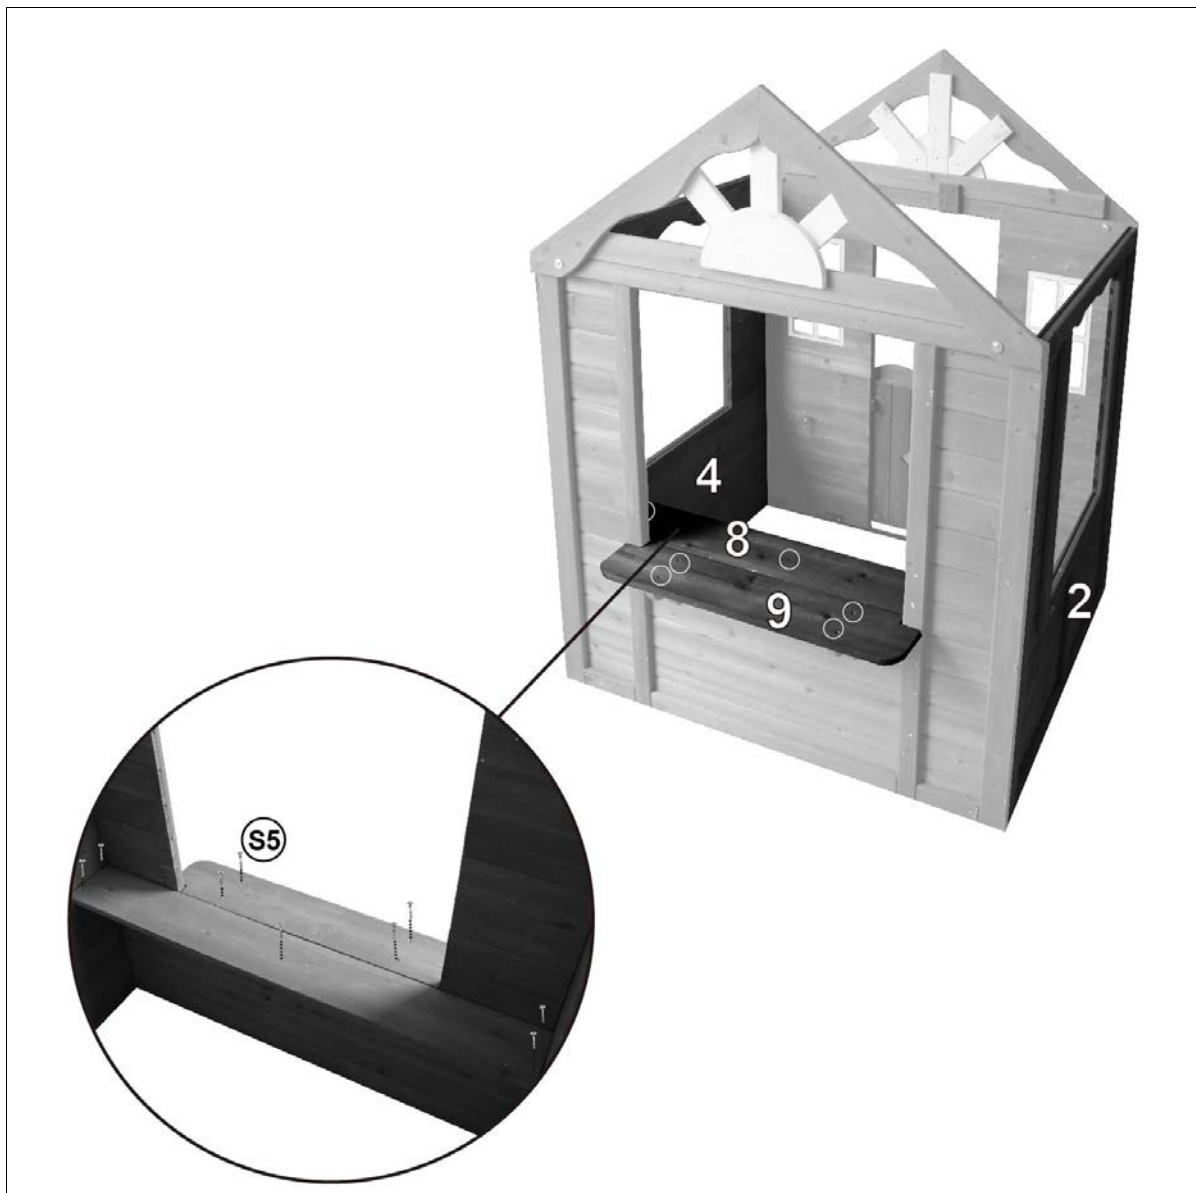

Assembly Instructions

Connect 10 to 2 using S6(2) as show.
Connect 10 to 4 using S6(2) as show.

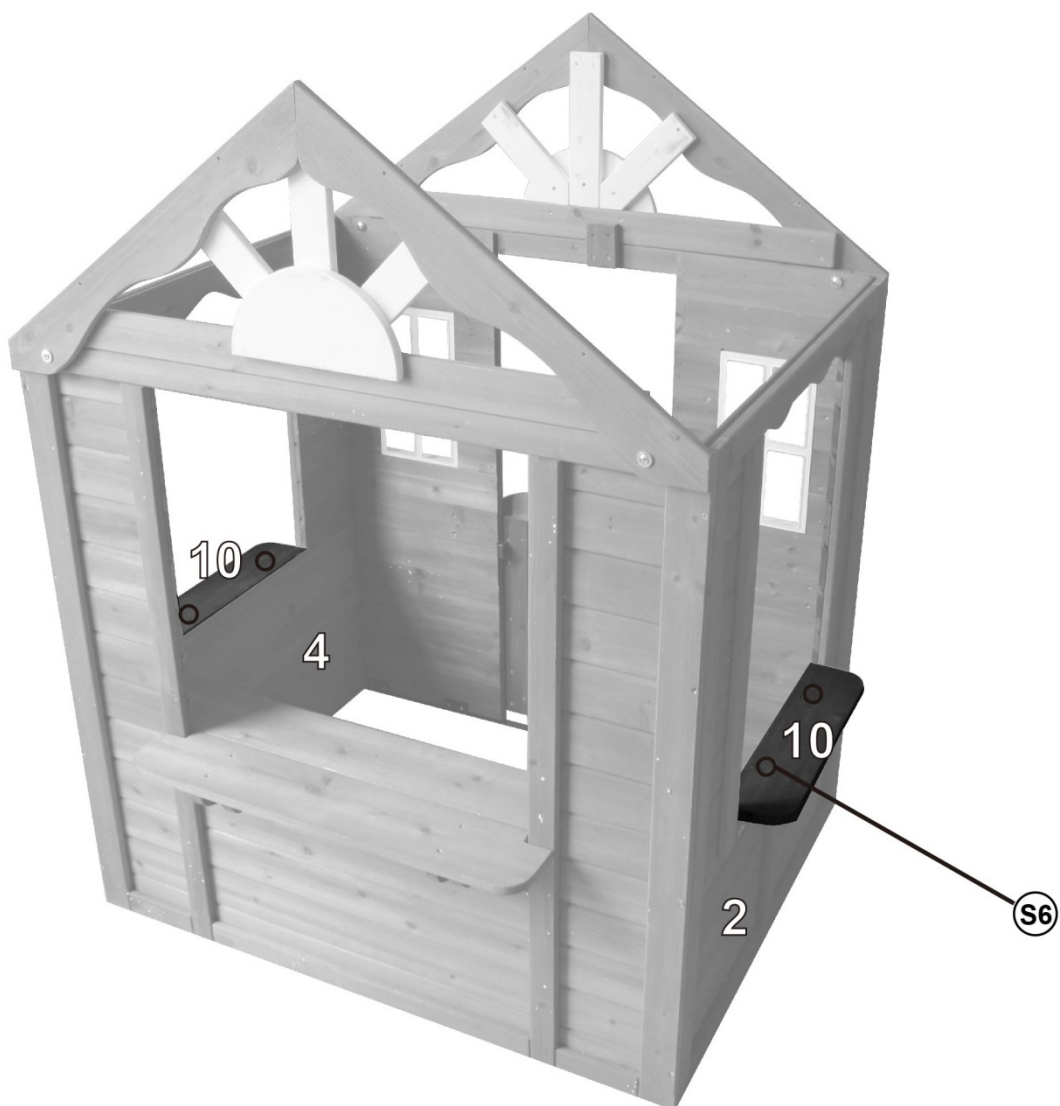

STEP 4

Assembly Instructions

Wood Boards Needed:

Part No.	Quantity
11	2sets
12	1set

Hardware Needed:

Part No.	Quantity
S6	12pcs
S10	4pcs

INSTALL THE ROOF OF THE PLAYHOUSE


From inside playhouse, Connect 11 to 5, using S6 (6) as show.
Repeat in the same manner on the opposite side, using S6 (6).

Important: Make sure the top sides of 11 are aligned with no gaps in between.



Assembly Instructions

From inside playhouse, Connect 12 to 11,using S10(4) as show.

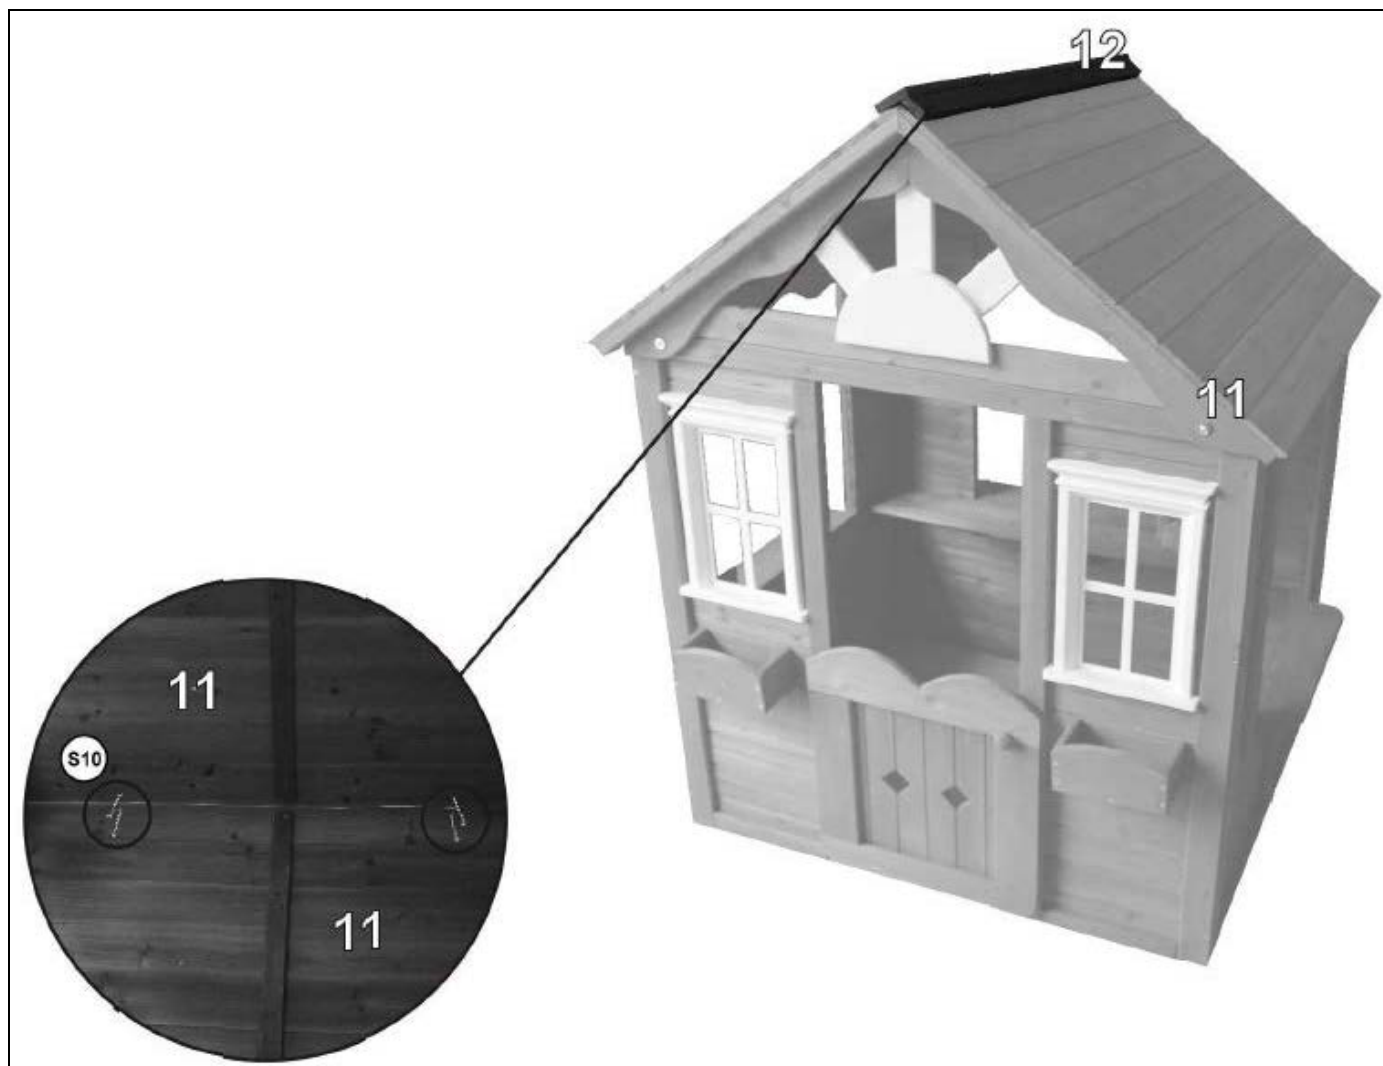

STEP 5

Assembly Instructions

Wood Boards Needed:


Part No.	Quantity
13	1set
13A	1set
14	1set

Hardware Needed:

Part No.	Quantity
S6	8pcs
S10	4pcs


INSTALL THE BENCH OF THE PLAYHOUSE

From inside playhouse, Connect 13 and 13A to 3, using S6 (4) as show.

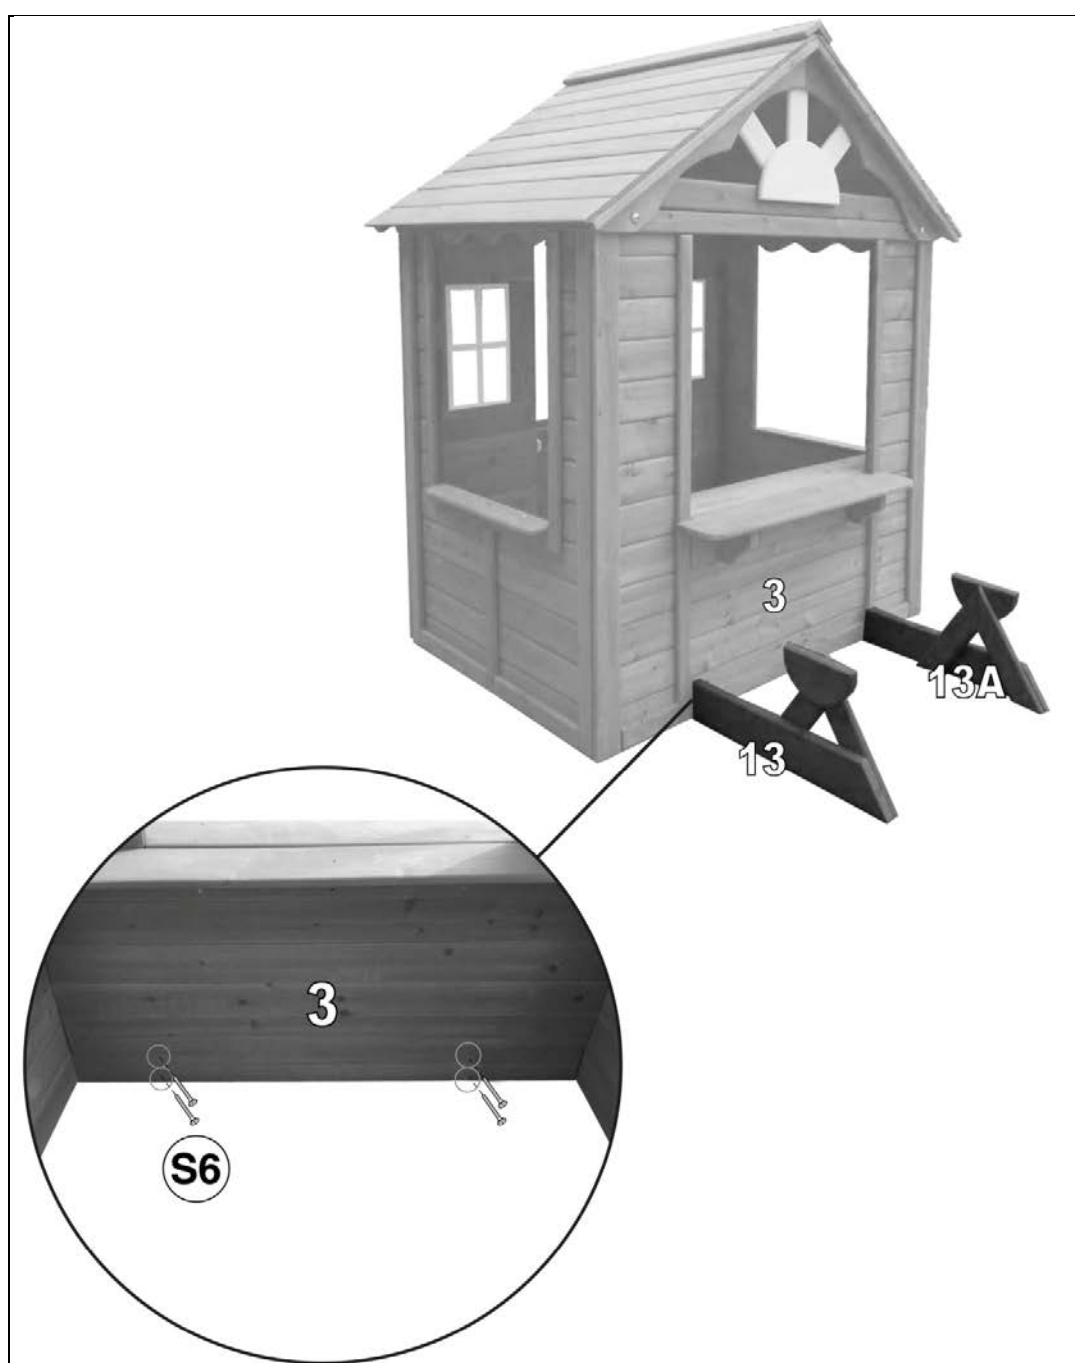


Assembly Instructions

Connect 14 to 13 and 13A, using S6(4) as show.

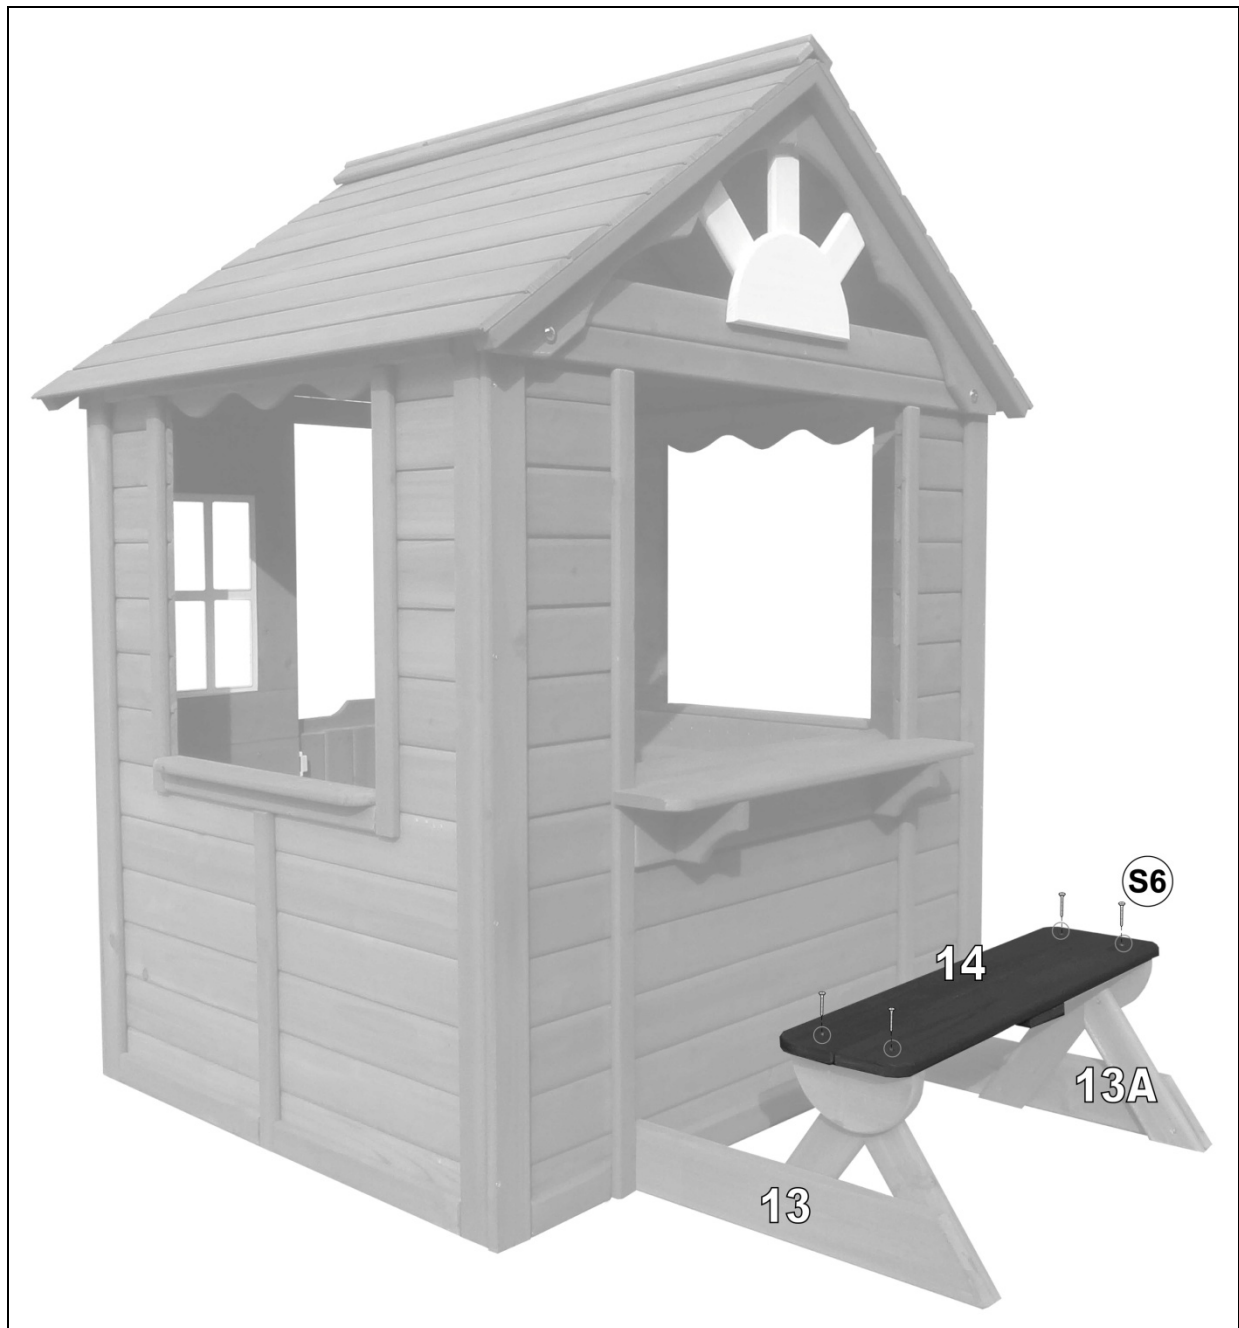

Assembly Instructions

Connect U32 to 13, 13A and 3, using S10(4) as show.

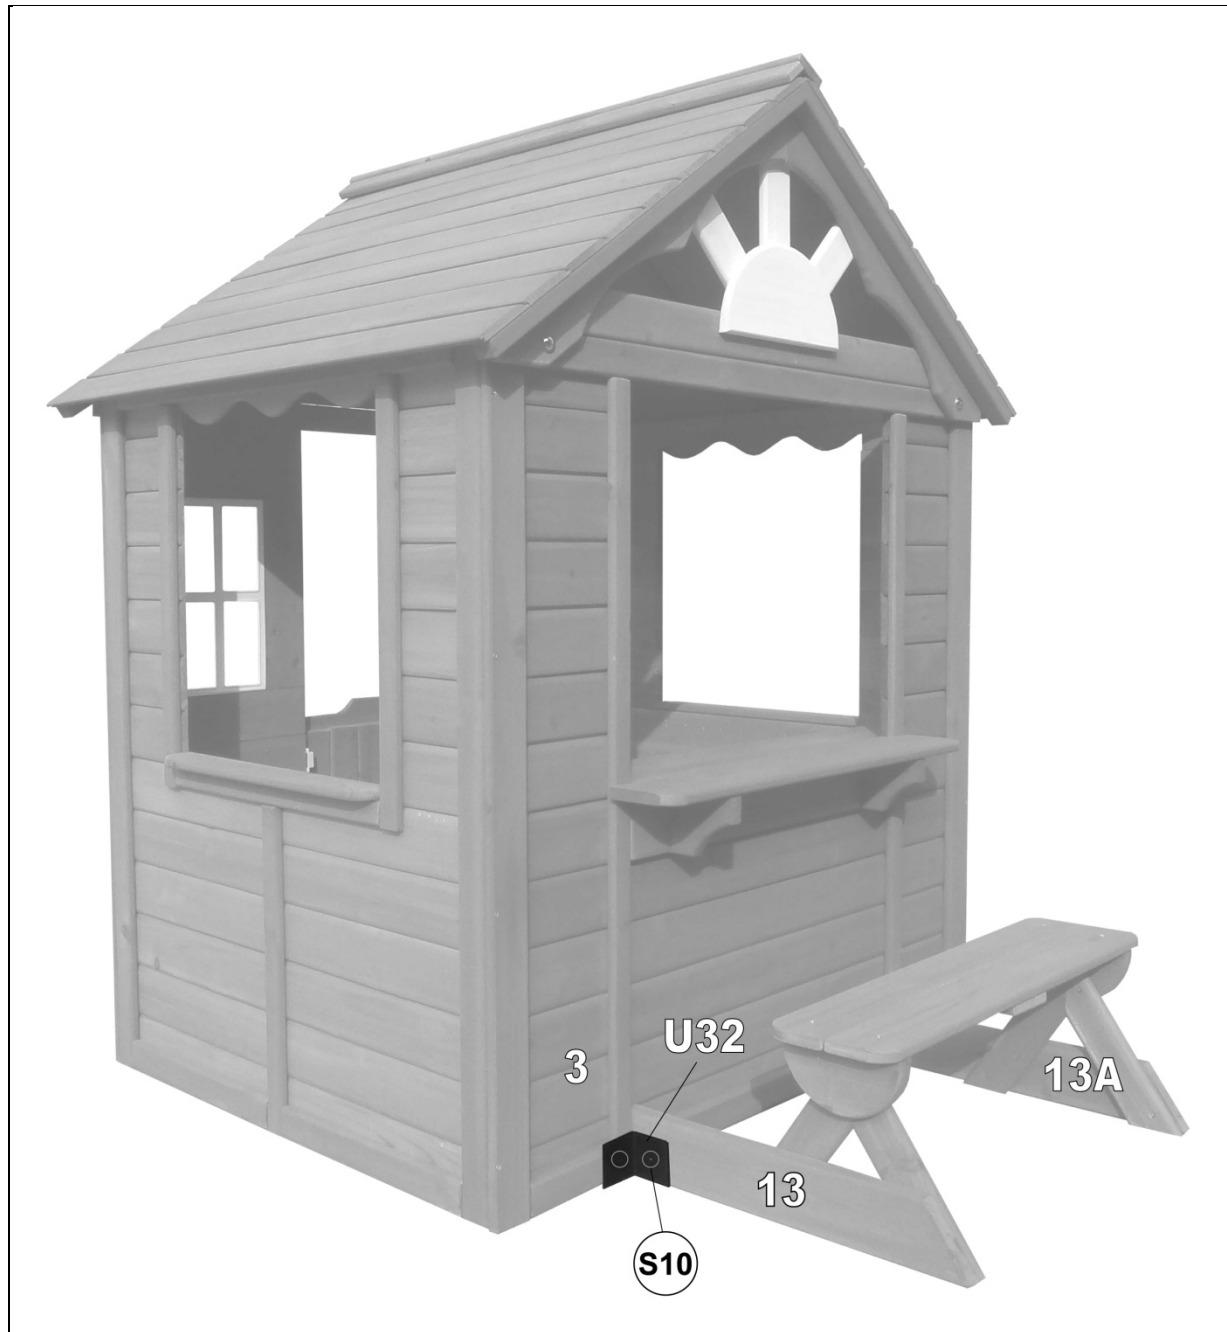

PRODUCT WARRANTY

Sportspower Ltd warrants its products to be free from defects in material and workmanship under normal use and service conditions for 180 days after the date of purchase. Extended warranty for an extra 90 days will be offered to those customers registering their products at www.sportspowerltd.net within 14 days from the date of purchase.

All warranty coverage extends only to the original purchaser of the product and is not assignable or transferable. The original store or online purchase receipt must be kept as proof of purchase in order for the warranty to be valid. These documents must be presented in the event of making a claim under warranty. During the warranty period, Sportspower will provide repair or replacement of defective equipment or parts thereof covered by the warranty. Any handling, transportation, delivery and other incidental charges in respect of the servicing of the equipment shall be borne by the Purchaser. If the product includes a number of accessories, only the defective part or accessory will be replaced.

The warranty will become void if any defects or damages are associated with the use of unauthorized replacement parts. All replacement parts must be obtained from Sportspower authorized agents. All decisions made by Sportspower in respect of the servicing of the equipment (including repairs, replacements or issues relating to defects of workmanship or materials) shall be conclusive and the Purchaser agrees to be bound by such decisions. Any defective equipment or part thereof replaced shall become the property of Sportspower.

In the event of a product or accessory being replaced during the guarantee, the guarantee on the replacement will expire at the original date, i.e. 180 days from the original purchase date.

This warranty excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse or being tampered with by unauthorized persons.

The Sportspower Limited Warranty does not cover:

- (a) Products used for commercial or rental purposes.
- (b) Loss or damage to product due to: (i) abuse, repairs and/or tampering by any person other than the authorized personnel of Sportspower; (ii) negligence and/or misuse (including foreign object, accident, improper storage, exposure to sun/moisture, excessive temperature, sand, dust, dirt, other pollution or other environmental conditions and failure to follow precautions or proper operating instructions stated in the User's Manual such as improper installations); (iii) fire, flood, lightning strike, wind storm or other acts of God; (vi) freight or improper transport damages, and (v) improper usage (including use by under-age, over-weight or excessive number of users permitted as stated in the User's Manual).
- (c) Defects, damages or accidents due to the malfunction, connection to or use of non-Sportspower or unauthorized parts. In such event, Sportspower reserves the right to cancel the Limited Warranty coverage immediately.

To the extent allowed by the applicable local law, the remedies in the Limited Warranty are the Purchaser's sole and exclusive remedies.

INFORMATION

SPORTSPOWER IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES.

PLEASE NOTE: ANY REPAIRS OR REPLACEMENTS MUST BE MADE USING AUTHORIZED SPORTSPOWER PARTS IN ORDER FOR THIS WARRANTY TO BE VALID.

For Customer Service or to order Replacement Parts, please call 1-866-370-2131 or visit our website www.sportspowerltd.net

SP-KS-WP-518S-KM-15001