

**FCC COMPLIANCE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

1. "Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product."

2. **NOTE:** This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."

www.sportline.com

Made in China.  
Sportline® is a trademark of SPORTLINE,  
a division of EB Sport Group,  
Yonkers, NY 10701  
Distributed in the United Kingdom by  
EB Brands (UK), Worcester WR4 9FA.  
All Rights Reserved. ©2012

WV2832IS01WAV

**SPORTLINE®**

**240 SPORT TIMER**

#2832

©2012 EB Sport Group

**IMPORTANT: READ THROUGH ALL INSTRUCTIONS BEFORE BEGINNING TO USE YOUR STOPWATCH**

**OPERATING INSTRUCTIONS:**

1. Remove the plastic film from the LCD display on the front of the stopwatch.
2. Slowly pull the battery protector tab out from the battery door located on the back to activate.

**FEATURES:**

- 24 hour stopwatch
- Time-of-day and calendar
- Alarm clock
- 12/24 hour time option

**THE STOPWATCH OPERATION**

Press **A** until you get to the stopwatch display.  
If necessary, press **B**, stop and **C**— reset to 0

**START — STOP/TIMING**


**B**— Start, **B**— Stop.  
(Repeatedly press **B** for time-in / time-out timing)  
**C**— Reset

**SPLIT TIMING**

**B**— Start, **C**— Split.  
**C**— Release (Repeatedly press **C**, **C** for more split times)  
**B**— Stop **C**, **C**— Reset

**1-2 FAST FINISH**

**B**— Start, **C**— Stop #1.  
**B**— Stop #2 (See record #1 time)  
**C**— Release (See record #2 time)  
**C**— Reset to 00

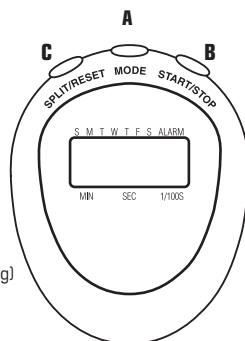

**TIME/CALENDAR SETTING**

Press **A** 3 times to enter Set Mode  
Press **C** to select Seconds, Minutes,  
Hour (A/P=12 hour, H=24 hour), Date,  
Month, Day  
Press **B** to change any of the above  
(Seconds only resets to 00)  
(Hold **B** to change digits rapidly)  
Press **A** to return to Time Display

**TIME/CALENDAR & ALARM DISPLAY**

Press **A** until you get Time Display  
Hold **B** display Month, Date & Day  
Hold **C** see Alarm Time

**BATTERY REPLACEMENT**

When the LCD becomes dim, replace with a new type LR44, A76 or AG13 1.5V battery.

**CAUTION - Battery Safety Information**

- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries must be removed before recharging
- Rechargeable batteries only to be recharged under adult supervision
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries
- Do not mix old and new batteries
- Exhausted batteries to be removed
- Do not dispose of battery or product in fire; battery may explode or leak

 
Hold **C** and press **B** Alarm On/Off

**ALARM SETTING**

Press **A** 2 times to enter Set Mode  
Press **C** to select Minutes & Hours  
Press **B** to change Minutes or Hours  
Press **A** to return to Time Display

**HOURLY CHIME SETTING**

Press **A** until you get Time Display  
Hold **C** see Alarm Time & Press **A**  
Chime is ON when dashes appear  
above display.  
Chime is OFF when no dashes appear.



**GUARANTEE CERTIFICATE**

**For purchases made in the U.S.:**

If at any time within one (1) year from the purchase date of this product, it fails to perform properly because of defects in material or manufacturing, return it prepaid to:

**EB SPORT GROUP, 585 Oak Ridge Road, Hazleton, PA 18202**

Complete this Guarantee Certificate and enclose it (or a copy of it) with the product.

(PLEASE PRINT CLEARLY)

NAME	TEL	STORE PURCHASED FROM
ADDRESS	DATE OF PURCHASE	
CITY	PURCHASE PRICE	
STATE	ZIP	

PROBLEM WITH PRODUCT

**REPLACEMENT**

This product has been carefully designed, manufactured and packaged. If any parts are missing or damaged, please contact us at the address above and we will replace unit at no charge. (Guarantee does not cover crystal or battery.)

**For purchases made in the UK:** Should you experience problems with this item, please return it to the point of purchase. This will not affect your statutory rights. Alternatively return it to the address shown below for a repair/replacement. **StarCase (UK) Ltd, Berkeley Business Park, Wainwright Road, Worcester WR4 9FA**

**SPORTLINE®**

EB SPORT GROUP, 585 Oak Ridge Road, Hazleton, PA 18202

WV2832IS01WAV  
05.10.2012  
05.14.2012 rev 1

Jim