

432\*280mm

**essential** garden™



Please refer to part numbers when reordering

For questions or comments about product:

Email: [psiservice@aol.com](mailto:psiservice@aol.com) or Call toll-free: 1-877-251-5558

Made in / Hecho en CHINA Distributed by Kmart Corporation, Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products  
on-line at [www.sears.com](http://www.sears.com) and [www.kmart.com](http://www.kmart.com)

## USE & CARE GUIDE

### 9Ft Market Umbrella(MIX)

Caution: Carefully Read Instructions and Assembly Procedures

Product Code: 0-06810762-2

UPC Code: 846346000577

UPC Code: 846346000584

UPC Code: 846346000591

Date of Purchase: \_\_\_\_/\_\_\_\_/\_\_\_\_

## Thank you for your purchase!

We are pleased that you have chosen Kmart for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

## Table Of Contents

a) Warranty and Customer after service .....	2
b) Care and Maintenance .....	2
c) Pre-Assembly .....	3
d) Assembly instruction .....	3

## Warranty

What is covered

We warrant our products to be free of defects in materials and workmanship to the original purchaser for 1 year. Should the frame or fabric fail to conform to this written warranty, we will, at our option, repair or replace the item. (Proof of purchase is required)

What is not covered

1. Natural variations in the color or texture of the wood;
2. Damage caused beyond the control of vendor, including but not limited to damage caused by misuse, abuse, accident, mishandling and by extreme weather conditions, severe temperatures variations, direct sun light, snow or rain, great humidity changes, fire, flood, earthquake, storm, tornado or other acts of nature
3. Damage caused by failure to comply with wooden furniture Care, Handling or Finishing Instructions.
4. Failure to perform normal homeowner's maintenance, including maintaining the finish.

Freight and packaging charges to and from our customer service center remain the customer's responsibility. We reserve the right to make substitutions with similar merchandise if the model in question is no longer in production.

## Customer After Service

Contact our customer service department with a description of the problem at 1-877-251-5558 or email us at [psiservice@aol.com](mailto:psiservice@aol.com) between 9:00am and 4:00pm Eastern standard Time Monday through Friday.

## Care & Maintenance

- Wood is a living material that continues to respond to climate condition even after being made into a piece of furniture. Left untreated, the wood will weather to a silvery grey.
- To reinforce its weatherproof ability, this furniture was treated with outdoor Polyurethane paint finish at the factory. Before using, wipe the finish with a clean & dry cloth lightly to obtain a more clean & shiny surface.
- During normal weathering, wood may crack slightly due to changes in the moisture. This does not affect the structural integrity of your furniture. The manufacturer recommends periodic application of furniture polish or Polyurethane paint to ensure the wood furniture is protected and its appearance maintained.
- As wood is a living product, you may find that you need to tighten fittings periodically
- Exercise care when using the wood furniture to prevent excessive scratching.
- Bring your furniture inside during inclement weather & cover it while not in use.
- Fabric may be cleaned by hand with a mild solution of soap and water. Rinse fabric thoroughly and allow it to drip dry. Do not machine-wash or tumble-dry, as fabric may shrink. Do not use bleach or solvents on fabric.

 
## Pre-Assembly

Please read instructions carefully and Identify all parts before assembly.

- Assemble your unit in an area free from any object that might scratch the surface of your unit.
- Examine all packing material before discarding, shortages may occur from parts left in the packing material.
- Follow the step by step instructions.
- Wipe down the timber with a clean, dry, soft cloth to remove any excess oil and avoid possible staining of clothing


### Step 1:

Carefully remove the umbrella from the box.

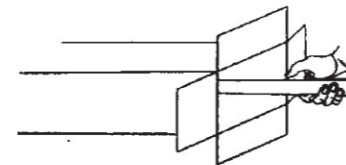


### Step 2:

 Use scissors (not included) to cut the plastic strip.

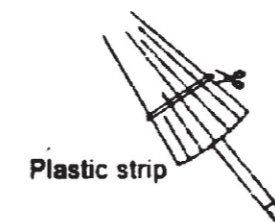


### Step 5:

 Insert finial into the top of the umbrella and screw in clockwise to tighten.

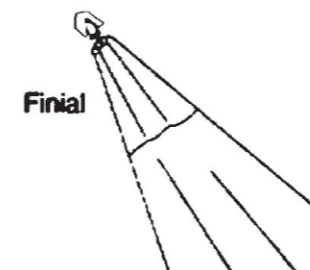


### Step 7:

 Velcro attached at the end of the ribs can be used to attach lights (not included) for nighttime illumination.

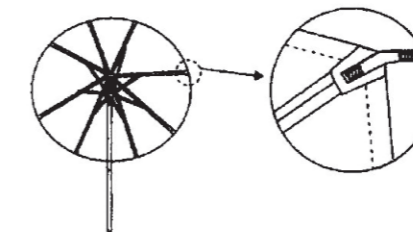


### Step 3:

 Remove the bottom pole from the inside pocket near one of the ribs. This pocket can also be used to store the bottom pole when not in use.

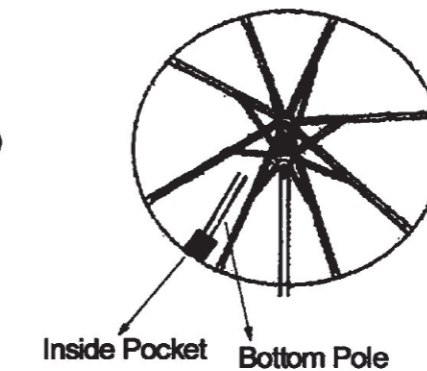


### Step 6:

 Stretch the umbrella canvas sideways as shown to loosen the spokes of the canvas a bit for smooth opening of the umbrella.

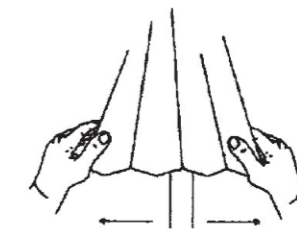

### Step 8:

 Push the umbrella up and insert the pin into the hole. The umbrella is ready to use.

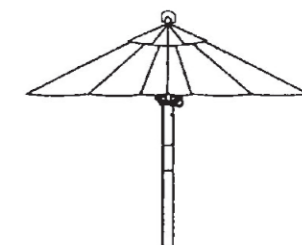

### Step 4:

Screw the bottom pole into the upper pole and tighten.

