

# Use and Care Guide

## Parkside 7pc Dining Set-Armless Chair

Product Code: D71 M50172

UPC Code: 848306016758

Date of Purchase: \_\_\_/\_\_\_/\_\_\_

## Thank you for your purchase

---

### Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

## Table of Contents

---

<b>Table of Contents.....</b>	<b>2</b>
<b>Safety Information.....</b>	<b>3</b>
Set Up Your Furniture Properly...	3
Examine Your Furniture.....	3
<b>Warranty.....</b>	<b>3</b>
What Is Covered.....	3
What Is Not Covered.....	4
<b>Care And Maintenance .....</b>	<b>5</b>
<b>Pre-Assembly.....</b>	<b>6</b>
Planning Assembly .....	6
Observe Weight Limits.....	6
Hardware Included .....	6
Package Contents .....	7
<b>Assembly Instructions</b>	
Dining Chair-Armless .....	8
<b>Customer Service.....</b>	<b>11</b>

## Safety Information

---

### SET UP YOUR FURNITURE PROPERLY

- ☐ Ensure that all parts are assembled properly and fully tightened as per the instructions.
- ☐ When placing in the desired location, ensure that all legs are resting on the same surface.

### EXAMINE YOUR FURNITURE

- ☐ Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

## Warranty

---

### WHAT IS COVERED

- ☐ This product is covered under the manufacturer's 2-Year Limited Warranty against defects in materials and workmanship. If your furniture frame fails structurally due to inferior metals or welds during normal use within two years of purchase, the manufacturer will repair or replace the defective piece. Peeling, crackling, blistering, discoloration or fading are warranted for 1-Year from the date of purchase. Resin weave and cushions are warranted for 1-Year from date of purchase. Warranty is to the original purchaser and is non-transferable. Proof of purchase (dated register receipt) and in some cases, photos of product are required for warranty claims. Lack of original receipt will void the warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

## Warranty

---

### WHAT IS NOT COVERED

- This warranty excludes: furniture used for commercial use, contract or other non-residential purposes, freight damage, furniture damaged by acts of nature, abuse or lack of proper care, vandalism or improper assembly. Discoloration or fading of straps or fabric or finish as a result of chemicals or spills is not covered. Glass, tile, and stone are not covered against breakage; frames and hardware are not covered against corrosion or rusting. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Exclusion also includes time for loss of use, inconvenience, travel, packaging or any other incidental or consequential damages. It remains the customer's responsibility for freight and packaging charges to and from our service center. If, within the stated warranty period, this product is found to be defective in material or workmanship, the purchaser must contact the customer service department at 1-877-931-7378.

Email: [custserv@huayuecs.net](mailto:custserv@huayuecs.net)

Customer Service hours: Monday to Friday 9:00AM - 5:00PM CST

## Care and Maintenance

---

- ❑ Wash the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly.
- ❑ Cushions may also be cleaned by hand with a mild solution of soap and water. Rinse the cushion cover thoroughly and allow to drip dry. The back cushion and pillow should be spot cleaned with a soft cloth. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics. Never use cleaners that contain acid or abrasive materials.
- ❑ Use and operation: To improve the lifespan of this furniture, cover when not use and store in a dry place in the off season.

## Pre-Assembly

### PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 20 minutes for two people to complete the assembly.

### OBSERVE WEIGHT LIMITS

The recommended weight limits for the following products are listed below:

- Dining Chair: 250 lbs.



**CAUTION:** If you overload your furniture, injuries can occur.

### HARDWARE INCLUDED




**NOTE :** Hardware not shown to actual size.



PART	DESCRIPTION	SIZE (MM)	QUANTITY
AA	ALLEN BOLT	M6x35	4
BB	ALLEN BOLT	M6x25	4
CC	ALLEN BOLT	M6x18	2
DD	METAL WASHER	M6	10
EE	PLASTIC BOLT CAP	M6	10
FF	ALLEN WRENCH		1

## Pre-Assembly(continued)

### Package Contents

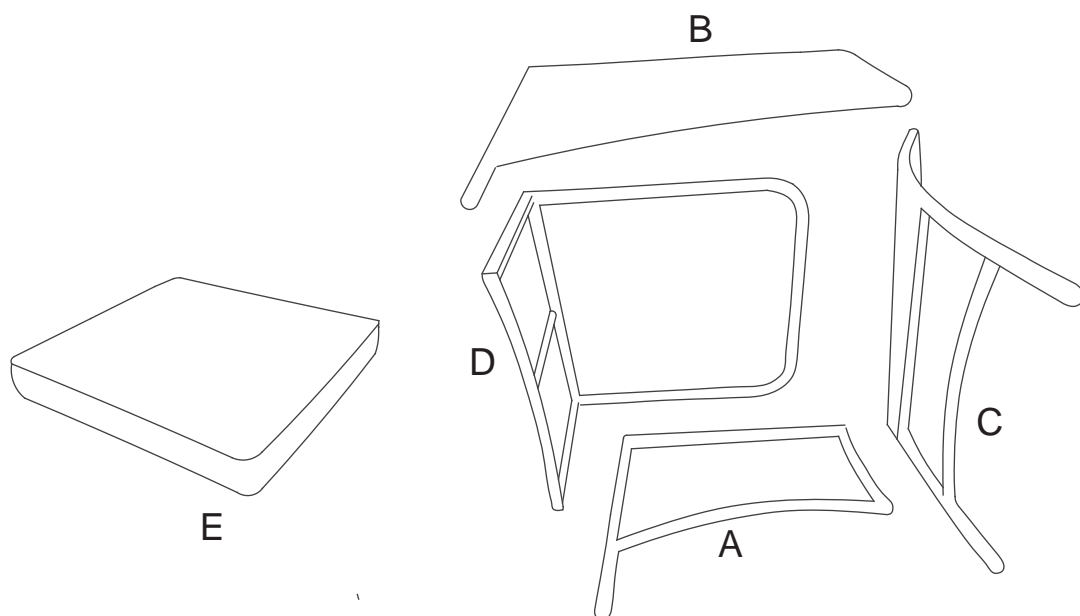


PART	DESCRIPTION	QUANTITY
A	RIGHT SIDE PANEL (when sitting)	1
B	LEFT SIDE PANEL (when sitting)	1
C	CHAIR BACK	1
D	CHAIR SEAT	1
E	SEAT CUSHION	1

## Assembly Instructions

# 1 Attaching the right side panel to chair back

- Attach the right side panel "A" to the chair back "C" using two Allen bolts "AA" and metal washers "DD". Do not tighten completely.

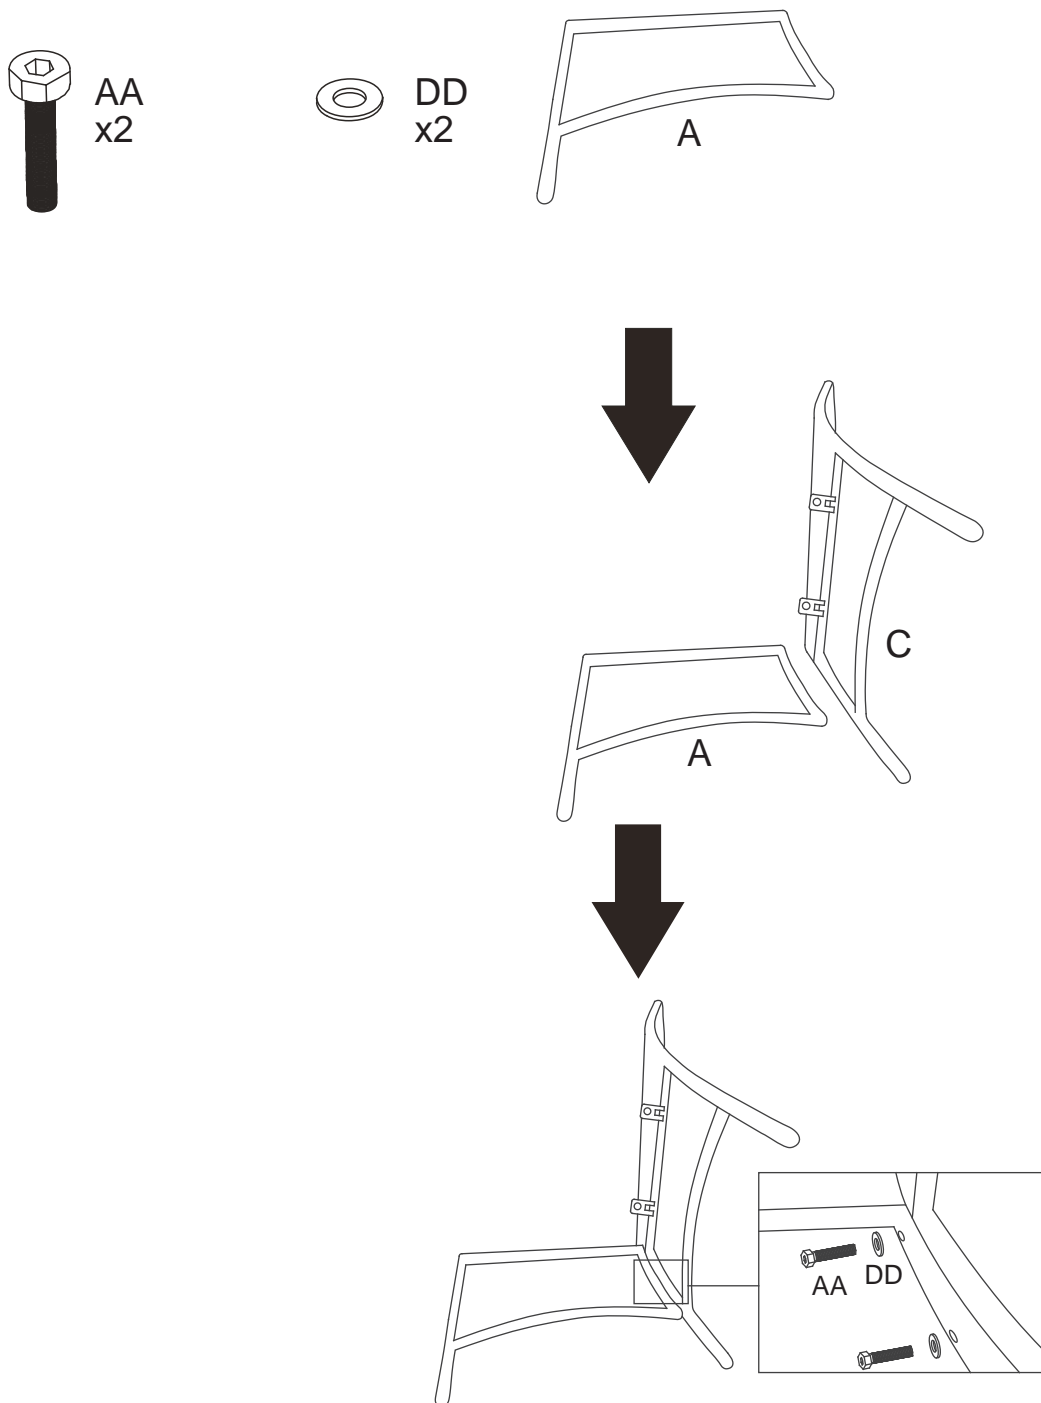




## Assembly Instructions

# 2 Attaching the side panels, chair seat and back

- Attach the chair seat "D" to the chair back "C" using two Allen bolts "CC" and metal washers "DD".
- Attach the front of chair seat "D" to the assembled right side panel "A" using two Allen bolts "BB" and metal washers "DD". Do not tighten completely.
- Attach the left side panel "B" to the chair back "C" using two Allen bolts "AA" and metal washers "DD".
- Attach the front of the chair seat "D" to the assembled left side panel "B" using two Allen bolts "BB" and metal washers "DD". Do not tighten completely.
- Tighten all the bolts using Allen wrench "FF".

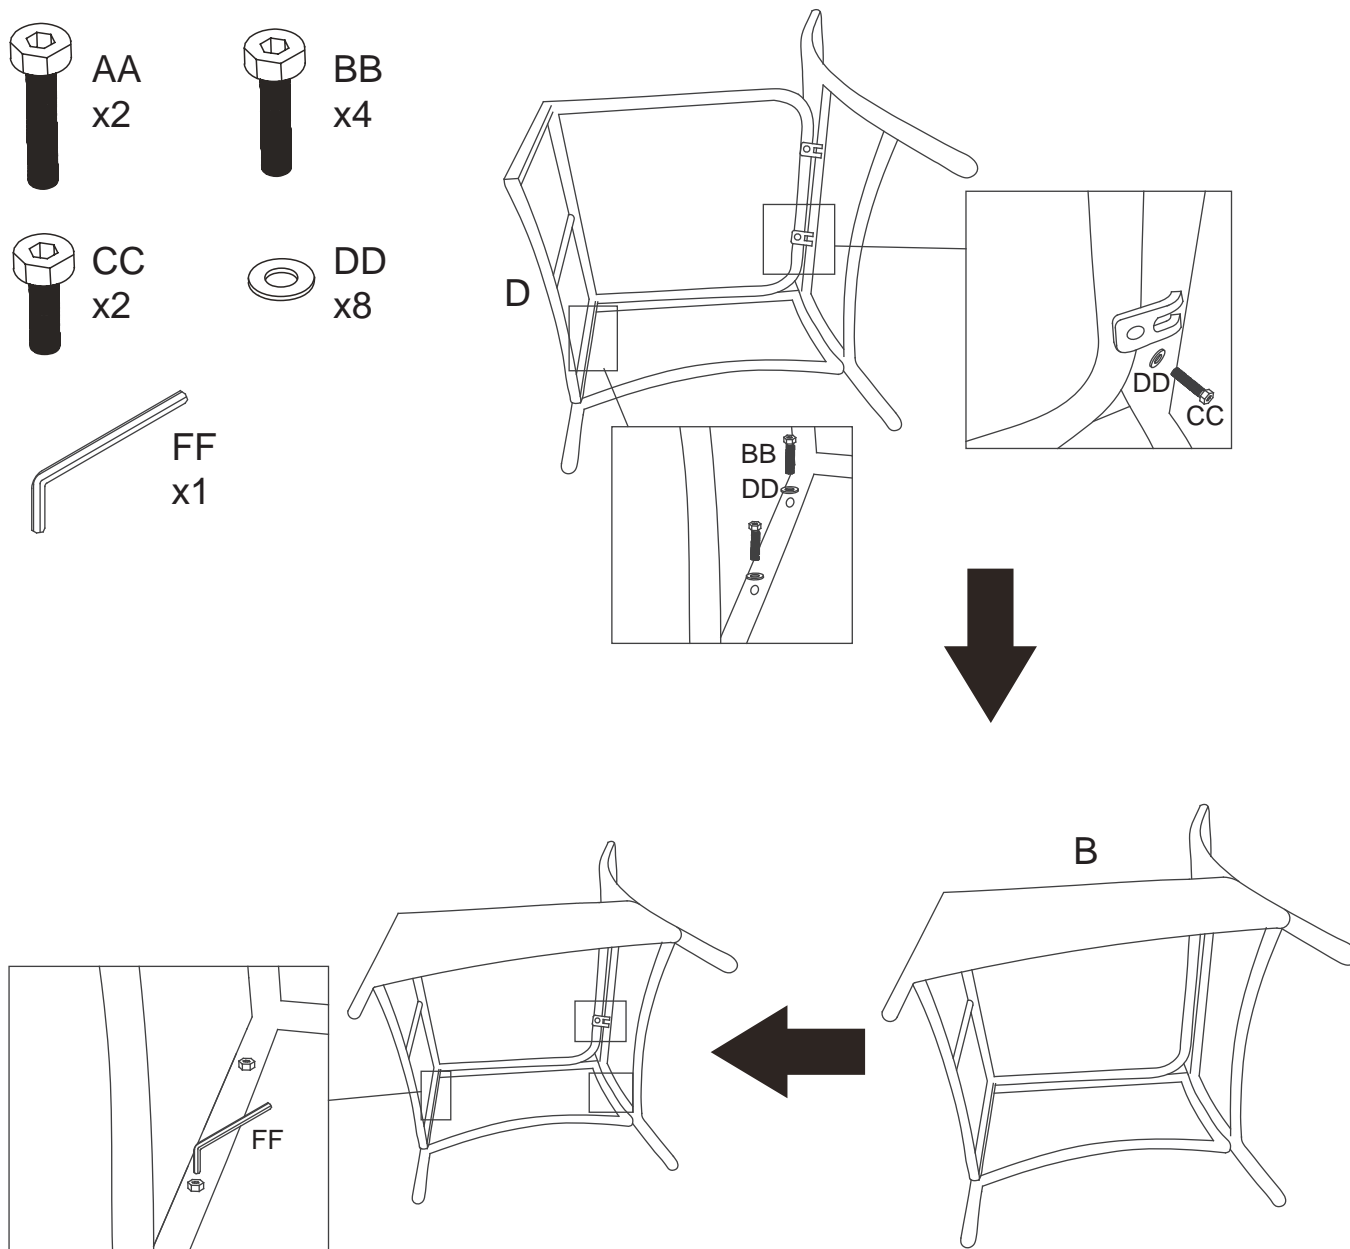



## Assembly Instructions

### 3 Placing the seat cushion

- ☐ Cover all the bolts with the plastic bolt caps "EE".
- ☐ Place the seat cushion "D" on the chair.



EE  
x10

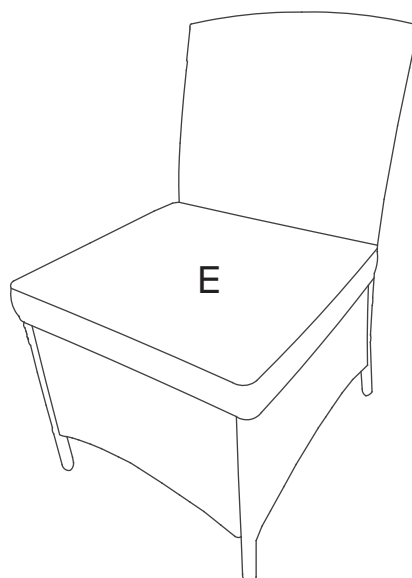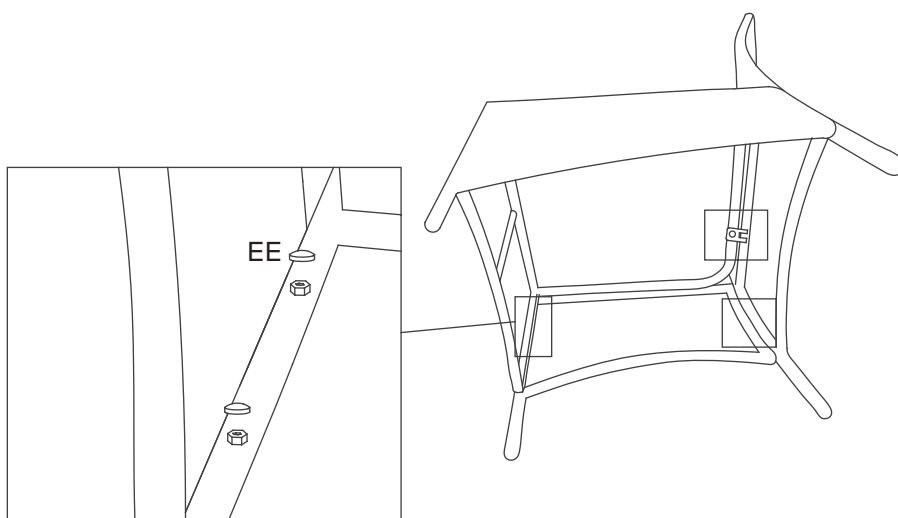

sears

Please refer to part numbers when reordering


For questions or comments about product:

Email: [custserv@huayuecs.net](mailto:custserv@huayuecs.net) or Call toll-free: 1-877-931-7378

Made in / Hech en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products  
on-line at [www.sears.com](http://www.sears.com) and [www.kmart.com](http://www.kmart.com)

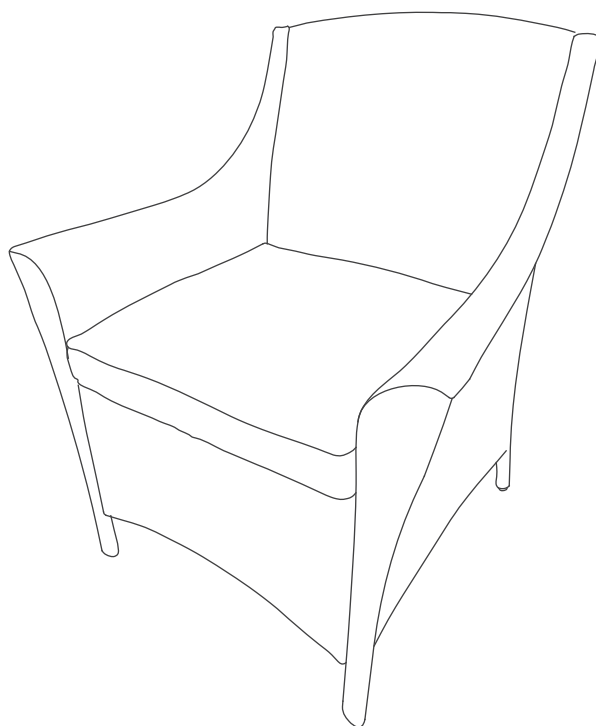

---

# Use and Care Guide

## Parkside 7pc Dining Set-Chair with Armrest

Product Code: D71 M50172

UPC Code: 848306016758

Date of Purchase: \_\_\_\_/\_\_\_\_/\_\_\_\_

## Thank you for your purchase

---

### Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

## Table of Contents

---

<b>Table of Contents.....</b>	<b>2</b>
<b>Safety Information.....</b>	<b>3</b>
Set Up Your Furniture Properly...	3
Examine Your Furniture.....	3
 <b>Warranty.....</b>	 <b>3</b>
What Is Covered.....	3
What Is Not Covered.....	4
<b>Care And Maintenance .....</b>	<b>5</b>
 <b>Pre-Assembly.....</b>	 <b>6</b>
Planning Assembly .....	6
Observe Weight Limits.....	6
Hardware Included .....	6
Package Contents .....	7
 <b>Assembly Instructions</b>	
Dining chair with armrest .....	8
 <b>Customer Service.....</b>	 <b>11</b>

## Safety Information

---

### SET UP YOUR FURNITURE PROPERLY

- ☐ Ensure that all parts are assembled properly and fully tightened as per the instructions.
- ☐ When placing in the desired location, ensure that all legs are resting on the same surface.

### EXAMINE YOUR FURNITURE

- ☐ Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

## Warranty

---

### WHAT IS COVERED

- ☐ This product is covered under the manufacturer's 2-Year Limited Warranty against defects in materials and workmanship. If your furniture frame fails structurally due to inferior metals or welds during normal use within two years of purchase, the manufacturer will repair or replace the defective piece. Peeling, crackling, blistering, discoloration or fading are warranted for 1-Year from the date of purchase. Resin weave and cushions are warranted for 1-Year from date of purchase. Warranty is to the original purchaser and is non-transferable. Proof of purchase (dated register receipt) and in some cases, photos of product are required for warranty claims. Lack of original receipt will void the warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

## Warranty

---

### WHAT IS NOT COVERED

- This warranty excludes: furniture used for commercial use, contract or other non-residential purposes, freight damage, furniture damaged by acts of nature, abuse or lack of proper care, vandalism or improper assembly. Discoloration or fading of straps or fabric or finish as a result of chemicals or spills is not covered. Glass, tile, and stone are not covered against breakage; frames and hardware are not covered against corrosion or rusting. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Exclusion also includes time for loss of use, inconvenience, travel, packaging or any other incidental or consequential damages. It remains the customer's responsibility for freight and packaging charges to and from our service center. If, within the stated warranty period, this product is found to be defective in material or workmanship, the purchaser must contact the customer service department at 1-877-931-7378.

Email: [custserv@huayuecs.net](mailto:custserv@huayuecs.net)

Customer Service hours: Monday to Friday 9:00AM - 5:00PM CST

## Care and Maintenance

---

- ❑ Wash the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly.
- ❑ Cushions may also be cleaned by hand with a mild solution of soap and water. Rinse the cushion cover thoroughly and allow to drip dry. The back cushion and pillow should be spot cleaned with a soft cloth. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics. Never use cleaners that contain acid or abrasive materials.
- ❑ Use and operation: To improve the lifespan of this furniture, cover when not use and store in a dry place in the off season.



## Pre-Assembly

### PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 20 minutes for two people to complete the assembly.

### OBSERVE WEIGHT LIMITS

The recommended weight limits for the following products are listed below:

- Dining Chair: 250 lbs



**CAUTION:** If you overload your furniture, injuries can occur.

### HARDWARE INCLUDED




**NOTE :** Hardware not shown to actual size.



PART	DESCRIPTION	SIZE (MM)	QUANTITY
AA	ALLEN BOLT	M6x35	4
BB	ALLEN BOLT	M6x25	4
CC	ALLEN BOLT	M6x18	2
DD	METAL WASHER	M6	10
EE	PLASTIC BOLT CAP	M6	10
FF	ALLEN WRENCH		1

## Pre-Assembly(continued)

### Package Contents

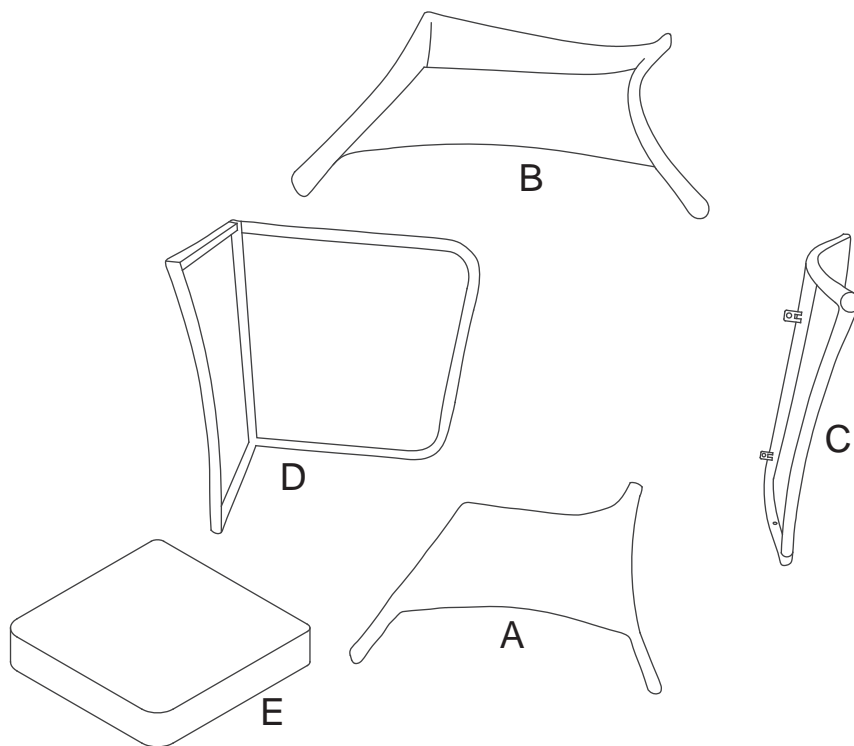


PART	DESCRIPTION	QUANTITY
A	RIGHT ARM (when sitting)	1
B	LEFT ARM (when sitting)	1
C	CHAIR BACK	1
D	CHAIR SEAT	1
E	SEAT CUSHION	1

## Assembly Instructions
 
# 1 Attaching the right arm to the chair back




- Attach the right arm "A" to the chair back "C" using two Allen bolts "AA" and metal washers "DD". Do not tighten completely.



AA  
x2




DD  
x2

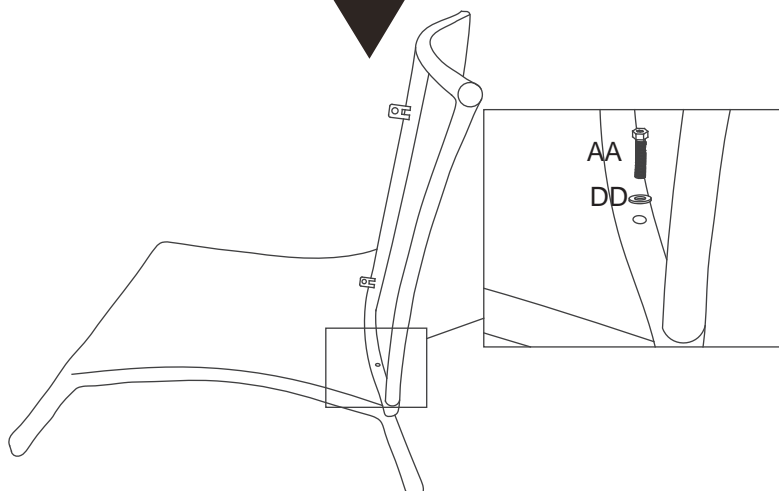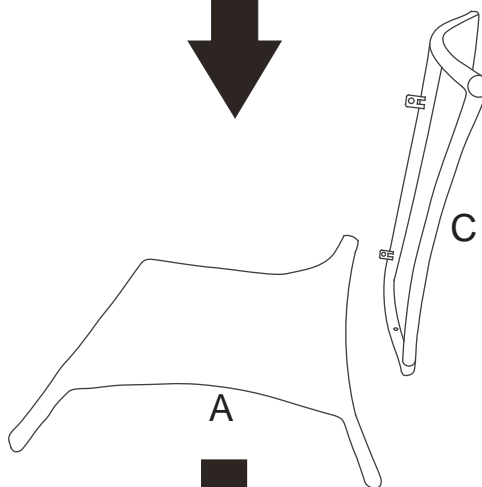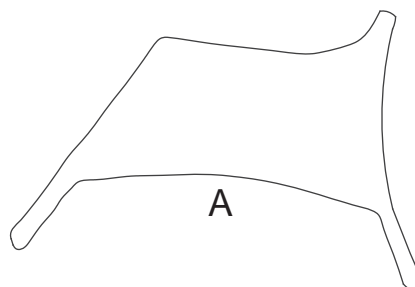

## Assembly Instructions

# 2 Attaching the left and right arms, chair seat and back

- Attach the chair seat "D" to the chair back "C" using two Allen bolts "CC" and metal washers "DD".
- Attach the front of chair seat "D" to the assembled right arm "A" using two Allen bolts "BB" and metal washers "DD". Do not tighten completely.
- Attach the left arm "B" to the chair back "C" using two Allen bolts "AA" and metal washers "DD".
- Attach the front of the chair seat "D" to the assembled left arm "B" using two Allen bolts "BB" and metal washers "DD". Do not tighten completely.
- Tighten all the bolts using Allen wrench "FF".

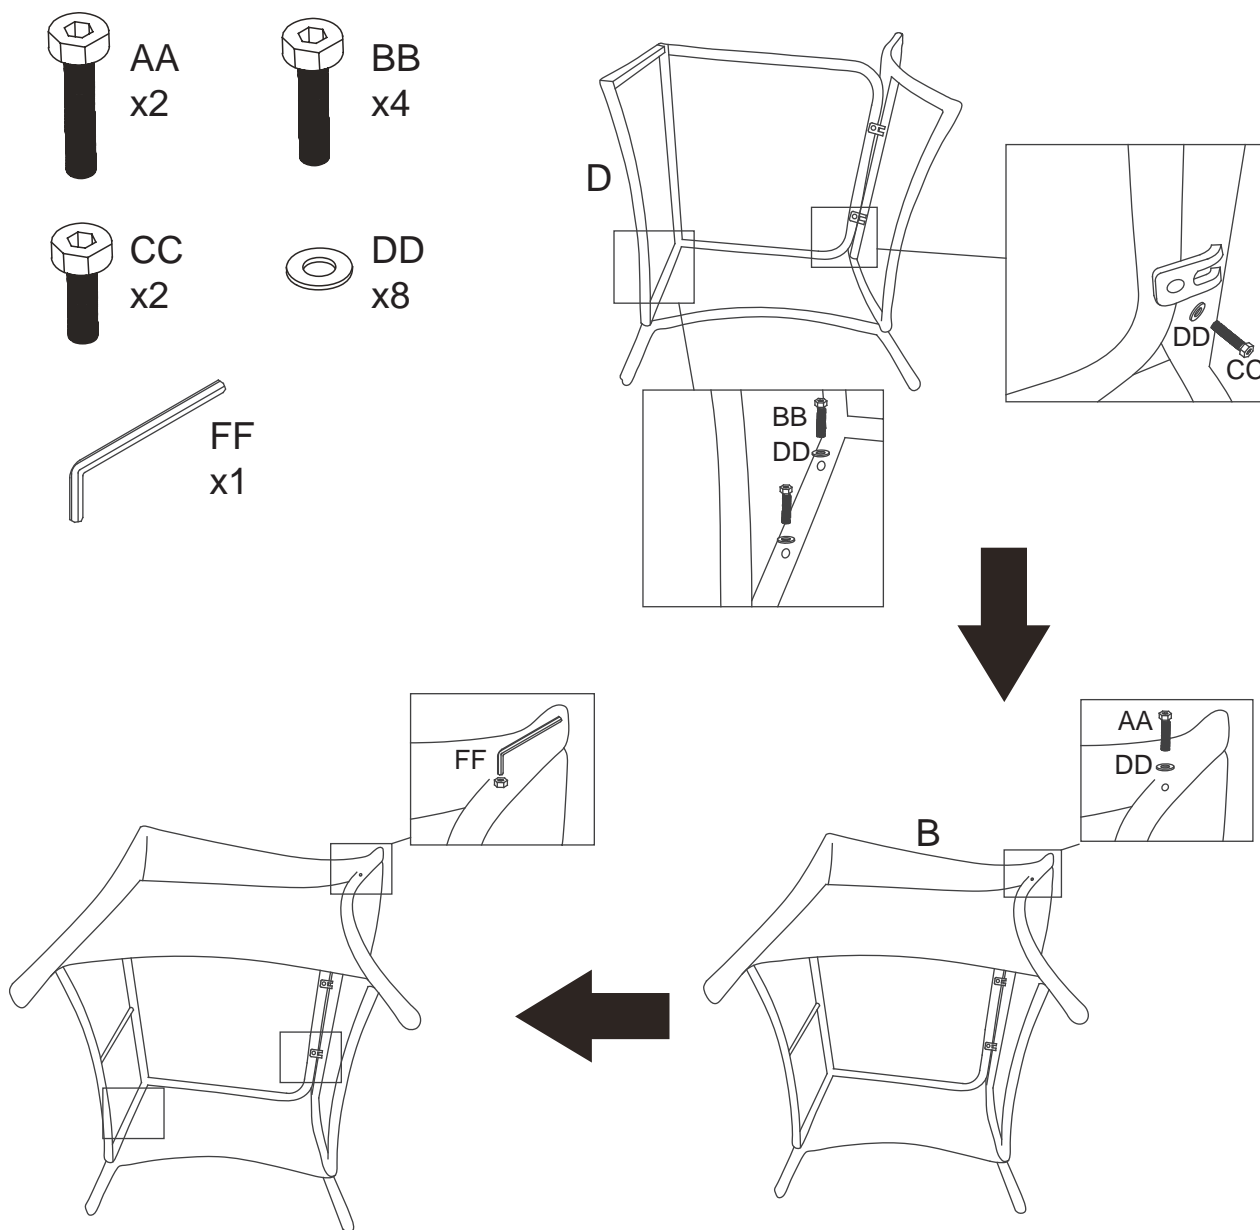



## Assembly Instructions

### 3 Placing the seat cushion

- ☐ Cover all the bolts with the plastic bolt caps "EE".
- ☐ Place the seat cushion "D" on the chair.



EE  
x10

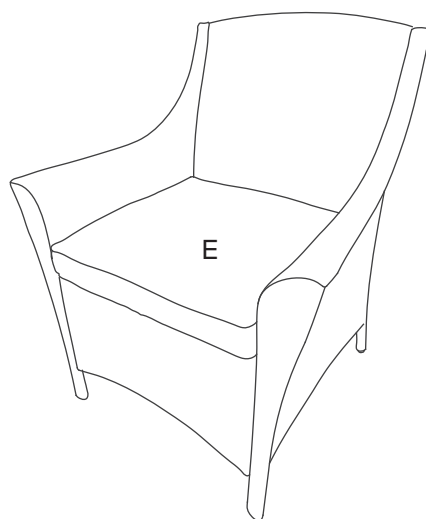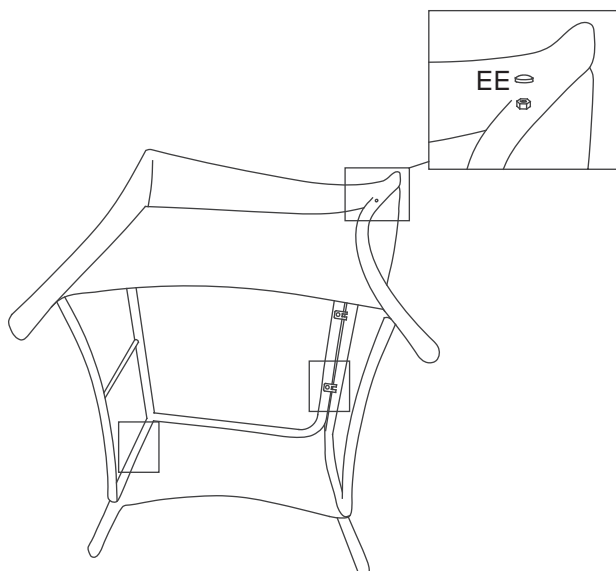

sears

Please refer to part numbers when reordering


For questions or comments about product:

Email: [custserv@huayuecs.net](mailto:custserv@huayuecs.net) or Call toll-free: 1-877-931-7378

Made in / Hech en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products  
on-line at [www.sears.com](http://www.sears.com) and [www.kmart.com](http://www.kmart.com)

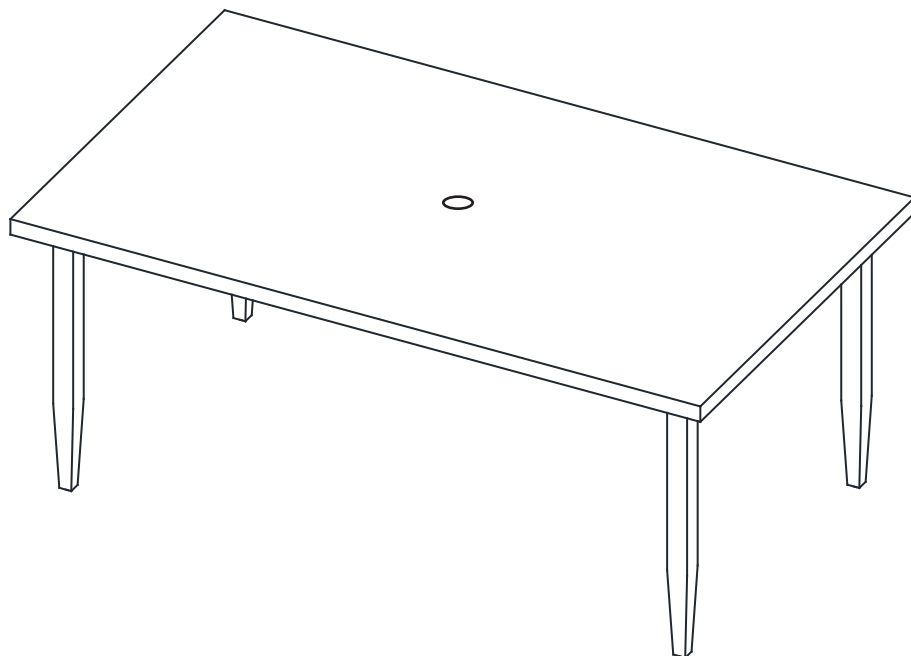

# Use and Care Guide

## Parkside 7pc Dining Set - Table

Product Code: D71 M50172

UPC Code: 848306016758

Date of Purchase: \_\_\_/\_\_\_/\_\_\_

# Thank you for your purchase

---

**Thank you for your purchase!**

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

# Table of Contents

---

**Table of Contents..... 2**

**Safety Information..... 3**

    Set Up Your Furniture Properly... 3

    Examine Your Furniture..... 3

**Warranty..... 3**

    What Is Covered..... 3

    What Is Not Covered..... 4

**Care And Maintenance ..... 5**

**Pre-Assembly..... 6**

    Planning Assembly..... 6

    Hardware Included..... 6

    Package Contents..... 7

**Assembly Instructions**

    Table ..... 8

**Customer Service.....11**



## Safety Information

---

### SET UP YOUR FURNITURE PROPERLY

- ☐ Ensure that all parts are assembled properly and fully tightened as per the instructions.
- ☐ When placing in the desired location, ensure that all legs are resting on the same surface.

### EXAMINE YOUR FURNITURE

- ☐ Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

## Warranty

---

### WHAT IS COVERED

- ☐ This product is covered under the manufacturer's 2-Year Limited Warranty against defects in materials and workmanship. If your furniture frame fails structurally due to inferior metals or welds during normal use within two years of purchase, the manufacturer will repair or replace the defective piece. Peeling, crackling, blistering, discoloration or fading are warranted for 1-Year from the date of purchase. Resin weave and cushions are warranted for 1-Year from date of purchase. Warranty is to the original purchaser and is non-transferable. Proof of purchase (dated register receipt) and in some cases, photos of product are required for warranty claims. Lack of original receipt will void the warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

## Warranty

---

### WHAT IS NOT COVERED

- This warranty excludes: furniture used for commercial use, contract or other non-residential purposes, freight damage, furniture damaged by acts of nature, abuse or lack of proper care, vandalism or improper assembly. Discoloration or fading of straps or fabric or finish as a result of chemicals or spills is not covered. Glass, tile, and stone are not covered against breakage; frames and hardware are not covered against corrosion or rusting. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Exclusion also includes time for loss of use, inconvenience, travel, packaging or any other incidental or consequential damages. It remains the customer's responsibility for freight and packaging charges to and from our service center. If, within the stated warranty period, this product is found to be defective in material or workmanship, the purchaser must contact the customer service department at 1-877-931-7378.

Email: [custserv@huayuecs.net](mailto:custserv@huayuecs.net)

Customer Service hours: Monday to Friday 9:00AM - 5:00PM CST

## Care and Maintenance

---

- ❑ Wash the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly.
- ❑ Cushions may also be cleaned by hand with a mild solution of soap and water. Rinse the cushion cover thoroughly and allow to drip dry. The back cushion and pillow should be spot cleaned with a soft cloth. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics. Never use cleaners that contain acid or abrasive materials.
- ❑ Use and operation: To improve the lifespan of this furniture, cover when not use and store in a dry place in the off season.

## Pre-Assembly

### PLANNING ASSEMBLY

To prevent damage , place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 20 minutes for two people to complete the assembly.

### HARDWARE INCLUDED




**NOTE :** Hardware not shown to actual size.



PART	DESCRIPTION	SIZE (MM)	QUANTITY
AA	ALLEN BOLT	M6x18	16
BB	METAL WASHER	M6	16
CC	PLASTIC BOLT CAP	M6	16
DD	ALLEN WRENCH	M6	1

## Pre-Assembly(continued)


### Package Contents

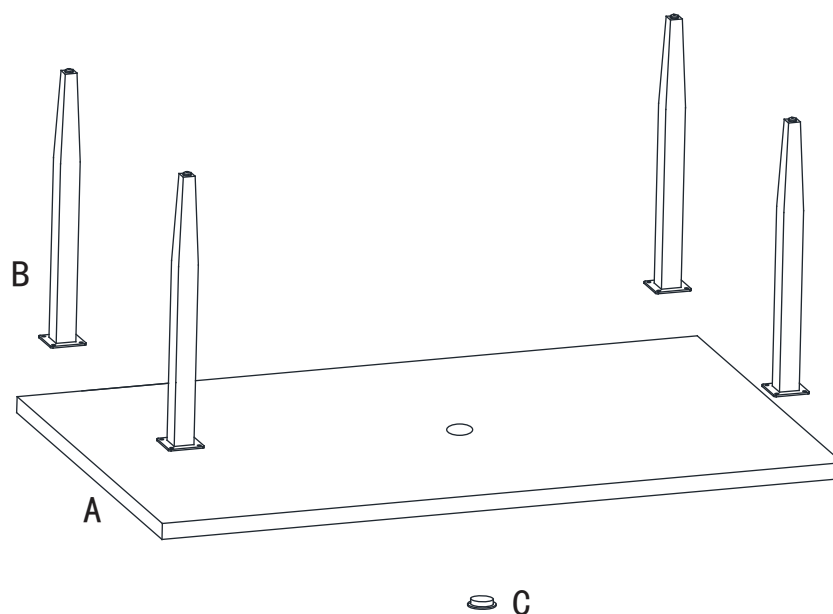

PART	DESCRIPTION	QUANTITY
A	TABLE TOP	1
B	TABLE LEG	4
C	UMBRELLA CAP	1



#### Safety Information

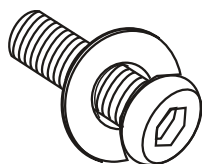

Every bolt needs to be used with a washer.  
To avoid damage to the table top, do not remove the packaging on the table top until ready to assemble. Assemble on a non-abrasive, flat surface.

## Assembly Instructions

### 1 Attaching the table legs to the table top




- Attach the table legs "B" to the table top "A" using sixteen Allen bolts "AA" and metal washers "BB". Do not tighten completely.



AA  
x16





BB  
x16

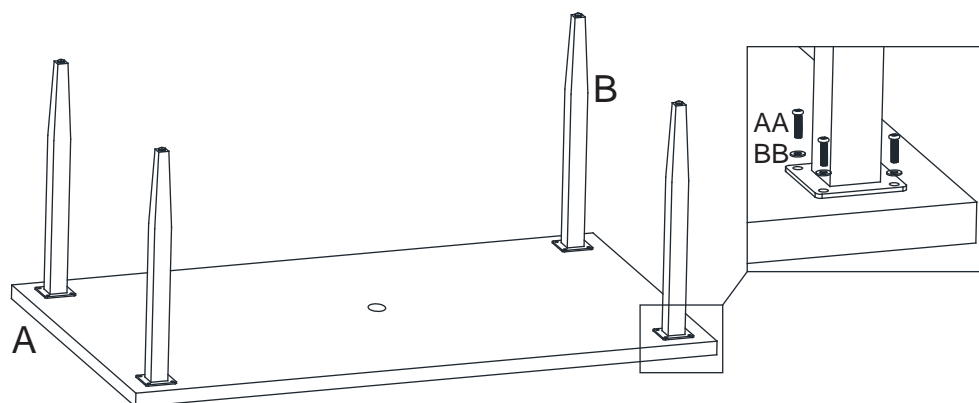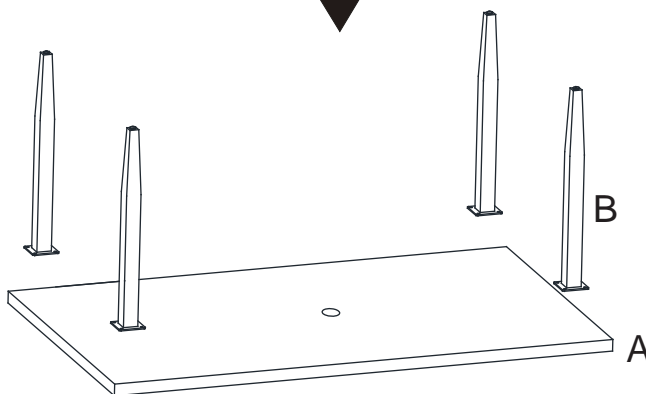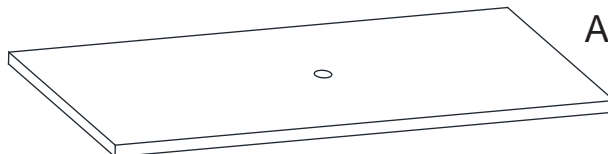

## Assembly Instructions

### 2 Attaching the plastic bolt caps

- Tighten all the bolts using Allen wrench "DD".
- Cover all the bolts with the plastic bolt caps "CC".

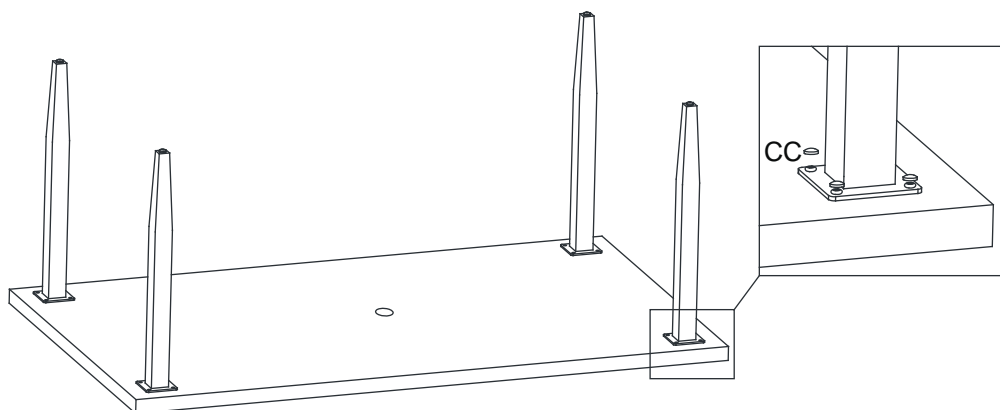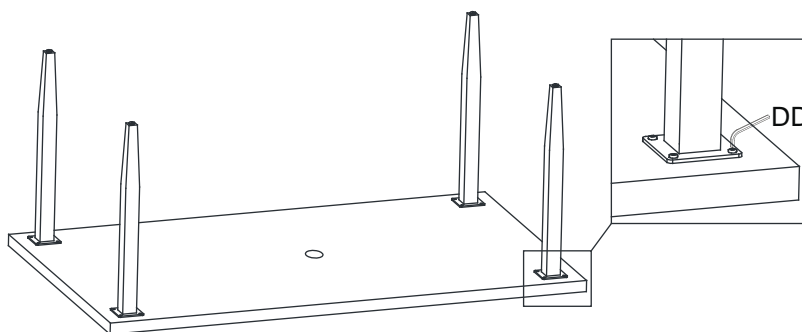


## Assembly Instructions

---

### 3 Attaching the umbrella cap

- ☐ Cover the umbrella hole with the umbrella cap "C".

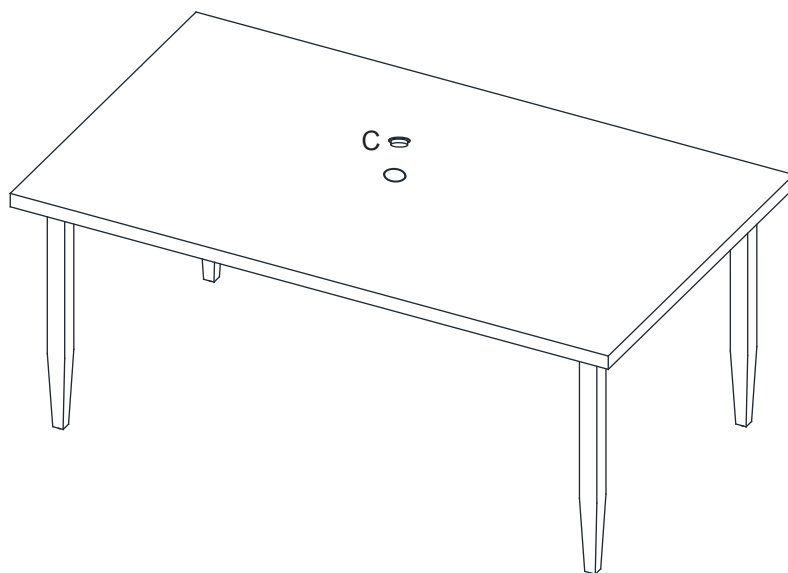



sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: [custserv@huayuecs.net](mailto:custserv@huayuecs.net) or Call toll-free: 1-877-931-7378

Made in / Hech en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products  
on-line at [www.sears.com](http://www.sears.com) and [www.kmart.com](http://www.kmart.com)