

LIMITED ONE YEAR WARRANTY

RETAIN THIS PART FOR FUTURE USE
THIS WARRANTY IS ONLY VALID IN THE USA

Techko Maid warrants this product for a period of one year from date of purchase against original defects in materials or workmanship. Techko Maid will replace (Techko Maid's option) with the same or equivalent product free of charge other than postage. This warranty does not cover damage caused by accident, misuse, abuse, or failure to follow instructions contained in your owner's manual. No refunds. Exchanges only.

Warranty Voids:

1. Using the product in any way other than specified in the owner's manual will void the warranty.
2. Opening or tampering with the product's housing will void the warranty.
3. Modifying the product or housing will void the warranty.
4. Failure to operate the product in accordance with the owner's manual will void the warranty.

RETURN INSTRUCTIONS:

1. PLEASE CALL TECHKO MAID'S CUSTOMER SERVICE LINE PRIOR TO RETURNING PRODUCT TO THE STORE OR SEEKING WARRANTY REPLACEMENT. (888) 883-2456
2. When returning a product to Techko Maid, please follow the instructions below:
 - a. Pack the product in the original carton or equivalent
 - b. Enclose a copy of the original, dated proof of purchase
 - c. Enclose a note explaining the difficulty you are experiencing with the product. Please be sure to enclose your full name, address, and telephone number.
 - d. Enclose a check or money order (no cash) payable to Techko Maid Inc. in the amount of \$10.00 for shipping and handling on your replacement.
 - e. Mail the above to:
Call (888) 883-2456 for mailing address
3. Please allow 4-6 weeks for warranty services.

Customer Service :
1-888-8TECHKO (1-888-883-2456)
Website: www.techkomaid.com

Mfg. By **TECHKO MAID**[®]
MADE IN CHINA

TECHKO MAID[®]

Super Maid[®] RV312

Robotic Vacuum & Floor Cleaning Machine

OPERATION INSTRUCTIONS



Before operating this unit, please read all of the instructions, including important warranty information.

Patents Pending :

Super Maid® RV312

Congratulations on the purchase of your new Super Maid® RV312 Robotic Floor Cleaning Machine. We know you will find this unit to be a helpful tool in your every day household cleaning.

- * Please see operation instructions for more information.
- * Retain these safety and operating instructions for future reference.

INSTRUCTIONS

Before using the Super Maid® RV312 for the first time, you will need to charge the battery completely overnight for best results.

CAUTION!

Before using your Super Maid® , be sure to observe the following precautions:

1. Super Maid® is for indoor use only.
2. Since the Super Maid® contains various electronic parts, when cleaning it, DO NOT submerge in water. You may clean the unit with a damp cloth only.
3. The Super Maid® is not a toy. Do not allow anyone to sit or stand on the unit. Small children and pets should always be supervised when the machine is cleaning.
4. Always follow the warnings and instructions outlined in this manual and on the packaging.
5. Do not use this device to clean anything that may be burning or smoking.
6. Do not use this device to clean certain spills such as bleach, paint, or other harmful or flammable chemicals.
7. Do not attempt to repair or adjust any electrical or mechanical functions on this device. Tampering with these functions may create a hazardous condition and will void your warranty.

3. Simply press the On/Off button, the Super Maid® will begin to move and start cleaning.

As the Super Maid® encounters chair legs, furniture and other obstacles, it will change direction and then continues with its cleaning pattern. It will periodically return to areas it skipped and continue on.

Movement Patterns:

Super Maid® will automatically perform two movement patterns and change to different movement patterns when needed:

1. Straight Pattern: (Fig.1 shows straight line movement)

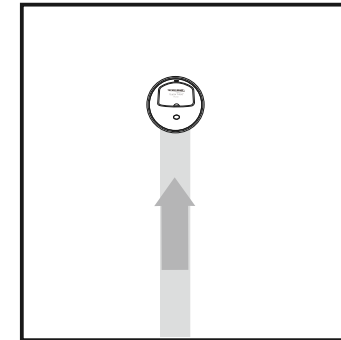 


Fig. 1

2. Random Pattern: the unit will reverse and change movement direction When blocked. (Fig. 2 shows angle changes)


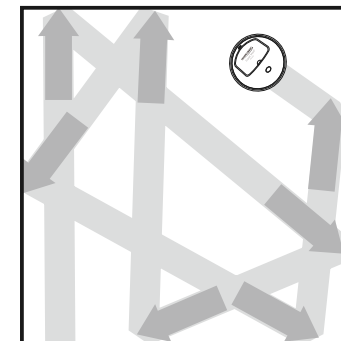 


Fig. 2

OPERATION:

 1. Apply a disposable cleaning cloth on to the cleaning pad attachment. See diagrams below. Wrap the sheet evenly around the cleaning pad attachment and push the edges of the sheet into the gripping slots. Then insert the whole pad on to the unit and into the pad insert holes located under the unit (see blew A to D).

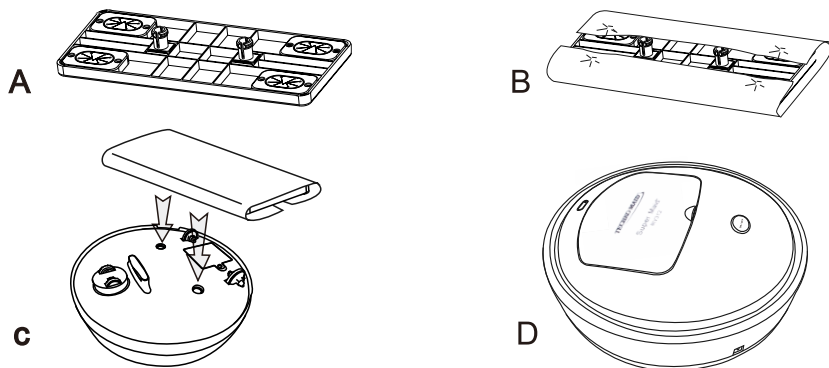

2. Cleaning and Maintenance

The maintenance for the Super Maid® is very simple. After each use, dispose of the cleaning sheet and clean any dirt left behind in the debris bin. You may clean the exterior by using a damp cloth only. Do not submerge in water.

Cleaning Dust Bin

1. Pry off the cover with your thumbs. (See A)
2. Pull the dust bin from the unit. (See B)



3. Empty contents into the trash. When necessary, you may need to slide the filter open and rinse the filter with plain water to clear the collected fine dust. Replace bin and shut the top cover. (See C and D)

 


8. Use only the electrical adapter provided by Techko Maid. Using another source may lead to product destruction, electrical shock or fires. Do not operate the unit with a damaged power supply cord.
9. For safety, this appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless supervised or instructed by a responsible party. Not intended for use by children.
10. Before using this machine, make sure to pick up objects such as clothing, toys, papers, pull cords for blinds or curtains, power cords and fragile objects that could get knocked over.
11. Always remove the battery before long-term storage or transportation.
12. Do not use common household cleaners, lubricants, or alcohol on or near the mopping machine. Do not use flammable, petroleum-based or aerosol cleaners on or near this product. Some agents may combust causing serious injury.

FEATURES:

- * Automatically cleans floors with the touch of a single button
- * Excellent for dusting / cleaning sealed wood floors, linoleum, tile and marble floors
- * Dusting and dry cleaning capability
- * Uses standard, convenient and easy to change disposable cleaning cloths
- * Compact design enables it to work under sofas, beds, and other hard-to-reach areas
- * Uses preprogrammed and random pattern movements for maximum room coverage
- * Rechargeable batteries and AC Adapter included


COMPONENT ILLUSTRATION

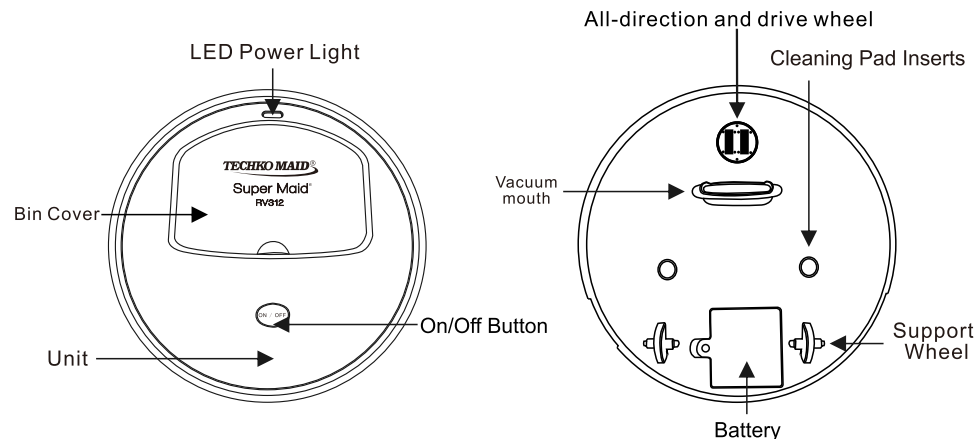


1. Remove the Robot and all parts from outer carton.

2. Please check your accessories:

 - * 1 Super Maid® RV312 Unit
- * 1 Cleaning Pad Attachment
- * 1 Charger - AC Adapter
- * 1 Rechargeable Battery Pack
- * 2 Disposable Dry Cleaning Cloths

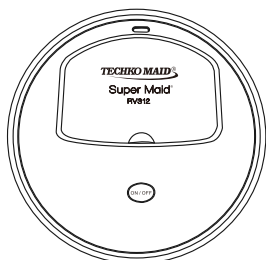

Unit

 


Cleaning Pad Attachment



Disposable Dry/Dust Cleaning Cloths



 Charger (AC Adapter)



Battery Pack

BATTERY AND CHARGING

- * **IMPORTANT** - Before using the Super Maid RV312 for the first time, you'll need to charge the battery completely overnight for best results. (3 hours +)
- * Charge using a standard AC outlet only.
- * Only use the included charger to charge your Super Maid .
- * Only use the rechargeable battery packs provided or approved by the manufacturer.
- * Do not use a charger with a damaged cord or plug.
- * Do not handle or charge the Super Maid when hands are wet.
- * Always disconnect the Super Maid from the charger before cleaning the unit itself.

CHARGING

1. Insert battery pack into the battery compartment located under the unit and tighten the screw to secure the battery pack to the unit. (see below)



2. Insert the plug into the power socket (see Fig.1).
3. Insert the other end of the plug into the jack located at the back of the machine(see Fig.2). The LED indicator light will begin to flash.
4. Charging time is 3 hours.

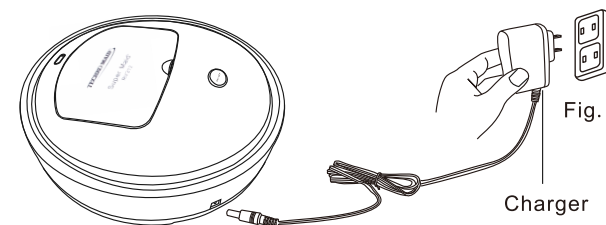 


Fig. 2

Fig. 1