

LIMITED ONE YEAR WARRANTY
RETAIN THIS PART FOR FUTURE USE
THIS WARRANTY IS ONLY VALID IN THE USA

Techko Maid warrants this product for a period of one year from date of purchase against original defects in materials or workmanship. Techko Maid will replace (Techko Maid's option) with the same or equivalent product free of charge other than postage. This warranty does not cover damage caused by accident, misuse, abuse, or failure to follow instructions contained in your owner's manual. No refunds. Exchanges only.

Warranty Voids:

1. Using the product in any way other than specified in the owner's manual will void the warranty.
2. Opening or tampering with the product's housing will void the warranty.
3. Modifying the product or housing will void the warranty.
4. Failure to operate the product in accordance with the owner's manual will void the warranty.

RETURN INSTRUCTIONS:

1. PLEASE CALL TECHKO MAID'S CUSTOMER SERVICE LINE PRIOR TO RETURNING PRODUCT TO THE STORE OR SEEKING WARRANTY REPLACEMENT. (888) 883-2456
2. When returning a product to Techko Maid, please follow the instructions below:
 - a. Pack the product in the original carton or equivalent
 - b. Enclose a copy of the original, dated proof of purchase
 - c. Enclose a note explaining the difficulty you are experiencing with the product. Please be sure to enclose your full name, address, and telephone number.
 - d. Enclose a check or money order (no cash) payable to Techko Maid Inc. in the amount of \$10.00 for shipping and handling on your replacement.
 - e. Mail the above to:
Call (888) 883-2456 for mailing address
3. Please allow 4-6 weeks for warranty services.

Customer Service :
1-888-8TECHKO (1-888-883-2456)
Website: www.techkomaid.com

Mfg. By **TECHKO MAID**[®]
MADE IN CHINA

TECHKO MAID[®]

Super Maid[®] **RV218**
Robotic Vacuum Machine

**OPERATION
INSTRUCTIONS**



**Before operating this unit, please read all of
the instructions, including important
warranty information.**

Patent Pending:14/182,999

Super Maid® RV218

Congratulations on the purchase of your new Super Maid® RV218 Robotic Vacuum machine. We know you will find this to be a helpful tool in your every day household cleaning.

- * Please see operation instructions for more information.
- * Retain these safety and operating instructions for future reference.

IMPORTANT

 
 
Before using the Super Maid® for the first time, you'll need to charge the battery completely overnight for best results. See Battery and Charging.

CAUTION!



Before using your Super Maid® RV218, be sure to observe the following precautions:

1. The Super Maid® is for indoor use only.
2. Since the Super Maid® contains various electronic parts, when cleaning it, DO NOT submerge in water. You can clean the unit with a damp cloth only.
3. The Super Maid® machine is not a toy. Do not allow anyone to sit or stand on the unit. Small children and pets should always be supervised when machine is cleaning.
4. Always follow the warnings and instructions outlined in this manual and on the packaging.
5. Do not use this device to clean anything that may be burning or smoking.
6. Do not use this device to clean certain spills such as bleach, paint, or other harmful or flammable chemicals.
7. Do not attempt to repair or adjust any electrical or mechanical functions on this device. Tampering with these functions may create a hazardous condition and will void your warranty.

3. Empty contents in to the trash. When necessary, you may need to slide the filter open and rinse the filter with plain water to clear the collected fine dust. Replace bin and shut the top cover. (See C and D)

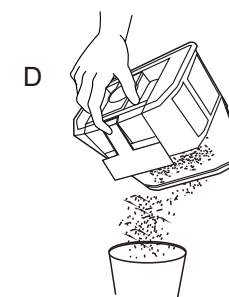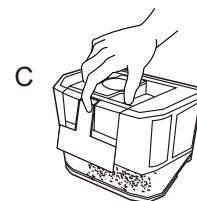

  4. Press filter points from dustbin box side, get filter out (look at the picture E), use water to clean filter (look at picture F)

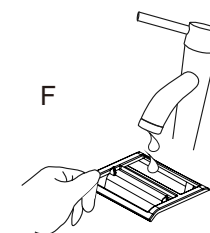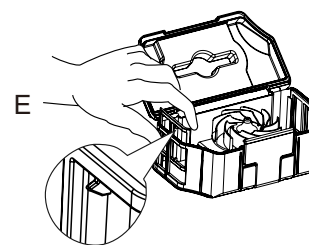

Simply press the On/Off button, the Super Maid® RV218 will begin to move and start cleaning.

As the Super Maid® RV218 encounters chair legs, furniture and other obstacles, it stops, changes direction and then continues with its cleaning pattern.

Movement Patterns:

Super Maid® will automatically perform various movement patterns and change to different movement patterns when needed:

1. Straight walk pattern (Fig.1 shows straight line movement)
2. Random Pattern: When blocked or at a drop off, the unit will reverse and change movement direction (Fig. 2 shows angle changes)

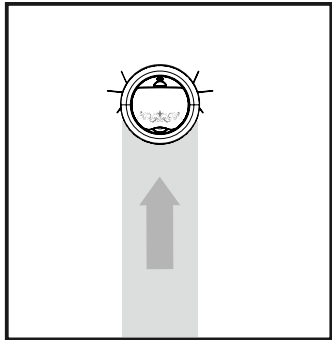 


Fig.1

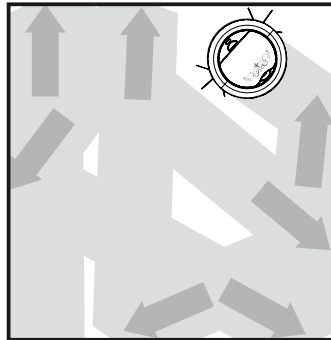 




Fig.2

Cleaning and Maintenance

The maintenance for the Super Maid® RV218 is very simple. After each use, dispose of the cleaning sheet and clean any dirt left behind in the debris bin. You may clean the exterior by using a damp cloth only. Do not submerge in water.

Cleaning Dust Bin

  1. Pry off the cover with your thumbs. (See A)
2. Pull the dust bin from the unit. (See B)

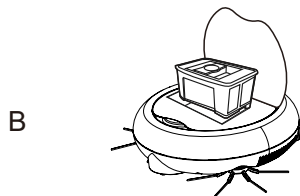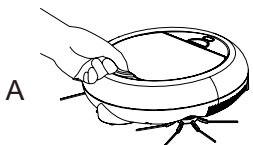

8. Use only the electrical adapter provided by TECHKO MAID. Using another source may lead to product destruction, electric shock or fires. Do not operate the unit with a damaged power supply cord.
9. To be on the safe, this product should not give (including children) physical, sensory, or who has experience of defective or lack of intelligence. If necessary, please use it under the care of supervisor .
10. Before using this machine, make sure to pick up objects such as clothing, toys, papers, pull cords for blinds or curtains, power cords, and any fragile objects that could get knocked over.
11. Always remove the battery before long-term storage or transportation.
12. Do not use common household cleaners, lubricants, or alcohol on or near your Super Maid®. Do not use aerosols or any products marked flammable. Some agents may combust causing serious injury.

Features:

 
- * Easy one touch operation
- * Excellent for vacuuming on hard floors
- * Side brush for extended cleaning near walls and tight areas
- * Easy removing waste bin
- * Compact design enables it to work under sofas, beds, and other hard-to-reach areas
- * Rechargeable batteries and AC adapter included

Contents:


1. Remove the Robot and all parts from the packaging.

2. Please check your accessories:

- 1 Super Maid® RV218 Unit
- 1 Charger - AC Adapter
- 1 Battery Pack
- 2 Side Brushes

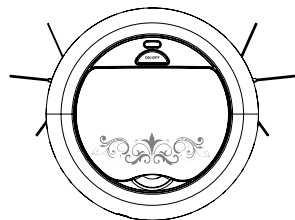

Unit

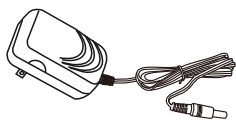 

(Charger)
AC Adapter



2 Side Brushes



 
Battery Pack

BATTERY AND CHARGING


- * **IMPORTANT** - Before using the Super Maid® RV218 unit for the first time, you'll need to charge the battery completely overnight for best results. (3 hours +)
- * Charge using a standard USA AC outlet only.
- * Only use the included charger to charge your Super Maid®.
- * Only use the rechargeable battery packs provided or approved by the manufacturer.
- * Do not use a charger with a damaged cord or plug.
- * Do not handle or charge the Super Maid® RV218 when hands are wet.
- * Always disconnect the Super Maid® from the charger before cleaning the unit itself.

CHARGING


1. Insert battery pack into the battery compartment located under the unit and tighten the screw to secure the battery pack to the unit. (see below)

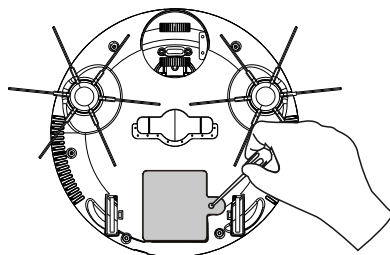

 
- 2. Insert the plug into the power socket (see Fig. 1).
- 3. Insert the other end of the plug into the socket located at the back of the machine (see Fig. 2). The LED indicator light will begin to flash.
- 4. Charging time is more than 3 hours. Charging is complete when the LED light turns off.

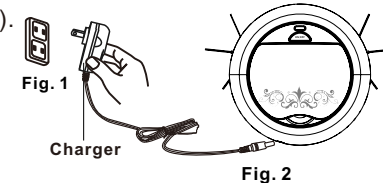

COMPONENT ILLUSTRATION

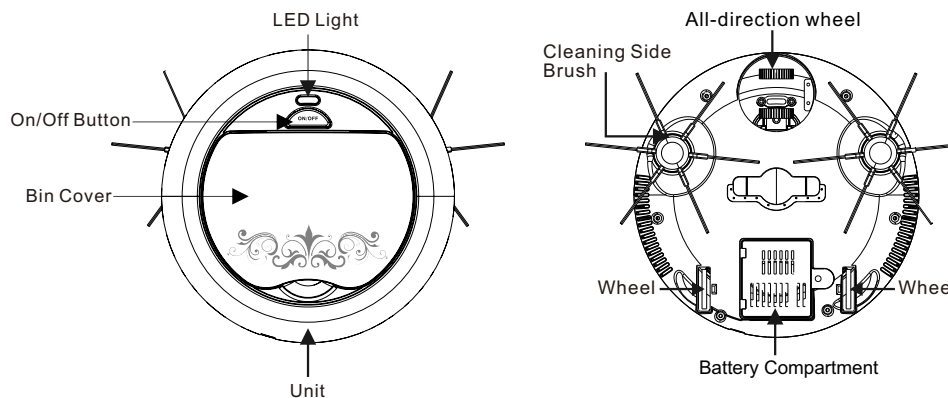 

SIDE BRUSHES:

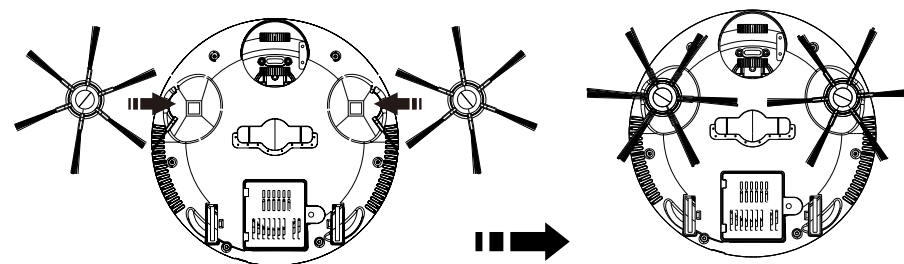 

When the unit is working, the LED shines Blue.
 When the battery power is low, the LED shines RED.
 When the battery is charging, the LED blinks RED.
 When the battery power is full, all LED lights will turn off.