

***SPORTCRAFT*** 

# 84" Viper Turbo Hockey

213cm Mesa De Air Hockey



## Instruction Manual

#64670

#64671



# **Congratulations for choosing Sportcraft Games!**

**This game has been manufactured from  
high quality materials for recreational purposes.**

## **CAUTION:**

**Please carefully read this manual  
and familiarize yourself with all the  
parts and contents before beginning  
assembly.**

## **WARNING:**

### **CHOKING HAZARD-**

**This Game Contains Small Parts**

### **SHARP OBJECTS -**

**This Game Contains Parts Which May Have Sharp Edges.  
Not Recommended for Children Under 8 Years of Age.**

 
 
 
 
 
 
 
 
## **Caring for Your Game Table:**

**Keep the table free from dust. To remove dust use a lightly dampened,  
lint free towel. Wipe from the center of the table surface to the edge  
of the table as you clean.**

 
 
**Do not put wet objects such as drinks on the playing surface  
or any other part of the table as it might cause damage to the table.**

**Do not store in a damp place.  
Do not place heavy objects on the playing surface.**

 

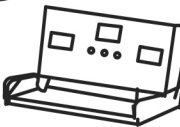 
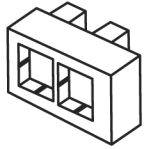 
# TABLE & LEG COMPONENTS

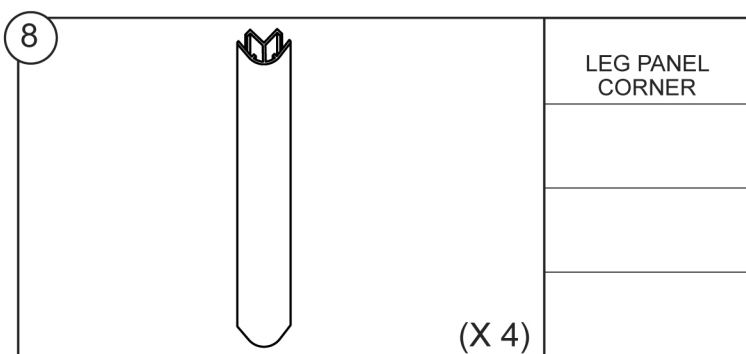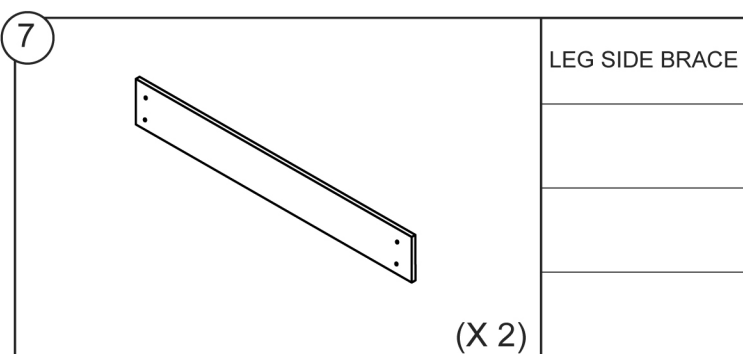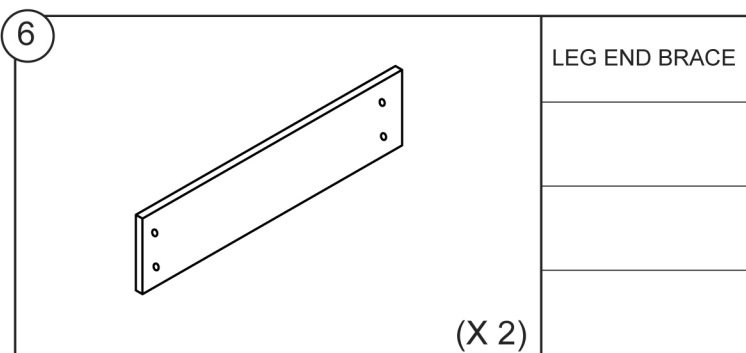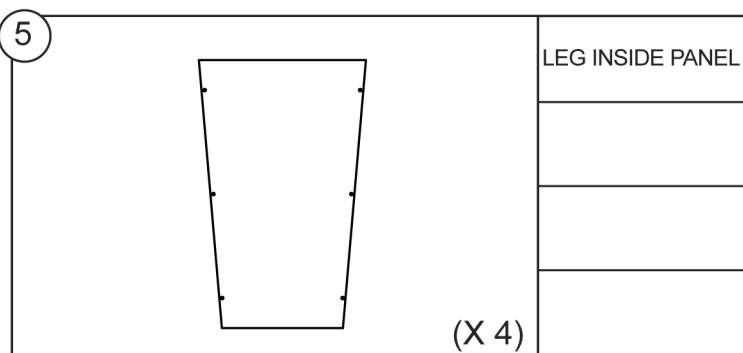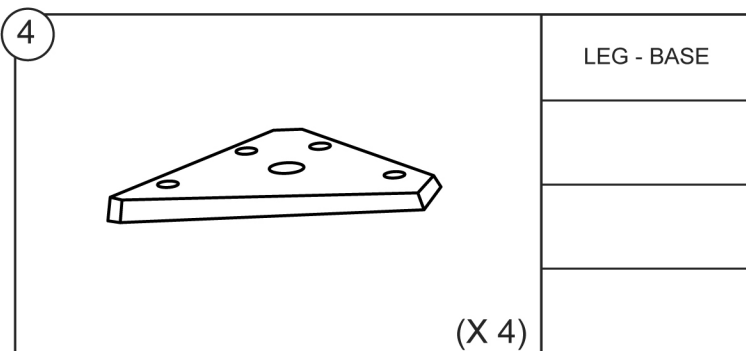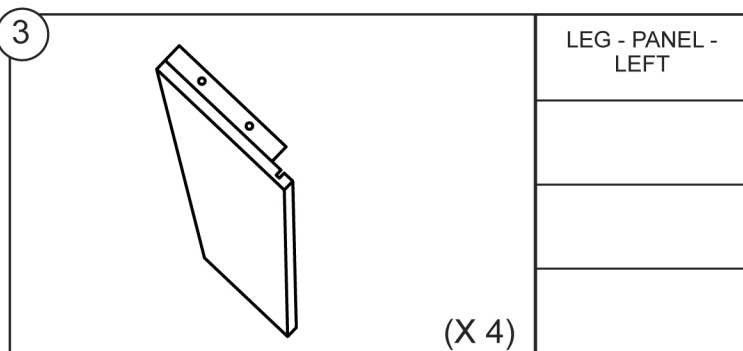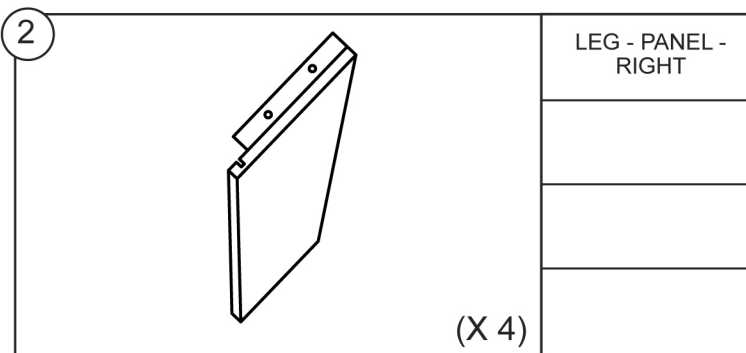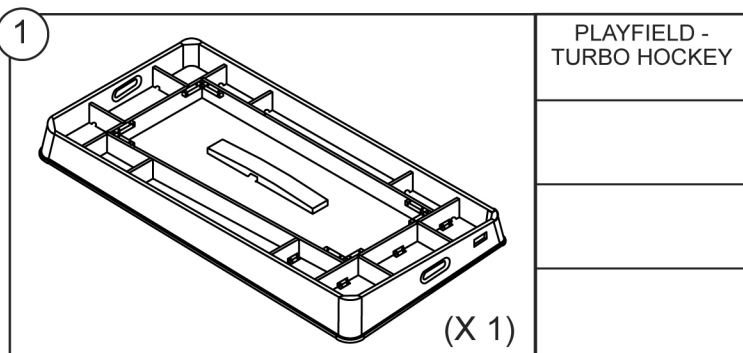

## SMALL PRODUCT PARTS

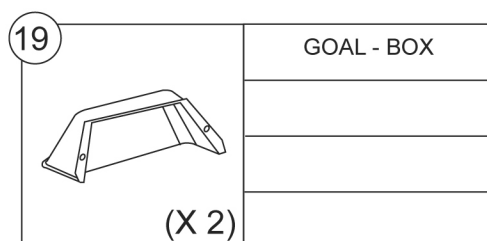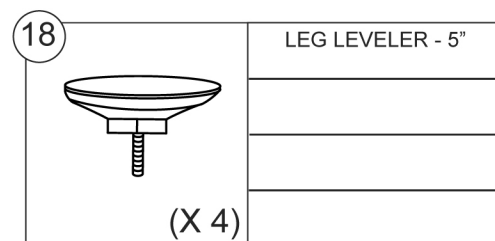



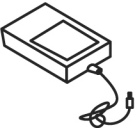

 

 
 
## ELECTRONIC SCORER PARTS

<p>31</p>  <p>(X 1)</p>	<p>BATTERY BOX</p>
<p>32</p>  <p>(X 2)</p>	<p>PUCK CATCHER WIRE</p>
<p>33</p>  <p>(X 1)</p>	<p>LED SCORING</p>
<p>34</p>  <p>(X 1)</p>	<p>SCORER BASE BOX</p>


## ACCESSORIES & MAINTENANCE
 
<p>39</p>  <p>(X 3)</p>	<p>PUSHER - SOMBRERO - RED</p>
<p>40</p>  <p>(X 3)</p>	<p>FELT PAD</p>
<p>41</p>  <p>(X 3)</p>	<p>PUCK - ROUND - RED</p>



## HARDWARE & TOOLS

<p>47</p>  <p>(X 16)</p>	<p>BOLT - HEX HEAD - 8 X 63.5 MM</p>
<p>48</p>  <p>(X 16)</p>	<p>WASHER - 8 X 19 MM</p>
<p>49</p>  <p>(X 16)</p>	<p>BOLT - ALLEN KE 6.5 X 22 MM</p>
<p>50</p>  <p>(X 16)</p>	<p>WASHER - 6 X 15 MM</p>
<p>51</p>  <p>(X 16)</p>	<p>SCREW - FLAT HEAD - 4 X 45 MM</p>
<p>52</p>  <p>(X24)</p>	<p>SCREW - ROUND HEAD - 4 X 15 MM</p>
<p>53</p>  <p>(X 20)</p>	<p>SCREW - ROUND HEAD - 4 X 12 MM</p>
<p>54</p>  <p>(X 1)</p>	<p>WRENCH</p>






**CAUTION : Do not use power tools to tighten the screws and/or bolts. Drills and Power Screwdrivers can provide too much torque and may damage parts unnecessarily. Use only the Allen Wrench provided and your own Phillips Head Screwdriver.**

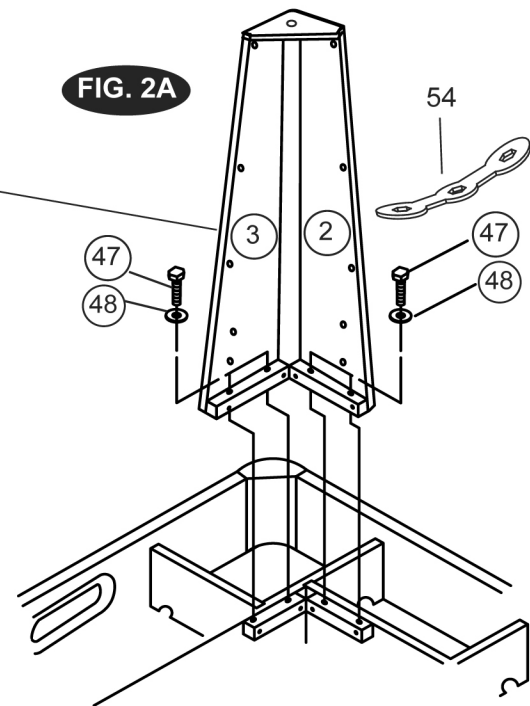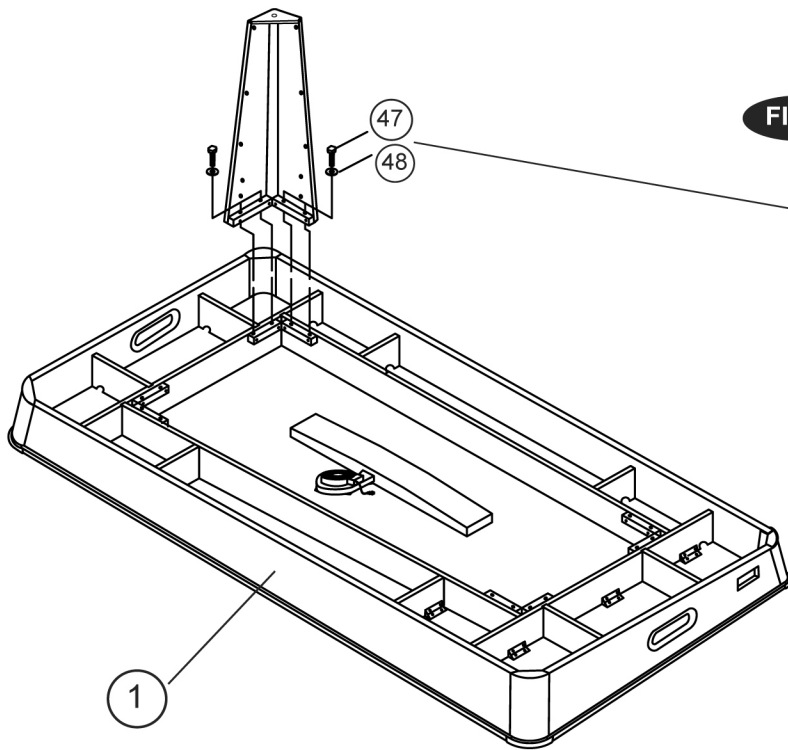  

**STEP 2:**




 
- Attach the four Leg assemblies to the table (#1) using four Bolts (#47), eight Washers (#48) per leg assembly. See Fig. 2A.

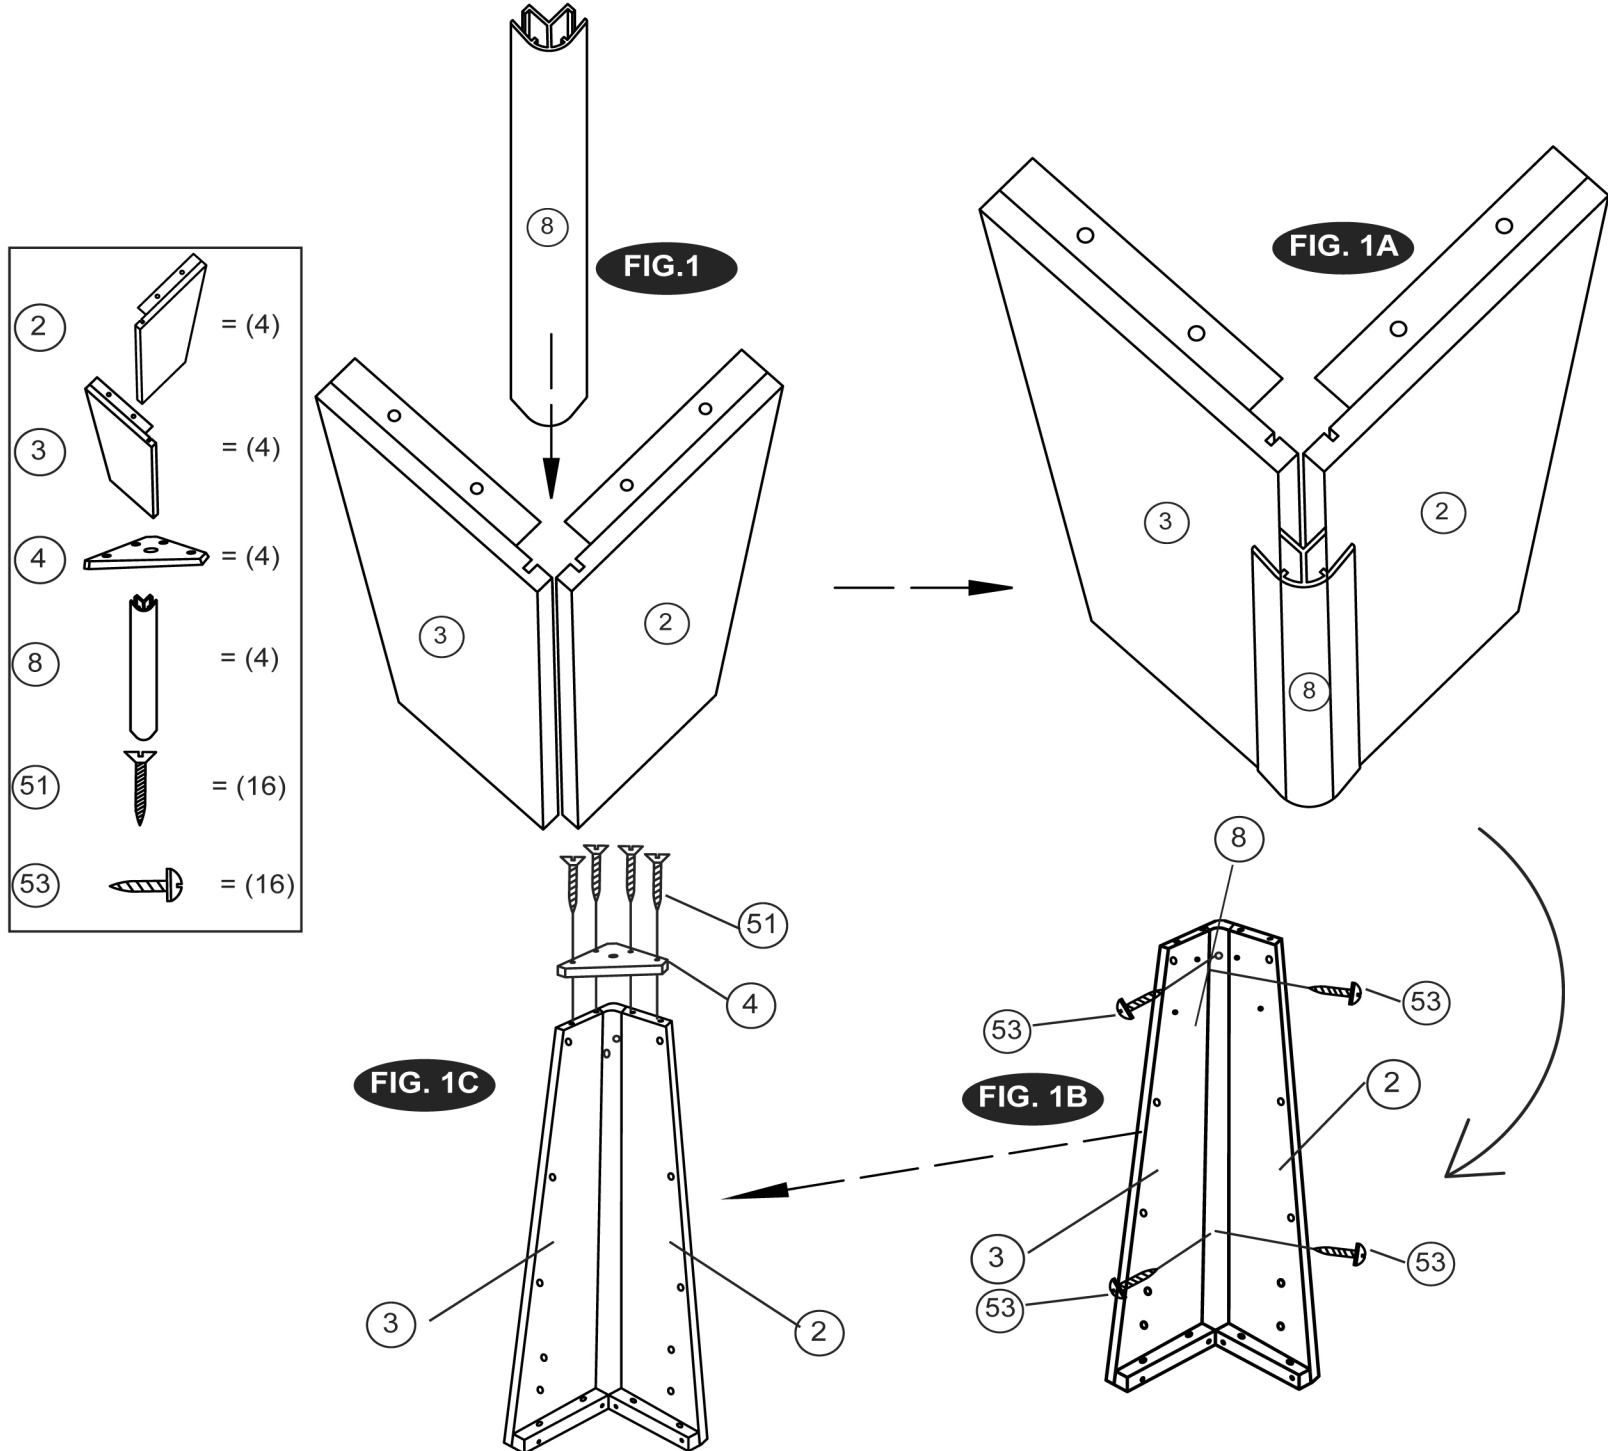


**CAUTION : Do not use power tools to tighten the screws and/or bolts. Drills and Power Screwdrivers can provide too much torque and may damage parts unnecessarily. Use only the Allen Wrench provided and your own Phillips Head Screwdriver.**

**STEP 2:**

    - Hold two Leg Panels -Right and Left (#2 and #3). See Fig.1.
- Slide one Leg Panel Corner (#8) between the Leg Panels (#2and #3). See Fig.1A.
- Turn over the Leg assembly and then attach two Screws (#53) to the top of the middle of the Leg assembly. See Fig.1B.
- Attach four Leg Bases (#4) to Leg assemblies using four Screws (#51) per Leg Base. See Fig.1C
- Repeat the above steps for the other Leg Panels (#2 and #3) Corners (#8) and Leg Base (#4).

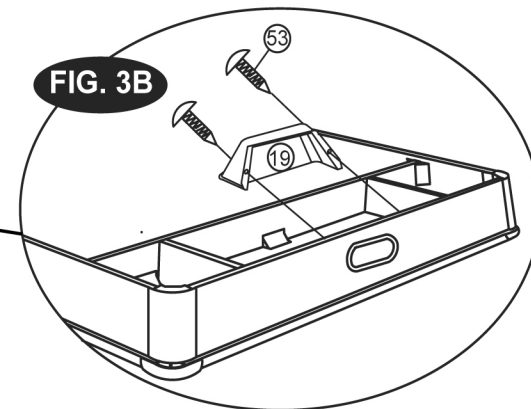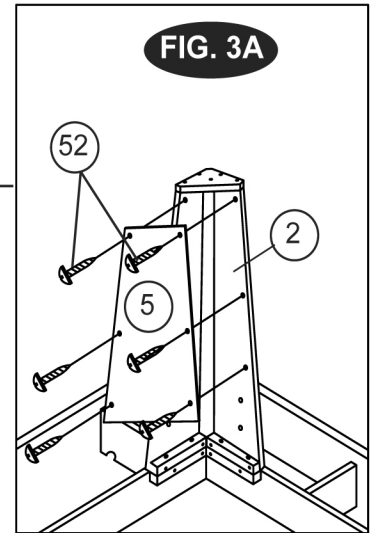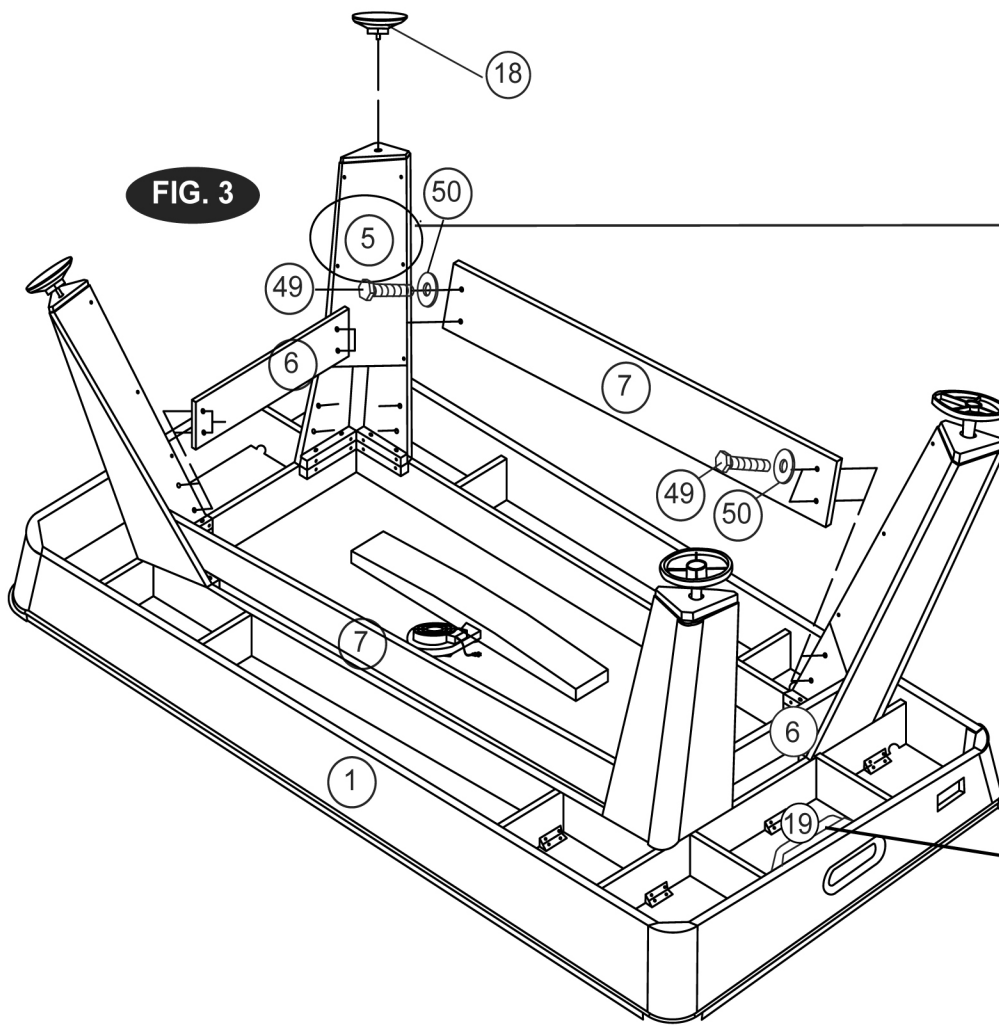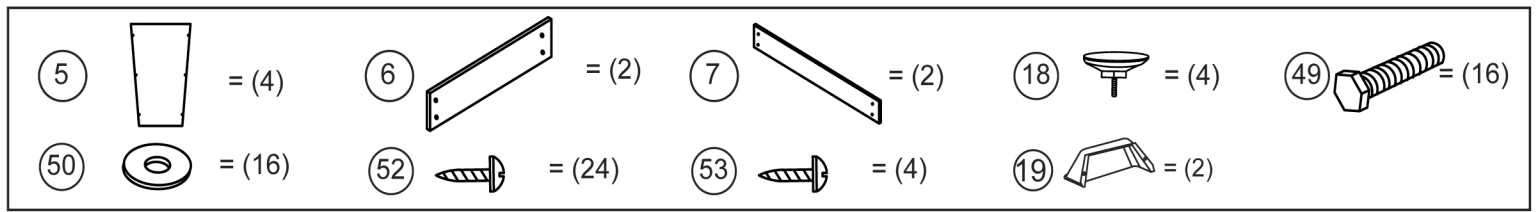


**CAUTION : Do not use power tools to tighten the screws and/or bolts. Drills and Power Screwdrivers can provide too much torque and may damage parts unnecessarily. Use only the Allen Wrench provided and your own Phillips Head Screwdriver.**

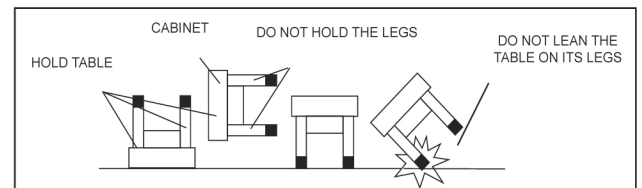 

### STEP 3:


- Attach four Leg Inside Panels (#5) to the Leg assemblies using six Screws (#52) per Leg Inside Panel. See Fig. 3A.
  - **[4]** Attach the Goal Boxes (#19) to the Cabinet (#1) using two Screws (#53) per Goal Box. See Fig. 3B.
  - Attach two Leg End Panels (#6) and two Leg Side Panels (#7) between two Legs using four Bolts (#49) with four washer (#50) per Leg End Panel and Side Panel.
  - Screw four Leg Levelers (#18) into the four Legs. See Fig. 3.
  - You will need 4 or more adults for this step. Carefully lift the assembly off the floor and turn it over.
- CAUTION:** Make sure that you place the table squarely onto its legs or damage to the table may occur.
 
### SCHEMATIC DIAGRAM

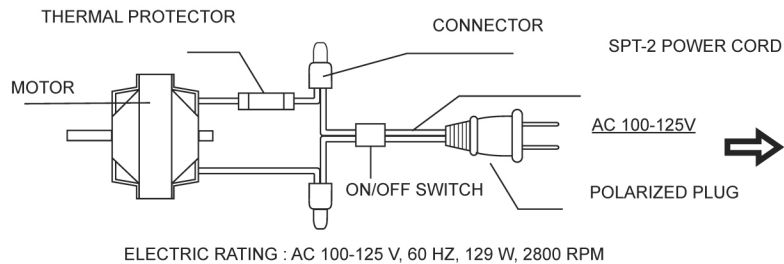

### ELECTRICAL CONNECTIONS DIAGRAM

 FIG. 4

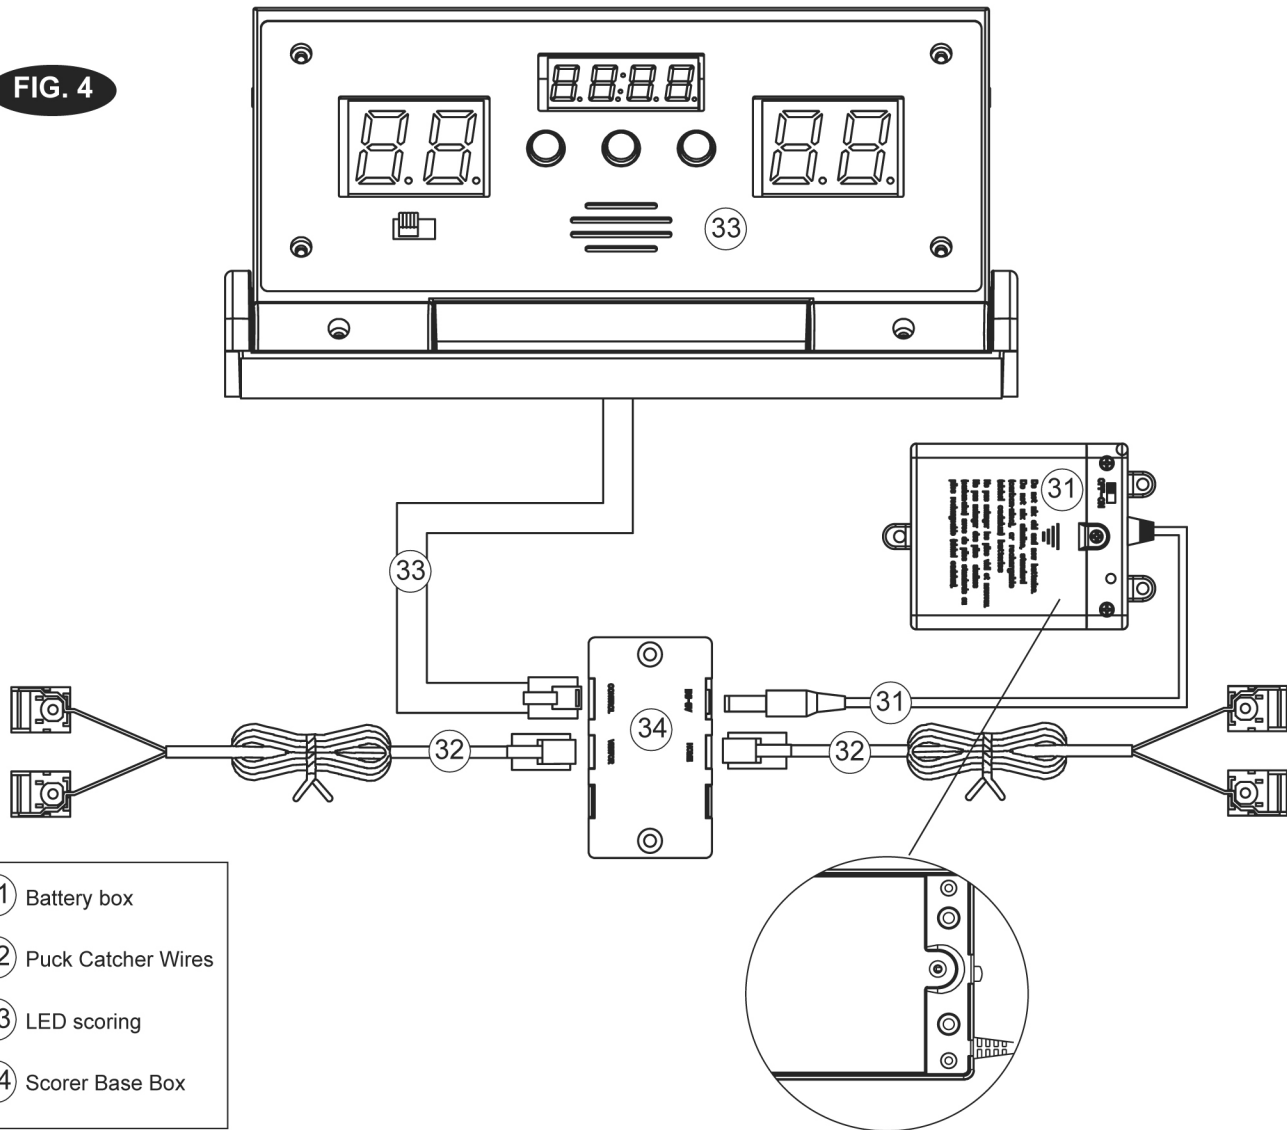

#### STEP 4:

- Connect the wires under the table as shown above.

- WARNING!** Do not mix old and new batteries. Do not mix alkaline, standard (carbon - zinc), or rechargeable (nickel cadmium) batteries. Do not dispose of batteries in fire, batteries may explode or leak.

**NOTE:** Please clean the battery contacts of the device prior to battery installation. Make sure to remove batteries from the scorer when not used for an extended period of time. Remove used batteries promptly.

## ELECTRONIC SCORER OPERATION:

1. From underneath the table, unscrew the bolt using a screwdriver and open the battery box. Insert 4 AA batteries (not included) in the order of polarity as shown on the inside cover. Then close using a screwdriver. Turn on the power by turn the on/off switch on the battery box. (If the game will not be used for a long period of the time, we recommend that the batteries be removed.)
2. Turn on the scorer using the on/off switch on the control box. You will hear music and Home and Visitor will display "SC".
3. There is one pre-set period of 5 minutes which can be adjusted to 10 minutes, 15 minutes, or "Free play" mode by pressing the "TIME/RESET" button.
4. Press the "START/PAUSE" button to begin the game.
5. During Play - When the "TIME/RESET" button is pushed and held for 3 seconds, or after the game is over - when the "TIME/RESET" button is pushed, the scoreboard will reset back to the game time selection.
6. Press the "START/PAUSE" button to Pause the game, to resume play, press this button again.
7. "Sound ON/OFF" – Press this button while the game is on to turn the sound OFF and ON.
8. Once the home or visitor has reached 99 points, the Home or Visitor display will stop scoring and flash continuously. Press the "TIME/RESET" button to reset.
9. **NOTE:** If there is no score or any button pressed for 20 minutes, the scoreboard will automatically turn off. To restart press the "START/PAUSE" button. We suggest turning the power off when the game will not be used for an extended period of time.

## HOCKEY GAME RULES:

- 1) This game is designed to be played with two (2) players, one at each end, or with four (4) players, two at each end of the game table.
- 2) Flip a coin to determine who will begin play, or a face-off can be held at the center of the table.
- 3) Play begins when the puck is placed on the playing surface. Players must hit the puck with the hand-held pushers and attempt to shoot into the opponent's goal.
- 4) One point is awarded when a puck is shot into the opponent's goal.
- 5) Winning the game: the winning score is accomplished by being the first player to reach a predetermined score or by being the player to score the most points within a given period of time.

***Play and  
Have FUN!***



## Limited Warranty

This product is warranted to be free of defects in workmanship or materials from the time of purchase for a period of 90 days. This limited warranty covers normal consumer usage. This limited warranty does not cover institutional or commercial use and does not cover failures which result from alterations, accidents, misuse, abuse, neglect, or acts of God.

Should evidence of defects in materials or workmanship or any customer service issues occur within the 90 day limited warranty period, please contact Lion Sports Inc.

Requests for warranty service can be made at 1-877-244-5466 between the hours of 9am and 4pm EST Monday through Friday or via email at [customerservice@lionsportsinc.com](mailto:customerservice@lionsportsinc.com)

This warranty gives you specific legal rights and you may have other rights which vary from state to state.



**Lion Sports Inc.**  
**701 Koehler Ave. Ste 2**  
**Ronkonkoma, NY 11779**  
**Toll Free Customer Service Hotline – 1-877-244-5466**  
**Or Email [customerservice@lionsportsinc.com](mailto:customerservice@lionsportsinc.com)**



Sportcraft® is a registered trademark of ABG-Sportcraft, LLC in the USA and other countries.  
Sportcraft™ is a trademark of ABG-Sportcraft, LLC. ©2012 ABG-Sportcraft, LLC

The Lion Head and Lion Sports Logos are Registered Trademarks of Lion Sports Inc.