

## Dock Stations & Phone Cradles

For smartphones up to 3.06 in. wide x .58 in. thick

*Thank you for purchasing a Sportsman's Desk premium desktop product. Please carefully read and save these instructions before attempting to assemble, maintain, install, clean or use this product. Observe all information to protect you, your equipment, and others. Failure to observe these instructions may result in property damage and/or personal injury. Please keep these instructions for future reference.*

### HOW TO SETUP:

The patent pending universal smartphone 2 in 1 dock station and cradle is designed for use with most phones with or without cases. It is not designed to be used with "flip" style phones or tablets.



#### **Devices with cable ports located on the bottom:**

Feed the cable through the bottom of the dock station base until the fitting is exposed above the phone

base retaining slot. For phones with cable ports located on the side: Plug cable directly into the phone without feeding through the dock station base. If the dock station base does not sit flush on the surface then you will need to purchase a Sportsman's Desk flat ribbon cable for your phone.

#### **Connect the cable to the smartphone.**



#### **Place the phone securely into the base.**

There are two machined cavities in the base. For best results use the cavity that conforms to your phone size.



### PROBLEMS AND SOLUTIONS:

#### **Phone will not charge or sync properly when plugged into computer USB port.**

**Solution:** Disable the WiFi feature on your phone (many phones will not sync or charge from the computer if this feature is enabled). Disconnect the cable, restart your computer and reconnect. Many times turning off your phone and powering it back on will solve this issue as well.

Software specific to your phone make and model must typically first be installed onto your computer in order to charge or transfer data and images. Check your phone manufacturer's website for details.

#### **Phone charges but displays a "Red X" over the battery symbol when charging.**

**Solution:** A "Red X" symbol when charging is perfectly normal when using a flat ribbon cable. Your phone will continue to charge properly and often this symbol no longer appears over time.

**CLEANING INSTRUCTIONS:**

Unplug and remove all electronics including phones and cables prior to cleaning. Use a clean soft damp cloth.

**DO NOT USE** abrasives, cleaning solvents or oil based products as they may harm the finish on the product and/or desk surface.

**DO NOT RETURN TO STORE**

**SPORTSMAN'S DESK (SD)** makes every effort to ensure that this product meets high quality and durability standards. SD warrants to the original retail consumer a life time limited warranty from the date the product was purchased at retail and that each product is free from defects in materials. *Warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence, or accidents, repairs or alterations, or a lack of maintenance. SD shall in no event be liable for death, injuries to persons or property, or for incidental, special, or consequential damages arising from the use of our products. To receive service under warranty, the original manufacturer part must be returned for examination. Shipping and handling charges may apply. If a defect is found, SD will either repair or replace the product at its discretion.*

**CALIFORNIA PROPOSITION 65 WARNING**

You can create dust when you cut, sand, drill or grind materials such as wood, paint, metals, or other materials. This dust often contains chemicals known to cause cancer, birth defects, or other reproductive harm. Wear protective gear.

**WARNING:** This product or its power cord may contain chemicals, including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

**IMPORTANT:** When using equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating manual with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the product to any other person, give them these operating instructions as well. We accept no liability for damage or accidents which arise due to non-observance of these instructions and the safety information herein.

For warranty purposes, keep your dated proof of purchase and attach to the manual for safekeeping.

For customer service, email [Info@SportsmansDesk.com](mailto:Info@SportsmansDesk.com) or call 1-419-515-4059  
The Sportsman's Desk LLC, PO Box 259, Norwalk Ohio 44857