

Operating Instructions

Handheld Steamer

Model 2315



TOP: Read all instructions carefully before using this item.

Filling the Steamer with Water

1. Place the steamer on a flat, level surface.
2. Fill the water reservoir with a measuring cup.
3. Never fill the water past MAX.
4. Place back the water reservoir cap.

WARNINGS:

1. Never fill the water reservoir when the power cord is plugged in.
2. Allow the appliance to cool for at least 5 minutes after it has been used.
3. Never add cold water to hot water. Steam may shoot out of the filling hole and cause injuries. Always let the appliance cool before adding water.

Steaming Fabrics and Linens

Steaming Fabrics and Linens

Note: The water reservoir must be filled and supplied cap attached securely before proceeding with the following steps.

1. Plug the steamer power cord into an electrical outlet. The heat indicator light will illuminate when turned on.
2. The steamer will emit steam after approximately 50 seconds.
3. Direct the steam nozzle towards the material you wish to steam.
4. Keep the flow of steam focused on the material. Using a slight back and forth motion will further enhance the steaming process.

Caution: Never point the steam nozzle towards your body, other people, pets or plants.

Steaming Garments

1. Place the garment on a clean hanger.
2. Begin steaming slowly from the bottom to the top of the garment. The steam will rise along the inside and outside of the fabric, removing the wrinkles.
3. Periodically point the steamer away from the garment and smooth the fabric with your free hand.
4. Repeat the above steps as necessary until the garment is free of wrinkles.

Steaming Tips

1. Steaming both sides of the fabric will help to remove stubborn wrinkles.
2. Delicate fabrics need to be steamed carefully to avoid damage caused by water spotting.
3. Drapery and curtains can be steamed while still hanging.
4. Caution should be taken while using a ladder or step ladder. Do not use a stool, chair or revolving chair.
5. To steam towels, handkerchiefs and napkins, hang them over a rod or towel holder.

Handling and Storing

1. Use distilled water to avoid mineral build-up.
2. Remove all accessories from the steamer.
3. Empty any remaining water into a sink to minimize mineral build-up.
4. Reattach the water reservoir cap. Do not over tighten.
5. It is recommended to store the steamer and any supplied accessories together in the original packaging.
6. Store the steamer in a cool, dry place.

When using your appliance, basic safety precautions should always be taken. Read all instructions before use. Save this user manual for further reference.

Safety Instructions:

1. Please keep out of reach of children.
2. Do not operate any appliance with a damaged cord, plug or steam hose.
3. Do not operate any appliance after it has been dropped, damaged or malfunctioned in any way.
4. Do not disassemble or attempt to repair the appliance.
5. To avoid electric shock, do not immerse the appliance in water or any other liquid.
6. To reduce the risk of contact with hot water emitting from steam vents, check the appliance before each use by holding it away from your body.
7. Use this appliance only in an up or down vertical motion. Never use steam head in a horizontal position, or tilt into a backward position as this may result in a hot water spill. Let the appliance cool completely before storing.
8. Burns may occur from touching hot parts, hot water or steam. Use care when emptying a steamer appliance as hot water may still be in the reservoir.
9. Do not direct steam towards people or animals.
10. Do not steam garments while they are being worn.
11. Nozzle and attachments become hot during use. To avoid injuries and burns, DO NOT touch the steam nozzle or water reservoir while the appliance is in use.
12. **DO NOT** change attachments while the appliance is plugged in or emitting steam.
13. Always disconnect the appliance from any electrical outlet when adding/changing attachments, filling with water, emptying the water or when not in use.
14. The use of accessory attachments other than those supplied with the appliance is not recommended and may result in fire, electric shock or personal injury.
15. If an extension cord is being used, the marked electrical rating should be at least as high as the electrical rating of the appliance. Cords rated for less amperage may overheat. Care should be taken when using the extension cord so that cannot be pulled or tripped over

Troubleshooting

Problem	Possible Cause	Solution
No Light on the switch.	The steamer is not plugged in.	Plug the steamer power cord into an electrical outlet.
	The household circuit breaker has been tripped; there is a blown fuse in the electrical circuit.	Reset the household circuit breaker or replace the blown fuse. Contact an electrician or your area's electrical provider.
The steamer heats up but there is no steam.	The water reservoir is empty.	Refill the water reservoir.
	There is mineral build-up in the steamer.	Remove the mineral build-up.
The steamer flow light? is flashing	There is mineral build-up in the steamer.	It is normal for the flow of the steam to stop for a few seconds. If it stays off for longer periods, check for mineral build-up.

Warranty

Epica Products LLC provides a 3-year limited warranty on the Epica Compact Fabric Steamer. The warranty begins on the original date of purchase, applies only to the purchase of the Epica Compact Fabric Steamer, and covers only the Epica Compact Fabric Steamer.

To receive warranty service, which covers only manufacturing defects in workmanship or materials, the purchaser must contact Epica Products LLC and provide proof of purchase in the form of the original, dated sales receipt for the product. After verification, Epica Products LLC will determine the problem and decide on the appropriate service procedures.

The Epica Products LLC warranty does not cover any of the following (1) damage caused by user negligence, accidents, lack of required maintenance; (2) damage caused by failure to follow the instructions and or warning contained in the owner's manual; (3) damage caused by unauthorized repairs or alterations to the product;

(4) damage or wear caused by the use of the product in ways for which it was not designed; (5) damage or wear caused by the use of the product other than for home use; (6) malfunction of the product due to its replacement near a source or interference or in a location beyond the range of the receiver; and (7) damage or malfunctions caused by extreme weather events, such as flood and lightning strikes or weather events exceed the minimum or maximum operating temperature ranges of the product as listed in the owners manual.

This warranty covers only actual defect within the product itself, and does not cover extraneous costs such as the cost of mounting or removing the product; setting up, configuring and adjusting the product; or performing routine maintenance on the product.

Contact info

Epica Products

1-877-507-0576

support@epicaproducts.com