

Epica



Cool Touch Kettle

Owner's Manual

Model: EP-82561

IMPORTANT SAFEGUARDS TO KEEP IN MIND



When using electrical appliances, basic safety precautions should always be followed, including the following:





READ ALL INSTRUCTIONS BEFORE USE

1. Make sure that the voltage indicated on the bottom of the appliance corresponds to the local power voltage
2. Only use the kettle for boiling water. Do not use it for boiling milk, soup, coffee, tea or steaming.
3. Only the kettle base provided can be used with this kettle.
4. Never dry-heat the appliance. Stop using immediately and contact Epica Products for repair when the power cord is damaged.
5. Use a flat, stable and heat - resistant word surface. Do not place it on the surface of other appliances, such as cookers, oven or microwaves.
6. Keep the appliance away from wet areas. Do not immerse the appliance or its base into water. Do not operate with wet hands.
7. Make sure the water level is between the minimum and maximum lines marked inside the kettle. Overfilling may cause boiling water to be ejected.
8. Keep the appliance away from children.
9. During processing, the appliance gives off steam and heat. Do not open lid while in use.
10. Unplug the power cord after use, before pouring and cleaning. Do not unplug the appliance by pulling the cord.
11. Do not try to repair or disassemble the appliance to avoid electric shock. Please send the appliance to an authorized Epica service center for repair.
12. Unplug the power cord if the appliance fails to operate correctly during processing, then lift the carafe off the base. Let cool completely, then clean and inspect for damage.
13. This appliance is designed for domestic use only. It is not intended for commercial use.

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

ABOUT YOUR EPICA COOL TOUCH KETTLE

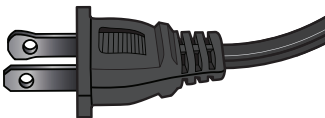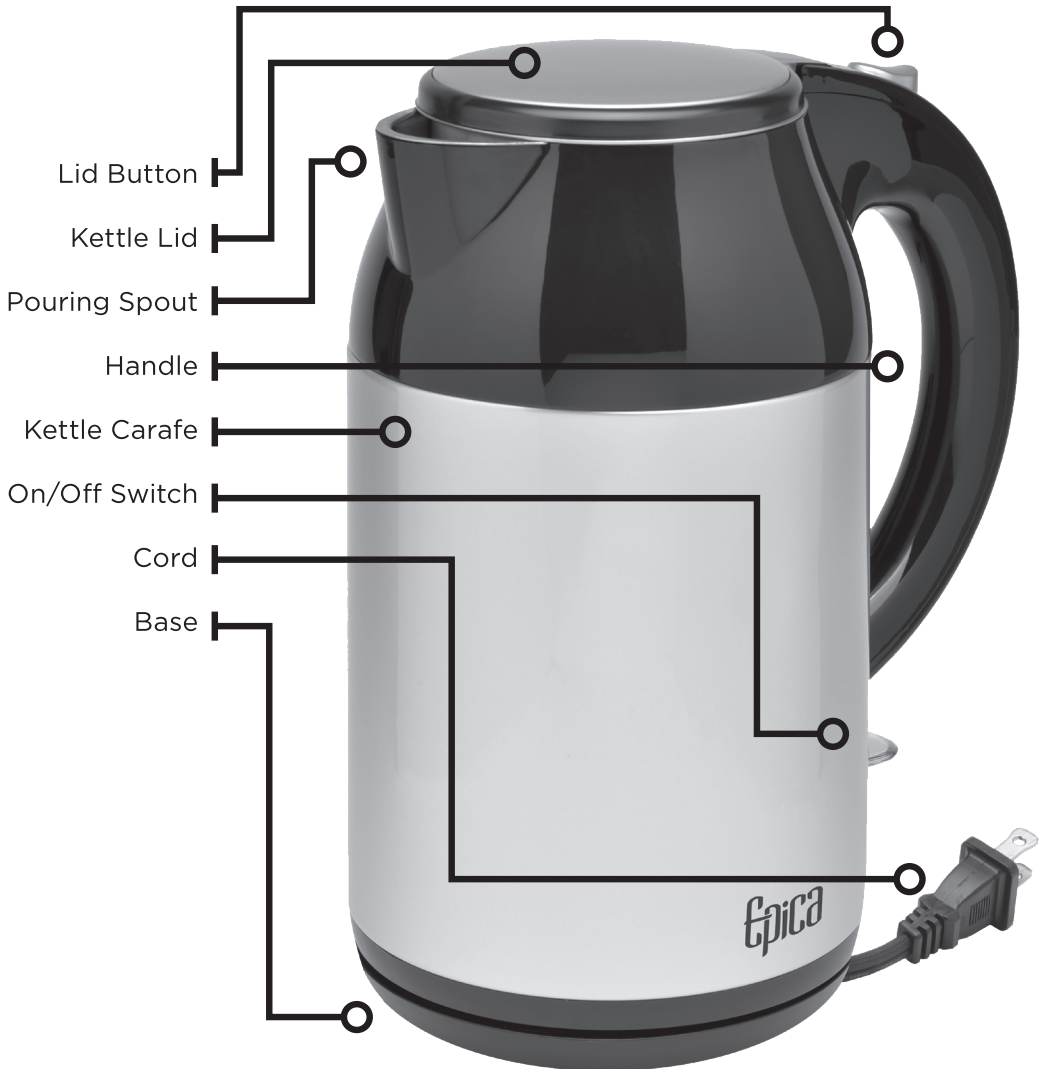

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than other). As a safety feature to reduce the risk of electrical shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

USER INSTRUCTIONS

- Before using for the first time, pour water to the maximum water level (1.7 L). Plug in and turn on boiling process. Kettle will automatically shut off when boiling is over.

BOILING WATER:

1. Place the power base on a flat surface.
2. Place the lid-opening button lightly to open the lid. Fill carafe with desired amount of water, and close the lid. Place the body on the base and plug in.
3. Press the on/off switch to the “I” position to begin the heating process. The red indicator light will turn on.
4. A few seconds after boiling point is reached, the kettle will automatically shut off, the

indicator light will go out and the on/off switch will return to the “O” position. **NOTE:** You may turn off the kettle at any time by pushing the on/off switch to the “O” position.

5. Lift the carafe off the base and pour out the water.
6. Unplug the power cord after use.

DRY HEATING PROTECTION

If the kettle is turned on without water in the appliance, the heating protection sensor will automatically shut off in order to protect the appliance from being damaged from dry heating.

If this happens, unplug the power cord and wait 10 minutes for the appliance to cool down. It will then return to its normal working state.

CLEANING & MAINTENANCE

- Unplug the appliance and allow it to cool before performing cleaning and maintenance.
- Use dishwashing liquid to clean the surface of the appliance, and water to clean the inner pot of the appliance.
- If you boil “hard” tap water, calcium carbonate oxide sedimentary deposits may be produced during boiling and should be removed. Fill the kettle with a solution made of 2 parts water and 1 part white vinegar. Then bring to a boil. When boiling is over, let the solution sit in the appliance for one day. Wash with clean water again and after the water is spilled out, kettle is ready for use.
- To prevent scratching, do not use any metal or abrasive cleaning tools.



WARNING: Do not immerse the appliance, power cord or plug in water or any other liquid.

WARRANTY

Epica Products provides a 3-year limited warranty on the Epica Cool Touch Kettle. The warranty begins on the original date of purchase, applies only to the purchaser of the Epica Cool Touch Kettle, and covers only the Epica Cool Touch Kettle.

To receive warranty service, which covers only manufacturing defects in workmanship or materials, the purchaser must contact Epica Products and provide proof of purchase in the form of the original, dated sales receipt for the product. After verification, Epica Products will determine the problem and decide on the appropriate service procedures.

The Epica Products warranty does not cover any of the following: (1) damage caused by user negligence, accidents, lack of required maintenance; (2) damage caused by failure to follow the instructions and or warnings contained in the owner's manual; (3) damage caused by unauthorized repairs or alterations to the product; (4) damage or wear caused by the use of the product in ways for which it was not designed; (5) damage or wear caused by the use of the product other than for home use; and (6) damage or malfunctions caused by extreme weather events, such as floods and lightning strikes.

This warranty covers only actual defects within the product itself, and does not cover extraneous costs such as the cost of mounting or removing the product; setting up, configuring and adjusting the product; or performing routine maintenance on the product.

PARTS & SERVICE

We want you to be happy with your purchase. If you experience a problem with the Cool Touch Kettle, please contact us and we'll do our best to help.

For free replacement parts or to report a problem, call 888-507-0576 M-F 9:30 am-5:30 pm ET.

Epica Products

Brick, New Jersey

1-888-507-0576

www.epicapproducts.com

support@epicapproducts.com