

SONY®

Mobile HD Snap Camera

Instruction Manual



bloggie™ Touch

MHS-TS10 / TS20 / TS20K

Shoot



Still image

Shoot still images also during movie recording.

Movie

Start/Stop



Recordable time of movies (approx.)*

MHS-TS20 / TS20K: 4 hours

MHS-TS10: 2 hours

* When image size is set to [1280×720 30p]



Settings



Self-Timer



Change image size



Go to view mode



Go to shooting mode



Delete



Share it Later



Go to index view mode



Volume

Play



Share (Windows only)

1 Share it later

Select images and media services to upload.




2 Connect to the computer.



When it detects your camera, Bloggie Software will launch and help you import and share your photos and videos.

- You must install Bloggie Software to use the camera's sharing menu.

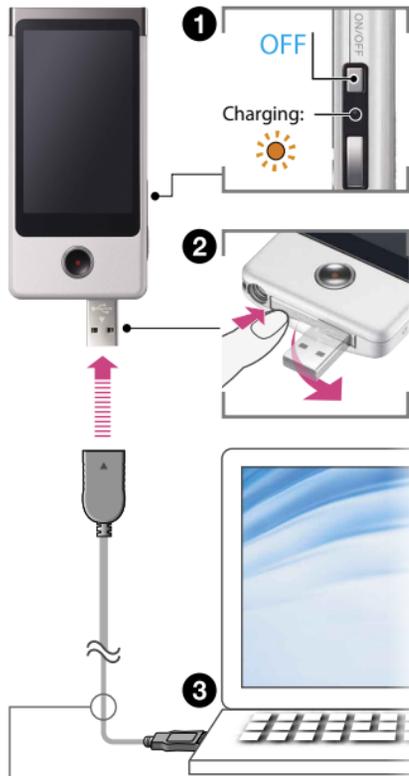

USB connection support cable (supplied)



Windows 7

Windows Vista/Windows XP

If the AutoPlay screen does not appear, click [Start] → [Computer] (in Windows XP, [My Computer]), then double-click [Bloggie Software] → "Setup_Bloggie.exe".

Supplied accessories

- USB connection support cable (1)
(Sony Corporation 1-836-378-)
- Wrist Strap (1)
- Instruction Manual (this manual)
- Important Notice (1)
- 360 Video Lens VCL-BPP2 (1)/360 Video Lens case (1)
(MHS-TS20K only)
- Capture 360-degree images, playable on Bloggie Software.

Built-in supplies

Battery/Bloggie Software/Bloggie Handbook

Learning more about Bloggie

Install [Bloggie Handbook] (PDF) on your computer.

Windows:

Click [Start] → [Computer] (in Windows XP, click [My Computer]) → double-click [Bloggie Software] → [Handbook.exe] → click [Install].

Macintosh:

Select the [BLOGGIE_SW] folder and copy "Handbook.pdf" stored in the [GB] folder to your computer.

When the camera does not work properly:

Press and hold the ON/OFF (Power) button for at least 7 seconds, and reboot the camera.