

# CHEFMAN™

## INSTRUCTION BOOKLET



**READ ALL INSTRUCTIONS  
BEFORE USE.**

**6-SPEED HAND MIXER**

**RJ17 Series**

For your safety and continued enjoyment of this product, always read the instruction manual before using.



## IMPORTANT SAFEGUARDS



### - FOR HOUSEHOLD USE ONLY -

**WARNING:** When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. To protect against electrical shock, do not place cord, plug or power head in water or other liquid.
2. This appliance should not be used by children, and close supervision is necessary when any appliance is used near children.
3. Do not leave hand mixer unattended while in use.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any electrical appliance with a damaged cord or plug or after appliance malfunctions or has been dropped or damaged in any manner. Return appliance to nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electrical shock or injury to persons.
8. Do not use outdoors or for commercial purposes.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces including stove.
10. Do not place hand mixer on or near a hot gas or electric burner, or in a heated oven or microwave.
11. Keep hands, hair, clothing as well as spatulas and other utensils away from beaters/dough hooks and out of container while mixing to reduce the risk of severe injury to persons or damage to the unit. A scraper may be used, but must be used **ONLY** when the unit is not running and unplugged.
12. Remove beaters/dough hooks from mixer before washing.
13. Do not use hand mixer for other than its intended use.

## SAVE THESE INSTRUCTIONS



This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.



**WARNING:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### **SHORT CORD INSTRUCTIONS**

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and:
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

### **LINE CORD SAFETY TIPS**

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

**DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

### **IMPORTANT**


During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



# GETTING TO KNOW YOUR HAND MIXER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

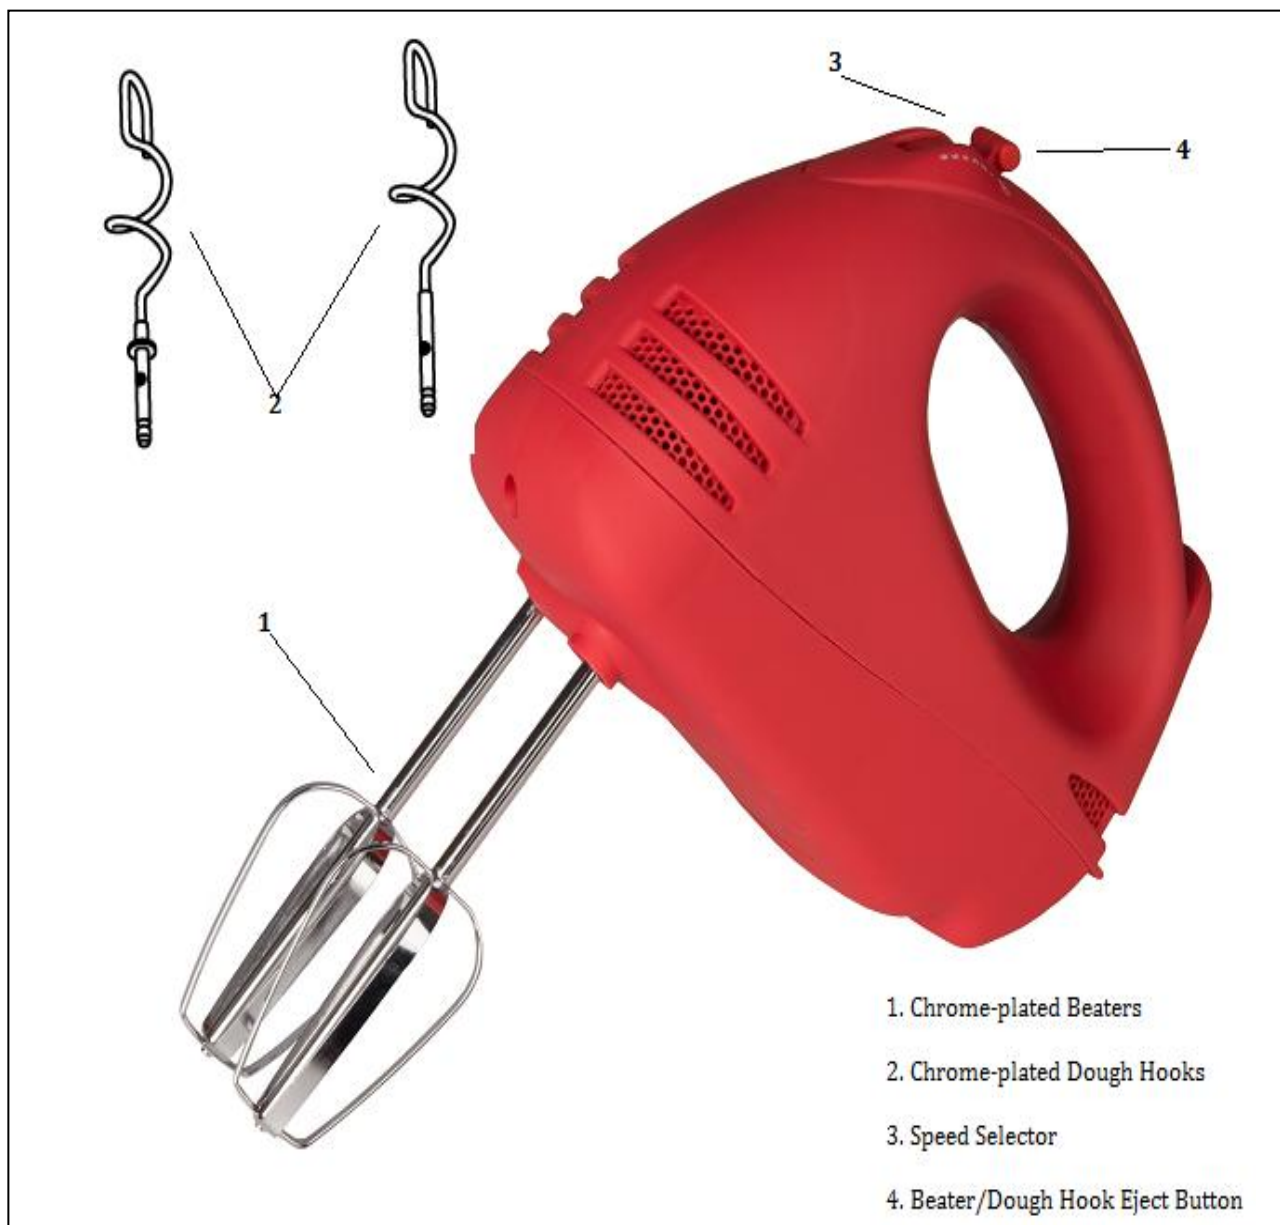

## OPERATING INSTRUCTIONS

### ATTACHING BEATERS/DOUGH HOOKS

Be sure appliance is unplugged. Align notches on beaters/dough hooks with slots in hand unit, and push until they lock in place.



## USING YOUR MIXER FOR THE FIRST TIME

Insert plug into any standard household outlet. Place beaters directly into container holding ingredients to be mixed. Set the speed control level to the 1 (Low) position to start blending, then increase to 2 (Low-Medium), 3 (Medium), 4 (Medium-High) or 5&6 (High) position as necessary.

## REMOVING BEATERS/DOUGH HOOKS

Slide speed control to "OFF" position. Unplug appliance, and push down on the speed selector button to eject beaters/dough hooks.

This hand mixer is capable of blending several ingredients. Simply place beaters/dough hooks in container holding ingredients, and switch on. Use the mixer to make cakes, pies, whipped topping, mashed potatoes and much more. The 6 speeds allow you to mix a variety of foods.

SPEED	DESCRIPTION
1	This is a good starting speed for bulk and dry foods such as flour and butter.
2	Best speed to start liquid ingredients.
3	For mixing cakes and breads
4	For creaming butter and sugar, beating uncooked candy, desserts, etc
5-6	For beating eggs, mixing icings, whipping potatoes, whipping cream, etc.

## USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

## CLEANING YOUR HAND MIXER

Wash the beaters before and after every use. Beaters and Dough Hooks may be washed in a dishwasher. After removing cord from electrical outlet, clean mixer head with a damp cloth and wipe dry. **DO NOT IMMERSE MIXER IN WATER.** This may cause electric shock, injury, or damage to the product. Avoid the use of abrasive cleaners that will damage the finish of your mixer.

## STORING YOUR HAND MIXER

Unplug unit; store in a clean, dry place. Never store while it is hot or plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.



## WARRANTY TERMS AND CONDITIONS

CHEFMAN LLC warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of THREE (3) years. CHEFMAN LLC, at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, CHEFMAN LLC will repair or replace the same effecting all necessary parts replacements for a period of three years from the date of purchase. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

**CONDITIONS:** This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty. Warranty registration is not necessary to obtain warranty on CHEFMAN LLC Products. Save your proof of purchase receipt.

**ABOUT YOUR PRODUCT WARRANTY:** Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

**NORMAL WEAR:** This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than CHEFMAN LLC or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. CHEFMAN LLC shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

**HOW TO OBTAIN WARRANTY SERVICE:** You must contact CHEFMAN LLC. Customer Service at 888-315-8407 Ext: 400. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy

CHEFMAN is a registered trademark of PLUS ITS CHEAP, LLC. 10952