

# OWNER'S MANUAL

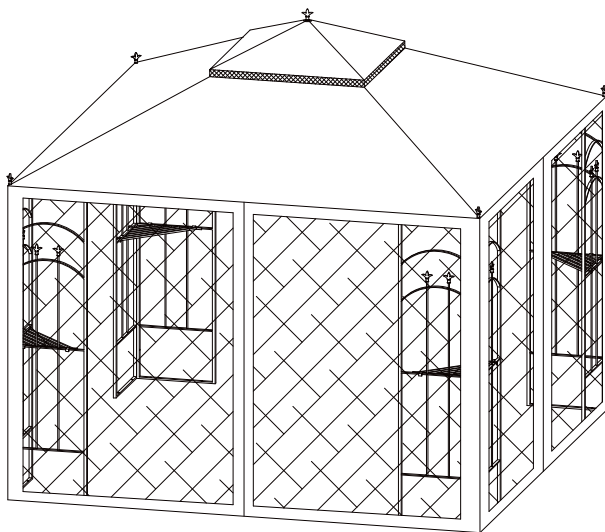
## 10X10 Arrow Gazebo

Caution: Carefully Read Instructions and Procedures  
for Safe Operation

KSN: 0-06298288-9

UPC Code: 846822013183

Date of Purchase: \_\_\_\_/\_\_\_\_/\_\_\_\_

 
 




 
 
 
 







## Warning:

1. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
2. Some parts may contain sharp edges, wear protective gloves if necessary. At least four or more people are recommended for safe assembly.
3. Keep all children and pets away from assembly area.
4. Begin assembly more than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry line or electrical wires.
5. Install on level ground. This gazebo cannot be permanently staked or attached to a concrete floor or platform. The provided stakes are for soft ground use only. If assembling on a hard surface like a deck or concrete, other forms of attachment must be used such as expansion bolts that can be purchased locally.
6. This gazebo is intended for decorative and sunshade purposes only and is not meant to withstand inclement weather including high winds, rain and snow. Gazebo fabric is water resistant, not water proof and may leak during exposure to precipitation.
7. Please lay out all parts before assembling, checking to make sure all parts are there. If any parts are missing, please call 1-866-578-6569 and parts will be expedited to you.
8. **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This Tent meets the flammability requirements of CPAI - 84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.





**Assembly Tools Required: a ladder and a hammer (not provided)**

# WINSLOW GAZEBO PARTS LIST

NO	PART	DESCRIPTION	QTY
A1		Screen 1	4
B1		Screen 2	4
C		Pole	4
D		Big Top Long Pole Connector	4
E		Big Top Long Pole	4
F		Big Top Short Pole	4
G		Big Top Connector	1
H		Small Top Pole	4
I		Small Top Connector	1
J		Corner Shelf	4
L		Decorative Finial	5
M		Hook	1
O		Big Canopy	1
P		Small Canopy	1
Q		Mosquito Netting	1

# WINSLOW GAZEBO ASSEMBLY INSTRUCTION

## WINSLOW GAZEBO HARDWARE PACK 1

No.	Description	Qty.	Part
B B	M6x32 Bolt	28 pcs	
C C	M6 Washer	44 pcs	
H H	M6 Nut	16 pcs	
D D	M6 Wrench	2 pcs	

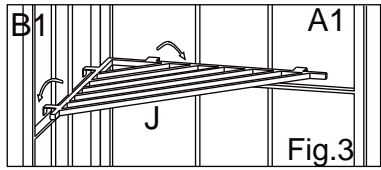
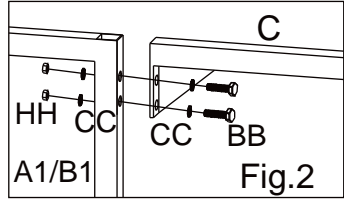
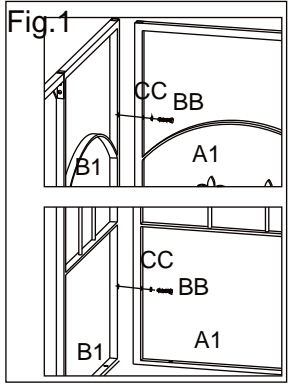
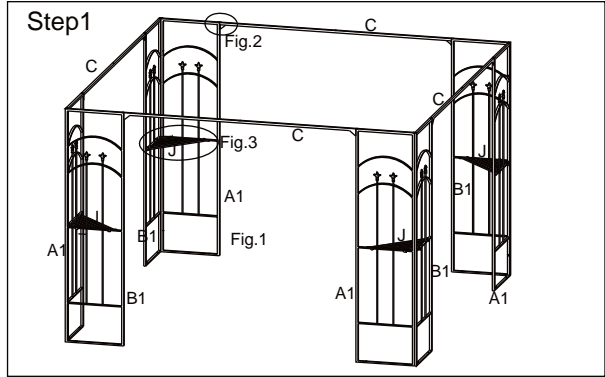


 

Fig.1: Connect Screen 1(A1) to Screen 2(B1) by M6 Washer (CC) and M6x32 Bolt (BB).

Fig.2: Attach Pole (C) to Screen 1(A1) and Screen 2(B1) by M6 Washer (CC), M6 Nut (HH) and M6x32 Bolt (BB).

Fig.3: Place the Corner Shelf (J) onto Screen 1(A1) and Screen 2(B1) as per Fig.3.

# WINSLOW GAZEBO ASSEMBLY INSTRUCTION

## WINSLOW GAZEBO HARDWARE PACK 2

No.	Description	Qty.	Part
AA	M6x20 Bolt	4 pcs	
CC	M6 Washer	4 pcs	

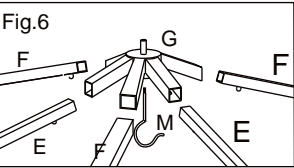
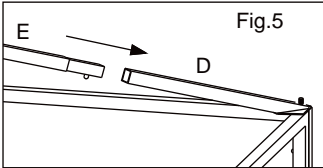
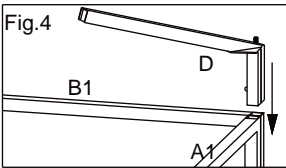
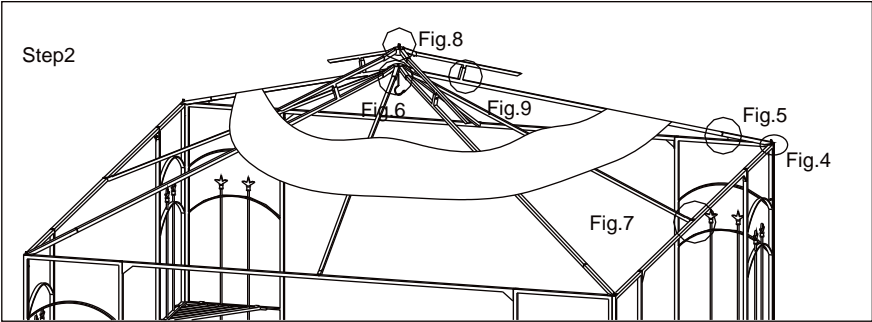


Fig.4: Insert Big Top Long Pole Connector (D) into assembled screens.(A1/B1)

Fig.5: Insert Big Top Long Pole (E) into Big Top Long Pole Connector (D).

Fig.6: Connect Hook (M) to Big Top Connector (G),and then insert Big Top Long Pole (E) and Big Top Shot Pole (F) into Big Top Connector (G).

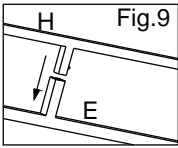
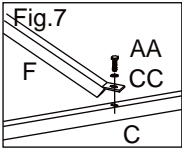
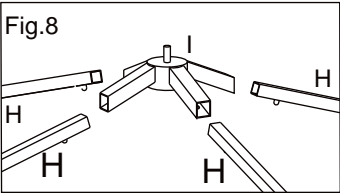


Fig.7: Attach Big Top Short Pole (F) to Pole (C) byM6 Washer (CC) and M6x20 Bolt (AA).

 

Fig.8: Insert Small Top Pole (H) into Small Top Connector (I).

Fig.9: Insert Small Top Pole (H) into Big Top LongPole (E).



# WINSLOW GAZEBO ASSEMBLY INSTRUCTION

## WINSLOW GAZEBO HARDWARE PACK 3

EE	6x180 Stake	16pcs	
FF	Plastic Tie	40pcs	

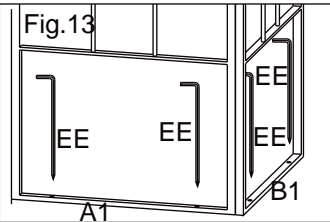
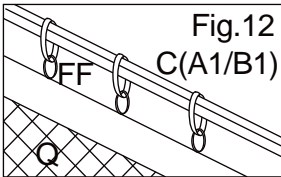
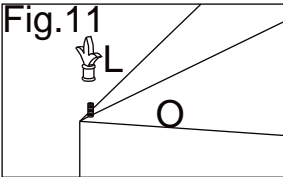
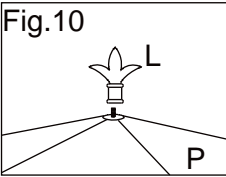
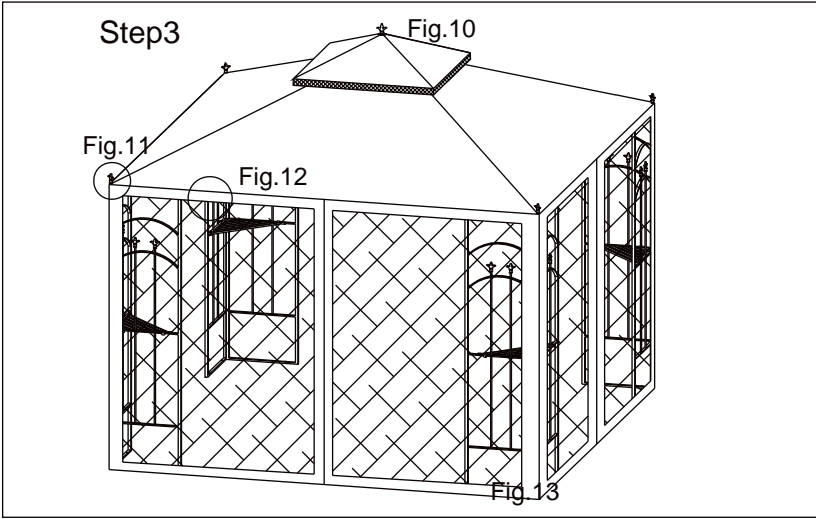


Fig.10:Place the big canopy O onto the big top frame but do not layout it completely; place the Small Canopy (P) onto the Small Top, then fix Finial (L) to Small Top Canopy (I)

Fig.11:Lay out the Big Canopy (O) and then fasten Decorative Finial (L) to Big Top Long Pole Connector (D).

Fig.12: Attach Plastic Ring (FF) to frame and hang up the Mosquito Netting (Q).

Fig.13: Fix the gazebo to ground by 6x180 mm Stake (EE).

Now your gazebo is ready for use

---

# WINSLOW GAZEBO ASSEMBLY INSTRUCTION

---

## CARE & Maintenance

It is advised that the Canopy should be removed in the winter for best protection and length of use. Our steel components for garden accessories and furniture are treated with rust inhibiting paint that protects it from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, it is strongly recommended that consumers buy touch up paint prior to the assembly process so that any parts they scratch during assembly are touched up. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if the measure is taken to keep the product from oxidizing. Also the use of wax candle to lubricate the zippers once a year will keep them running smoothly.

## Limited Warranty

The item is warranted to be free from defects in material or workmanship for a period of 1 year. However, we don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item, provided the item is maintained with care and used only for personal, residential purposes.

## Exclusions

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

## Important

Please do not return this product to the store. For technical assistance on assembly or replacement parts, call Sunjoy Industries at (866) 578-6569 from 8:30 AM to 5:30 PM EST Monday to Friday. For expedited replacement parts order, fax the attached completed customer service replacement form to 1-740-283-3549, or send an email to [kmart@sunjoygroup.com](mailto:kmart@sunjoygroup.com) for assistance.

**Made in China**



Please refer to part numbers when reordering

For questions or comments about product:

Email: [kmart@sunjoygroup.com](mailto:kmart@sunjoygroup.com) or Call toll-free: 866-578-6569

Made in / Hecho en CHINA for Kmart Corporation, Hoffman Estates , IL 60179

**See our extensive assortment of outdoor living products**

**on-line at [www.sears.com](http://www.sears.com) and [www.kmart.com](http://www.kmart.com)**