



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2014 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 01/08/14)



RISM900COKE

Coca-Cola® Series Electric Shaved Ice Machine

Instructions and Recipes

Make every day a party!
Visit www.nostalgiaelectrics.com for more fun products.

CONTENTS

IMPORTANT PRECAUTIONS 3

IMPORTANT SAFEGUARDS 3

INTRODUCTION 4

PARTS & ASSEMBLY 5

HOW TO OPERATE 6

HELPFUL TIPS 6

CLEANING & MAINTENANCE 7


RECIPES 7

RETURNS & WARRANTY 8

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:
120 Volts, 60 Hz
50 Watts

IMPORTANT PRECAUTIONS

1. NEVER immerse Motor Cabinet or plug in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth on the appliance.
4. NEVER use a scouring pad on the appliance.
5. NEVER leave appliance unattended while in use.
6. Unplug unit from outlet when not in use, before placing or removing parts and during cleaning.
7. DO NOT operate this appliance with a damaged cord or plug, nor if the appliance ever malfunctions.
8. DO NOT put in a dishwasher.
9. Blades are extremely sharp. Use **EXTREME CAUTION** when operating this appliance.
10. Keep out of reach of children.
11. This appliance is NOT A TOY.
12. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
13. Young children should be supervised while in proximity of the appliance to ensure that they do not play with it.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. **Read all instructions before operating this appliance.**
2. Keep hands away from blade mechanism.
3. DO NOT touch moving parts.
4. To protect against electrical shock do not immerse cord, plug or Motor Cabinet in water or other liquids.
5. Close supervision is necessary when any appliance is used near children.
6. Unplug from outlet when not in use, before removing parts and before cleaning.
7. DO NOT operate any appliance with a damaged cord or plug, nor if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
8. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
9. DO NOT use outdoors.
10. Position the appliance as close to the outlet as possible to prevent injury due to tripping over cord.
11. DO NOT place on or near a hot gas or electric burner, nor in a heated oven.

12. Check Shaver Bowl for presence of foreign objects prior to use.
13. DO NOT use the appliance for other than its intended use.
14. DO NOT operate the appliance when the Shaver Bowl is empty.
15. DO NOT place fingers or utensils into feed or discharge areas.
16. DO NOT press the Power Button when Motor Cabinet is not assembled to Shaver Bowl and Base.
17. After each 1 minute of continuous use, wait 10 minutes before using again to allow motor to cool.
18. An appliance that is plugged into an outlet should not be left unattended while in operation.
19. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
20. Longer detachable power supply cords can be used if care is exercised in their use.
21. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
22. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.

SAVE THESE INSTRUCTIONS!


INTRODUCTION

Thank you for purchasing the COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE from Nostalgia Electrics™. This fun and easy to use appliance produces snow-like shaved ice, perfect for snow cones, slush drinks, margaritas, daiquiris and much more! The included Ice Molds freeze ice into the perfect shape for making soft, fluffy, shaved ice. Simply add flavored syrup, soda or your favorite beverage to create unique refreshments at home anytime.

PARTS & ASSEMBLY

ASSEMBLY


Your COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE requires very little assembly.

-  The COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE has a sharp stainless steel blade that can cut and cause injury. Use **EXTREME CAUTION** when handling the appliance. Keep fingers clear from blade and avoid contact at all times when using and cleaning.
- Wipe the Motor Cabinet and Base with a damp, non-abrasive cloth. Dry thoroughly. **DO NOT** immerse Motor Cabinet or cord in water.
- Clean the Shaver Bowl and Ice Molds with a soft cloth in warm water mixed with a mild detergent. Rinse and dry with a non-abrasive towel.
- Place the Shaver Bowl on top of the Base.

Now you are ready to enjoy cool, refreshing icy drinks!



HOW TO OPERATE

- Fill a standard ice cube tray or the supplied Ice Molds with water and place in freezer until frozen. Remove ice from tray(s). See HELPFUL TIPS section for instructions on using Ice Molds.
- Place the COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE on a stable, waterproof surface near an electrical outlet before starting.
- Always make sure that the cord is away from a water source.
- With Shaver Bowl fitted on top of Base, place frozen ice cubes in Shaver Bowl. If using ice from Ice Molds, place with flat side down and notched side up.
-  **BE CAREFUL** when placing ice cubes in Shaver Bowl. The blade in the Shaver Bowl is very sharp.
- Place a bowl under the Shaver Bowl to catch the shaved ice.
- Place the Motor Cabinet on top of the Shaver Bowl and hold in place. When filled with ice, the Motor Cabinet will rest a few inches above the bottom of the Shaver Bowl.
- Plug in the unit. The COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE operates at one speed. While holding the Motor Cabinet steady with one hand, press the Power Button. It will start with a gentle press.
- Press continuously until majority of ice is shaved, or until the Motor Cabinet sits flush on the bottom of the Ice Bowl. To stop shaving ice, release pressure on the Power Button.
- Some ice may remain in the Shaver Bowl. Discard this ice before adding a new ice cube.
- Repeat the process until you have the desired amount of shaved ice.
- After each 1 minute of continuous use, wait 10 minutes before using again to allow motor to cool.
- Unplug unit from outlet when finished.

HELPFUL TIPS

USING ICE MOLDS

Common ice cubes may be used in the COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE, but will produce slightly coarser textured ice. For best results, we recommend using the included Ice Molds.

- Fill the supplied Ice Molds with liquid to approximately ½ inch below the top, just below the Max fill line.
- Place on a flat surface in the freezer until frozen (about 10 - 12 hours).
- If unable to remove ice from Ice Molds, run under water until ice is loose.
- Each Ice Mold makes approximately 2 cups of shaved ice.
- Ice Molds may also be used as serving bowls for shaved ice.

USING TRADITIONAL ICE CUBES

- Place 10 medium-sized ice cubes in an even layer in Shaver Bowl to yield approximately 2 cups of shaved ice.
- Do not overfill Shaver Bowl with ice.

CLEANING & MAINTENANCE



The blades in the Shaver Bowl are very sharp. Use **EXTREME CAUTION** when handling the appliance during cleaning.

- Make sure the unit is unplugged before cleaning. Do not put the Motor Cabinet in water or any other liquid.
- Before first use and continuing after each use, be sure to wipe off the Motor Cabinet with a damp, non-abrasive cloth and dry thoroughly. Wash the Shaver Bowl, Base and Ice Molds with a soft cloth in warm water mixed with a mild detergent. Dry with a soft cloth or air dry prior to storage.
- To prolong the life of your COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE, hand-washing parts is advised. Dishwasher use is not recommended. Never place the Motor Cabinet in a dishwasher.

RECIPES

Your COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE makes perfectly shaved ice that can be used to make:

- **SNOW CONES**
After shaving the ice, add flavored syrup. Add more than one flavor to create colorful and varied snow cones. Create stripes of flavor in the shaved ice for Rainbow Snow Cones.
- **SLUSH DRINKS**
Fill a glass with freshly shaved ice. Add your favorite soft drink, flavored tea or fruit juice. Mix well.
- **FRESH FRUIT SLUSH**
Fill a serving cup with freshly shaved ice. Add flavored syrup and top with fresh chopped fruit of your choice.
- **ICE CREAM SLUSH**
Fill a serving cup with your choice of ice cream. Top with a generous serving of shaved ice. Add flavored syrup.
- **YOGURT SNOW**
Freeze flavored yogurt in Ice Molds. Use your COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE to shave the yogurt cubes and make a refreshing, healthy treat. Add syrup for even more flavor.
- **SNOW SMOOTHIES**
Freeze ½ cup of milk in Ice Molds. Use your COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE to shave the ice cubes. Place the shaved cubes and fresh strawberries or your choice of fruit in a blender. Add ¼ cup of sugar for sweetness, then blend until smooth or to desired consistency.
- **FROZEN JUICE DRINK**
Freeze fruit juice in Ice Molds. Use your COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE to shave the cubes to create a healthy treat.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

COCA-COLA® SERIES ELECTRIC SHAVED ICE MACHINE / RISM900COKE

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgiaelectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaelectrics.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaelectrics.com.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information, visit us online at www.nostalgiaelectrics.com.

Like us on Facebook at www.facebook.com/NostalgiaElectrics.

Follow our boards on Pinterest at www.pinterest.com/nostalgiaelctrx.

Tweet along with us on Twitter at www.twitter.com/NostalgiaElctrx.