 

GRAND RESORT

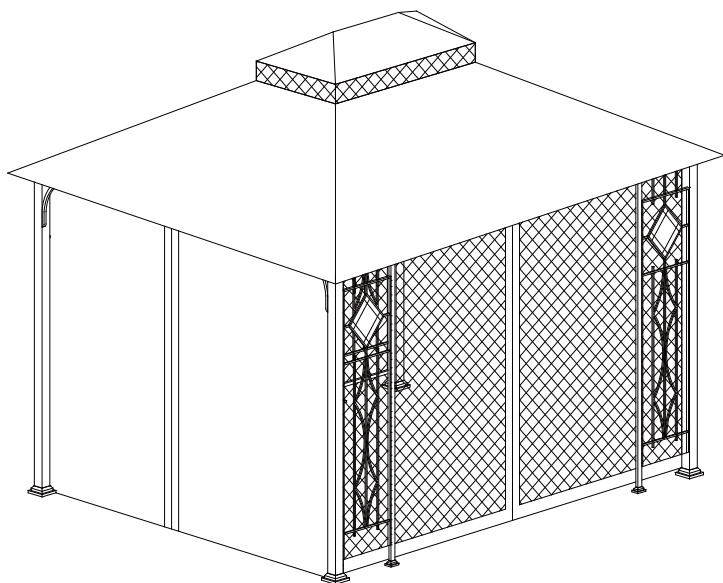

Owner's Manual

Art Glass Gazebo

 
Caution: Carefully Read Instructions and Procedures for Safe Operation

Product Code: D71 M 34683

KSN: 06033382-0

UPC Code: 846822013169

Date of Purchase: __/ __/ __

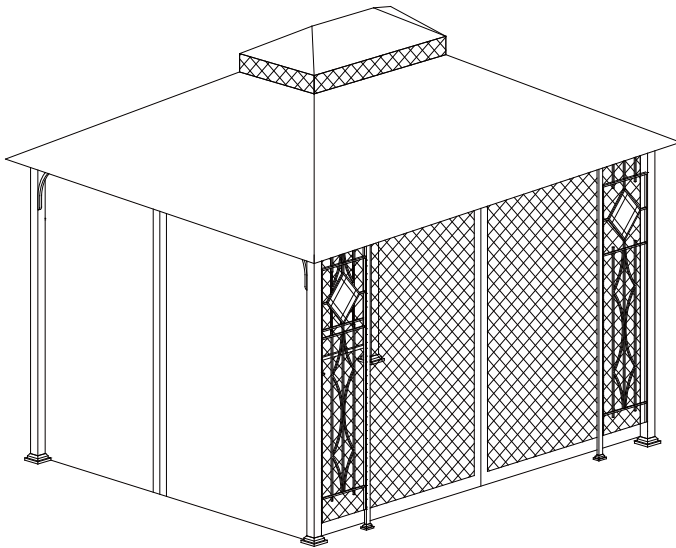
 
 

 
 











Warning:















1. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
2. Some parts may contain sharp edges, wear protective gloves if necessary. At least four or more people are recommended for safe assembly.
3. Keep all children and pets away from assembly area.
4. Begin assembly more than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry line or electrical wires.
5. Install on level ground. This gazebo cannot be permanently staked or attached to concrete floor or platform. The provided stakes are for soft ground use only. If assembling on a hard surface like a deck or concrete, other forms of attachment must be used such as expansion bolts that can be purchased locally.
6. This gazebo is intended for decorative and sunshade purposes only and is not meant to withstand inclement weather including high winds, rain and snow. Gazebo fabric is water resistant, not water proof and may leak during exposure to precipitation.
7. Please lay out all parts before assembling, checking to make sure all parts are there. If any parts are missing, please call 1-866-578-6569 and parts will be expedited to you.
8. **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This Tent meets the flammability requirements of CPAI - 84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Assembly Tools Required: a ladder and a hammer (not provided)

 

 
 
 
 

ART GLASS GAZEBO PARTS LIST

NO	PART	DESCRIPTION	QTY
A		Small Top Connector	1
B		Hook	1
C		Small Top Pole	4
D		Corner Connector	4
E1		Long Top Beam	2
E2		Short Top Beam	2
F1		Slanting Beam	4
F2		Middle Beam 1	4
F3		Middle Beam 2	4
G1		Long Beam 1	2
G2		Long Beam 2	2
G3		Short Beam 1	2
G4		Short Beam 2	2
H1		Big Post 1	2
H2		Big Post 2	2

 
ART GLASS GAZEBO PARTS LIST

NO	PART	DESCRIPTION	QTY
I		Small Post	4
J		Screen 1	4
K		Base	4
L		Base Cover	4
M		Curve Support Bar	4
N1		Long Tracking Tube	4
N2		Short Tracking Tube	4
O		Middle Beam Connector	4
P		Small Top Canopy	1
Q		Big Top Canopy	1
R		Curtain	1
S		Mosquito Netting	1
T		Glass	4
U		Glass Preform	16

ART GLASS GAZEBO HARDWARE PACK 1

NO	HARDWARE	DESCRIPTION	QTY
AA		M6x15 Bolt	48PCS
BB		M6 Flat Washer	104PCS
CC		M6x15 Bolt	16PCS
DD		M6x35 Bolt	16PCS
EE		M6x25 Bolt	24PCS
WW		M6 Wrench	2 PCS
JJ		Plastic Cap	64PCS

ART GLASS GAZEBO ASSEMBLY INSTRUCTION

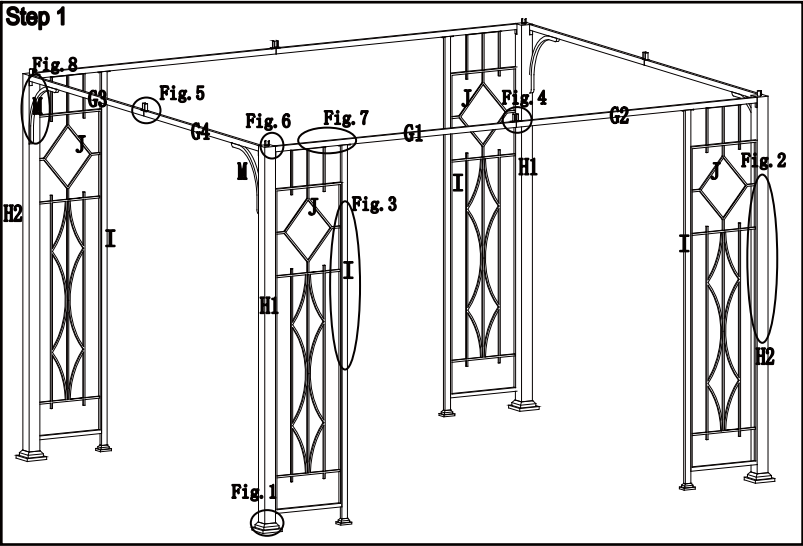

ART GLASS GAZEBO ASSEMBLY INSTRUCTION

 
 
 
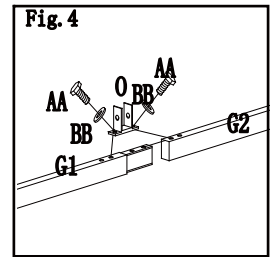 


Fig.1: Attach the Base cover (L) to Post , secure Base (K) and Big post (H1&H2) by Bolt (CC) and Flat Washer (BB).

Fig.2: Secure the Screen (J) and Big post (H1&H2) by Bolt (EE) and Flat Washer (BB), then put the Plastic (JJ) to Bolt (EE).

Fig.3: Secure the Small post (I) and screen by Bolt (EE) and Flat washer (BB), then put the Plastic (JJ) to Bolt (EE).

Fig.4: Insert Long Beam 1 (G1) into Long Beam 2 (G2), then secure Middle Beam Connector (O) and connected Long Beam 1/2 (G1/G2) by Bolt (AA) and Flat Washer (BB).

 
 
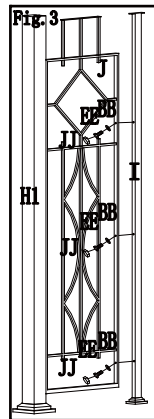 
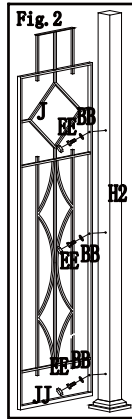 
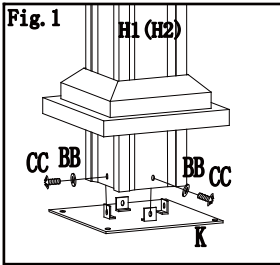 



 
 
Fig.5: Insert Short Beam 1 (G3) into Short Beam 2 (G4) , then secure Middle Beam Connector (O) and connected Short Beam by Bolt (AA) and Flat Washer (BB).

Fig.6: Attached beam (G1,G2,G3&G4) onto Big post by Bolt (AA) and Flat washer (BB), Screw the bolt tightly and then put the Plastic (JJ) to Bolt(AA). then secure the tracking tube and the connected beam.

Fig.7: Secure Screen, top of the Small post and beam by Bolt (AA) and Flat washer (BB), Screw the bolt tightly and then put the Plastic Cap (JJ) to Bolt (AA).

Fig.8: Fix Curve Support Bar (M) to the Big Post and Beam by Bolt (DD) and Flat Washer (BB), Screw the bolt tightly and then put the Plastic Cap (JJ) to Bolt (DD).

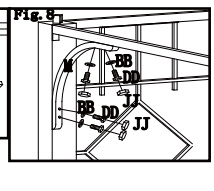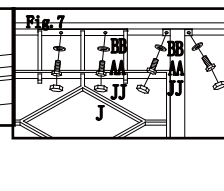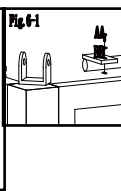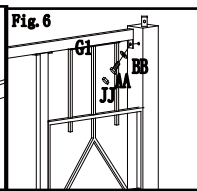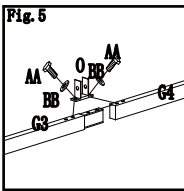ART GLASS GAZEBO HARDWARE PACK 2

NO	HARDWARE	DESCRIPTION	QTY
BB		M6 Flat Washer	16PCS
DD		M6x35 Bolt	8PCS
FF		M6 Nut	8PCS

ART GLASS GAZEBO ASSEMBLY INSTRUCTION

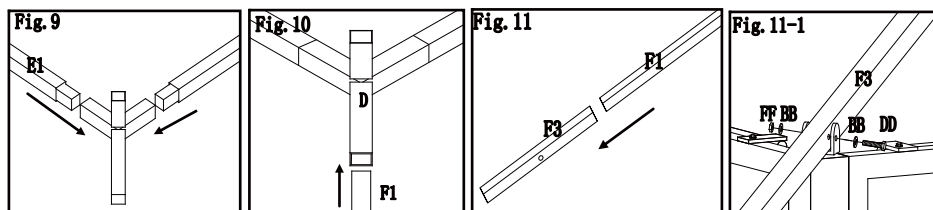 
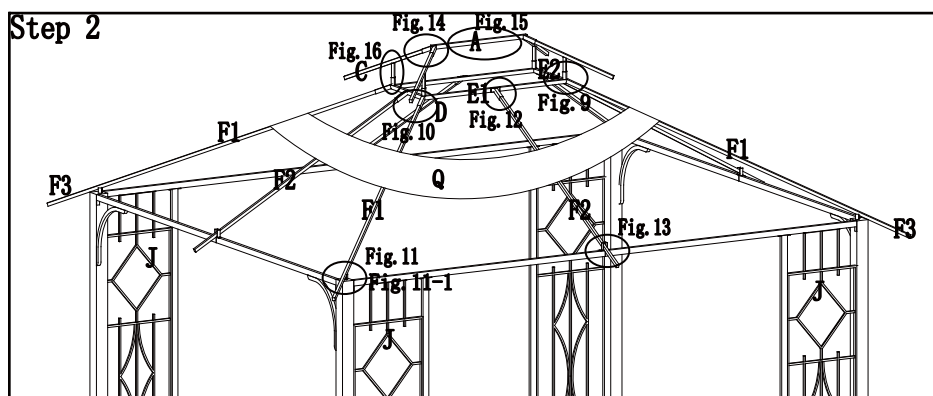 


Fig.9: Insert Long Top Beam (E1)& Short Top Beam (E2) into Corner Connector (D).

Fig.10: Insert Slanting Beam (F1) into Corner Connector (D).

Fig.11: Insert the end of Slanting beam (F1) into Middle Beam 2 (F3).

Fig.11-1: Secure Middle Beam 2 (F3) by Flat Washer (BB), Nut (FF) and Bolt (DD).

ART GLASS GAZEBO ASSEMBLY INSTRUCTION

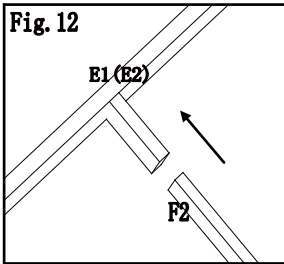 


Fig.12: Insert the Middle Beam(F2) into the tube of the Big top frame.

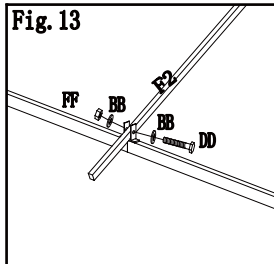 


Fig.13: Secure the end of Middle Beam and Middle Beam Connector by Bolt (DD), Flat Washer (BB) and Nut (FF).

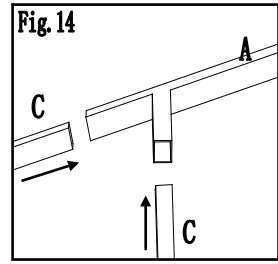 


Fig.14: Insert Small Top Pole (C) into Small Top Connector (A), put Big Top Canopy (Q) onto the assembled top frame (Do not fully spread) after screw the middle beam and slanting beam.

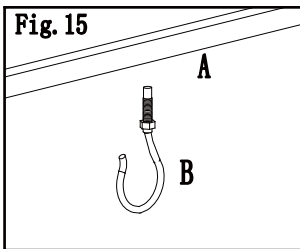 


Fig.15: Attach Hook (B) onto Small Top Connector (A).

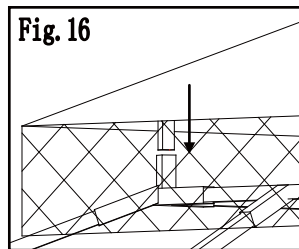 

 



Fig.16: Put the Small Top Canopy (P) onto small top frame, then Insert Small Top Pole (C) into the four connector plugs of the Small Top Connector (D).

ART GLASS GAZEBO HARDWARE PACK 3

NO	HARDWARE	DESCRIPTION	QTY
GG		Plastic Ring	104 PCS
II		M4*10 Self-Tapping Screw	16 PCS
HH		Φ8*180mm Stake	16 PCS

ART GLASS GAZEBO ASSEMBLY INSTRUCTION

Step 3

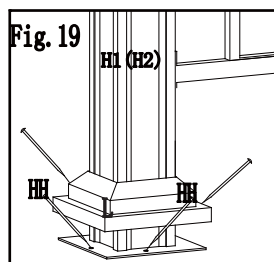 
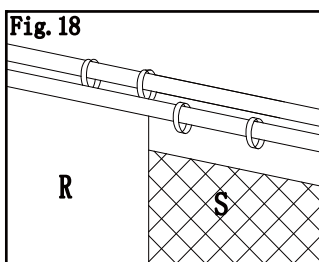 
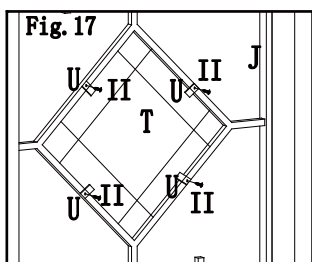 
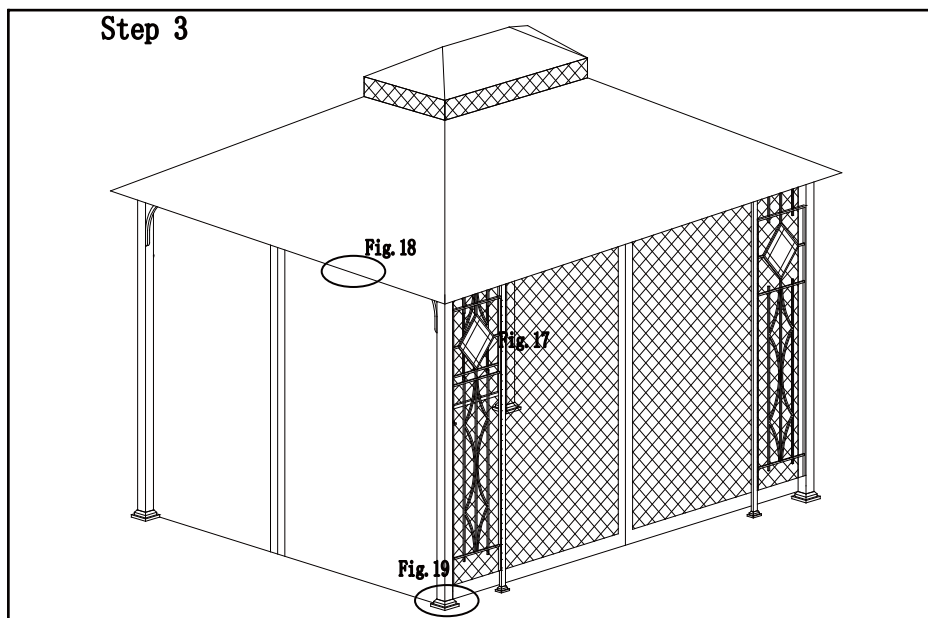 


Fig.17: Put the Glass to the frame of the Screen (J) firstly, then fix the Glass Preform (U) to the screen by Self-Tapping Screw (II).

Fig.18: Hang up the Mosquito Netting (S) and Curtain (R) to the tracking tube by Plastic Ring (GG).

Fig.19: Attach the gazebo to the ground with Stake (HH).

ART GLASS GAZEBO ASSEMBLY INSTRUCTION

Care & Maintenance

It is advised that the Canopy should be removed in the winter for best protection and length of use. Our steel components for garden accessories and furniture are treated with rust inhibiting paint that protects them from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, it is strongly recommended that consumers buy touch up paint prior to the assembly process so that any parts they scratch during assembly are touched up. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if the measure is taken to keep the product from oxidizing. Also the use of wax candle to lubricate the zippers once a year will keep them running smoothly.

Limited Warranty

The item is warranted to be free from defects in material or workmanship for a period of 1 year. However, we don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product. This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item, provided the item is maintained with care and used only for personal, residential purposes.

Exclusions

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Important

Please do not return this product to the store. For technical assistance on assembly or replacement parts, call Sunjoy Industries at (866) 578-6569 from 8:30 AM to 5:30 PM EST Monday to Friday. For expedited replacement parts order, fax the attached completed customer service replacement form to 1-740-283-3549, or send an email to sears@sunjoygroup.com for assistance.

Made in China

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: sears@sunjoygroup.com or Call toll-free: 1-866-578-6569

Made in / Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products

on-line at www.sears.com and www.kmart.com