

OWNER'S MANUAL

BAY WINDOW GAZEBO(EASY SET UP)


Caution: Carefully Read Instructions and Procedures
for Safe Operation

Product Code: D71 M 34684

KSN: 06033384-6

UPC Code: 846822013152

Date of Purchase: ____/____/____

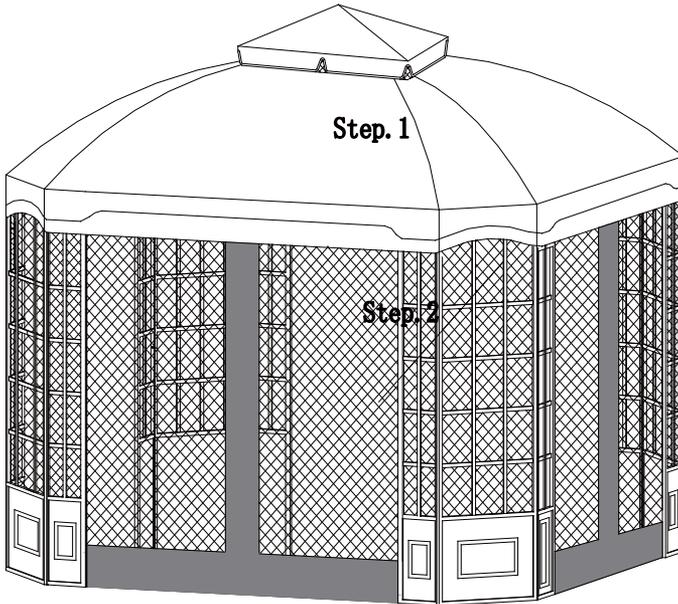



Warning:

1. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
2. Some parts may contain sharp edges, wear protective gloves if necessary. At least three or more people are recommended for safe assembly.
3. Keep all children and pets away from assembly area.
4. Begin assembly not less than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry line or electrical wires.
5. Install on level ground. This gazebo cannot be permanently staked or attached to concrete floor or platform. The provided stakes are for soft ground use only. If assembling on a hard surface like a deck or concrete, other forms of attachment must be used such as expansion bolts that can be purchased locally.
6. This gazebo is intended for decorative and sunshade purposes only and is not meant to withstand inclement weather including high winds, rain and snow. Gazebo fabric is water resistant, not water proof and may leak during exposure to precipitation.
7. Please lay out all parts before assembling, checking to make sure all parts are there. If any parts are missing, please call 1-866-578-6569 and parts will be expedited to you.
8. **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This Tent meets the flammability requirements of CPAI - 84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



Estimated Assembly Time: 30 minutes.

Assembly Tools Required: a ladder and a hammer (not provided)

  GAZEBO PARTS LIST

NO	PART	DESCRIPTION	QTY
A		Screen	4
B		Screen For Long Side	2
C		Screen For Short Side	2
D		Big Top Connector	1
E		Support Pole	4
F		Support Pole 1	4
G		Support Pole 2	4
H		Arch Beam 1	2
I		Arch Beam 2	2
J		Hook	1
K		Big Canopy	1
L		Small Canopy	1
M		Mosquito Netting	1

BAY WINDOW GAZEBO ASSEMBLY INSTRUCTION

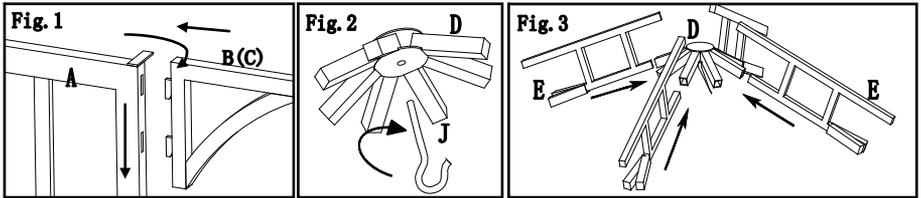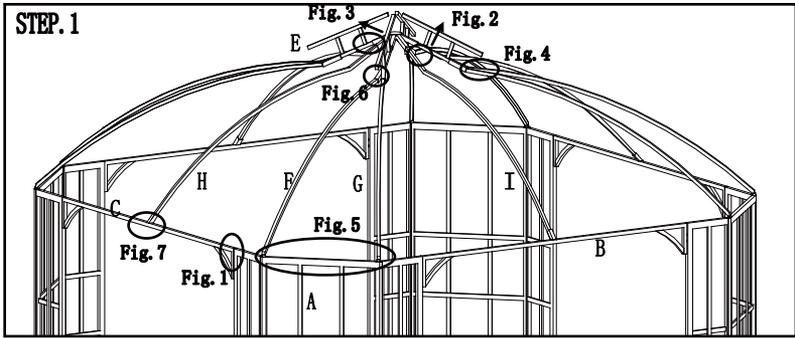

Step: 1

Fig.1: Insert the Screen (B) and Screen (C) into the hole of screen (A), then the Screen (B) and Screen (C) with rotating the sealed strip on the Screen.

Fig.2: Attach and fix the Hook (J) to Big Top Connector (D).

Fig.3: Assemble the Support Pole (E) and Big Top Connector (D). Please note that the Support Pole (E) should be inserted into the longer tubes.

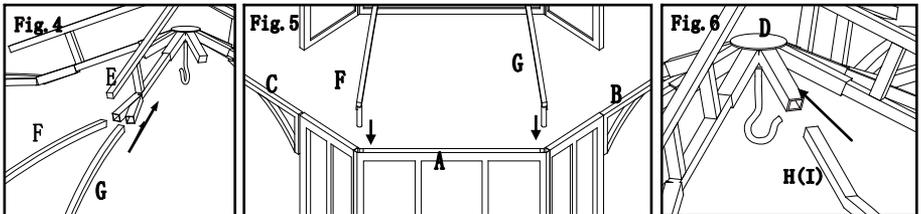


Fig.4: Insert Support Pole 1(F) and Support Pole 2 (G) into the Support Pole (E). Support Pole 1 (F) should be assembled near to Short Beam (C), Support Pole 2 (G) is opposite.

Fig.5: Connect Support Pole 1 (F) and Support Pole 2 (G) to Screen (A), please note the direction when assembling. Support Pole 1 (F) should be connected with Screen for long side (C), Support Pole 2 (G) should be connected with Screen for long side (B).

BAY WINDOW GAZEBO ASSEMBLY INSTRUCTION

Fig.6: Insert Arch Beam 1 (H) and Arch Beam 2 (I) into Big Top Connector (D), please note the direction when assembling, Arch Beam 1 (H) should be connected with Screen For Short Side (C), Arch Beam 2 (I) should be connected with Screen For Long Side (D).




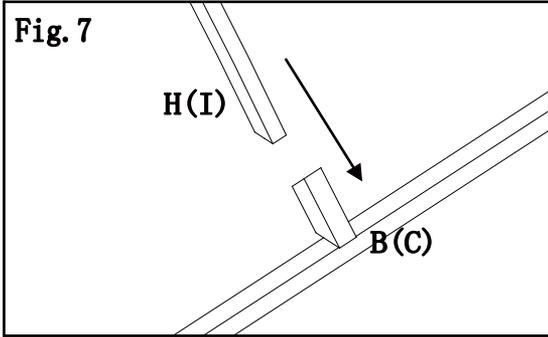


Fig.7: Insert the lower part of Arch beam 1 (H) and Arch Beam 2 (I) into the Screen for Long Side (B) and Screen For Short Side (C), please note that Arch beam 1 (H) should be connected with Screen For Short Side (C), Arch Beam 2 (I) should be connected with Screen For Long Side (B).

HARDWARE PACK

DD	∅ 6*180 Stake	12 PCS	
EE	Hook	48 PCS	

BAY WINDOW GAZEBO ASSEMBLY INSTRUCTION

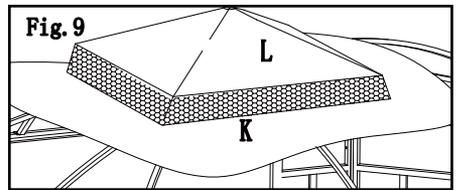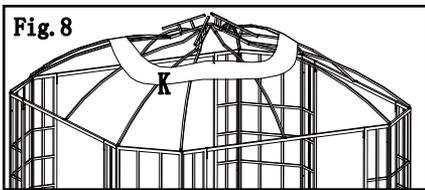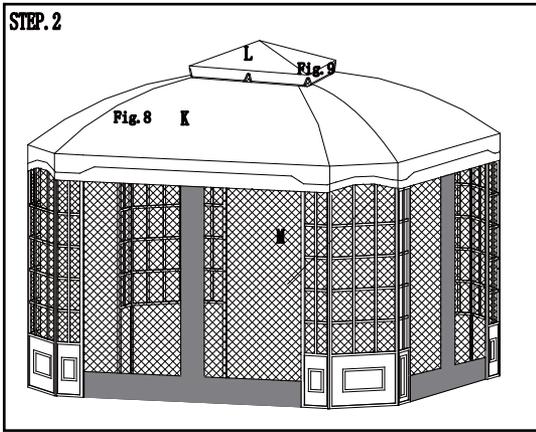

Step: 2

Fig.8: Put the Big Canopy (K) onto the Frame first, but don't spread it completely.

Fig.9: Assemble the Small Canopy (L), fix the Mosquito Netting of Small Canopy and tie of Big Canopy together. Spread the Big Canopy (K) completely and fix it into Beam and Screen.

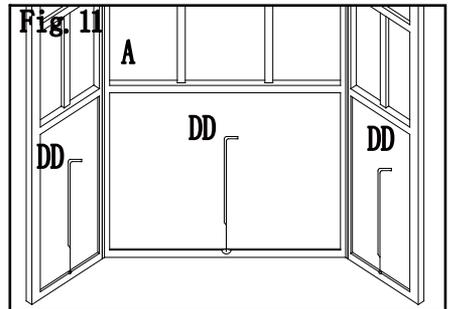
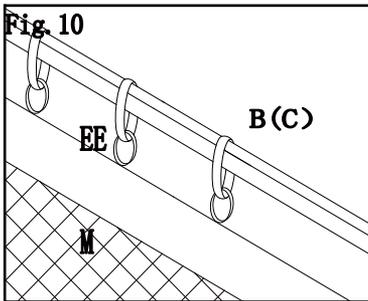


Fig.10: Connect the Mosquito Netting to Big Screen(A), Right Screen(B) and Left Screen(C) with the Hook (EE), please note the long and short side of the Mosquito Netting and Frame when assembling.

Fig.11: Attach the Gazebo to ground with Stake (DD).

BAY WINDOW GAZEBO ASSEMBLY INSTRUCTION

Care & Maintenance

It is advised that the Canopy should be removed in the winter for best protection and length of use. Our steel components for garden accessories and furniture are treated with rust inhibiting paint that protects them from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint, which is included in the package. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if the measure is taken to keep the product from oxidizing. Also the use of wax candle to lubricate the zippers once a year will keep them running smoothly.

Limited Warranty

The item is warranted to be free from defects in material or workmanship for a period of 1 year. However, we don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product. This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item, provided the item is maintained with care and used only for personal, residential purposes.

Exclusions

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Important

Please do not return this product to the store. For technical assistance on assembly or replacement parts, call Sunjoy Industries at (866) 578-6569 from 8:30 AM to 5:30 PM EST Monday to Friday. For expedited replacement parts order, fax the attached completed customer service replacement form to 1-740-283-3549, or send an email to sears@sunjoygroup.com for assistance.

Made in China

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: sears@sunjoygroup.com or Call toll-free: 1-866-578-6569

Made in / Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

**See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com**