


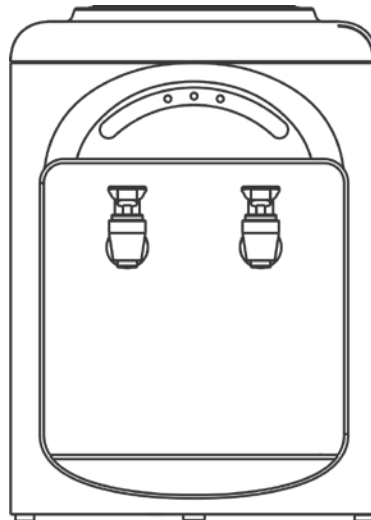

**INSTRUCTION MANUAL
MANUAL DE INSTRUCCIONES**

Model Number/Número de Modelo

WDT35EC



CAUTION:

BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS.

Avanti has a policy of continuous improvement on its products and reserves the right to change materials and specifications without notice.

La sección en español empieza en la página 11

**Avanti Products LLC
P.O. Box 520604 - Miami, Florida 33152
www.avantiproductions.com**

NOTES / COMMENTS

TABLE OF CONTENTS

Help Us Help you	4
Parts and Features	5
Important Safety Instructions	6
Electrical Connection	6
Installation Guidelines	6
Operation Instructions	7
Before Using Your Water Dispenser	7
Operating Your Water Dispenser	8
Replacing the Water Bottle	8
Indicator Lights	8
Care and Maintenance	8
Taking the dispenser out of service	8
Problems with Your Water Dispenser	9
Troubleshooting Guide	9
Service for Your Water Dispenser	9
Your Avanti Products Warranty	10
Instrucciones en Español	11 – 12
Registration Information and Registration Card	15

HELP US HELP YOU...

Read this guide carefully.

It is intended to help you operate and maintain your new water dispenser properly.

Keep it handy to answer your questions. If you don't understand something or you need more help, please call:

Avanti Customer Service
800-220-5570

Keep proof of original purchase date (such as your sales slip) with this guide to establish the warranty period.

Write down the model and serial numbers.

You'll find them on a label located on the back side of the unit.

Please write these numbers here:

Date of Purchase

Model Number

Serial Number

Use these numbers in any correspondence or service calls concerning your water dispenser.

If you received a damaged water dispenser, immediately contact the dealer (or builder) that sold you the water dispenser.

Save time and money. Before you call for service, check the Problem Solver Guide. It lists causes of minor operating problems that you can correct yourself.

IF YOU NEED SERVICE


We're proud of our service and want you to be pleased. If for some reason you are not happy with the service you receive, here are some steps to follow for further help.

FIRST, contact the people who serviced your appliance. Explain why you are not pleased. In most cases, this will solve the problem.

NEXT, if you are still not pleased, write all the details, including your telephone number, and send to:

Customer Service
Avanti Products
10880 NW 30 Street
Miami, FL 33172

PARTS AND FEATURES

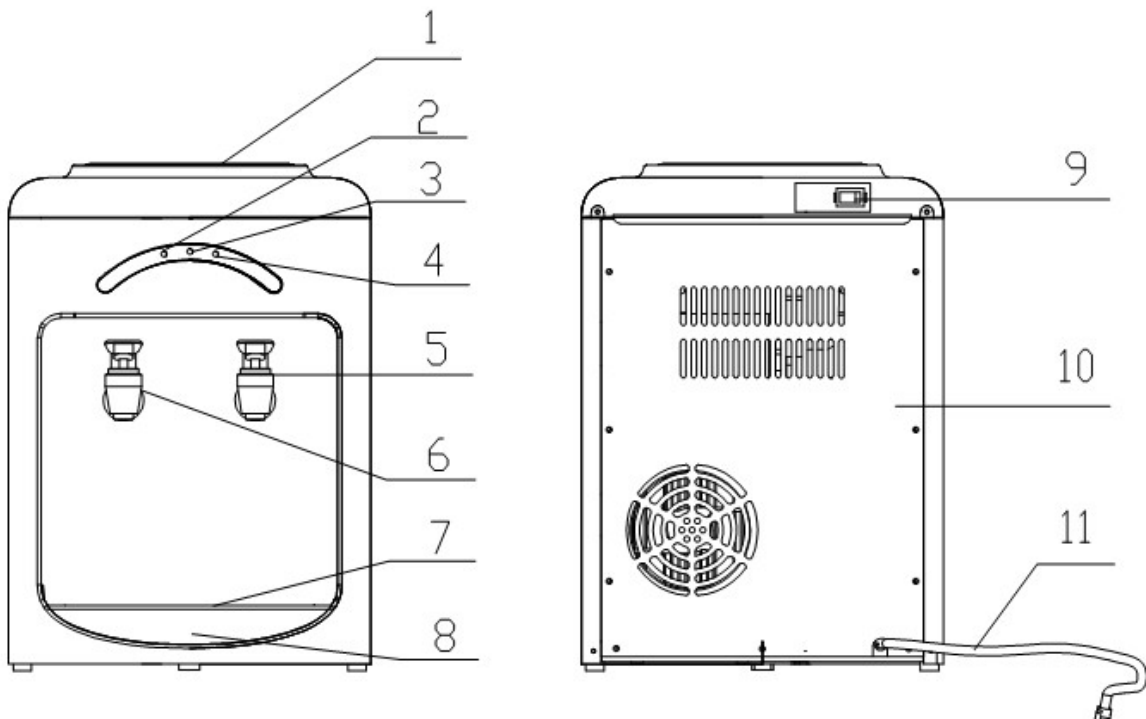

1. WATER INTAKE
2. POWER INDICATOR LIGHT
3. COOL INDICATOR LIGHT
4. COLD INDICATOR LIGHT
5. COOL WATER FAUCET (WHITE)
6. COLD WATER FAUCET (BLUE)
7. REMOVABLE DRIP TRAY COVER
8. REMOVABLE DRIP TRAY
9. POWER SWITCH
10. VENTILATION GRILLE
11. POWER CORD

Important Safety Instructions

 WARNING 	To reduce the risk of burns, fire, electrical shock, or injury when using your appliance, follow these basic precautions:
• Read all instructions before using the water dispenser. • Never clean parts with flammable fluids. The fumes can create a fire hazard or explosion. • Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other water dispenser. The fumes can create a fire hazard or explosion. • Do not plug unit into receptacle until you ensure the water tank switches are off. -Save these instructions-	

➤ **Electrical Connection**

This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.

Plug the appliance into an exclusive properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and or grounding should be directed toward a certified electrician or an authorized Avanti Products service center.

This appliance requires a standard 115/120-volt 60Hz electrical outlet with three-prong ground.

The cord should be secured behind the appliance and not left exposed or dangling to prevent accidental injury.

Do not use an adapter plug with this appliance.

Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

INSTALLATION GUIDELINES:

- Remove the exterior and interior packing.
- Place your appliance on a surface that is strong enough to support the dispenser when it is fully loaded.
- Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the appliance not to perform properly.
- Allow 5 inches of space between the water dispenser and the wall, which allows for proper air circulation.
- Plug the appliance into an exclusive properly installed-grounded wall outlet. Do not cut or remove the third (ground) prong from the power cord under any circumstances. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized Avanti Products service center.
- This water dispenser is not recommended for outdoor use.
- Do not locate the dispenser in area where the temperature may fall below freezing (32° F).
- Keep area around dispenser free of dust and dirt.
- Keep the reserve supply of water bottles away from excessive heat and light.
- Never unplug the water cooler, except for maintenance or transport.

OPERATION INSTRUCTIONS

Before Using Your Water Dispenser

- Check to be sure the following parts are included:
 - Instruction manual
- Before connecting the appliance to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
 - The water dispenser is pre-cleaned at the factory but the reservoir and water lines must be flushed with fresh water before use as follows:
 - **Keep the unit unplugged.**
 - Fill water tank with tap water full to capacity (more than 3/4 of a gallon). Wait for 5 minutes until water settles.
 - Plug the dispenser into the electrical outlet. Set the POWER switch at the back of the unit to the ON position; Power, Cool and Cold indicator lights will illuminate. We are ready to complete the first cycle. In order to do that, wait for the cold water indicator light to go off (another 40 minutes, approximately).
 - Unplug the dispenser from the electrical outlet. Proceed to drain the water from the faucets one at a time until no more water remains.
(Note: To facilitate this operation, use a large container).
 - Then, drain any water left in the tanks by opening the drain plug located on the back, until it drains completely.
 - Proceed to close the drain cap.
 - Place the standard 2, 3 or 5-gallon bottle of water on the water inlet, allow water to stand for approximately one minute.
 - Open water faucets to insure water flows from both faucets.
 - Plug dispenser into the electrical outlet.
 - Now you are ready to use your water dispenser.

NOTE: Your water dispenser has been cleaned and sanitized before leaving the factory, but in case a taste problem develops, place two tablespoons of baking soda and add tap water. Fill water tank again and repeat basic operations previously outlined.

⚡ WARNING ⚡

IMPROPER USE OF THE GROUNDED PLUG CAN RESULT IN THE RISK OF ELECTRICAL SHOCK. IF THE POWER CORD IS DAMAGED, HAVE IT REPLACED BY AN AUTHORIZED AVANTI PRODUCTS SERVICE CENTER.

OPERATING YOUR WATER DISPENSER

➤ Steps to replace water bottles

- Use a clean cloth to wipe off neck of bottle.
- Remove cap.
- Carefully lift bottle (approx. 40 lbs.) using your legs and not your back. Do not place hands on opening of bottle while placing in reservoir.
- Insert the water bottle on the water intake over reservoir opening so it settles properly on it.
- Wipe off any water which may have splashed on dispenser top.

➤ Indicator Lights:

Turn the cooling switch on.

There are 3 indicator lights on the front of the unit. POWER, COOL and COLD

The POWER indicator light will glow indicating the unit is plugged in and the power switch is in the ON position.

The COOL indicator light will glow after the Power Switch turned on, and the cooling process will begin. When the water reaches the appropriate temperature the COOL indicator light will turn off and the cooling cycle will stop, then the COLD indicator glows. When the temperature of the water in the reservoir rises above the appropriate temperature the COOL light will glow indicating the cooling system as begun.

CARE AND MAINTENANCE

- Wash the inside of the reservoir with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- The drip tray and water faucets should be cleaned with mild detergent and warm water.
- At regular intervals or once a month inspect the coils located across the back of the dispenser. Vacuum accumulation of dust or clean it with a soft bristled brush.

TAKING DISPENSER OUT OF SERVICE

- If the water dispenser will not be used for a long period of time, unplug the power cord from the wall outlet.
- Drain the water through the faucets.
- Turn the POWER switch to the "OFF" position.
- Drain the water from the tank by removing the plug from the back of the dispenser.
- Unit should not be transported on the sides. Place it upright if possible and cover it with a blanket.

PROBLEMS WITH YOUR WATER DISPENSER

You can solve many common water dispenser problems easily, saving you the cost of a possible service call. Try the suggestions outlined below to see if you can solve the problem before calling the service.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Water dispenser does not operate.	Not plugged in. The circuit breaker tripped or a blown fuse.
Water cooler is not cold enough.	Check to be sure the POWER switch on the back is ON. The water dispenser does not have the correct clearances.

SERVICE FOR YOUR WATER DISPENSER

We are proud of our customer service organization and the network of professional service technicians that provide service on your Avanti appliances. With the purchase of your Avanti appliance, you can have the confidence that if you ever need additional information or assistance, the Avanti Products Customer Service team will be here for you. Just call us toll-free.

AVANTI PRODUCTS CUSTOMER SERVICES

Product Information 800-323-5029	Whatever your questions are about our products, help is available.
Part Orders 800-220-5570	You may order parts and accessories that will be delivered directly to your home. You may order these items by personal check, money order, Master Card, or Visa.
In-Home Repair Service 800-220-5570	An Avanti Products authorized service center will provide expert repair service, scheduled at a time that is convenient for you. Our trained servicers know your appliance inside and out.

YOUR AVANTI PRODUCTS WARRANTY	Staple your sales receipt here. Proof of original purchase date is needed to obtain service under warranty.		
WHAT IS COVERED – LIMITED ONE-YEAR WARRANTY Avanti Products warrants that the product is free from defects in materials and/or workmanship for a period of twelve (12) months from the date of purchase by the original owner. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended for any reason whatsoever unless described in detail in the warranty document. For one year from the date of purchase by the original owner, Avanti products will, at its option, repair or replace any part of the product which proves to be defective in material or workmanship under normal use. Avanti Products will provide you with a reasonably similar product that is either new or factory refurbished. During this period Avanti Products will provide all parts and labor necessary to correct such defects free of charge, so long as the product has been installed and operated in accordance with the written instructions in this manual. In rental or commercial use, the warranty period is 90 days. All Avanti appliances of 4.2 cubic feet capacity or less must be brought/sent to the appliance service center for repair.			
WARRANTY EXCLUSIONS / WHAT IS NOT COVERED: The warranty coverage described herein excludes all defects or damage that are not the direct fault of Avanti Products, including without limitation, one or more of the following:			
• A failure to comply with any applicable state, local, city, or county electrical, plumbing and/or building codes, regulations, or laws, including failure to install the product in strict conformity with local fire and building codes and regulations. • Any external, elemental and/or environmental forces and factors, including without limitation, rain, wind, sand, floods, fires, mud slides, freezing temperatures, excessive moisture or extended exposure to humidity, lightning, power surges, structural failures surrounding the appliance, and acts of God. <table border="1" data-bbox="178 880 1453 1261"> <tr> <td data-bbox="178 880 820 1261"> • Content losses of food or other content due to spoilage. • Incidental or consequential damages • Parts and labor costs for the following will not be considered as warranty: • Light bulbs and/or plastic housing. • Shipping and handling costs associated with the replacement of the unit. • Repairs performed by unauthorized servicers. Service calls that are related to external problems, such as abuse, misuse, inadequate electrical power, accidents, fire, floods, or any other acts of God. </td> <td data-bbox="820 880 1453 1261"> • Failure of the product if it is used for other than it intended purpose. • The warranty does not apply outside the Continental USA. • Surcharges including but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas. </td> </tr> </table>		• Content losses of food or other content due to spoilage. • Incidental or consequential damages • Parts and labor costs for the following will not be considered as warranty: • Light bulbs and/or plastic housing. • Shipping and handling costs associated with the replacement of the unit. • Repairs performed by unauthorized servicers. Service calls that are related to external problems, such as abuse, misuse, inadequate electrical power, accidents, fire, floods, or any other acts of God.	• Failure of the product if it is used for other than it intended purpose. • The warranty does not apply outside the Continental USA. • Surcharges including but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas.
• Content losses of food or other content due to spoilage. • Incidental or consequential damages • Parts and labor costs for the following will not be considered as warranty: • Light bulbs and/or plastic housing. • Shipping and handling costs associated with the replacement of the unit. • Repairs performed by unauthorized servicers. Service calls that are related to external problems, such as abuse, misuse, inadequate electrical power, accidents, fire, floods, or any other acts of God.	• Failure of the product if it is used for other than it intended purpose. • The warranty does not apply outside the Continental USA. • Surcharges including but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas.		
In no event shall Avanti Products have any liability or responsibility whatsoever for damage to surrounding property, including cabinetry, floors, ceilings, and other structures and/or objects around the product. Also excluded from this warranty are scratches, nicks, minor dents, and other cosmetic damages on external surfaces and exposed parts; Products on which the serial numbers have been altered, defaced or removed; service visits for customer education, or visits where there is nothing wrong with the product; correction of installation problems (you are solely responsible for any structure and setting for the product, including all electrical, plumbing and/or other connecting facilities, for proper foundation/flooring, and for any alterations including without limitation cabinetry, walls, floors, shelving etc., as well as the resetting of breakers or fuses.			
OUT OF WARRANTY PRODUCT Avanti Products is under no obligation, at law or otherwise, to provide you with any concessions, including repairs, pro-rates, or product replacement, once this warranty has expired.			
WARRANTY – REFRIGERATION – NON COMPRESSOR			

INSTRUCCIONES EN ESPAÑOL

DIRECCIONES BASICAS DE OPERACION:

- COLOQUE EL ENFRIADOR EN UN AREA BIEN VENTILADA Y DEJE UN ESPACIO DE UN POCO MAS DE 5 PULGADAS ENTRE LA UNIDAD Y LA PARED.
- ESCOJA UN LUGAR CON PISO NIVELADO.
- NO COLOQUE EL ENFRIADOR DONDE LA TEMPERATURA AMBIENTAL PUEDA BAJAR DE 32°F (0°C).

OPERACION INICIAL

- AUNQUE EL ENFRIADOR SALE LIMPIO DE LA FABRICA, DEBE LIMPIAR Y ESTERILIZAR LOS CONDUCTOS DEL TANQUE Y LAS LLAVES DE ACUERDO A LOS SIGUIENTES PASOS:
- LLENE EL TANQUE DE AGUA (HASTA EL TOPE) CON AGUA DE LA PILA.
- DEJE NIVELAR EL AGUA POR 5 MINUTOS.
- ABRA LAS LLAVES HASTA QUE SALGA TODA EL AGUA. CIERRELAS.
- ENTONCES, VACIE EL TANQUE COMPLETAMENTE ABRIENDO LA TAPA DE DRENAJE SITUADA ABAJO DEL CABINETE. CIERRELA.
- COLOQUE DE NUEVO EL BOTTELLON LLENO DE 2, 3 o 5 GALONES. DEJE QUE EL AGUA SE NEVELE POR UN MINUTO.
- ABRA LAS LLAVES PARA ASEGURARSE QUE EL AGUA SALE UNIFORMEMENTE. CIERRELAS INMEDIATAMENTE.
- CONECTE EL ENFRIADOR AL TOMA CORRIENTE.
- MUEVA EL INTERRUPTOR DE ENCENDIDO SITUADO EN LA PARTE TRASERA A LA POSICION "ON".
- AHORA SU ENFRIADOR ESTA LISTO PARA USAR.

CONTROLES DE OPERACION

HAY TRES (3) LUCES INDICADORAS EN LA FRENTE DE LA UNIDAD:

POWER: ROJO
COOL: AMBAR
COLD: VERDE

LA LUZ INDICADORA DE POWER (ROJO) ALUMBRARA CUANDO ENCHUFE LA UNIDAD AL TOMA CORRIENTE .

LA LUZ INDICADORA DE COOL (AMBAR) Y LA DE COLD (VERDE) ALUMBRARAN CUANDO EL CICLO DE ENFRIAR ESTE EN PROCESO.

CUANDO EL AGUA EN EL TANQUE ALCANZA LA TEMPERATURA OPTIMA LA LUZ INDICADORA DE COOL (AMBAR) APAGARA.

CUANDO LA TEMPERATURA DEL AGUA EN EL TANQUE SUBE LA LUZ INDICADORA DE COOL (AMBAR) ALUMBRARA DE NUEVO INDICANDO QUE EL CICLO DE ENRIAR ESTE EN PROCESO.

PARA ALCANZAR LA TEMPERATURA OPTIMA SE NECESITA APROXIMADAMENTE UNA HORA. PARA REPONER UN VASO DE AGUA DE 8 oz., SE NECESITAN APROXIMADAMENTE 25 MINUTOS O MENOS. PARA REPONER 2 (DOS) O MAS VASOS DE 8 oz. ESPERE APROXIMADAMENTE UNA HORA.

NOTA: SU ENFRIADOR FUE LIMPIADO Y ESTIRILIZADO ANTES DE SALIR DE LA FABRICA. EN CASO QUE SIENTA ALGUN SABOR EN EL AGUA, ECHE UNA CUCHARADA DE BICARBONATO DE SODA Y AÑADA AGUA DE LA PILA. LLENE EL TANQUE Y REPITA LA OPERACION INICIAL.

ADVERTENCIA

EL USO INCORRECTO DEL CABLE A TIERRA PUEDE OCASIONAR UN CHOQUE ELECTRICO. SI EL CORDON ESTA DAÑADO, REEMPLACELO EN UN CENTRO DE SERVICIOS AUTORIZADO POR AVANTI PRODUCTS.

MANTENIMIENTO

- ANTES DE EFECTUAR LA LIMPIEZA, DESENCHUFE EL ENFRIADOR.
- PARA LIMPIAR LAS PARTES DE PLASTICO SE REQUIERE JABON LIQUIDO Y AGUA TIBIA. NO USE LIMPIADORES ABRASIVOS EN LA SUPERFICIE SUPERIOR NI EN LA BANDEJA DE ESCURRIMIENTO.

SI NO VA A USAR EL ENFRIADOR POR UN TIEMPO PROLONGADO

- DESENCHUFE LA UNIDAD.
- QUITA EL BOTELLON DE AGUA.
- COLOQUE EL INTERRUPTOR (EN LA PARTE TRASERA) EN LA POSICION "OFF". (APAGADO)
- DRENE EL AGUA ABRIENDO LAS LLAVES.
- DRENE LA APERTURA EN EL FONDO QUITANDO EL TAPON.

CENTRO DE SERVICIOS

LA MAYORIA DE LOS PROBLEMAS SE RESUELVEN CON UNA SIMPLE LLAMADA TELEFONICA A NUESTRO NUMERO SIN CARGO.

1-800-220-5570

ANTES DE DEVOLVER EL PRODUCTO O PARA OBTENER LA DIRECCION Y NUMERO DE TELEFONO DEL CENTRO DE SERVICIO MAS CERCANO LLAME AL SIGUIENTE NUMERO.

1-800-220-5570

GUIA PARA RESOLVER PROBLEMAS

POSIBLES PROBLEMAS	CAUSA
DERRAME DE AGUA POR FUERA DEL ENFRIADOR.	LA BOTELLA ESTA PERFORADA – REEMPLACELA.
EL AGUA NO ESTA SUFICIENTEMENTE FRIA.	VERIFIQUE QUE EL INTERRUPTOR ESTE EN POSICION "ON" (ENCENDIDO). NO DIO SUFICIENTE TIEMPO PARA QUE ENFRIE EL AGUA. PARA REPONER DOS O MAS VASOS DE 8 oz. SE NECESITA APROXIMADAMENTE UNA HORA.
EL ENFRIADOR NO ENFRIA O CALIENTA EL AGUA.	VERIFIQUE LOS CIRCUITOS, FUSIBLES O DISYUNTORES.

NOTES / COMMENTS

NOTES / COMMENTS

Registration Information

Thank you for purchasing this fine Avanti product. Please fill out this form and return it to the following address within 100 days from the date of purchase and receive these important benefits:

AVANTI PRODUCTS LLC
P.O.Box 520604 – Miami, Florida 33152

➤ **Protect your product:**

We will keep the model number and date of purchase of your new Avanti product on file to help you refer to this information in the event of an insurance claim such as fire or theft.

➤ **Promote better products:**

We value your input. Your responses will help us develop products designed to best meet your future needs.

------(detach here)-----

Avanti Registration Card

Name			Model #	Serial #
Address			Date Purchased	Store / Dealer Name
City	State	Zip	E-mail Address	
Area Code	Phone Number		Occupation	
Did You Purchase An Additional Warranty			As your Primary Residence, Do You:	
☐ Extended			☐ Own ☐ Rent	
☐ None				
Reason for Choosing This Avanti Product: Please indicate the most important factors That influenced your decision to purchase this product:			Your Age:	
☐ Price			☐ under 18 ☐ 18-25 ☐ 26-30	
☐ Product Features			☐ 31-35 ☐ 36-50 ☐ over 50	
☐ Avanti Reputation			<u>Marital Status:</u>	
☐ Product Quality			☐ Married ☐ Single	
☐ Salesperson Recommendation				
☐ Other: _____			<u>Is This Product Used In The:</u>	
☐ Friend / Relative Recommendation			☐ Home ☐ Business	
☐ Warranty				
☐ Other: _____			<u>How Did You Learn About This Product:</u>	
			☐ Advertising	
Comments:			☐ In-Store Demo	
			☐ Personal Demo	

