

RECHARGING UTILITY LIGHT

1. Turn fixture OFF.
2. When charging with AC adapter, insert the battery charger plug into the jack on the worklight handle and the other end into a standard 110-120V AC outlet.

NOTE: Batteries will reach full charge in about 2 hours. LED indicator light glows red while the batteries are charging.

HANGING UTILITY LIGHT

1. Hanging hook can rotate 360°.

MAINTENANCE

Before performing any maintenance, **ALWAYS** unplug worklight. Remove dirt and grime as soon as it accumulates. Use a soft, damp cloth and a mild soap, if needed. Be sure not to get the electrical lug wet. **NEVER** submerge any part of the worklight in any solution to clean it. **DO NOT USE** solvents such as gasoline, turpentine, etc. to clean unit. Aerosols and other chemicals may fog the clear polycarbonate lens.

ONE YEAR FULL WARRANTY ON WORKLIGHT

If this product fails due to a defect in material or workmanship within one year from the date of purchase, **RETURN IT TO YOUR NEAREST SEARS STORE OR CRAFTSMAN OUTLET IN THE UNITED STATES**, and it will be replaced free of charge. This warranty applies for only 90 days from the date of purchase if this Craftsman Worklight is used for commercial or rental purposes. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Sears, Roebuck and Co., Hoffman Estates, IL 60179 USA
Assembly or operation questions? Call 1-800-469-4663
www.craftsman.com

Printed in China
07/2014 825-0972

Owner's Instructions

CRAFTSMAN®

 
IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS!

DANGER - TO REDUCE THE RISK OF ELECTRIC FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

WARNING - When using electrical fixtures, base precautions should always be followed, including the following:

1. Read all instructions before using the fixture.
2. **DO NOT** handle this fixture or try to plug it in when your hands are wet or damp or when you are standing on a wet or damp surface or in water.
3. To reduce the risk of injury, close supervision is necessary when an fixture is used near children.
4. **ONLY USE** attachments recommended or sold by the manufacturer.
5. **DO NOT** use outdoors. This fixture is intended for use as general indoor lighting.
6. **DO NOT** use in potentially dangerous locations, such as flammable or explosive atmospheres.
7. **DO NOT** use in potentially dangerous locations, such as flammable or explosive atmospheres.

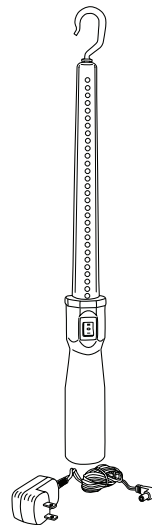

**LED WORK LIGHT
MODEL NO. 73919**

8. To reduce the risk of electric shock, do not put in water or other liquid. Do not place or store appliance where it can fall or be pulled into a tub or sink. **NEVER ATTEMPT TO PICK UP PLUGGED-IN APPLIANCES WHEN THEY FALL INTO WATER BECAUSE FATAL ELECTROCUTION COULD RESULT.**
9. Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
10. Do not operate fixture if it has received a sharp blow, been dropped, or otherwise damaged in any way.
11. The direct plug-in charger is intended to be correctly oriented in a vertical or floor mount position.
12. This fixture **MUST ALWAYS BE USED** in accordance with all electrical and safety codes and ordinances, including the most recent National Electric Code (NEC) and with the Occupational Safety and Health Administration (OSHA) Volume 1 on General Industry Standards and interpretations.
13. **DO NOT** replace batteries.
14. **DO NOT** dispose of this product in fire. Batteries inside this product may explode or leak.
15. NiMH batteries must be disposed of in accordance with local waste ordinances and regulations.
16. **DO NOT** short the positive-negative terminals together.
17. **DO NOT** work on this battery pack.
18. **DO NOT** disassemble fixture. The fixture does not have any user serviceable parts.
19. This product is not intended to be repaired by service personal in case of failure or component defect (unit can be thrown away).
20. This product must not be disposed of together with domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.
21. **NEVER** operate the light with the clear protective lens removed.
22. **KEEP AWAY** from excessive heat or flame.

23. **DO NOT** look directly into the light.
24. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

OPERATION

1. Press switch in the handle up to turn the LED lights on high output.
2. Press switch in the handle down to turn the LED lights on low output.
3. Press switch to the middle to turn the fixture OFF.