

2014 SNOW THROWER MAINTENANCE



BELTS

Examine belts each season for any signs of wear



SPARK PLUG

Check yearly and every 25 hours of use



PINS & BOLTS

Be prepared with extra pins and bolts



OILS

Change oil every 50 hours of use



STABILIZER

Keep fuel fresh with stabilizer

CARE & MAINTENANCE TIPS



FIRST 5 HOURS OF USE

- Change the oil



EACH USE / EVERY 5 HOURS OF USE

- Check oil level
- Tighten/replace loose or missing hardware
- Clean off unit



EACH YEAR / EVERY 25 HOURS OF USE

- Check spark plug
- Lube control linkages and pivots
- Lube wheels with auto grease
- Lube gear and auger shafts
- Check chute control cable for slack



EVERY YEAR OR ... EVERY 50 HOURS OF USE

- Change the oil

EVERY 100 HOURS OF USE

- Change spark plug

BEFORE STORING FOR NEXT YEAR

- Run engine until all fuel is gone



MAINTENANCE KIT

Maximize snow thrower performance



ROLLING SKID SHOES

Prevent damage to driveways and sidewalks



ENGINE KEY

Always keep a spare key



CAB

Protection from the elements while snow throwing



COVER

Protect your snow thrower when not in use



ULTRA CLAVA MASK

Weatherproof protection



QUICK CLAVA MASK

Fleece knit warmth



SNOW/MOWER LIGHT

Additional lighting versatility

TOP ONLINE SELLERS

Visit Sears.com/snow

for complete list of all available snow thrower accessories

*Select items may be available online only. 24-Hour online parts ordering at www.Sears.com or www.SearsPartsDirect.com

NOTE: Tire chains are not needed for aggressive treads on X-Trac™ tires.