

USE AND CARE GUIDE

Sears Landon 4Pc Seating Set

* Lounge chair

Product Code: D71 M20949

UPC Code: 7 22938 11312 5

Date of Purchase: __/ __/

La-Z-Boy® is a registered trademark of La-Z-Boy Incorporated and is used under license to BJI, Inc. © 2015 La-Z-Boy Incorporated.

Thank you for your purchase

THANK YOU FOR YOUR PURCHASE!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents		
Safety Information3		
Warranty3What is Covered3What is Not Covered3		
Care and Maintenance4		
Pre-Assembly5Planning Assembly5Observe Weight Limits5Hardware Included5Package Contents6		
Assembly Instruction7		
Customer Service11		

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!

EXAMINE YOUR FURNITURE

 Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

THIS IS A RESIDENTIAL WARRANTY AND DOES NOT APPLY FOR COMMERCIAL USE.

2 YEARS WARRANTY FOR FRAME, 1 YEAR WARRANTY FOR CUSHONS.

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for 2 years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center.

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use.

Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.

Glass table top breakage and corrosion or rusting of hardware are not covered.

In addition, purchase parts are not covered under this warranty.

Proof of purchase (dated register receipt) is required for warranty claims.

Warranty (continued)

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team below.

Contact the Customer Service Team at 1-866-391-4868 or visit www.bjifurniture.com.

Care and Maintenance

- Do not allow water to build up in frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. DO NOT use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients can cause discoloration or have adverse reaction to your finish.
- □ Rinse with clean water and dry with a soft, absorbent cloth towel.
- Cushions, slings, and/or an umbrella may be cleaned by hand with a solution of soap and water with a clean water rinse. Never machine wash as this will result in shrinking or damage. After cleaning, tip on end and allow to drip dry. Never use a commercial or home dryer to tumble dry fabric goods.
- Treat frames with liquid wax for maximum protection against UV rays and /or salty, damp air.
- Umbrella should be closed when not in use. Umbrella should be removed and stored in the event of wind, rain, hail, sleet, snow, or any other inclement weather. To prevent damage to your table, always use an umbrella base with your umbrella. Store indoors during winter months.
- Use and operation: To prolong the life of your outdoor furniture, cover when not in use. Store indoors during winter months.

Pre-Assembly

PLANNING ASSEMBLY

PLEASE READ COMPLETE USE AND CARE GUIDE PRIOR TO ASSEMBLY!

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a nonabrasive surface to avoid scratching. It takes about 45 minutes for two persons to complete all the assembly.

F	
Ľ	

NOTE: More than one person may be required to complete the assembly of this product.

OBSERVE WEIGHT LIMITS

The recommended weight limit for each item is listed below:

- Lounge chair: 300lbs
- □ Sofa: 600 lbs

HARDWARE INCLUDED






Part	Description	Quantity
AA	M6*15mm hex bolt	16
BB	M6*25mm hex bolt	8
CC	M6 washer	24
DD	M6 plastic cap	24
EE	Hex wrench	1

Pre-Assembly (continued)

PACKAGE CONTENTS

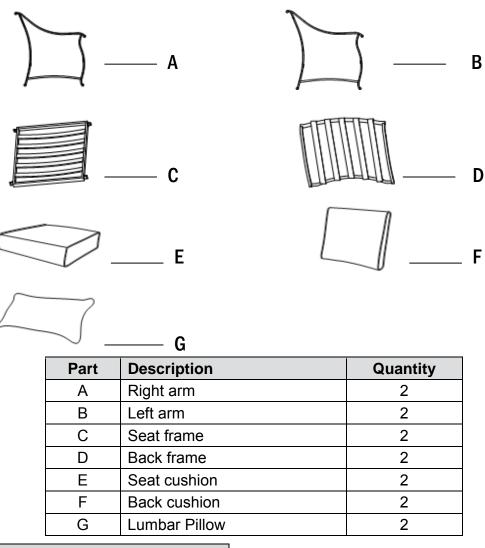

Safety Information



- EVERY BOLT NEEDS TO BE USED WITH A WASHER.
- DO NOT FULLY TIGHTEN BOLT UNTIL INDICATED IN **STEP 3**.

Assembly Instruction


Attaching the right arm

NOTE: Do not fully tighten the bolts.

M

- □ Place the back (D) on a soft, non-abrasive surface carefully.
- □ Attach the right arm (A) to the back (D) by using M6 hex bolts (BB) and M6 washers (CC).



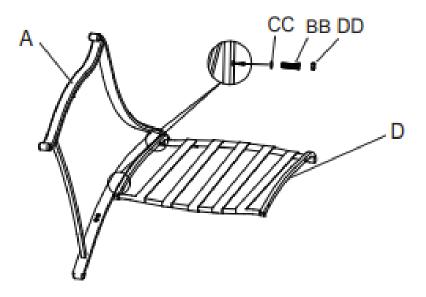

2


M

Attaching the seat frame

NOTE: Do not fully tighten the bolts.


Attach the seat frame (C) to the right arm (A) by using M6 hex bolts (AA) and M6 washers (CC).



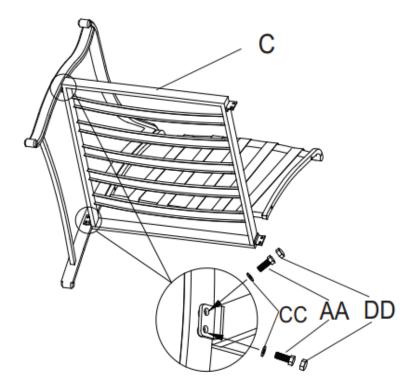


3 Attaching the left arm

- □ Attach the left arm (B) to the back frame (D) by using M6 hex bolts (BB) and M6 washers (CC).
- □ Attach the left arm (B) to the seat frame (C) by using M6 hex bolts (AA) and M6 washers (CC).
- Tighten all M6 hex bolts (AA) & (BB) with the hex wrench (EE). Attach the M6 plastic caps (DD).

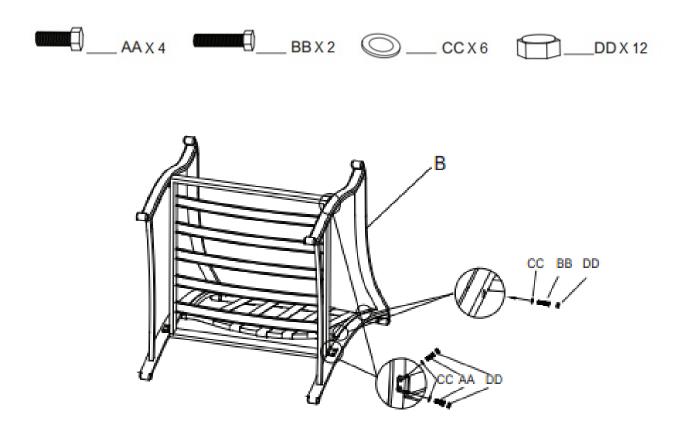

4 Adding the cushions

- □ With the assistance of another person turn the chair to an upright position.
- □ Place the seat cushion (E), back cushion (F) and lumbar pillow (G) onto the lounge chair.
- □ Repeat these instructions to assemble another lounge chair.
- □ Lounge chairs are ready for your enjoyment.

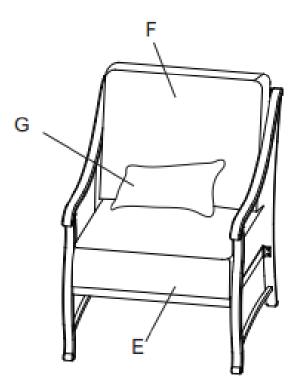



Please refer to part number when reordering

Questions, problems, missing parts? Before returning to the store, call our Customer Service 8 a.m. - 5 p.m., EST, Monday-Thursday 8 a.m. - 4 p.m., EST, Friday

1-866-391-4868

Made in/ Hecho en CHINA


Distributed by Sears, Roebuck and Co., Hoffman Estates, IL60179

See our extensive assortment of outdoor living products on-line

at www.sears.com and www.kmart.com

Retain this manual for future use.



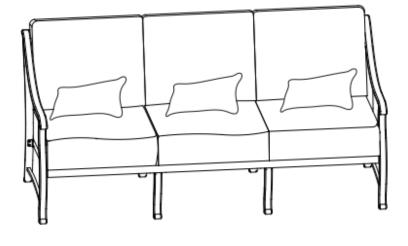

USE AND CARE GUIDE

Sears Landon 4Pc Seating Set

* Sofa

Product Code: D71 M20949

UPC Code: 7 22938 11312 5

Date of Purchase: / /

La-Z-Boy® is a registered trademark of La-Z-Boy Incorporated and is used under license to BJI, Inc. © 2015 La-Z-Boy Incorporated.

Thank you for your purchase

THANK YOU FOR YOUR PURCHASE!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents		
Safety Information3		
Warranty3What is Covered3What is Not Covered3		
Care and Maintenance4		
Pre-Assembly5Planning Assembly5Observe Weight Limits5Hardware Included5Package Contents6		
Assembly Instruction7		
Customer Service13		

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!

EXAMINE YOUR FURNITURE

 Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

THIS IS A RESIDENTIAL WARRANTY AND DOES NOT APPLY FOR COMMERCIAL USE.

2 YEARS WARRANTY FOR FRAME, 1 YEAR WARRANTY FOR CUSHONS.

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for 2 years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center.

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use.

Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.

Glass table top breakage and corrosion or rusting of hardware are not covered.

In addition, purchase parts are not covered under this warranty.

Proof of purchase (dated register receipt) is required for warranty claims.

Warranty (continued)

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team below.

Contact the Customer Service Team at 1-866-391-4868 or visit www.bjifurniture.com.

Care and Maintenance

- Do not allow water to build up in frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. DO NOT use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients can cause discoloration or have adverse reaction to your finish.
- □ Rinse with clean water and dry with a soft, absorbent cloth towel.
- Cushions, slings, and/or an umbrella may be cleaned by hand with a solution of soap and water with a clean water rinse. Never machine wash as this will result in shrinking or damage. After cleaning, tip on end and allow to drip dry. Never use a commercial or home dryer to tumble dry fabric goods.
- Treat frames with liquid wax for maximum protection against UV rays and /or salty, damp air.
- Umbrella should be closed when not in use. Umbrella should be removed and stored in the event of wind, rain, hail, sleet, snow, or any other inclement weather. To prevent damage to your table, always use an umbrella base with your umbrella. Store indoors during winter months.
- Use and operation: To prolong the life of your outdoor furniture, cover when not in use. Store indoors during winter months.

Pre-Assembly

PLANNING ASSEMBLY

PLEASE READ COMPLETE USE AND CARE GUIDE PRIOR TO ASSEMBLY!

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a nonabrasive surface to avoid scratching. It takes about 45 minutes for two persons to complete all the assembly.

F	
Ľ	

NOTE: More than one person may be required to complete the assembly of this product.

OBSERVE WEIGHT LIMITS

The recommended weight limit for each item is listed below:

- Lounge chair: 300lbs
- □ Sofa: 600 lbs

HARDWARE INCLUDED






Part	Description	Quantity
AA	M6*15mm hex bolt	16
BB	M6*25mm hex bolt	4
CC	M6 washer	20
DD	M6 plastic cap	20
EE	Hex wrench	1

Pre-Assembly (continued)

PACKAGE CONTENTS

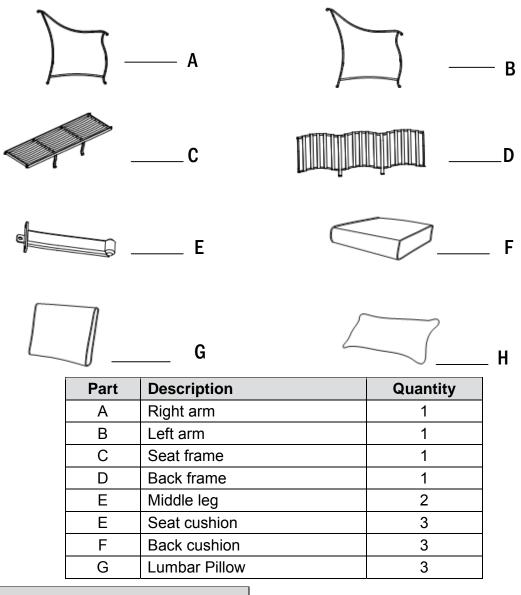

Safety Information

- EVERY BOLT NEEDS TO BE USED WITH A WASHER.
- DO NOT FULLY TIGHTEN BOLT UNTIL INDICATED IN **STEP 5**.


Assembly Instruction

M

Attaching the right arm

NOTE: Do not fully tighten the bolts.

- □ Place the back (D) on a soft, non-abrasive surface carefully.
- □ Attach the right arm (A) to the back (D) by using M6 hex bolts (BB) and M6 washers (CC).

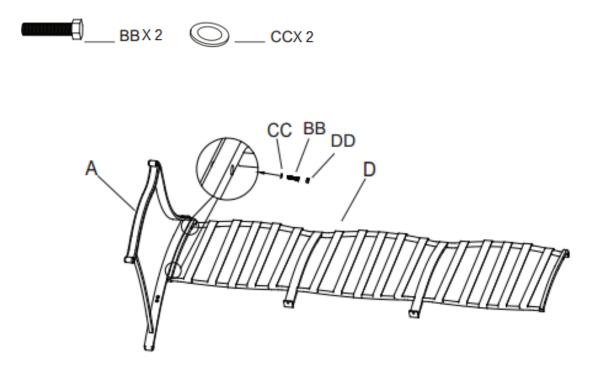

2


M

Attaching the seat frame

NOTE: Do not fully tighten the bolts.


Attach the seat frame (C) to the right arm (A) by using M6 hex bolts (AA) and M6 washers (CC).



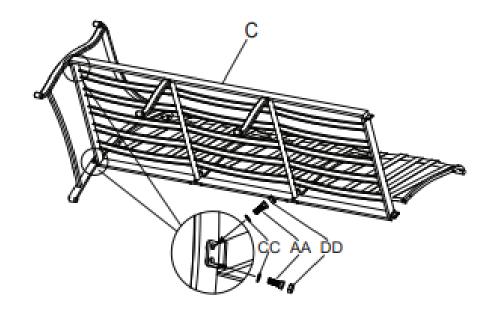

3 Attaching the left arm


- □ Attach the left arm (B) to the back frame (D) by using M6 hex bolts (BB) and M6 washers (CC).
- □ Attach the left arm (B) to the seat frame (C) by using M6 hex bolts (AA) and M6 washers (CC).

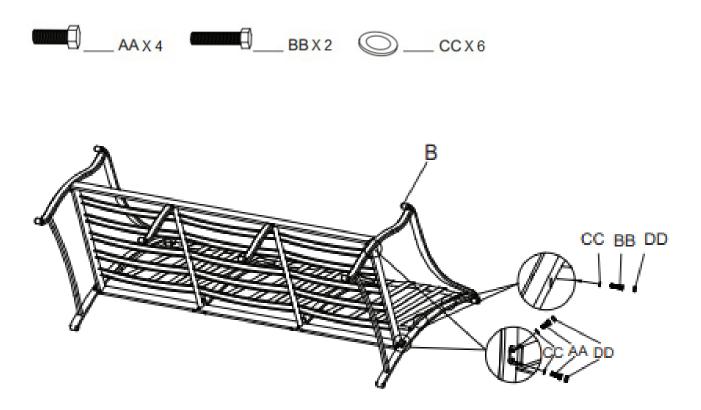

4 Attaching the middle leg to back


Attach the middle legs (E) to the back frame (D) by using M6 hex bolts (AA) and M6 washers (CC).



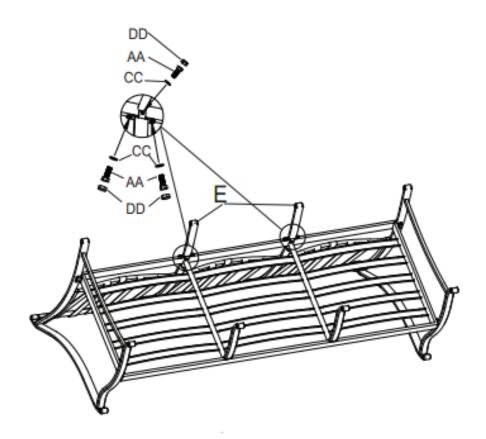


5 Attaching the middle leg to seat

- Attach the middle legs (E) to the seat frame (C) by using M6 hex bolts (AA) and M6 washers (CC).
- Tighten all M6 hex bolts (AA) & (BB) with the hex wrench (EE). Attach the M6 plastic caps (DD).

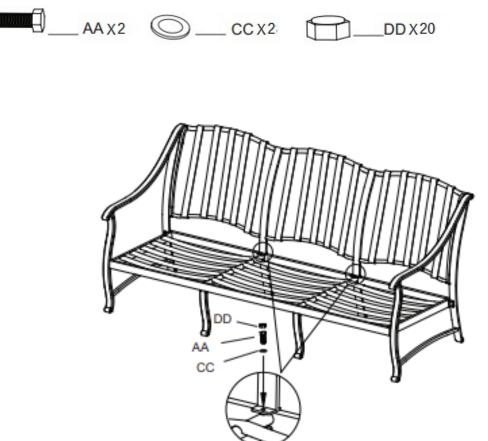

6 Adding the cushions

- □ With the assistance of another person turn the chair to an upright position.
- □ Place the seat cushion (F), back cushion (G) and lumbar pillow (H) onto the sofa.
- □ Sofa is ready for your enjoyment.

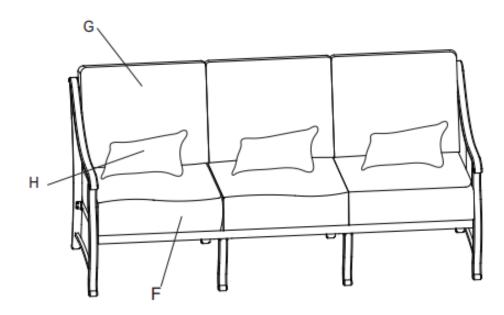



Please refer to part number when reordering

Questions, problems, missing parts? Before returning to the store, call our Customer Service 8 a.m. - 5 p.m., EST, Monday-Thursday 8 a.m. - 4 p.m., EST, Friday

1-866-391-4868

Made in/ Hecho en CHINA


Distributed by Sears, Roebuck and Co., Hoffman Estates, IL60179

See our extensive assortment of outdoor living products on-line

at www.sears.com and www.kmart.com

Retain this manual for future use.



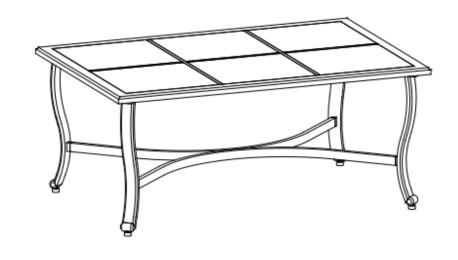

USE AND CARE GUIDE

Sears Landon 4Pc Seating Set

* Coffee Table

Product Code: D71 M20949

UPC Code: 7 22938 11312 5

Date of Purchase: __/ __/

La-Z-Boy® is a registered trademark of La-Z-Boy Incorporated and is used under license to BJI, Inc. © 2015 La-Z-Boy Incorporated.

Thank you for your purchase

THANK YOU FOR YOUR PURCHASE!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents	2
Safety Information	
Set up your furniture properly	
Examine your furniture	3
Warranty	3
What is Covered	3
What is Not Covered	3
Care and Maintenance	
Pre-Assembly	5
Planning Assembly	5
Observe Weight Limits	5
Hardware Included	5
Package Contents	6
Assembly Instruction	7

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.

EXAMINE YOUR FURNITURE

 Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!



WARNING: 1.Do not crawl, stand, or sit on table tops.

2. Do not set or lay heavy items on table tops.

3. Avoid extreme hot & cold items being placed on table tops.

Warranty

THIS IS A RESIDENTIAL WARRANTY AND DOES NOT APPLY FOR COMMERCIAL USE.

2 YEARS WARRANTY FOR FRAME

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for 2 years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center.

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use.

Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.

Glass table top breakage and corrosion or rusting of hardware are not covered.

In addition, purchase parts are not covered under this warranty.

Warranty (continued)

Proof of purchase (dated register receipt) is required for warranty claims.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team below.

Contact the Customer Service Team at 1-866-391-4868 or visit www.bjifurniture.com.

Care and Maintenance

- Do not allow water to build up in frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. DO NOT use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients can cause discoloration or have adverse reaction to your finish.
- □ Rinse with clean water and dry with a soft, absorbent cloth towel.
- Cushions, slings, and/or an umbrella may be cleaned by hand with a solution of soap and water with a clean water rinse. Never machine wash as this will result in shrinking or damage. After cleaning, tip on end and allow to drip dry. Never use a commercial or home dryer to tumble dry fabric goods.
- Treat frames with liquid wax for maximum protection against UV rays and /or salty, damp air.
- Umbrella should be closed when not in use. Umbrella should be removed and stored in the event of wind, rain, hail, sleet, snow, or any other inclement weather. To prevent damage to your table, always use an umbrella base with your umbrella. Store indoors during winter months.
- □ Use and operation: To prolong the life of your outdoor furniture, cover when not in use. Store indoors during winter months.

Pre-Assembly

PLANNING ASSEMBLY

PLEASE READ COMPLETE USE AND CARE GUIDE PRIOR TO ASSEMBLY!

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a nonabrasive surface to avoid scratching. It takes about 45 minutes for two persons to complete all the assembly.

	~	
	A	
I.	~ 1	
1		

 
NOTE: More than one person may be required to complete the assembly of this product.

OBSERVE WEIGHT LIMITS

The recommended weight limit for each item is listed below:

- □ Lounge chair: 300 lbs
- □ Sofa: 600 lbs

HARDWARE INCLUDED

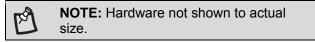



Part	Description	Quantity
AA	M6*15mm Hex Bolt	12
BB	M6 Washer	12
CC	M6 Plastic Cap	12
DD	Hex Wrench	1

PACKAGE CONTENTS









Part	Description	Quantity
A	Table leg	4
В	Leg Connector	1
С	Table rim	1
D	Ceramic tile	6

Safety Information



- EVERY BOLT NEEDS TO BE USED WITH A WASHER.
- DO NOT FULLY TIGHTEN BOLT UNTIL INDICATED IN **STEP 2**.

Assembly Instruction


M

Attaching the connector

NOTE: Do not fully tighten the bolts.

- □ Place the leg on a sofa, flat non-abrasive surface.
- □ Attach the leg connector (B) to the leg (A) using M6 hex bolts (AA) and M6 washers (BB).




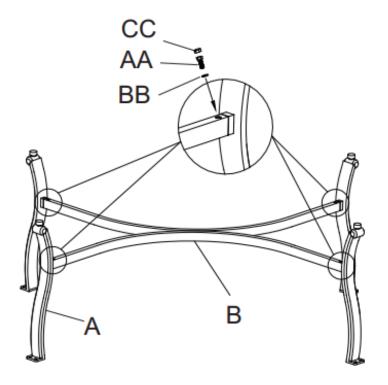

2 Attaching the table rim

- □ Attach the leg (A) to the table rim (C) by using M6 hex bolts (AA) and M6 washers (BB).
- □ Ensure all bolts are aligned and assembled correctly.
- □ Tighten all M6 hex bolts (AA) with the hex wrench (DD). Attach the M6 plastic caps (CC).



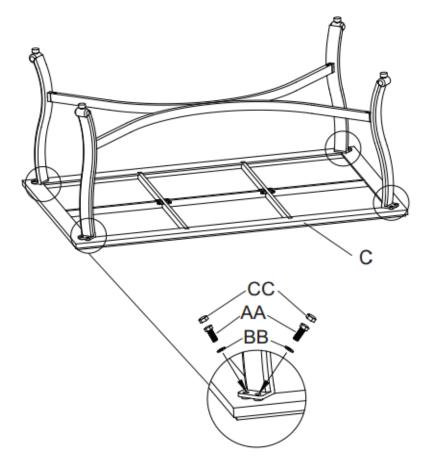

Replacing the ceramic tile top


- □ With the assistance of another person, carefully turn the table over and set it down on its legs.
- □ Place the ceramic tile top (D) onto the table.
- □ The coffee table is ready for your enjoyment.

WARNING:

1. Do not crawl, stand, or sit on tile table tops.

2. Do not set or lay heavy items on tile table tops.

3. Avoid extreme hot & cold items being placed on tile table tops.

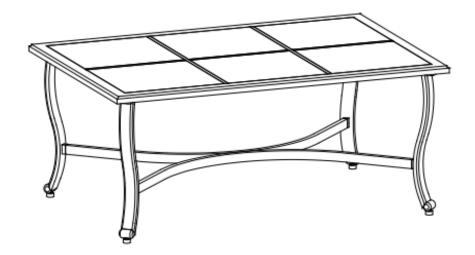

sears

Please refer to part number when reordering

Questions, problems, missing parts? Before returning to the store, call our Customer Service 8 a.m. - 5 p.m., EST, Monday-Thursday 8 a.m. – 4 p.m., EST, Friday

1-866-391-4868

Made in/ Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL60179

See our extensive assortment of outdoor living products on-line

at www.sears.com and www.kmart.com

Retain this manual for future use.