 




Live life Comfortably.™

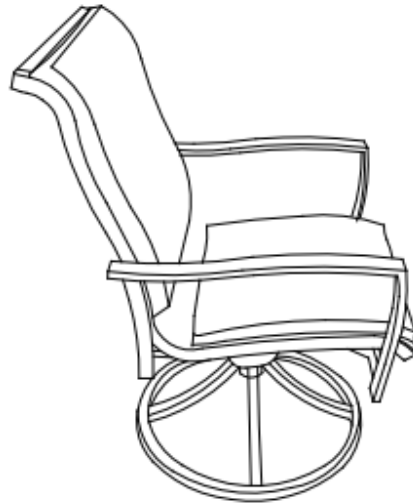

USE AND CARE GUIDE

Sears Lucas 7pc Dining Set

* Swivel Rocker

Product Code: D71 M34951

UPC Code: 7 22938 10463 5

Date of Purchase: __ / __ / __

La-Z-Boy® is a registered trademark of La-Z-Boy Incorporated and is used under license to BJI, Inc.

© 2015 La-Z-Boy Incorporated.

Thank you for your purchase

THANK YOU FOR YOUR PURCHASE!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents	2
Safety Information	3
Set up your furniture properly.....	3
Examine your furniture.....	3
Warranty	3
What is covered	3
What is not covered	3
Care and Maintenance	4
Pre-Assembly	5
Planning assembly.....	5
Observe weight limits.....	5
Hardware included.....	5
Package contents	6
Assembly Instruction	7
Customer Service	9

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.



WARNING: Do not sit or stand on the table.



WARNING: Do not place heavy items on the table top.



WARNING: An umbrella base must be used at all times. Umbrella should not be used in the event of wind, rain, hail, sleet, snow or any other inclement weather.

EXAMINE YOUR FURNITURE

- Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

THIS IS A RESIDENTIAL WARRANTY AND DOES NOT APPLY FOR COMMERCIAL USE.

7 YEARS WARRANTY FOR FRAME.

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for 7 years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center.

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use.

Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.

Glass table top breakage and corrosion or rusting of hardware are not covered.

In addition, purchase parts are not covered under this warranty.

Proof of purchase (dated register receipt) is required for warranty claims.

Warranty (continued)

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team below.

Contact the Customer Service Team at 1-866-391-4868 or visit www.bjifurniture.com.

Care and Maintenance

- Do not allow water to build up in frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. DO NOT use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients can cause discoloration or have adverse reaction to your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.
- Cushions, slings, and/or an umbrella may be cleaned by hand with a solution of soap and water with a clean water rinse. Never machine wash as this will result in shrinking or damage. After cleaning, tip on end and allow to drip dry. Never use a commercial or home dryer to tumble dry fabric goods.
- Treat frames with liquid wax for maximum protection against UV rays and /or salty, damp air.
- Umbrella should be closed when not in use. Umbrella should be removed and stored in the event of wind, rain, hail, sleet, snow, or any other inclement weather. To prevent damage to your table, always use an umbrella base with your umbrella. Store indoors during winter months.
- Use and operation: To prolong the life of your outdoor furniture, cover when not in use. Store indoors during winter months.

Pre-Assembly

PLANNING ASSEMBLY

PLEASE READ COMPLETE USE AND CARE GUIDE PRIOR TO ASSEMBLY!

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a nonabrasive surface to avoid scratching. It takes about 45 minutes for three persons to complete all the assembly.



NOTE: More than one person may be required to complete the assembly of this product.

OBSERVE WEIGHT LIMITS

The recommended weight limit for each item is listed below:

- Swivel Rocker: 300lbs
- Dining Chair: 300lbs

HARDWARE INCLUDED






NOTE: Hardware not shown to actual size.



Part	Description	Quantity
AA	M8*40mm hex bolt	8
BB	M8 washer	16
CC	Lock washer	8
DD	M8 PE cap	8
EE	Nut	8
FF	Nut cap	8
GG	Steel plate	8
HH	Hex wrench	2

Pre-Assembly (continued)

   
PACKAGE CONTENTS

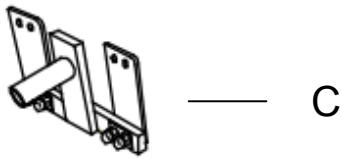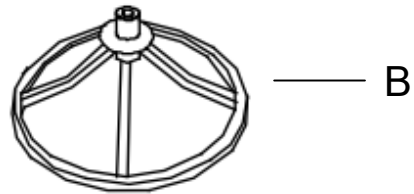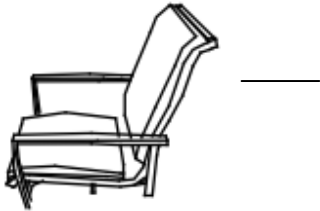

Part	Description	Quantity
A	Chair seat	2
B	Chair base	2
C	Stem bracket	2



 Safety Information



- EVERY BOLT NEEDS TO BE USED WITH A WASHER.
- DO NOT FULLY TIGHTEN BOLT UNTIL INDICATED IN **STEP 3**.


Assembly Instruction

1 Attaching the stem bracket



NOTE: Do not fully tighten the bolts.

 - Place the chair seat (A) on a soft, non-abrasive surface carefully.
- Attach the stem bracket (C) to the bottom of cross bar under the chair seat (A) by using M8 hex bolt (AA). Sequence should be M8 hex bolt (AA), M8 washer (BB), steel plate (GG), Chair seat (A), Stem bracket (C), steel plate (GG), M8 washer (BB), M8 lock washer (CC) and M8 nut (EE).
- Check the alignment and then tighten all the bolts and nuts with hex wrench (HH). Cover the bolts with M8 PE caps (DD) and cover all nuts with M8 nut caps (FF).



— AAX 4



— BB X 8



— CCX 4



— DDX 4



— EEX 4



 
— FF X 4



— GGX 4




— HHX 2

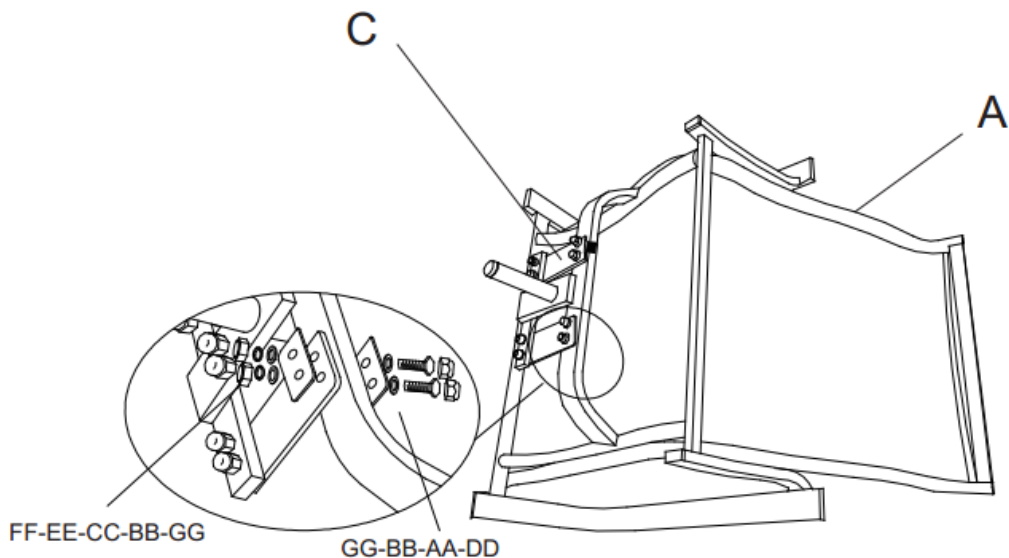

Assembly Instruction (continued)

2 Inserting the chair bucket

 - Place the chair base (B) on a flat surface and align the stem under the seat frame with the hole on the base. Push down firmly to connect both pieces. Make sure the seat bottoms out in the base for safety.

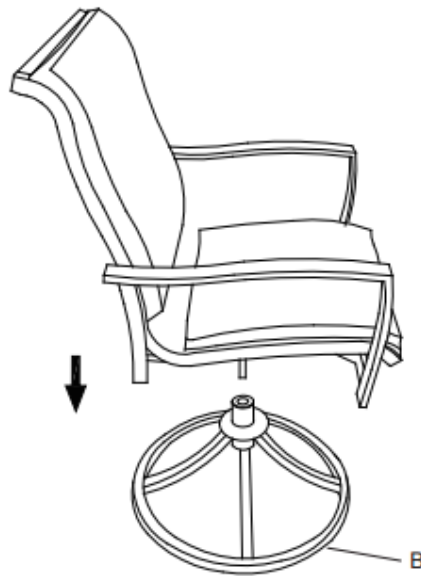

sears

Please refer to part number when reordering

Questions, problems, missing parts? Before returning to the store,
call our Customer Service

8 a.m. - 5 p.m., EST, Monday-Thursday

8 a.m. – 4 p.m., EST, Friday

1-866-391-4868

Made in/ Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL60179

 
See our extensive assortment of outdoor living products on-line

at www.sears.com and www.kmart.com

Retain this manual for future use.



Live life Comfortably.™

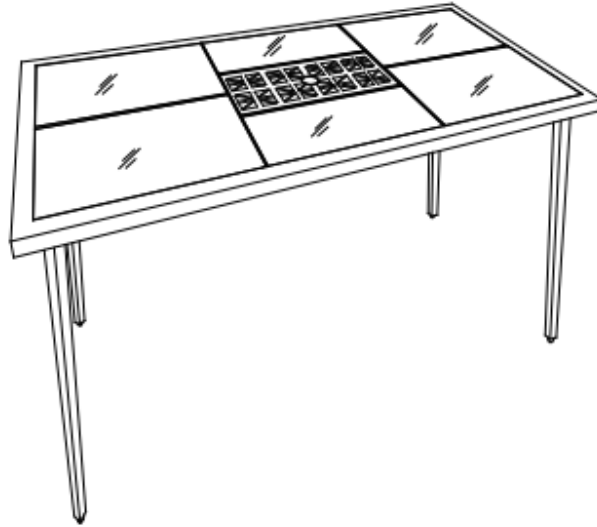

USE AND CARE GUIDE

Sears Lucas 7Pc Dining Set

*Dining Table

Product Code: D71 M34951

UPC Code: 7-22938-10463-5

Date of Purchase: __ / __ / __

La-Z-Boy® is a registered trademark of La-Z-Boy Incorporated and is used under license to BJI, Inc.

© 2015 La-Z-Boy Incorporated.

Thank you for your purchase

THANK YOU FOR YOUR PURCHASE!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents	2
Safety Information	3
Set up your furniture properly.....	3
Examine your furniture.....	3
Warranty	3
What is covered	3
What is not covered	3
Care and Maintenance	4
Pre-Assembly	5
Planning assembly.....	5
Observe weight limits.....	5
Hardware included.....	5
Package contents	6
Assembly Instruction	7
Customer Service	9

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.

**WARNING:**

1. Do not crawl, stand, or sit on table tops.
2. Do not set or lay heavy items on table tops.
3. Avoid extreme hot & cold items being placed on table tops.

EXAMINE YOUR FURNITURE

- Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!

Warranty

THIS IS A RESIDENTIAL WARRANTY AND DOES NOT APPLY FOR COMMERCIAL USE.

7 YEARS WARRANTY FOR FRAME, 1 YEAR WARRANTY FOR CUSHIONS

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for 7 years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center.

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use.

Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.

Glass table top breakage and corrosion or rusting of hardware are not covered.

Warranty (continued)

In addition, purchase parts are not covered under this warranty.

Proof of purchase (dated register receipt) is required for warranty claims.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team below.

Contact the Customer Service Team at 1-866-391-4868 or visit www.bjjfurniture.com.

Care and Maintenance

- Do not allow water to build up in frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. DO NOT use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients can cause discoloration or have adverse reaction to your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.
- Cushions, slings, and/or an umbrella may be cleaned by hand with a solution of soap and water with a clean water rinse. Never machine wash as this will result in shrinking or damage. After cleaning, tip on end and allow to drip dry. Never use a commercial or home dryer to tumble dry fabric goods.
- Treat frames with liquid wax for maximum protection against UV rays and /or salty, damp air.
- Umbrella should be closed when not in use. Umbrella should be removed and stored in the event of wind, rain, hail, sleet, snow, or any other inclement weather. To prevent damage to your table, always use an umbrella base with your umbrella. Store indoors during winter months.
- Use and operation: To prolong the life of your outdoor furniture, cover when not in use. Store indoors during winter months.

Pre-Assembly

PLANNING ASSEMBLY

PLEASE READ COMPLETE USE AND CARE GUIDE PRIOR TO ASSEMBLY!

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a nonabrasive surface to avoid scratching. It takes about 45 minutes for 3 persons to complete all the assembly.



NOTE: More than one person may be required to complete the assembly of this product.

OBSERVE WEIGHT LIMITS

The recommended weight limit for each item is listed below:

- Stationary dining chair: 300lbs
- Swivel rocker: 300lbs

HARDWARE INCLUDED



 
NOTE: Hardware not shown to actual size.



Part	Description	Quantity
AA	M6*20mm Hex Bolt	16
BB	M6 washer	16
CC	M6 PE cap	16
DD	Hex wrench	1

Pre-Assembly (continued)


PACKAGE CONTENTS

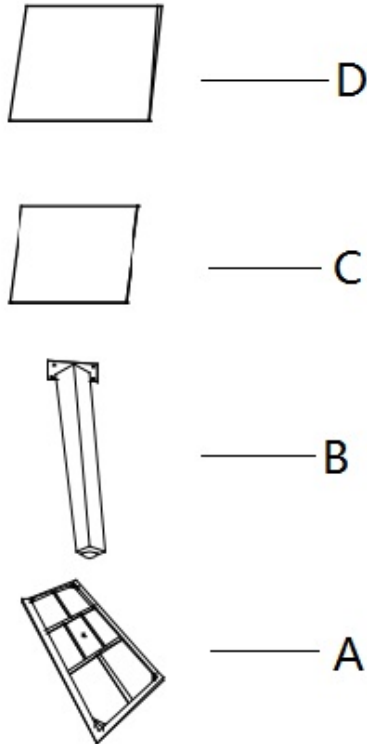

Part	Description	Quantity
A	Table rim	1
B	Table leg	4
C	Tile in small size	2
D	Tile in large size	4



 Safety Information




- EVERY BOLT NEEDS TO BE USED WITH A WASHER.
- DO NOT FULLY TIGHTEN BOLT UNTIL INDICATED IN **STEP 1**.

Assembly Instruction

1 Attaching the table rim

 - Carefully place the table rim (A) upside down on a soft, flat and non-abrasive surface.
- Attach the leg (B) to the table rim (A) using hex bolt (AA) and washers (BB).
- Tighten all M6 hex bolts (AA) with the hex wrench (DD). Attach the M6 PE caps (CC).

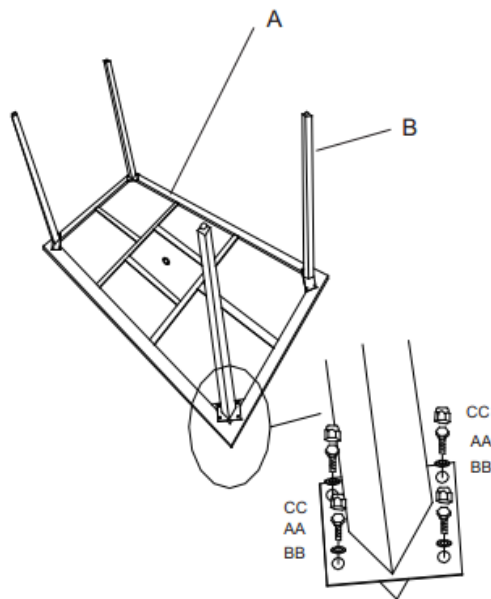

Assembly Instruction (continued)

 
2 Replacing the ceramic tile top

WARNING:



1. Do not crawl, stand, or sit on tile table tops.
2. Do not set or lay heavy items on tile table tops.
3. Avoid extreme hot & cold items being placed on tile table tops.

- With the assistance of another person carefully turn the table over and set it down on its legs.
- Place the tile top (C) & (D) onto the table.
- The dining table is ready for your enjoyment.

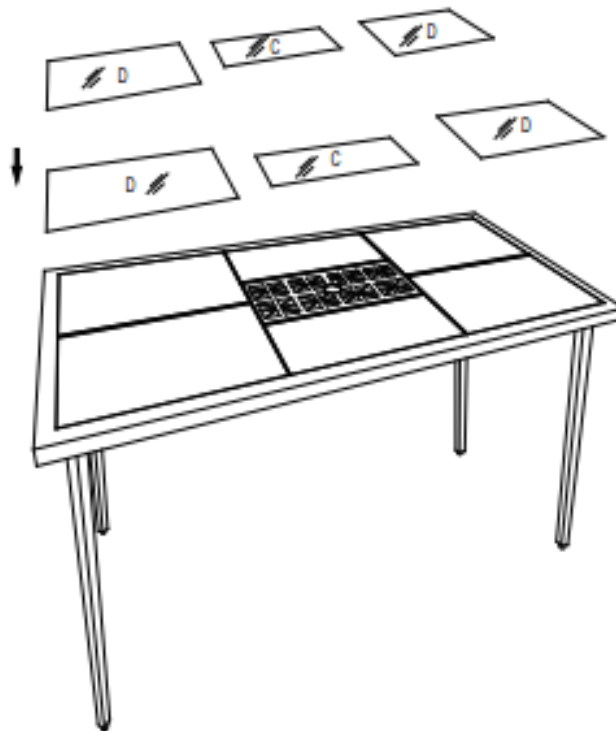

sears

Please refer to part number when reordering

Questions, problems, missing parts? Before returning to the store,
call our Customer Service

8 a.m. - 5 p.m., EST, Monday-Thursday

8 a.m. – 4 p.m., EST, Friday

1-866-391-4868

Made in/ Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL60179

See our extensive assortment of outdoor living products on-line

at www.sears.com and www.kmart.com

Retain this manual for future use.