 




*Live life Comfortably.™*

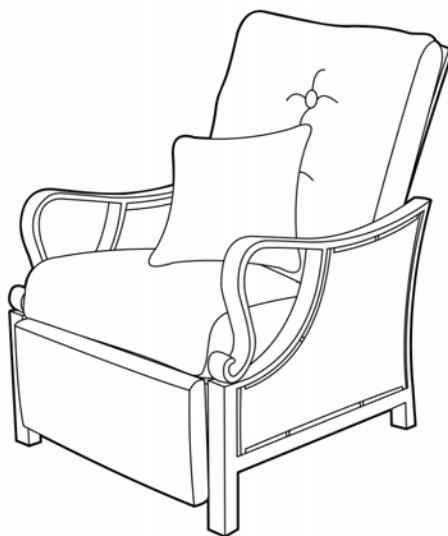

# USE AND CARE GUIDE

## Sears Peyton Recliner

Product Code: D71 M80901

UPC Code: 7-22938-07946-9

Date of Purchase: \_\_ / \_\_ / \_\_

La-Z-Boy® is a registered trademark of La-Z-Boy Incorporated and is used under license to BJI, Inc.

© 2015 La-Z-Boy Incorporated.

# Thank you for your purchase

---

## THANK YOU FOR YOUR PURCHASE!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

## Table of Contents

---

<b>Table of Contents.....</b>	<b>2</b>
<b>Safety Information .....</b>	<b>3</b>
Set up your furniture properly.....	3
Examine your furniture .....	3
<b>Warranty .....</b>	<b>3</b>
What is covered .....	3
What is not covered .....	3
<b>Care and Maintenance .....</b>	<b>4</b>
<b>Pre-Assembly .....</b>	<b>5</b>
Planning assembly.....	5
Observe weight limits .....	5
Package contents .....	6
<b>Assembly Instruction .....</b>	<b>7</b>
<b>Customer Service .....</b>	<b>10</b>

## Safety Information

### SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.

### EXAMINE YOUR FURNITURE

- Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.



**WARNING:** Keep hands away from the internal frame parts.



**CAUTION:** Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!



#### **DANGER:**

- This product has many moving parts, serious injury can occur if not used properly. Keep hands, fingers and body parts away from the mechanism. To reduce the risk of head entrapment and other injuries, keep children and pets away from openings and moving parts in and around furniture.
- Only the occupant should operate the unit. Never attempt to open the leg rest by pulling on it.
- Do not stand, sit or place extra weight on the arms, back or open leg rest.
- To safely exit the unit and prevent a tripping hazard bring the back upright and close the leg rest.
- Do not use this product if it is damaged. Do not use attachments or substitute parts.

## Warranty

**THIS IS A RESIDENTIAL WARRANTY AND DOES NOT APPLY FOR COMMERCIAL USE.**

**7 YEARS WARRANTY FOR FRAME, 1 YEAR FOR RESIN WICKER AND CUSHIONS**

### WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for 7 years, resin wicker for 1 year.

### WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center.

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use.

## Warranty (continued)

---

Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.

Glass table top breakage and corrosion or rusting of hardware are not covered.

In addition, purchase parts are not covered under this warranty.

Proof of purchase (dated register receipt) is required for warranty claims.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team below.

Contact the Customer Service Team at 1-866-391-4868 or visit [www.bjifurniture.com](http://www.bjifurniture.com).

## Care and Maintenance

---

- Do not allow water to build up in frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. DO NOT use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients can cause discoloration or have adverse reaction to your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.
- Cushions, slings, and/or an umbrella may be cleaned by hand with a solution of soap and water with a clean water rinse. Never machine wash as this will result in shrinking or damage. After cleaning, tip on end and allow to drip dry. Never use a commercial or home dryer to tumble dry fabric goods.
- Treat frames with liquid wax for maximum protection against UV rays and / or salty, damp air.
- Umbrella should be closed when not in use. Umbrella should be removed and stored in the event of wind, rain, hail, sleet, snow, or any other inclement weather. To prevent damage to your table, always use an umbrella base with your umbrella. Store indoors during winter months.
- Use and operation: To prolong the life of your outdoor furniture, cover when not in use. Store indoors during winter months.

# Pre-Assembly

---

## PLANNING ASSEMBLY

PLEASE READ COMPLETE USE AND CARE GUIDE PRIOR TO ASSEMBLY!

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a nonabrasive surface to avoid scratching. It takes about 15 minutes for 1 person to complete all the assembly.



**NOTE:** More than one person may be required to complete the assembly of this product.

 
## OBSERVE WEIGHT LIMITS

The recommended weight limit for each item is listed below:

- Recliner: 300 lbs

# Pre-Assembly (continued)

## PACKAGE CONTENTS

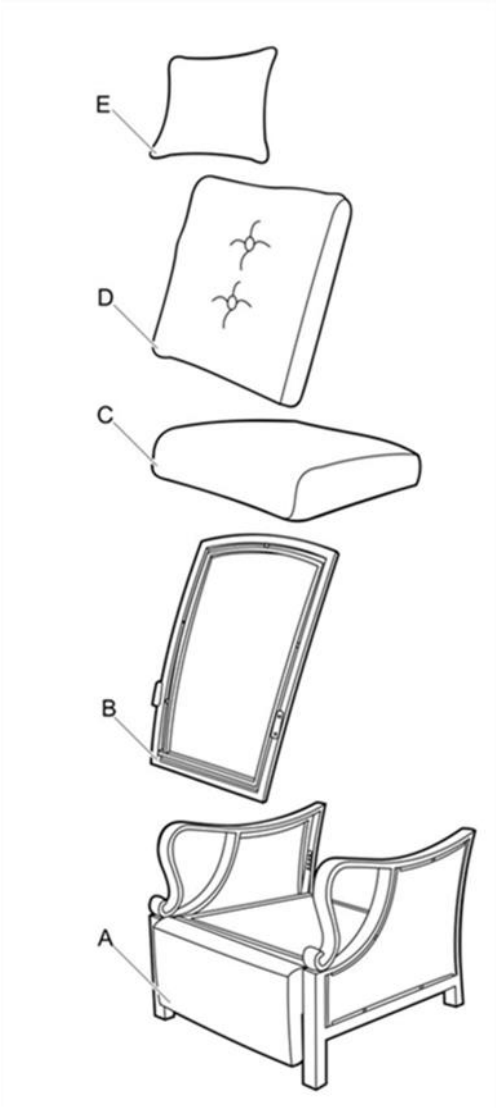


Part	Description	Quantity
A	Base Frame	1
B	Back Frame	1
C	Seat Cushion	1
D	Back Cushion	1
E	Toss Pillow	1

## Assembly Instruction
 
### 1 Attaching the back


- Place the back (B) at a slight angle and align the brackets on the back (B) with the brackets on the seat frame (A).
- Lower the back (B) onto the base frame (A), making sure the back (B) and seat frame (A) are completely engaged.
- To make sure the back (B) is properly installed with both sets of back and body brackets engaged, stand behind the chair and pull the back (B). If one or both sides move out of position the brackets are not engaged. Remove the back (B) and repeat the steps.

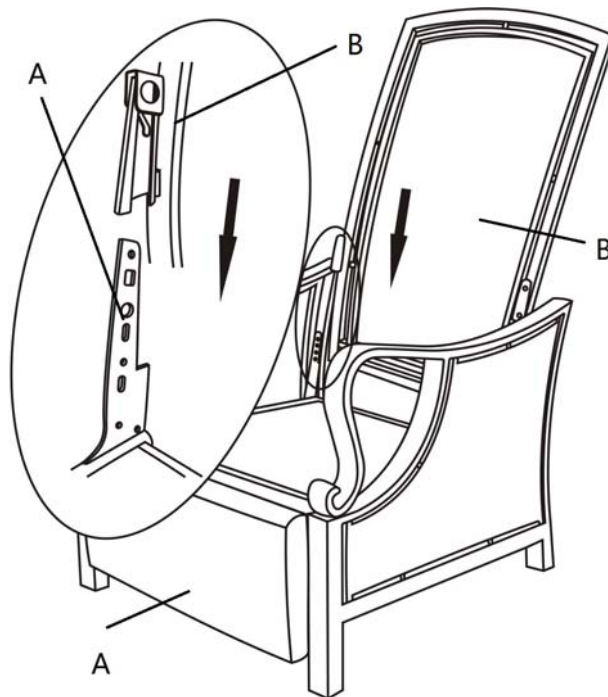

## Assembly Instruction (continued)

### 2 Adding the cushions

 - Place the seat cushion (C), back cushion (D), toss pillow (E) onto Recliner.
- Recliner is ready for your enjoyment.

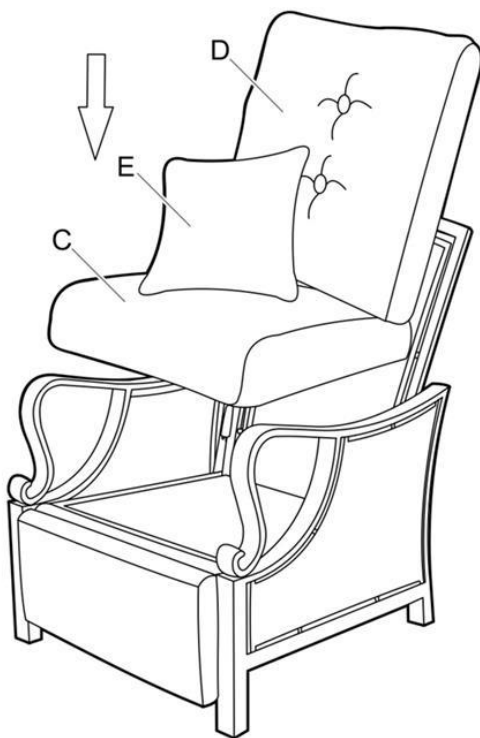



## Assembly Instruction (continued)

### 3 Operate the leg rest



**WARNING:**

Damage will occur to the mechanism if the leg rest is forced closed from the 2<sup>nd</sup> position. The leg rest must be returned to the 1<sup>st</sup> position and then closed.

- The recliner chair is equipped with a two-position locking leg rest for customized seating comfort. Simply put physical strength on the back and armrest to extend the recliner mechanism. You may stop in any one of two positions. The closed position is for relaxing reading (Figure 1). The 1<sup>st</sup> position is slightly inclined (Figure 2). The 2<sup>nd</sup> position is slightly more inclined (Figure 3).
- Bring the back upright by closing the leg rest before getting out of the unit.

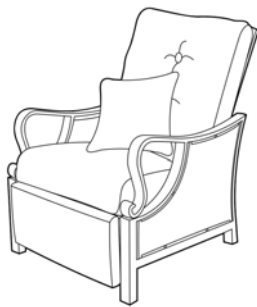 


Figure 1 (the closed position)



Figure 2 (the 1<sup>st</sup> position)

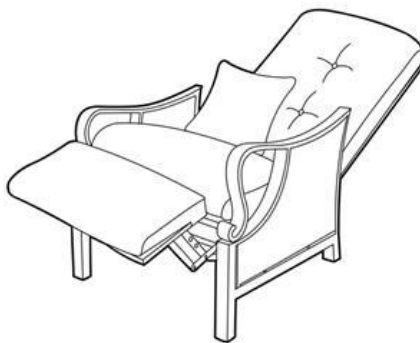 


Figure 3 (the 2<sup>nd</sup> position)



Please refer to part number when reordering

Questions, problems, missing parts? Before returning to the store,  
call our Customer Service

8 a.m. - 5 p.m., EST, Monday-Thursday

8 a.m. – 4 p.m., EST, Friday

**1-866-391-4868**

Made in/ Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL60179

See our extensive assortment of outdoor living products on-line  
at [www.sears.com](http://www.sears.com) and [www.kmart.com](http://www.kmart.com)

Retain this manual for future use.