 


---

# GRAND RESORT®

---

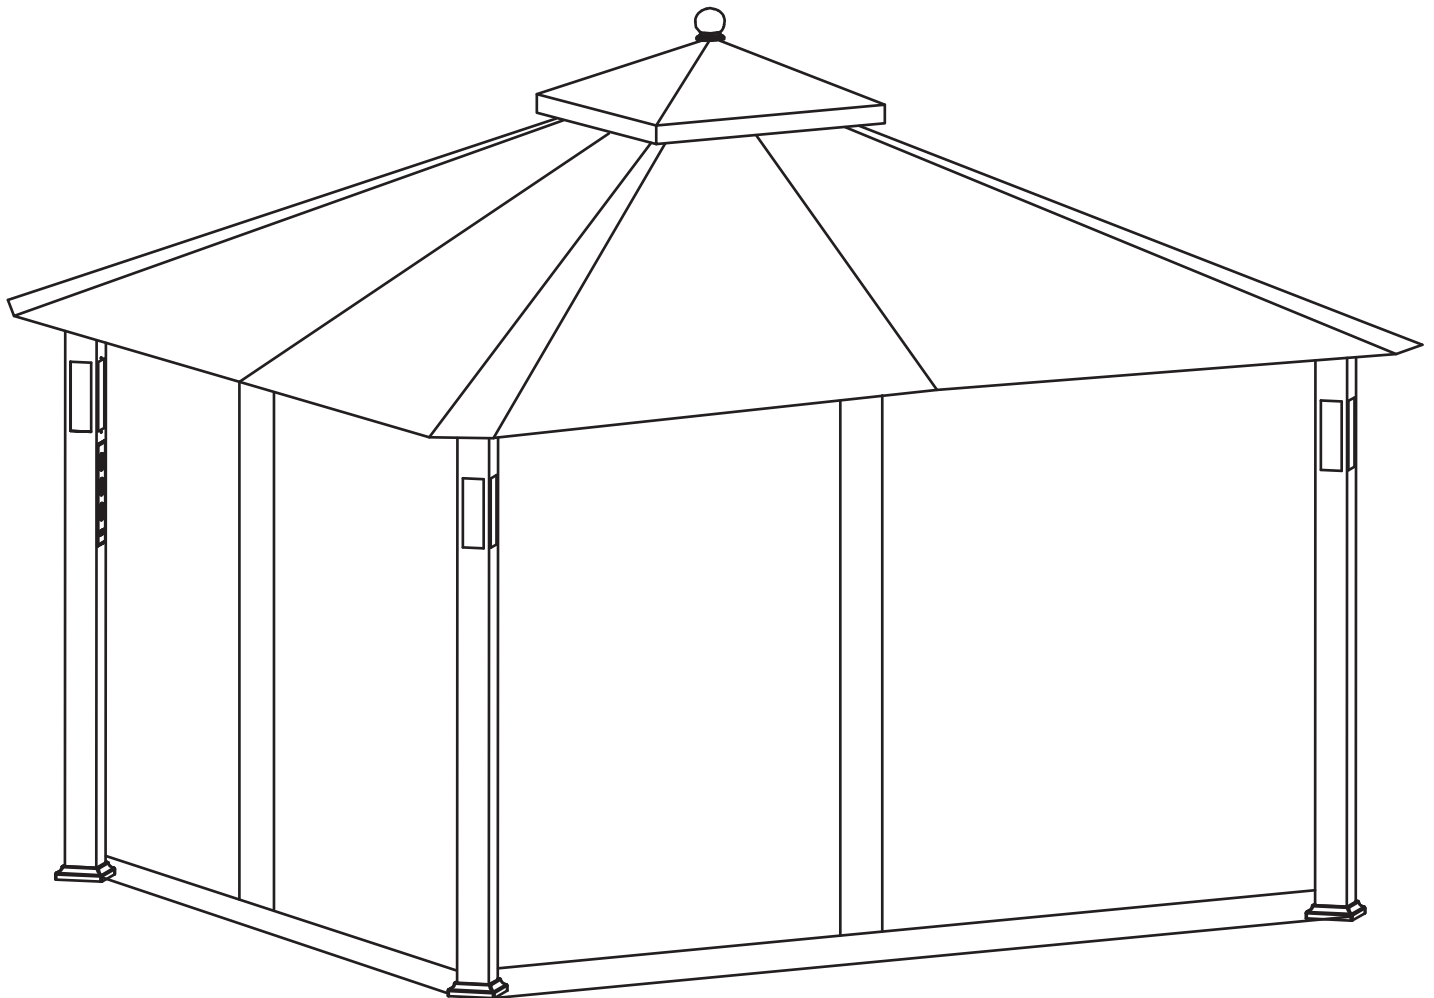

---

## Use and Care Guide

10 x 12 Lighted Gazebo with Top Quality Music

Product Code: D71 M20511

KSN: 0-08769304-0

UPC Code: 749241315923

Date of purchase: \_\_\_\_/\_\_\_\_/\_\_\_\_



# Thank you for your purchase

## Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

# Table of contents

<b>Table of Contents</b>	2
<b>Safety Information</b>	3
Set Up your Shelter Properly	3
Examine your Shelter	3
 <b>Warranty</b>	3
Excluded	3
Service Center	3
<b>Care and Maintenance</b>	4
 <b>Pre-Assembly</b>	5
Hardware Included	5
Package Contents	6
 <b>Assembly Instructions</b>	9
 <b>Customer Service</b>	35

## Safety Information

---

### SET UP YOUR SHELTER PROPERLY

- ☐ Please read and understand this entire manual before attempt to assemble, operate, or install the product.
- ☐ If any part is missing or damaged. Do not attempt to assemble the product.
- ☐ Two to four people are needed for assembly.
- ☐ In order to avoid damage to the gazebo and its components please use appropriate tools.
- ☐ Do not use the structure as support.
- ☐ Check all bolts on a regular basis to maintain the solidity of the structure.
- ☐ Keep instructions for future use.
- ☐ Approximate time: 1 – 2 hours

### EXAMINE YOUR SHELTER

- ☐ Examine occasionally to ensure there are no loose parts. If loose parts are found, they should be retightened immediately.

## Warranty

---

### 1 YEAR WARRANTY FOR FRAME AND FABRIC

Limited warranty is applicable on parts only. Warranty extends solely to the original purchaser who must offer original sales receipt for record.

### WHAT IS COVERED

Limited warranty is applicable on parts only. We warranty to the original purchase for one year limited from the date of purchase that the frame, fabric, speaker, audio controller LED light and AC adapter will be free from manufacturing defects.

### WHAT IS NOT COVERED

Product used for commercial, contract, or other non-residential purposes, or damage due to acts of nature, vandalism, misuse, or improper assembly is not covered. Corrosion or rusting of hardware is not covered. Warranty is to the original purchase and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued.

### SERVICE CENTER

The purchaser must contact our customer service center directly if this product is found to be defect in material or workmanship. The manufacturer, as its option, will repair or replace the defectives parts.

Please contact us via 1-800-961-9838, 9AM-5PM, Pacific Time Zone, Monday-Friday, or [customerservice@bondvast.com](mailto:customerservice@bondvast.com)

## Care and Maintenance

---

- ❑ For cleaning, use a mild detergent solution and rinse with water. Do not use acetone abrasive or others special detergents to clean and air dry only.
- ❑ Due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.

## Warning

---

### **WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.**

The tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

### **SPECIAL CARE SHEET:**

Do NOT use the AC adapter during precipitation or inclement weather.

Do NOT leave the AC adapter outside, place and store in dry place.

Keep the AC adapter away from babies and children.

In order to protect the LED lights, do NOT break the Acryl panel of the post.

All lighting equipment is designed to prevent humidity and moisture, please do not disassemble.

Please always keep the speaker cover on the right position, the speaker is waterproof.

When NOT using period of time, please turn off the power switch and unplug the AC adapter.

Please connect all cables securely before plugging in power cable into power outlet.

All the parts are special design for this product only, changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacture will not be held liable for any direct, indirect, incidental or consequential damages.

## Pre-Assembly

### PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly.


Tools required for assembly (not included): Allen wrench (included), a screwdriver, stepladder (min. 5ft.) and other safety items such as gloves, safety eyewear, and hardhat. To avoid injury from exposed sharp edges, it may be necessary to use the above safety equipment.

Do not leave it unattended if not fully assembled even if bolted to the ground.


### HARDWARE INCLUDED




**NOTED:** Hardware not shown to actual size.

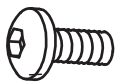

\_\_AA

 


\_\_BB

 

\_\_CC



 \_\_DD



\_\_EE




\_\_FF

Part	Description	Size	QTY.
AA	BOLT	(Φ 6 x 15mm)	56
BB	BOLT	(Φ 6 x 35mm)	16
CC	BOLT	(Φ 6 x 35mm)	12
DD	BOLT NUT		12
EE	SPANNER		1
FF	ALLEN WRENCH		1

  

 




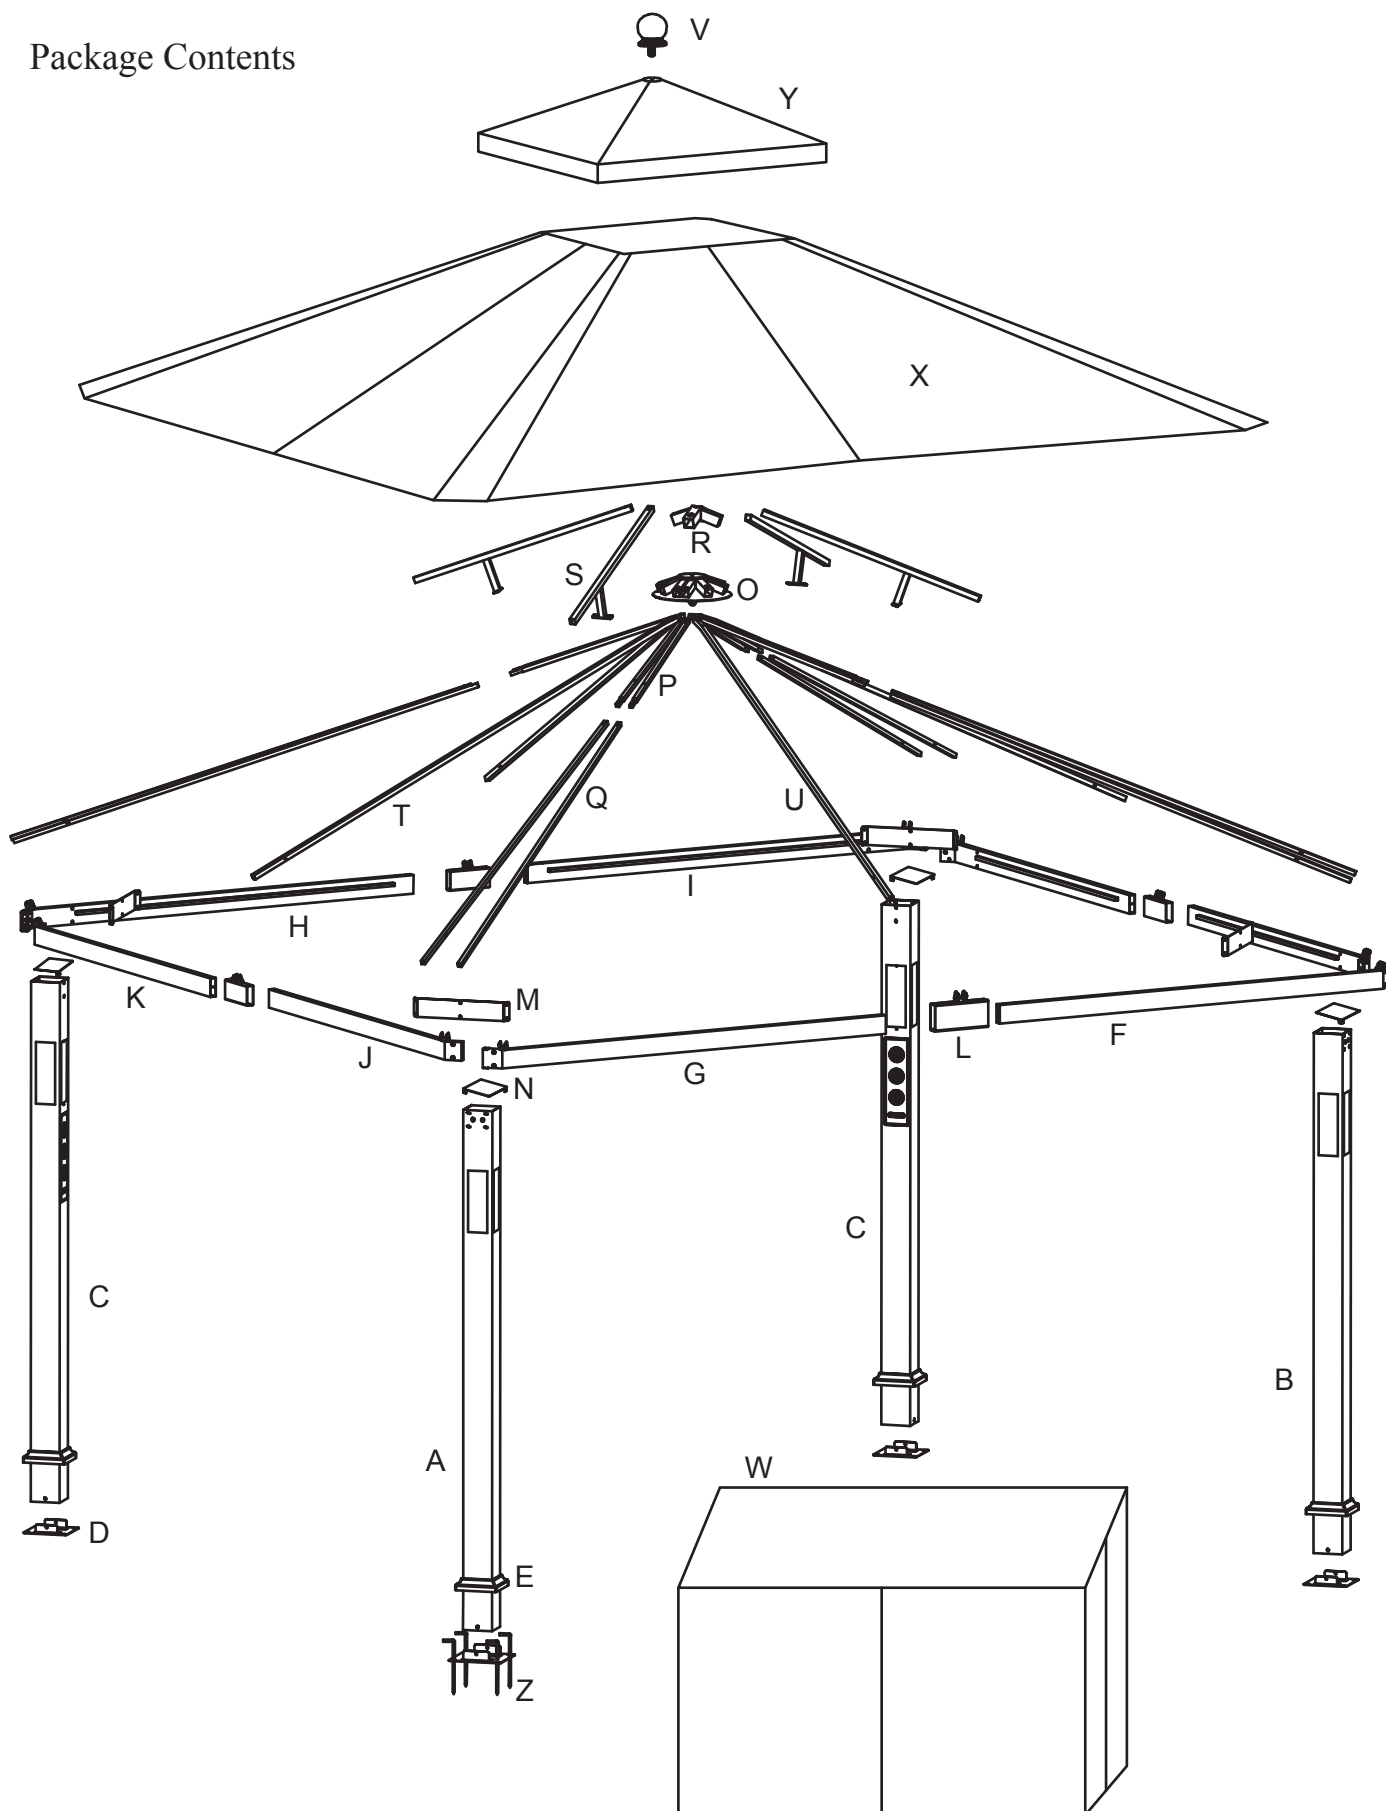



 
 
 

 



## Pre-Assembly (continued)

### Package Contents






 





## Pre-Assembly (continued)

### Package Contents

ITEM	DESCRIPTION	QTY.	ILLUSTRATION
A	POST A (WITH SWITCH, LIGHTS AND SPEAKER PREASSEMBLED)	1	
B	POST B (LIGHTS AND SPEAKER PREASSEMBLED)	1	
C	POST C (LIGHTS AND SPEAKER PREASSEMBLED)	2	
D	BASE FLANGE	4	
E	BASE CAP	4	
F	LONG CROSSBAR (WITH WIRES)	1	
G	LONG CROSSBAR (WITH WIRES)	1	
H	LONG CROSSBAR	1	
I	LONG CROSSBAR	1	
J	SHORT CROSSBAR (WITH WIRES)	2	
K	SHORT CROSSBAR (WITH WIRES)	2	
L	CENTER CONNECTOR	4	
M	FIXED PLATE	4	
N	POST UPPER CAP	4	
O	ROOF CONNECTOR	1	
P	2-TIER ROOF TUBE	8	
Q	ROOF TUBE	8	
R	2-TIER CENTER CONNECTOR	1	
S	AIR VENT TUBE	4	

## Pre-Assembly (continued)

  
### Package Contents

ITEM	DESCRIPTION	QTY.	ILLUSTRATION
T	LONG ROOF TUBE	2	
U	SHORT ROOF TUBE	2	
V	FINIAL	1	
W	NETTING	1	
X	CANOPY	1	
Y	AIR VENT COVER	1	
Z	STAKE	16	
AB	AC ADAPTER	1	
AC	CONNECTION WIRE	1	



## Assembly Instructions

 1. Insert Post (B) through Base Cap (E) into base Flange (D), and use Bolt (AA) to secure. Repeat this step for Post (A, C).

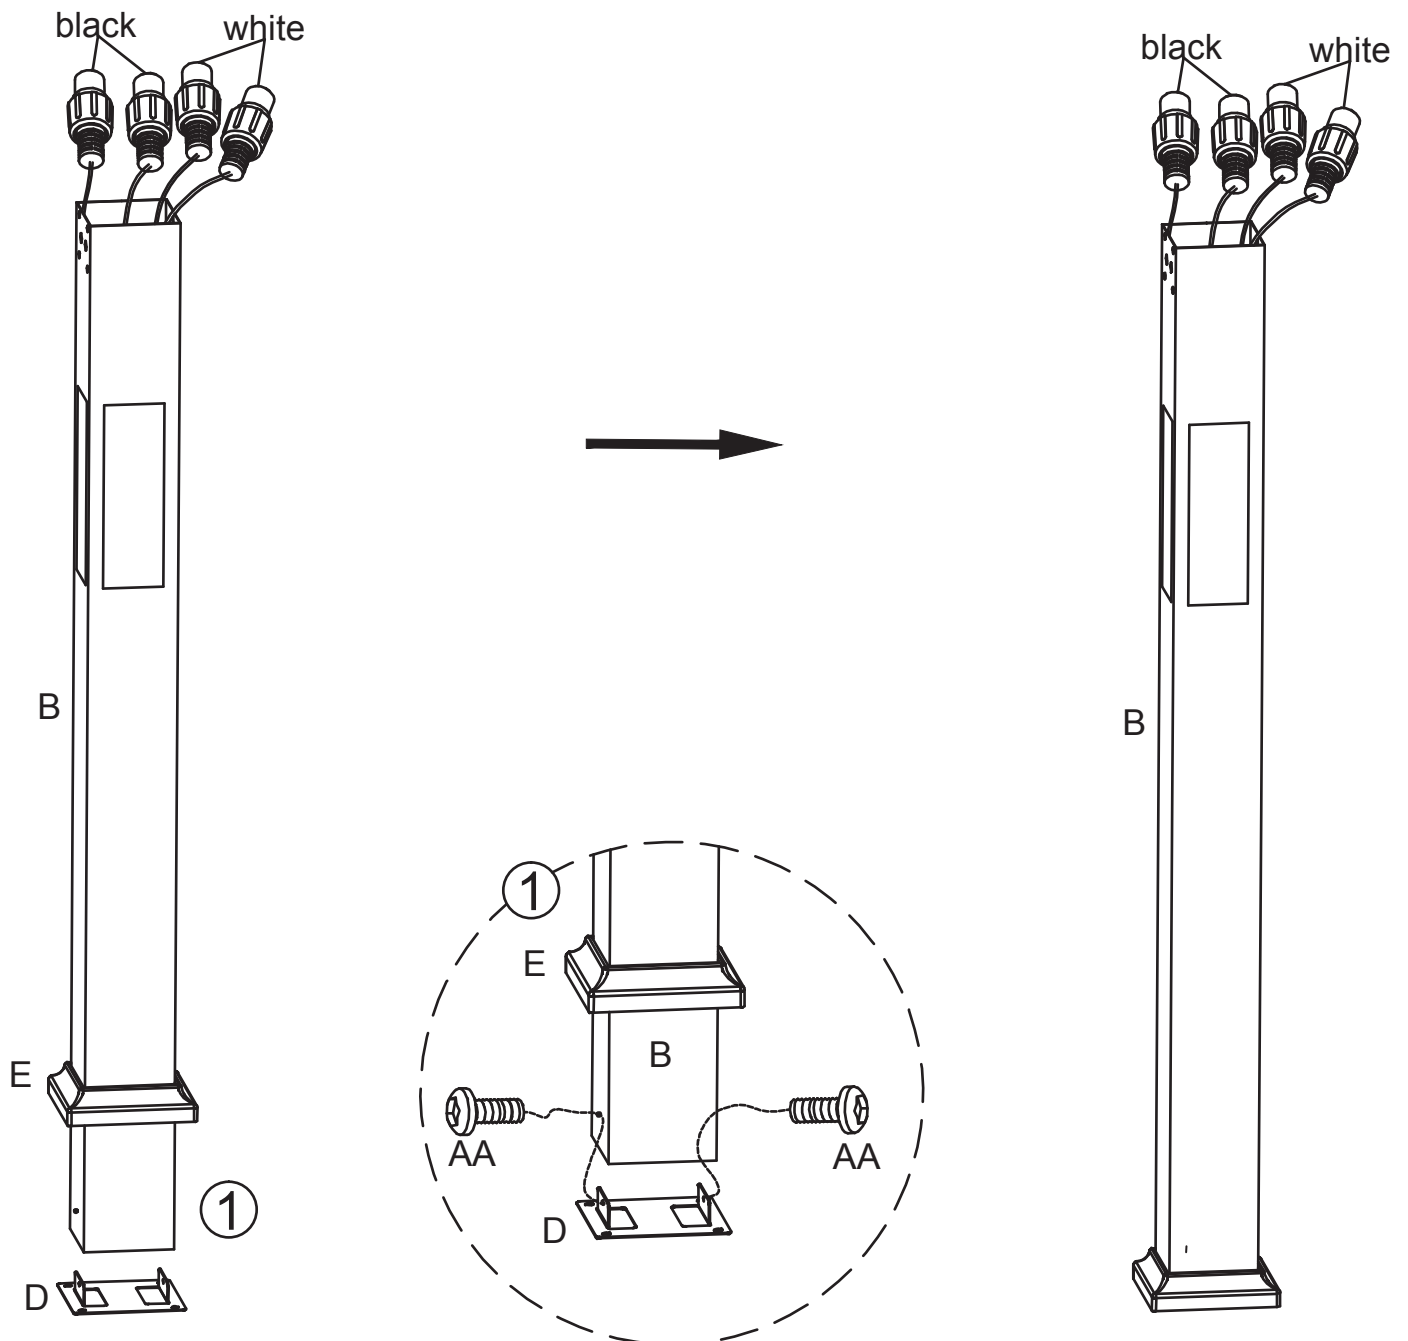


## Assembly Instructions

2. Insert Long Crossbar (F) into Center Connector (L) then connect wires in same color. Insert Long Crossbar (G) into Center Connector (L) then secure by Bolts (AA). Don't tighten bolts before complete this step assembly.



F x 1

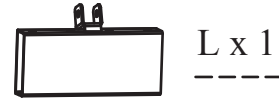


L x 1







G x 1



AA x 4

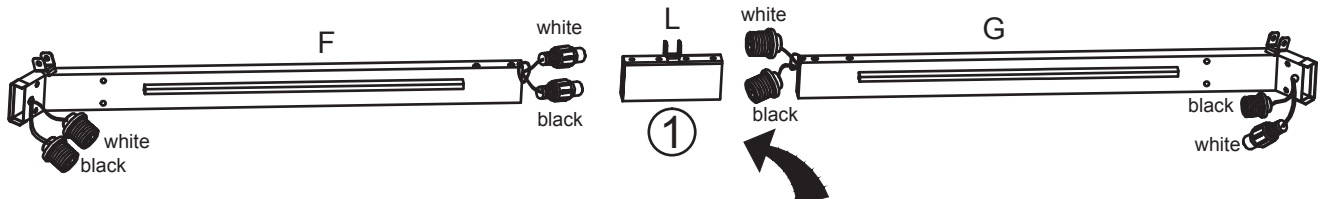

Warning: Please connect wires softly and slowly. And make sure two wires in same position.

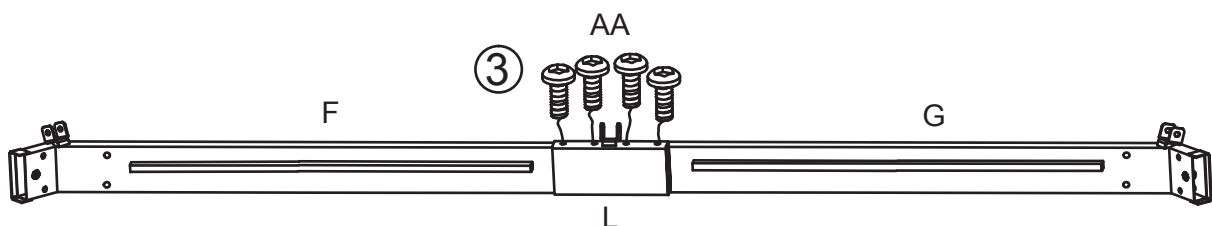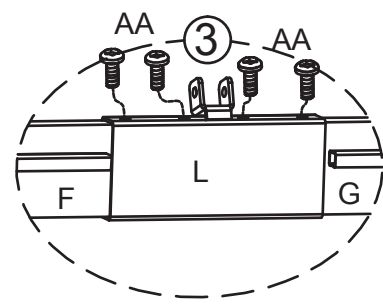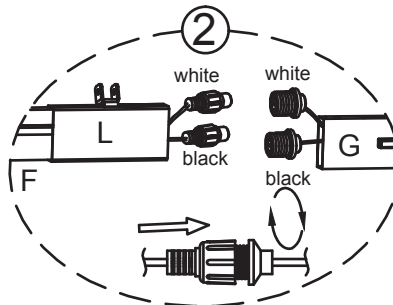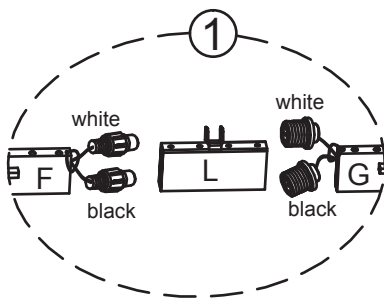


## Assembly Instructions

3. Insert Short Crossbar (J) into Center Connector (L) then connect wires in same color. Insert Short Crossbar (K) into Center Connector (L) then secure by Bolts (AA). Don't tighten bolts before complete this step assembly.



J x 2

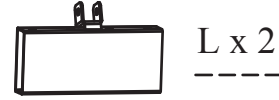


L x 2







K x 2



AA x 8



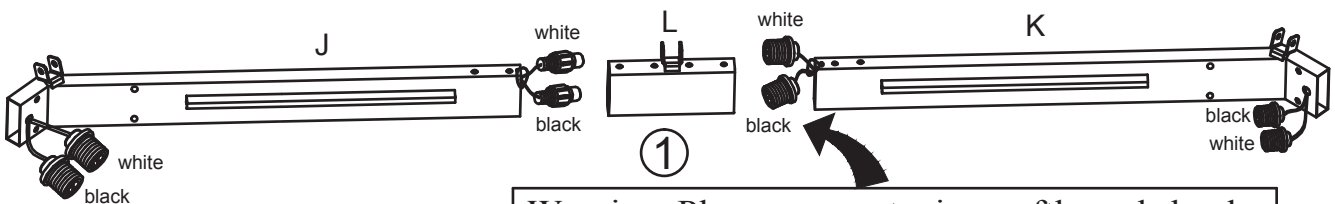


Warning: Please connect wires softly and slowly. And make sure two wires in same position.

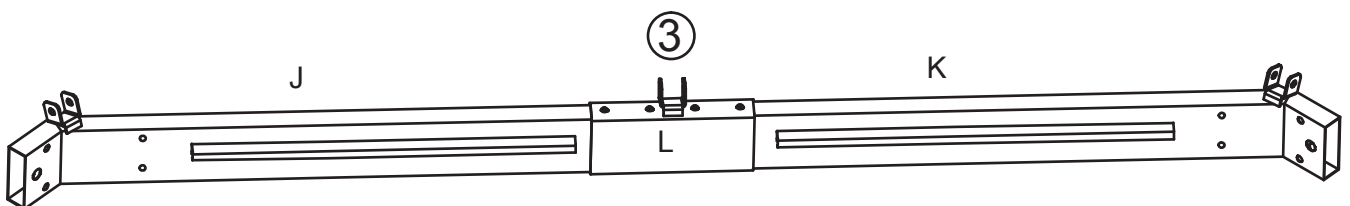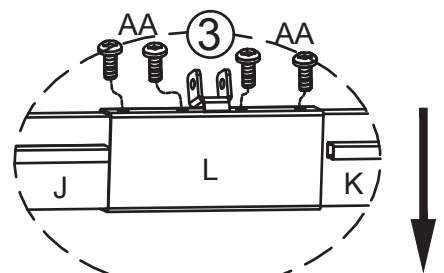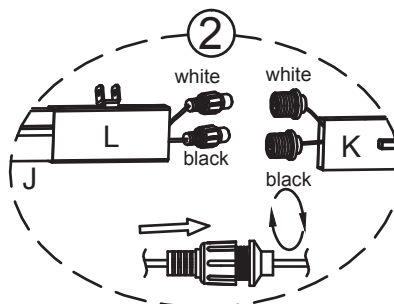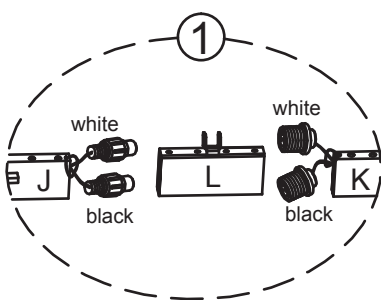



## Assembly Instructions

4. Insert Long Crossbar (H) into Center Connector (L).  
Insert Long Crossbar (I) into Center Connector (L) then secure by Bolts (AA).  
Don't tighten bolts before complete this step assembly.

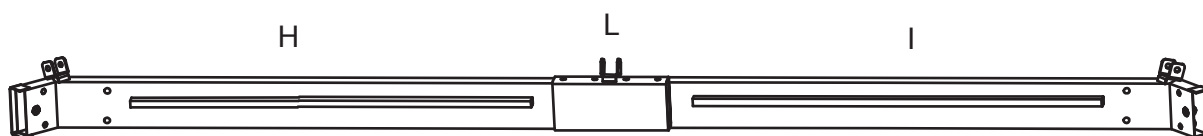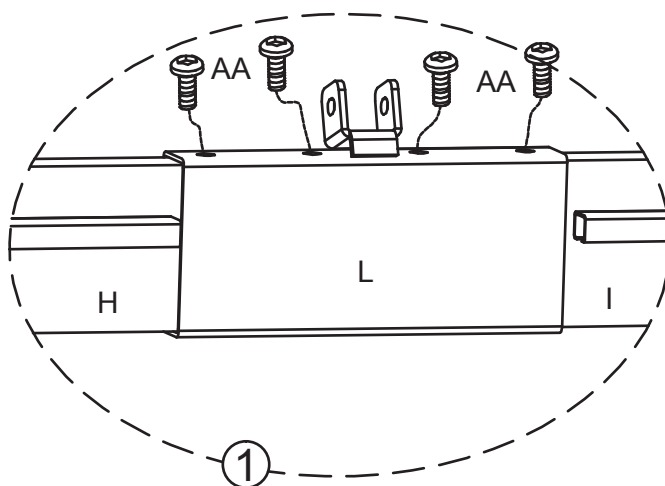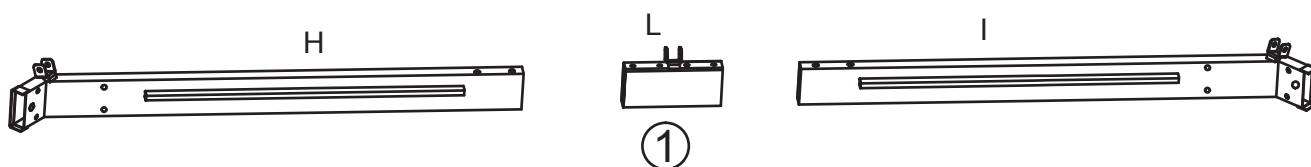


## Assembly Instructions

5. Insert wires on the two side of short crossbar into post A and C. Use Bolts (BB) secure Post (A, C) on the two side of Short Crossbar (J, K). Please check below fig. and make sure short crossbar in right direction. Don't tighten bolts before complete this step assembly.

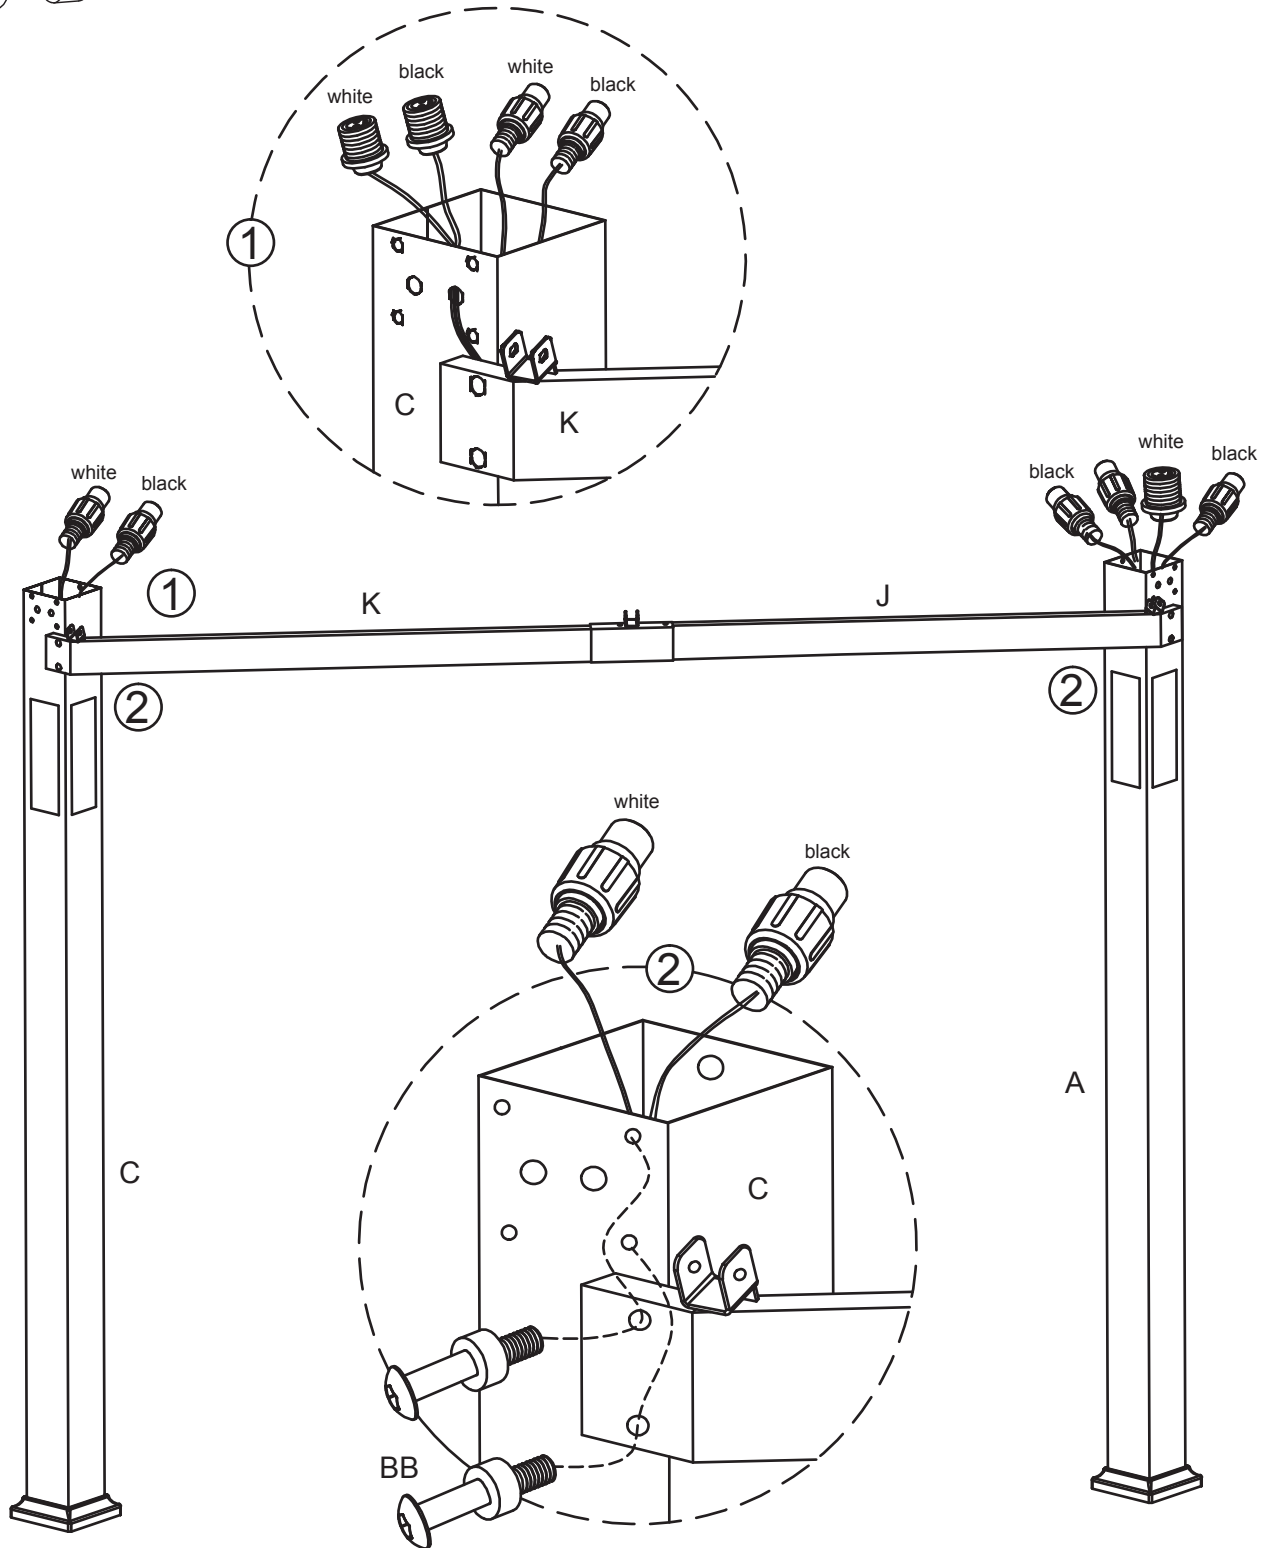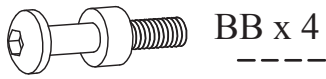



## Assembly Instructions

6. Insert wires on the two side of short crossbar into post B and C. Use Bolts (BB) secure Post (B, C) on the two side of Short Crossbar (J, K). Please check below fig. and make sure short crossbar in right direction. Don't tighten bolts before complete this step assembly.

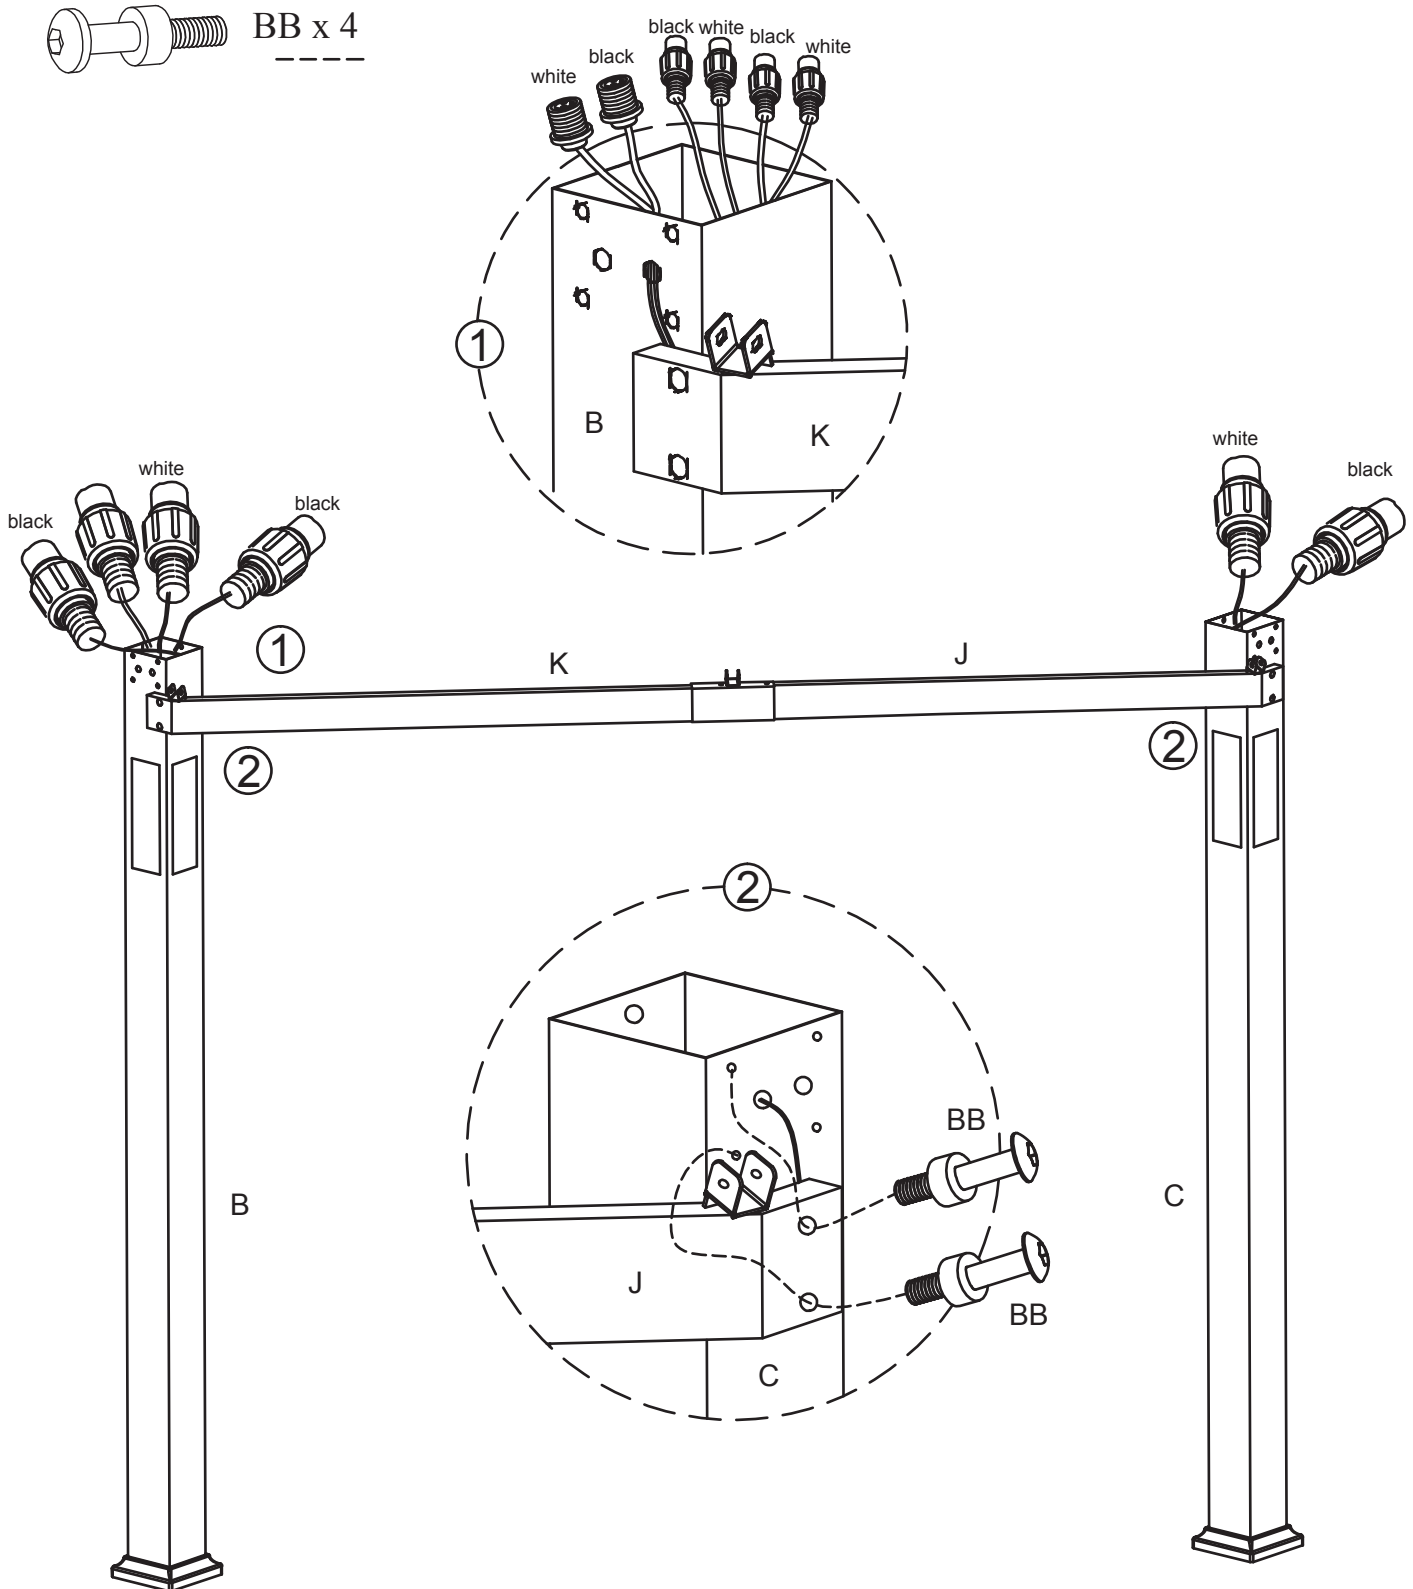


## Assembly Instructions

7. Insert wires on the two side of long crossbar into post A and B.  
Use Bolts (BB) secure Post (A, B, C) on the two side of Long Crossbar (F, G, I, J). Please check below fig. and make sure short crossbar in right direction.  
Don't tighten bolts before complete this step assembly.

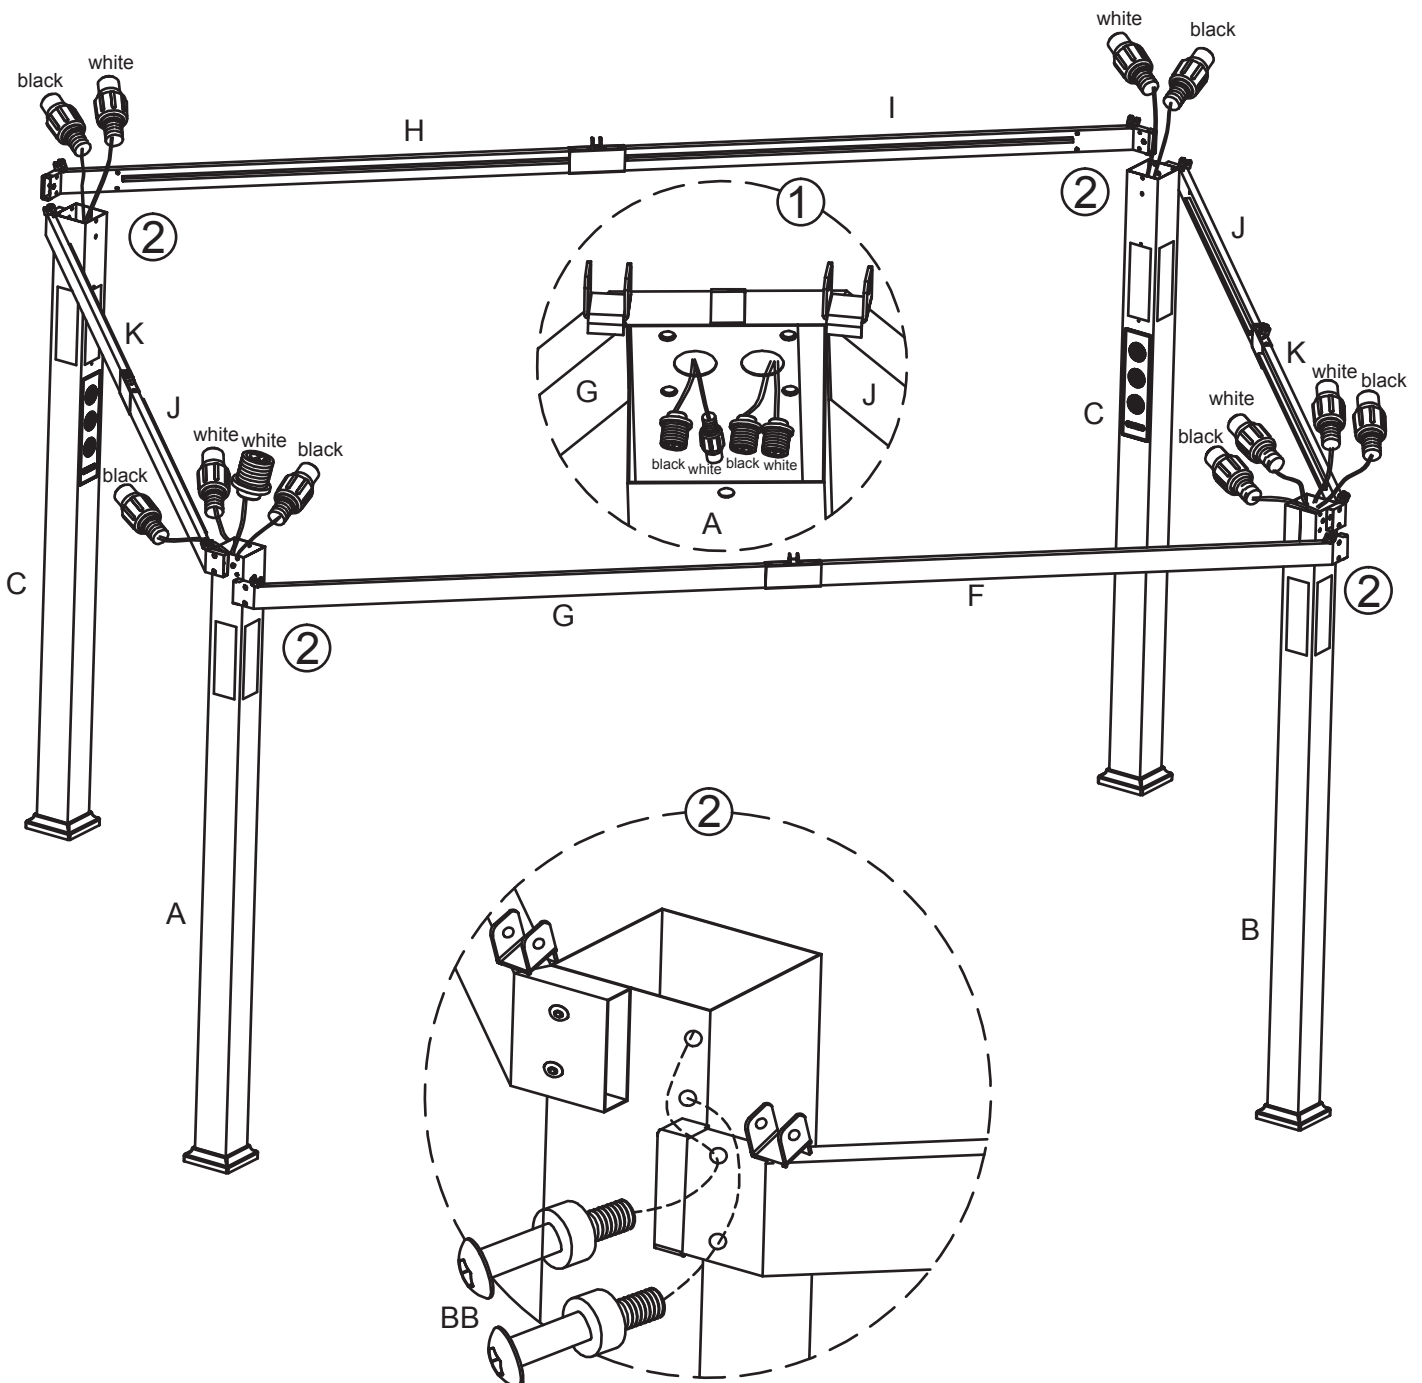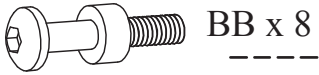

## Assembly Instructions


8. Use Bolts (AA) secure Fixed Plate (M) on the top of each post and crossbar. Then connect same color of wires together.

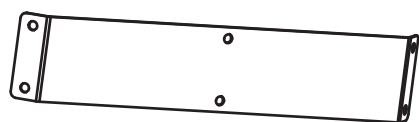

M x 4




AA x 24

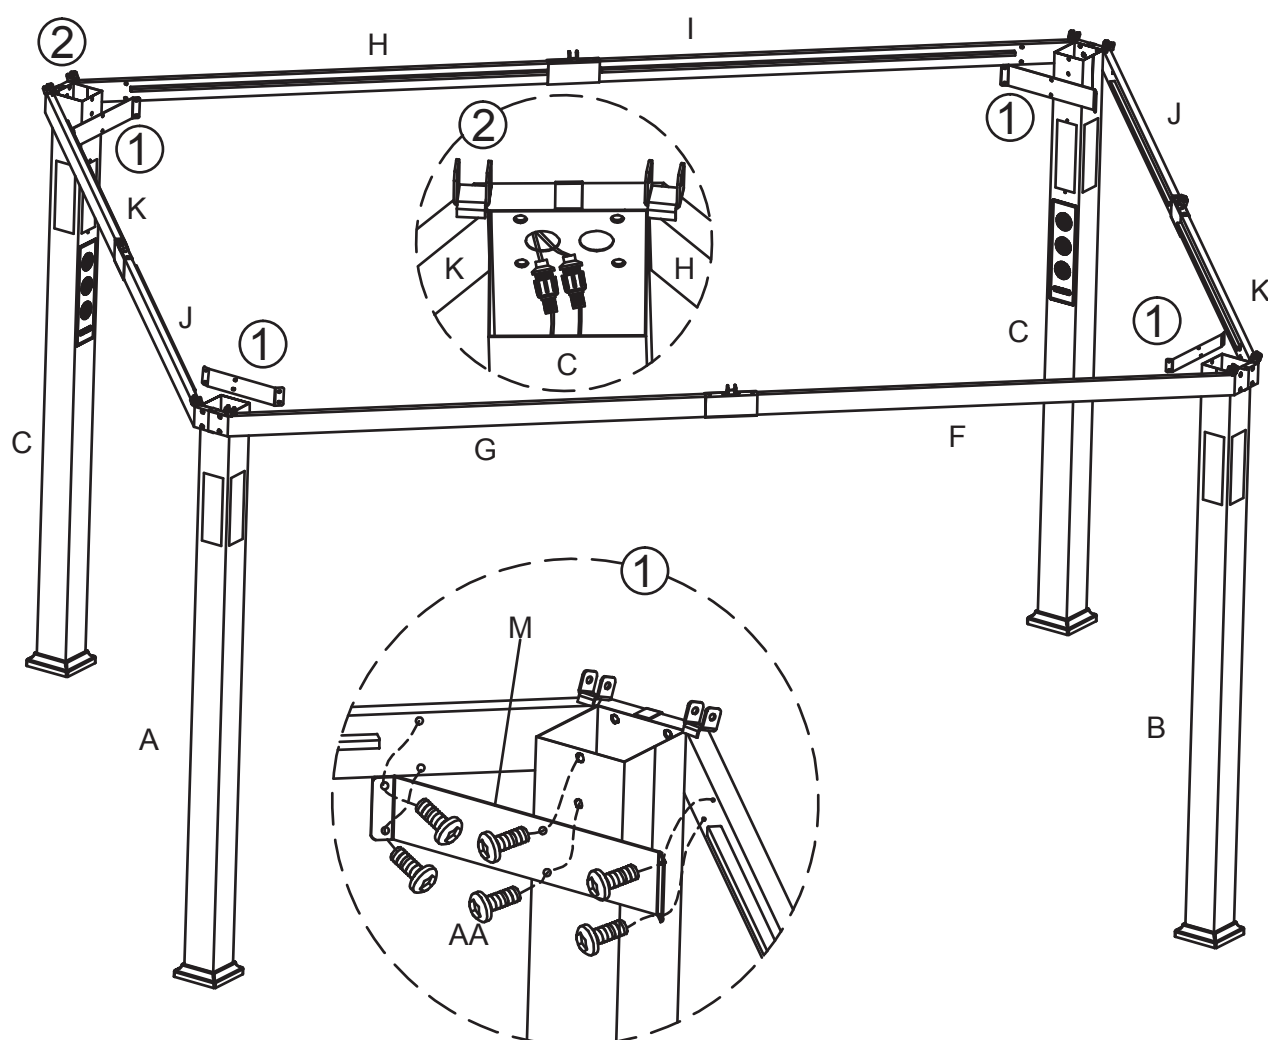




## Assembly Instructions

9. Connect AC Adapter and turn on the switch.

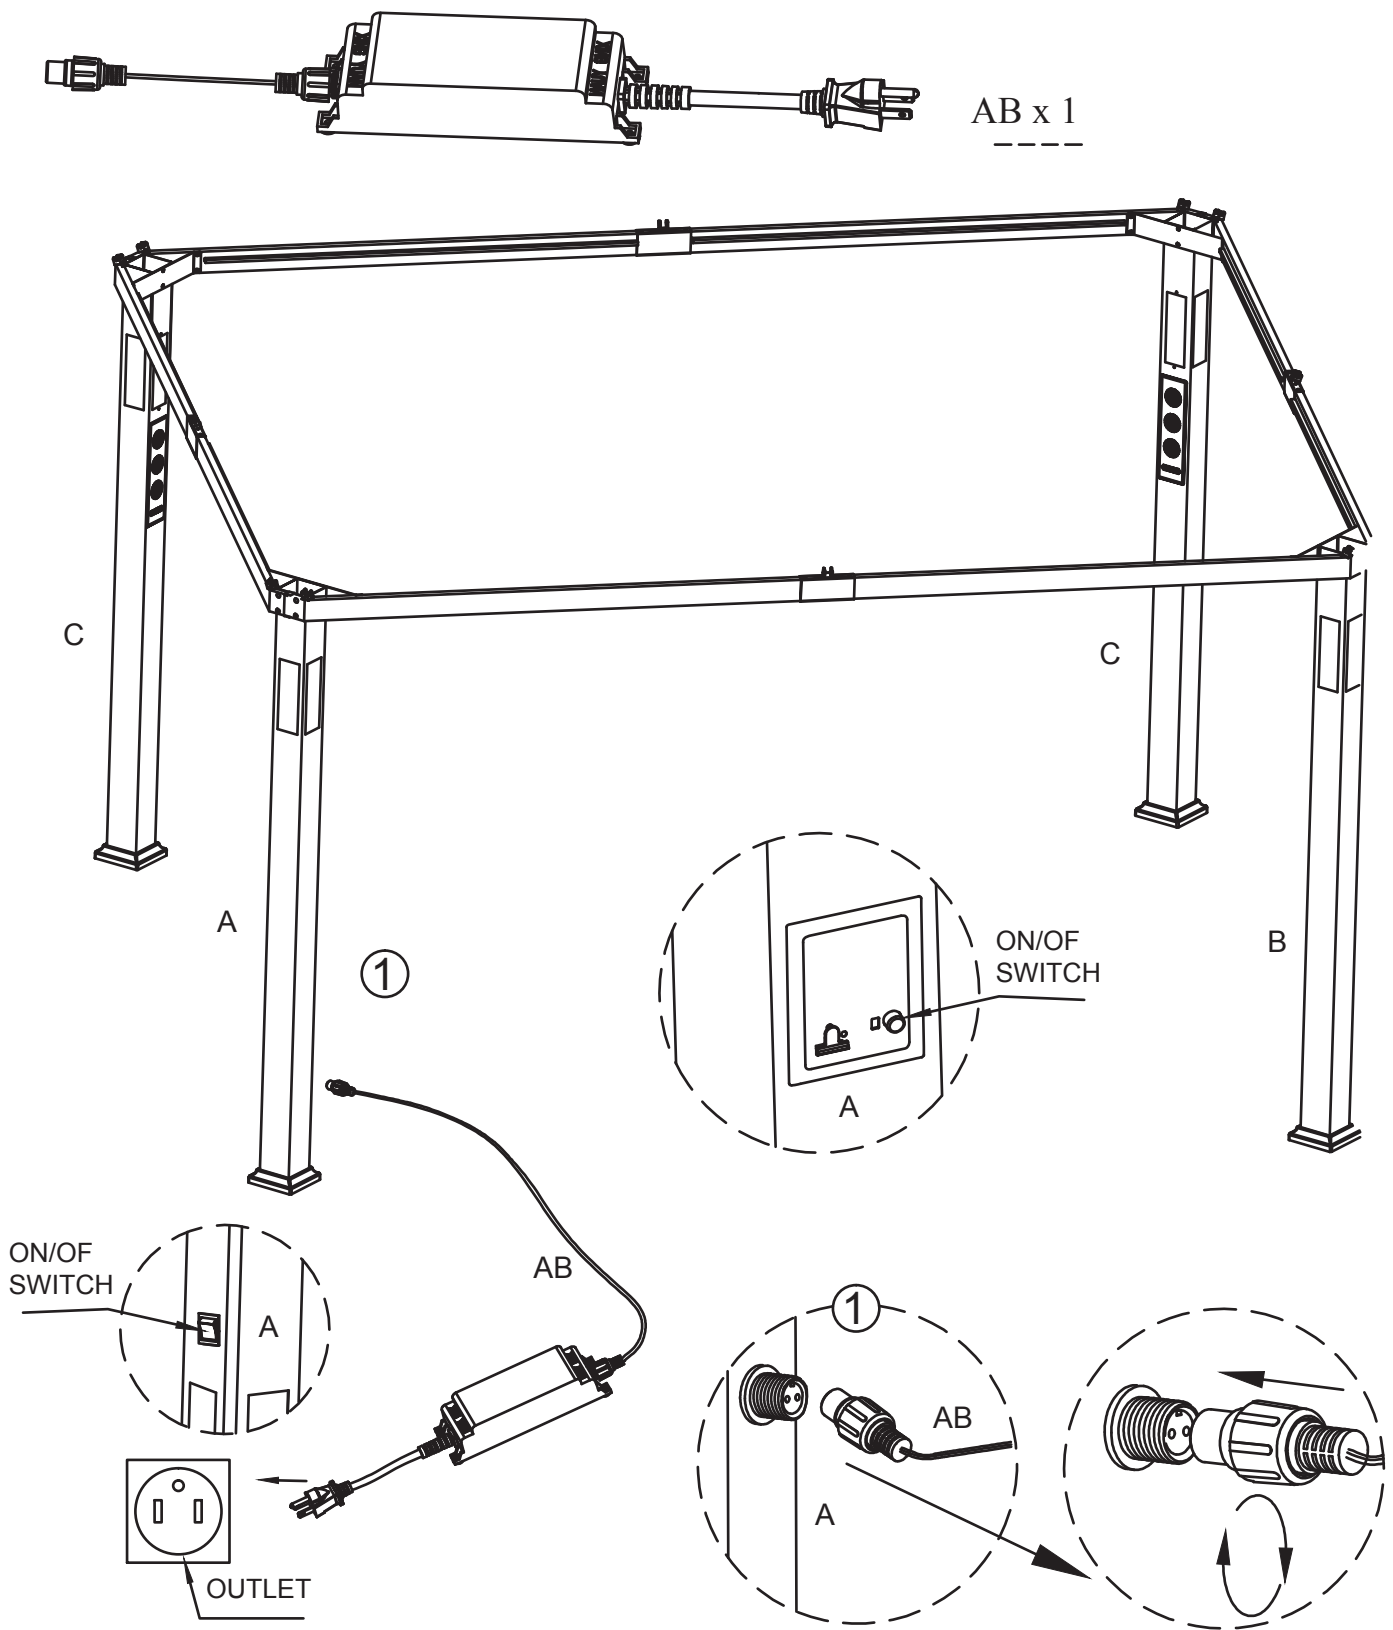


## Assembly Instructions

10. Place Post Upper Cap (N) on the top of each Post (A, B, C).



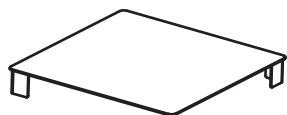


N x 4  
-----

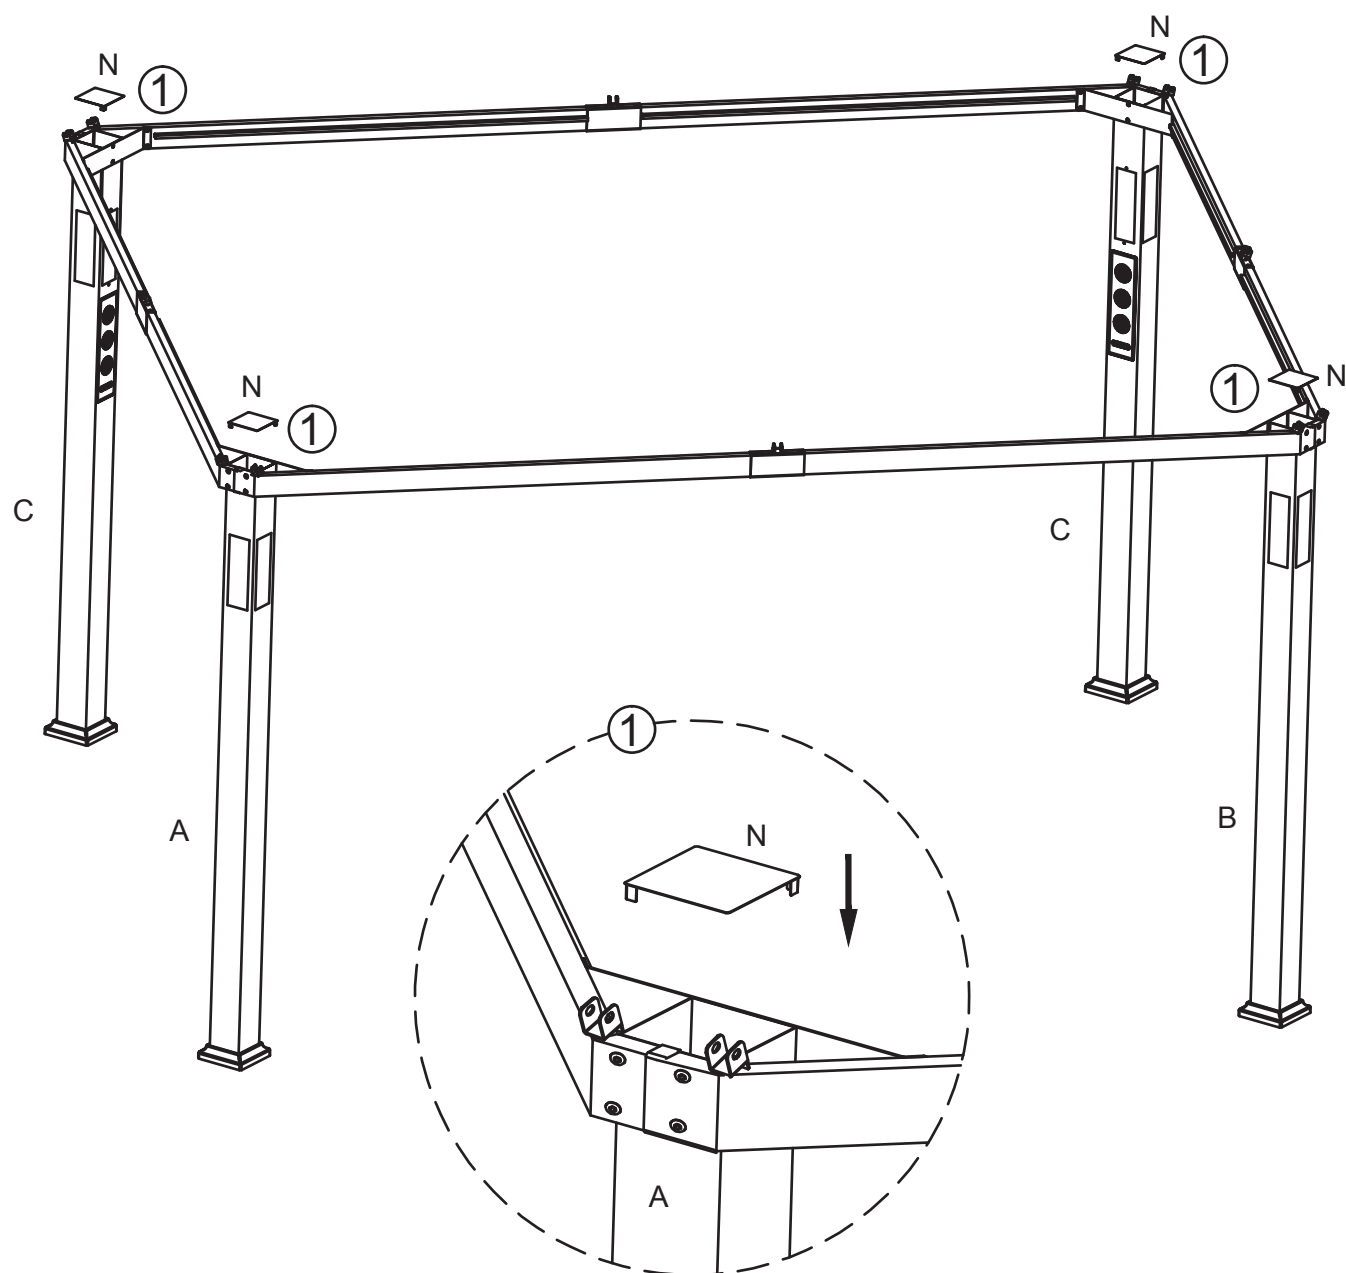


## Assembly Instructions

  **11.** Insert 2-tier Roof Tube (P) into Roof Tube (Q). Repeat this step for remaining tubes.

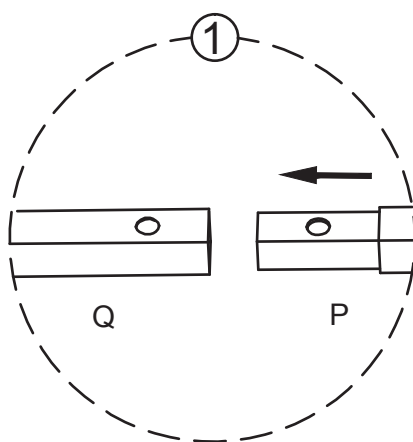


## Assembly Instructions

**12.** Insert 2-tier Roof Tube (P) into Roof Connector (O). Place Roof Tube (Q) on the top corner of post, the secure by Bolts (CC) with Bolt nuts (DD). Repeat this step for the remaining 2-tier Roof Tube and Roof Tube.

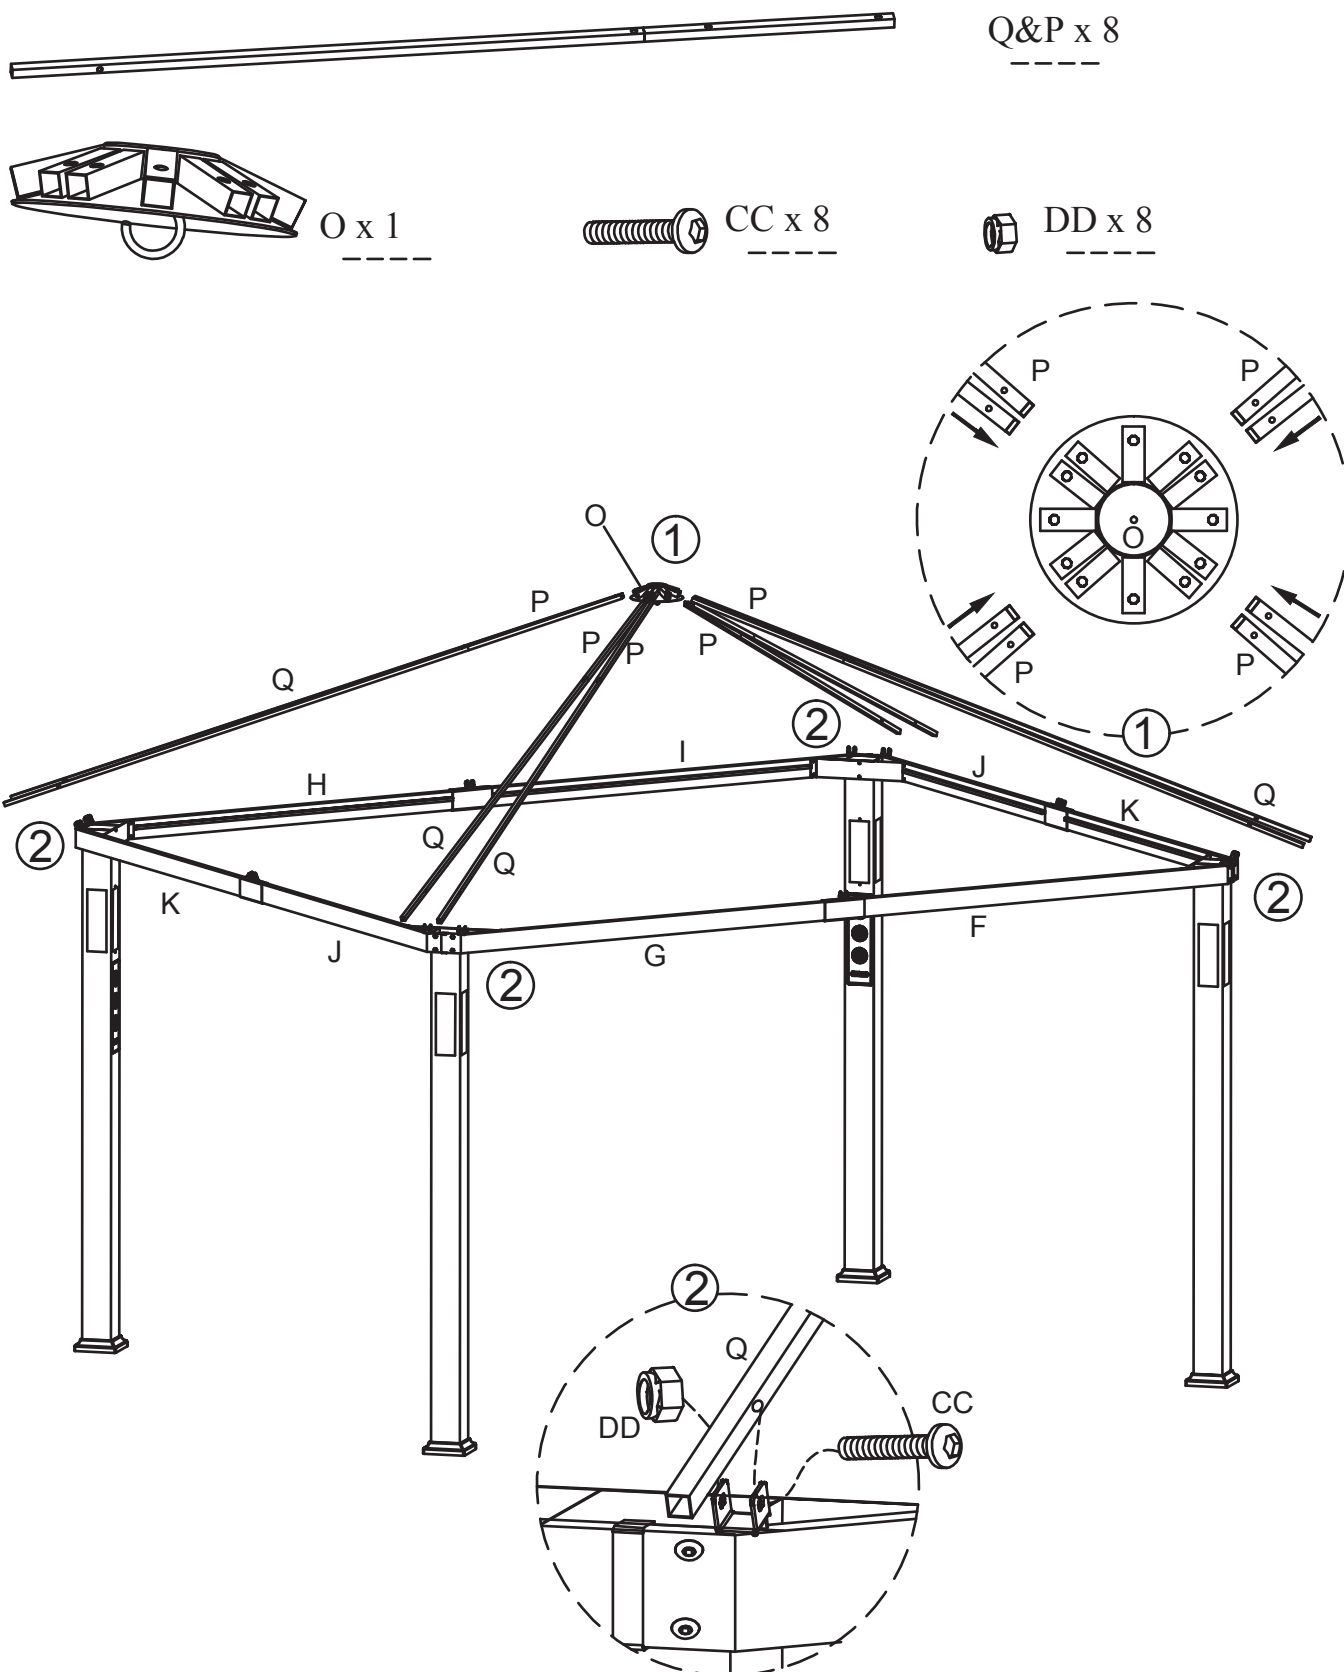


## Assembly Instructions

**13.** Insert Air Vent Tube (S) into 2-tier Center Connector (R), secure Air Vent Tube (S) onto 2-tier Roof Tube (P) using Bolts (AA).

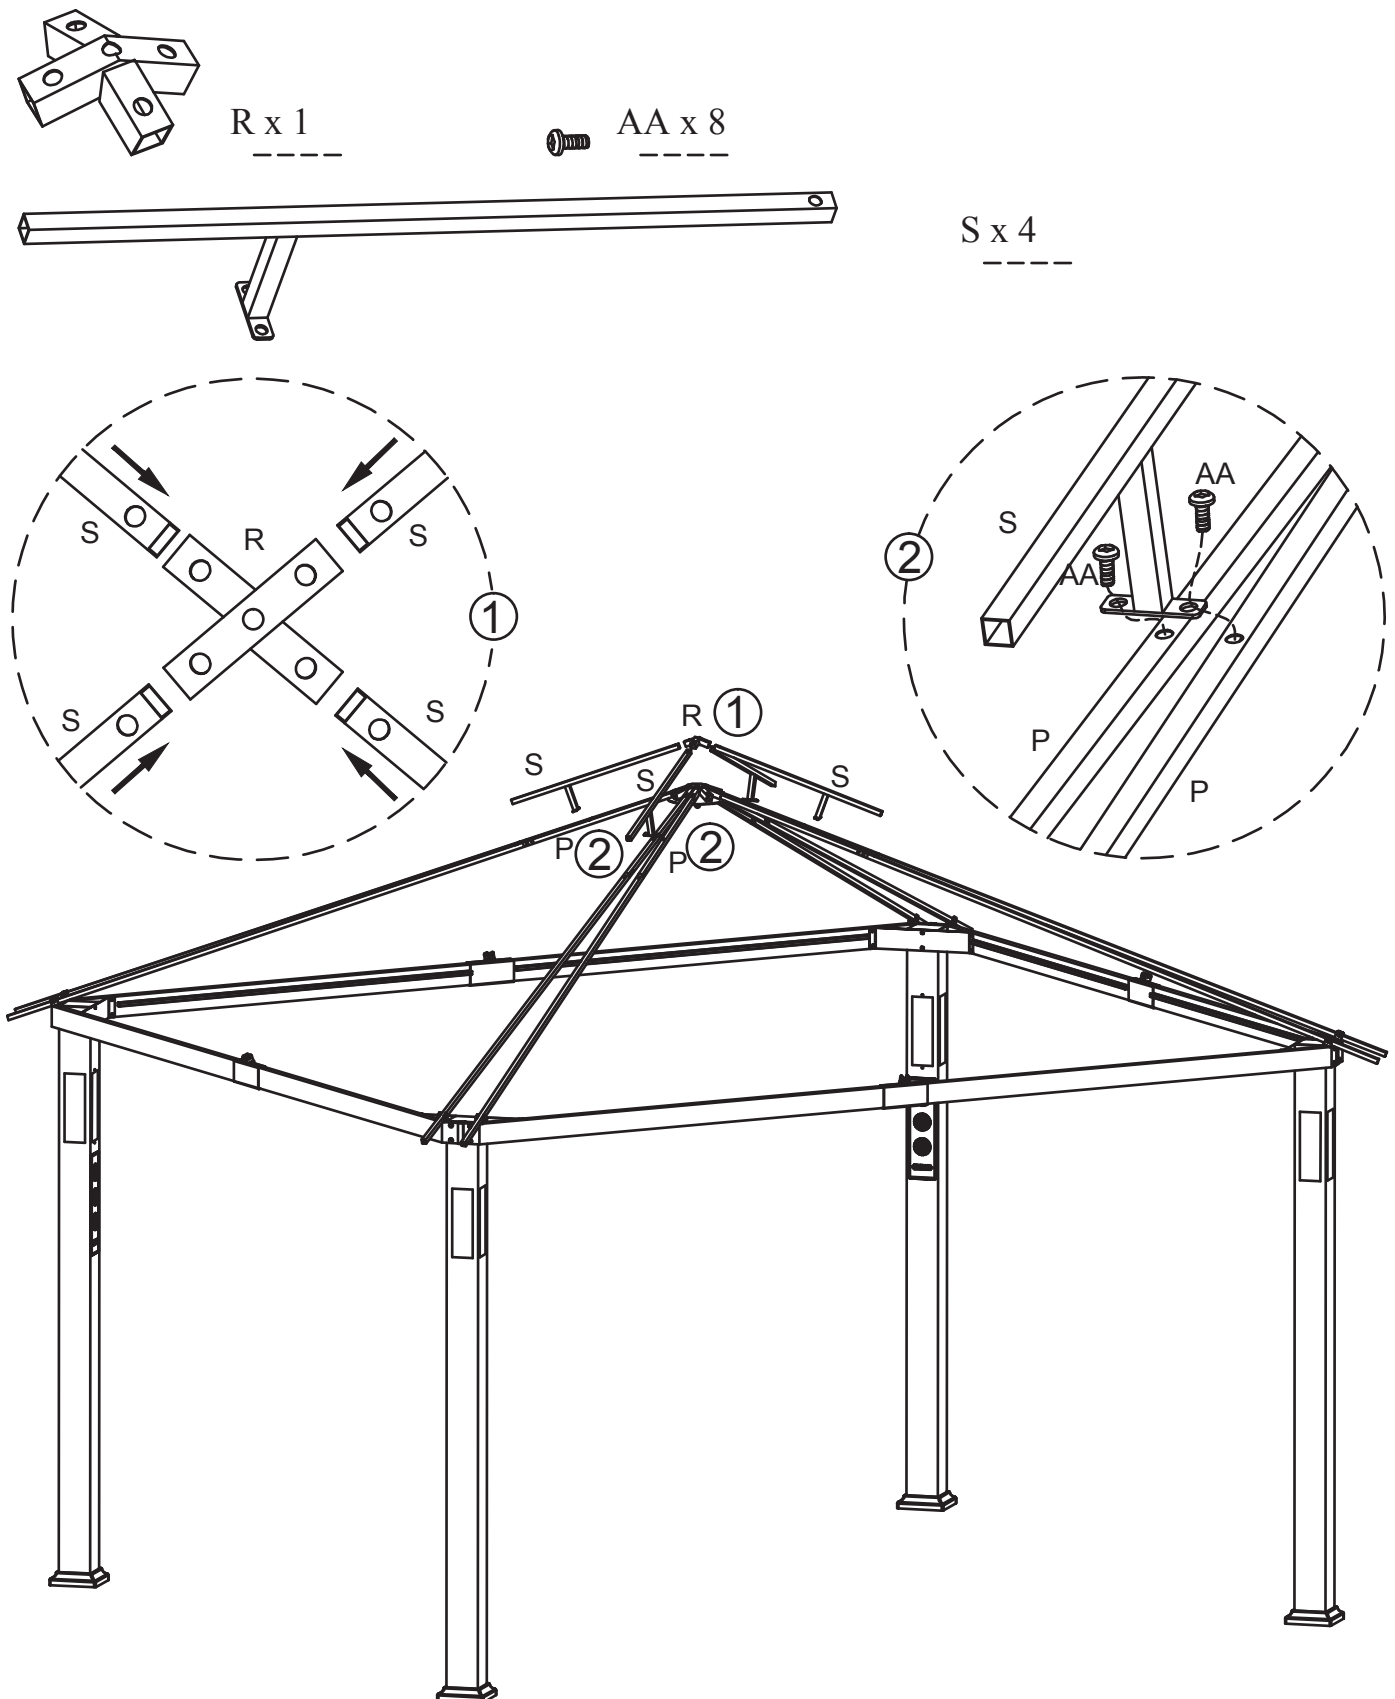

## Assembly Instructions

**14.** Insert Long Roof Tube (T) into Roof Connector (O) then secure Long Roof Tube (T) by Bolts (CC) with Bolt nuts (DD). Insert Short Roof Tube (U) into Roof Connector (O) then secure Short Roof Tube (U) by Screws (CC) with Nut (DD).

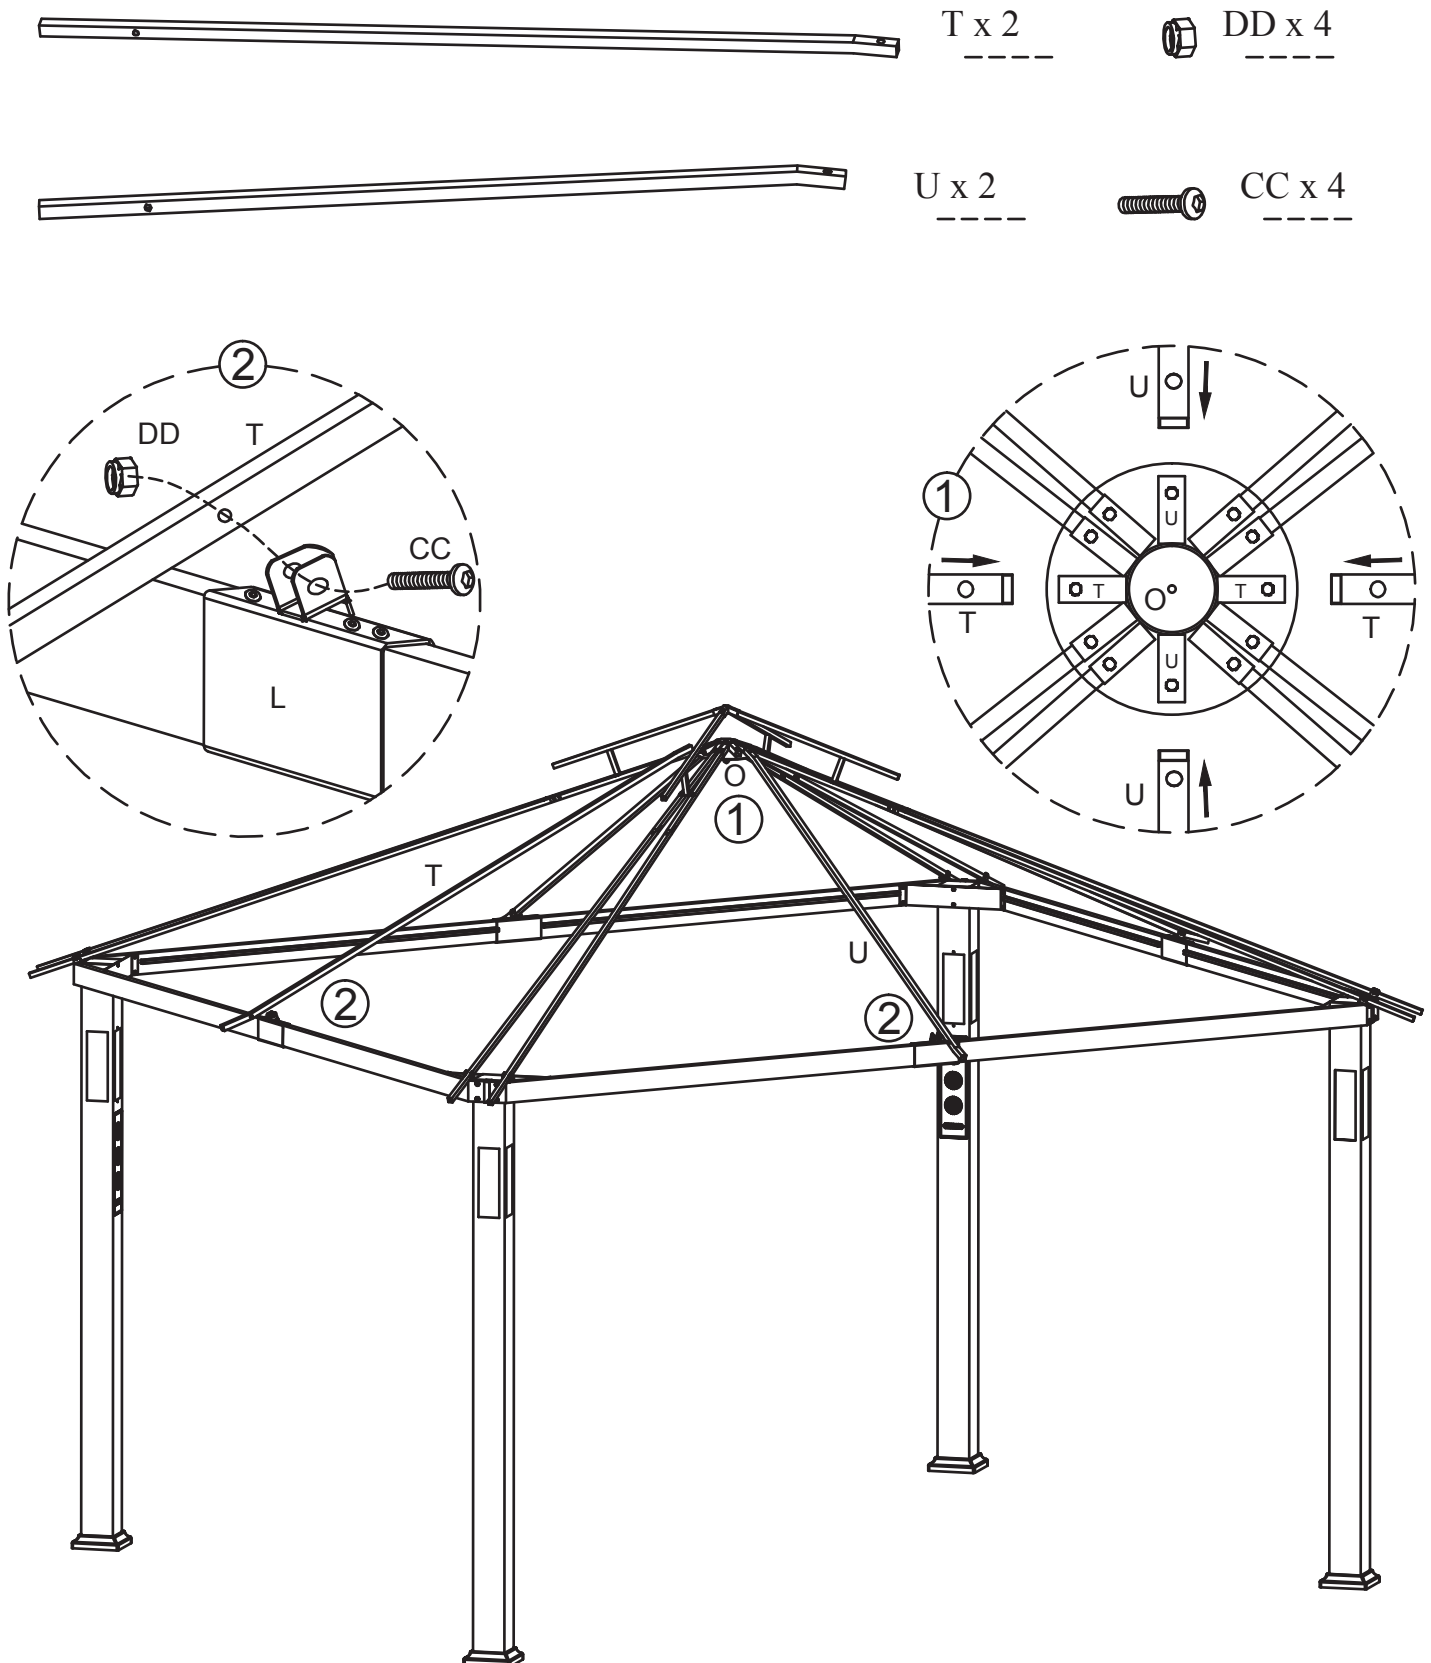


## Assembly Instructions

**15.** Place Canopy (X) and Air Vent Cover (Y) on the top then secure Finial (V) on the top of Canopy. Place Canopy in right position of each corner and hang Netting (W). Insert Stake (Z) through Base Flange (E) into ground.



V x 1

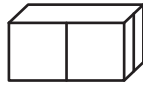


W x 1






X x 1



Y x 1


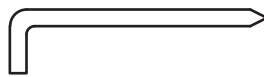


Z x 16

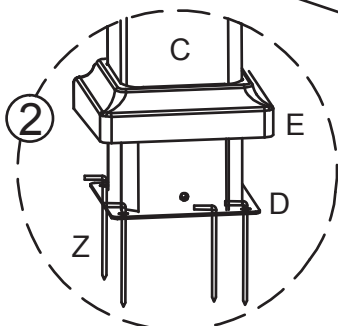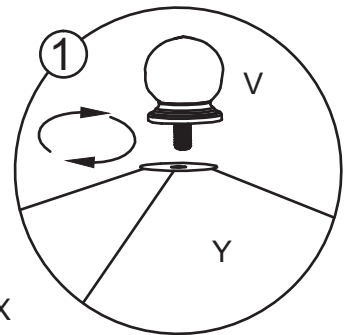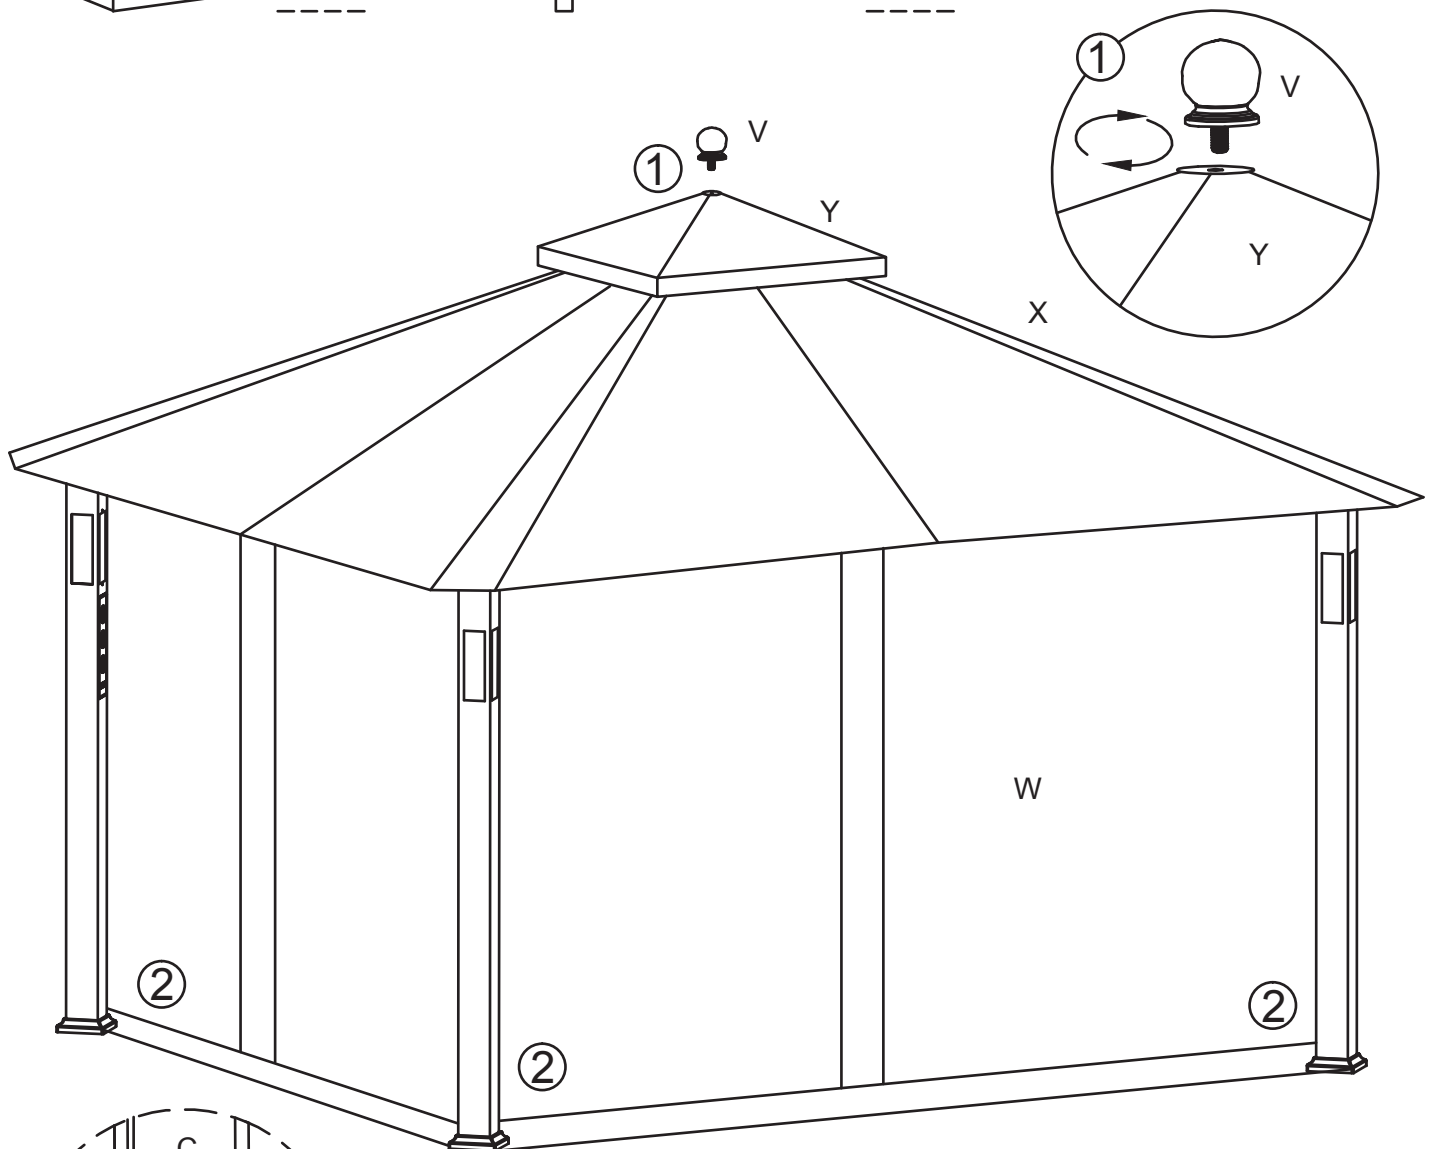

## Assembly Instructions

16. Connect AC Adapter and turn on the switch.

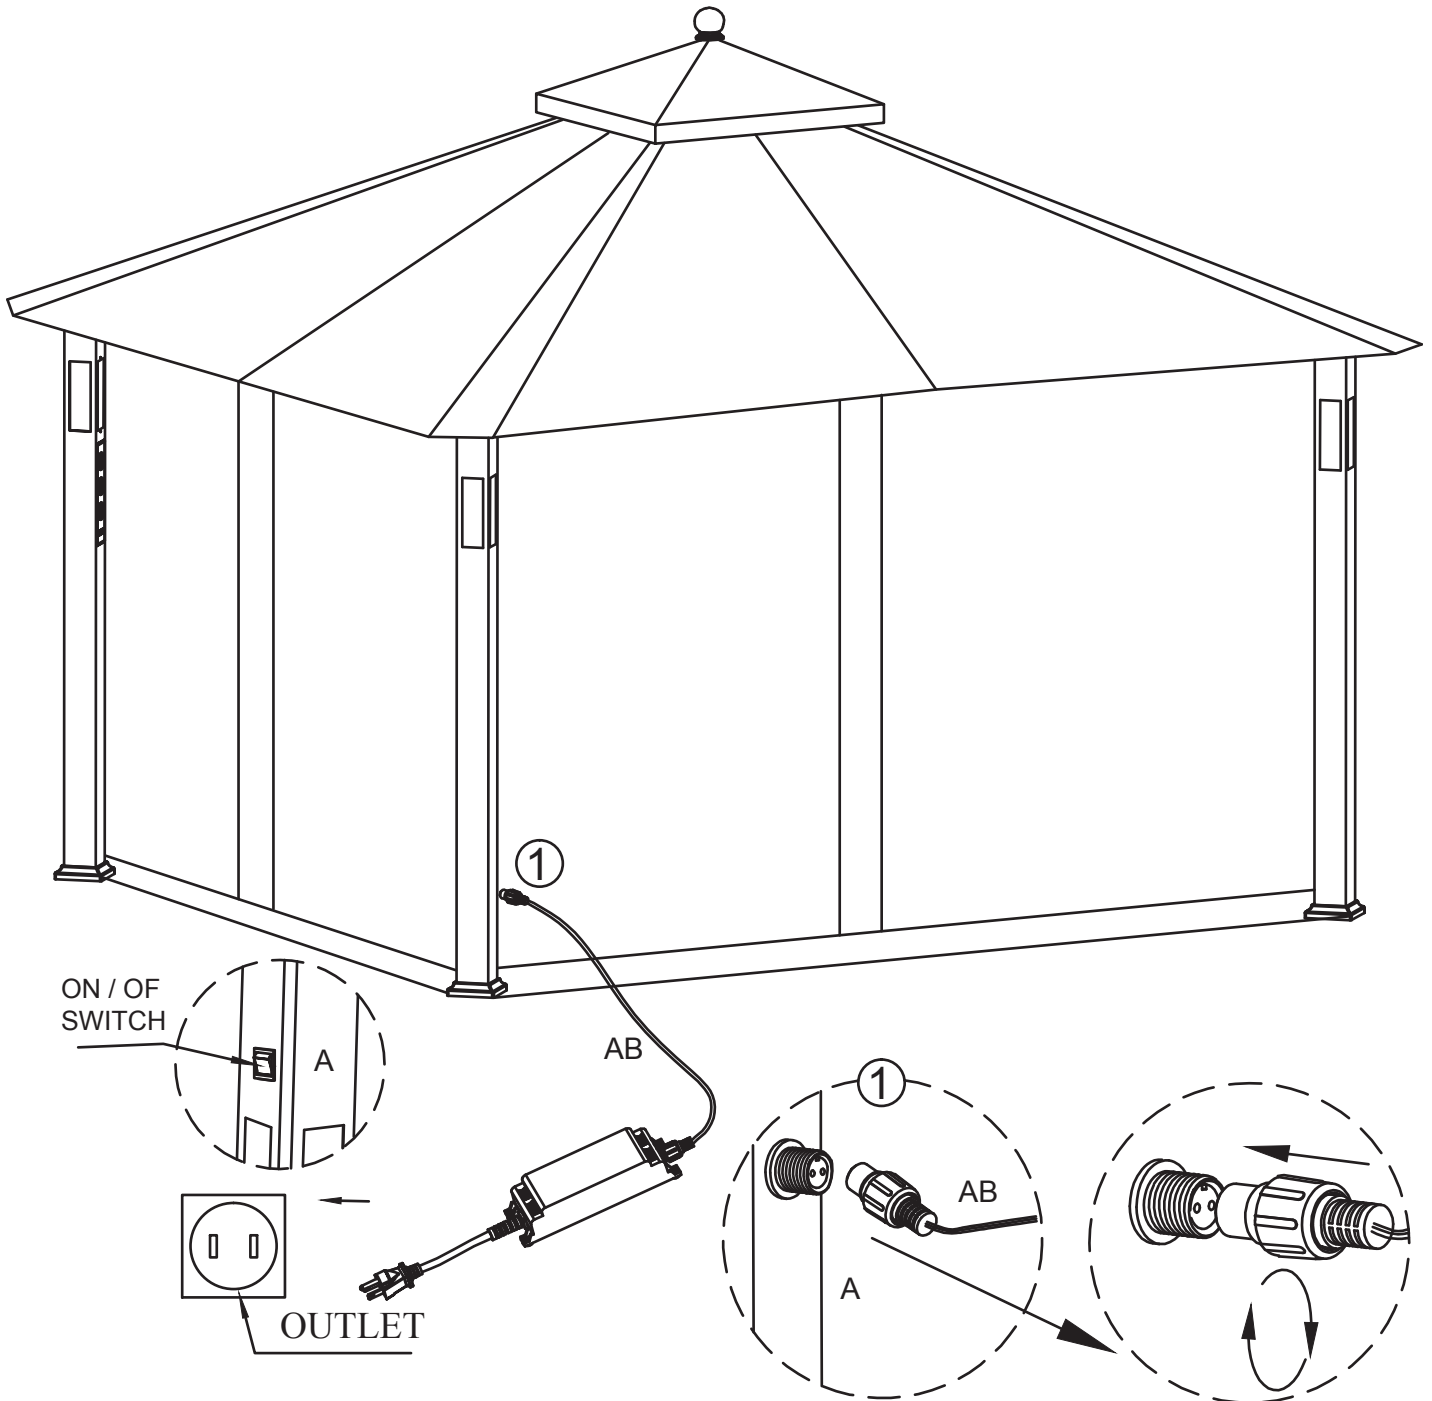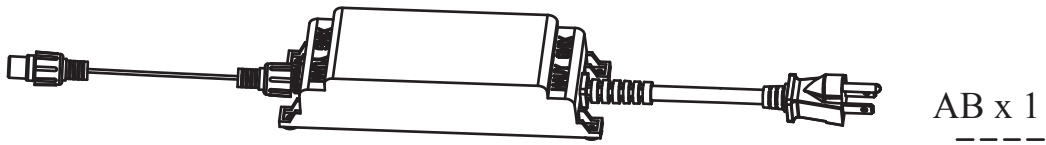





## Assembly Instructions

**17.** Connect AC adapter and turn on the switch (located on the top of Post A). Turn on the audio controller switch (located on the bottom of post in black round bottom).


There are 3 ways to play the music:

1. Wireless (see figure 1)
2. TF card (see figure 2)
3. AUX (see figure 3)

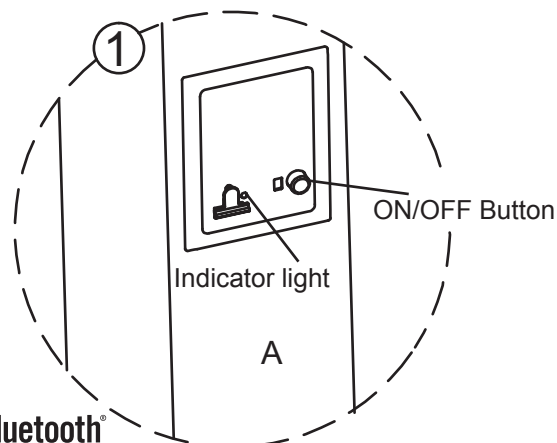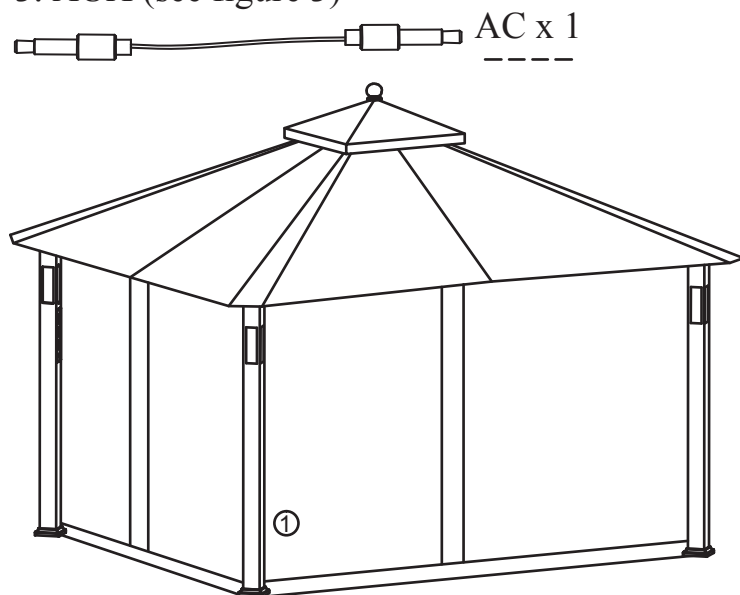


Bluetooth:

1. Turn on unit by pushing the black ON/OFF Button. The Red LED light will blink (until you connect your wireless device).
2. On your device, turn Bluetooth on. Set your device to search "GAZEBO", select "GAZEBO" to pair your device, the Red LED light will turn solid once you are connected.
3. When you play music the Red LED light will continue to blink.

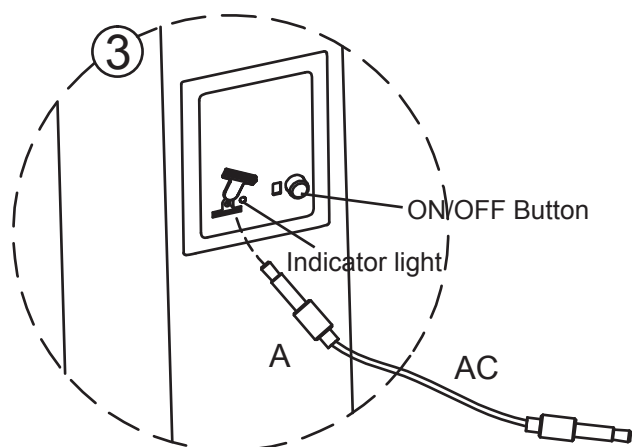

AUX:

 1. Turn on unit by pushing the black ON/OFF Button. The Red LED light will blink (until you connect your device).
2. Use connect wire (AC) to connect your output device, the Red LED light will turn solid Blue light.
3. When you play music the Blue LED light will keep solid.

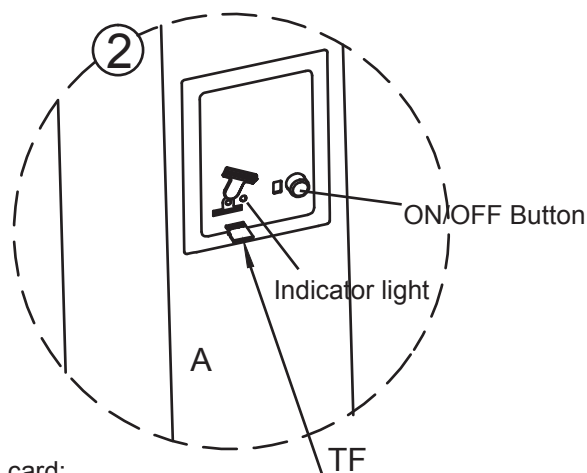

TF card:



1. Turn on unit by pushing the black ON/OFF/ Button. The Red LED light will blink (until you insert your TF card).
2. Insert TF card, the Red LED light will turn solid Blue light.
3. When you play music the Blue LED light will continue to blink.

## Assembly Instructions
  
### Instruction of Replace LED Lights

1. Take out Canopy (X) from corner. Disconnect all the wires.



Warning: Please make sure the power is disconnect.

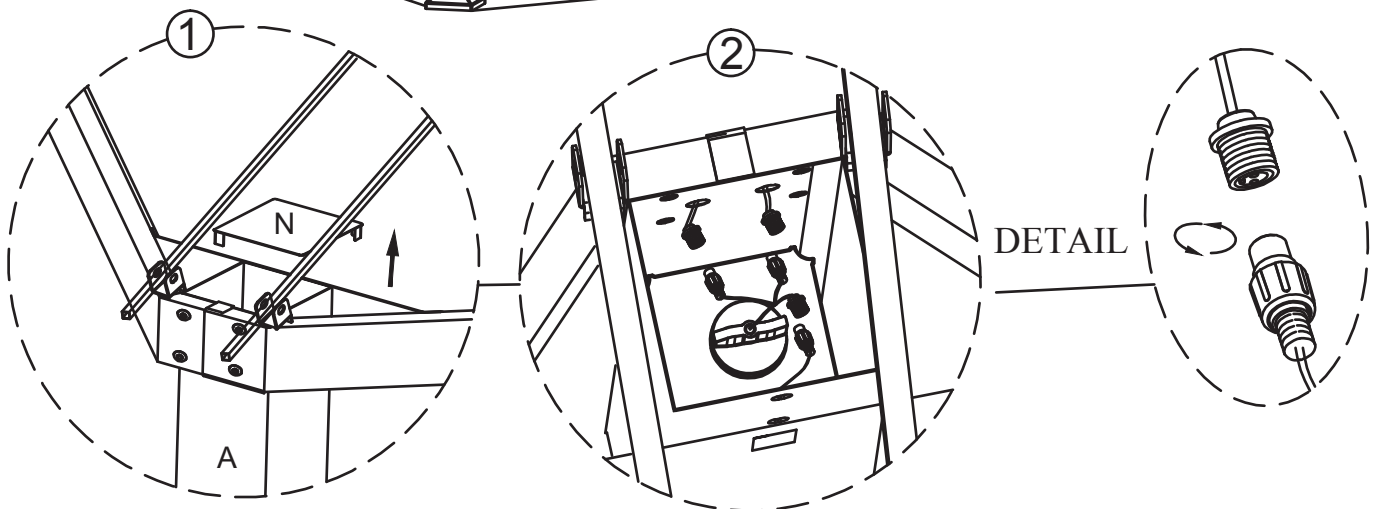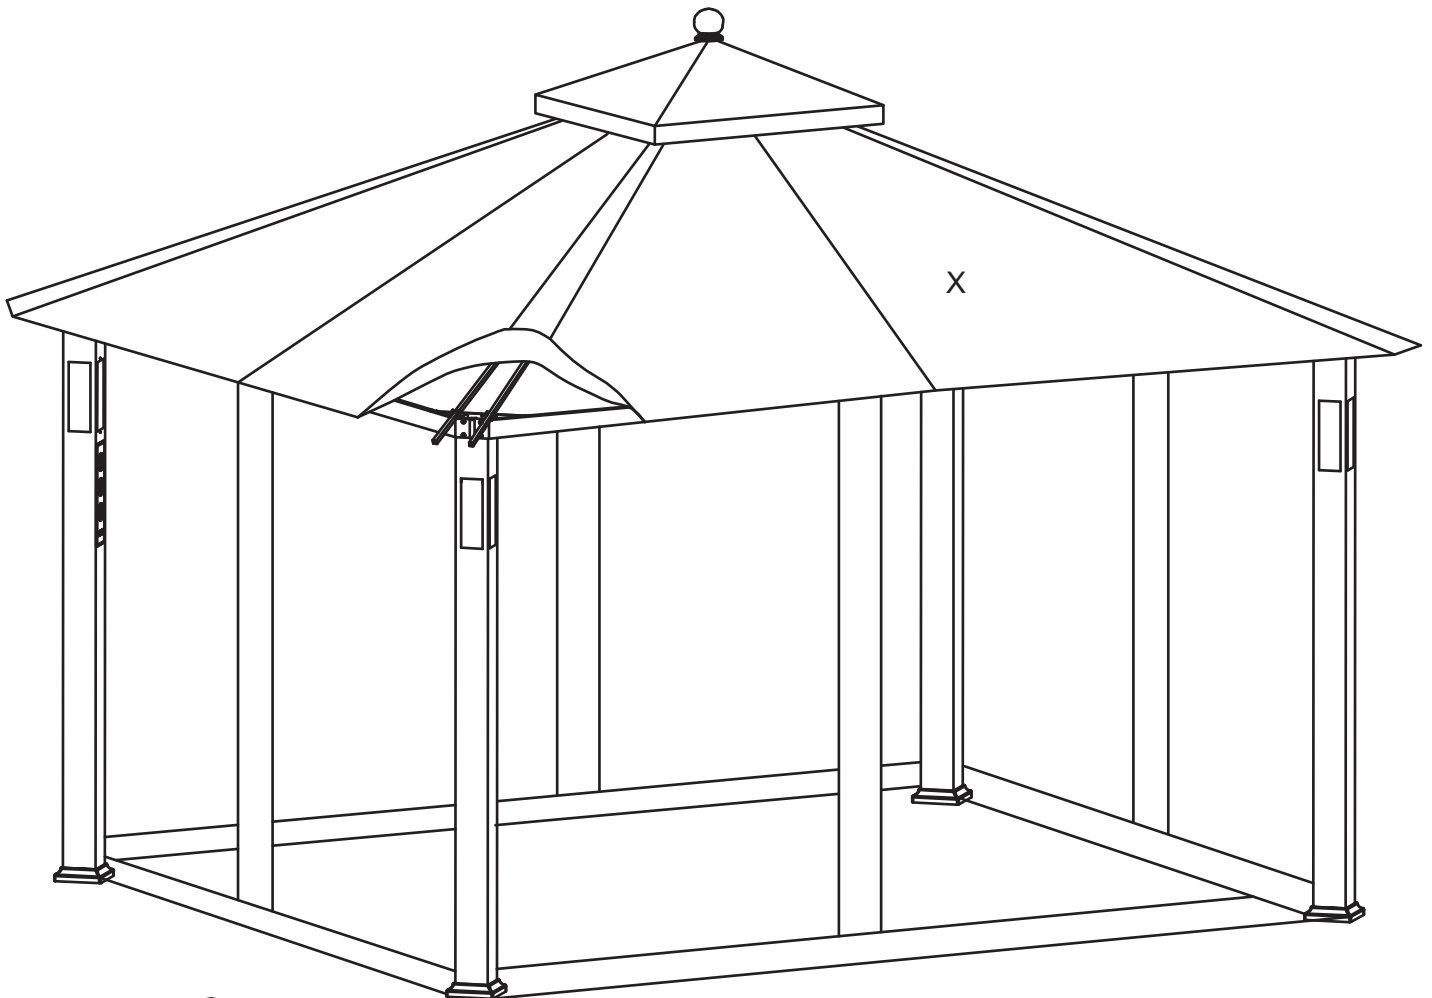

## Assembly Instructions

### Instruction of Replace LED Lights

  2. Turn counterclockwise to release and take out the LED lights.  
Place new LED lights then tighten up in clockwise.

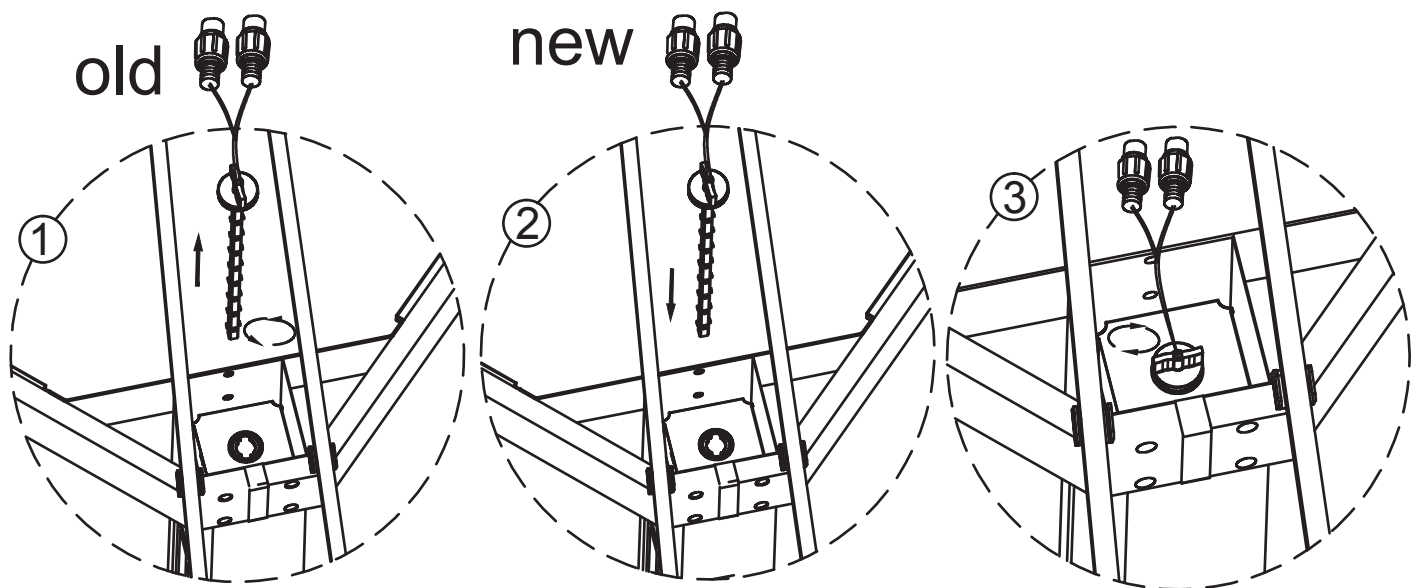
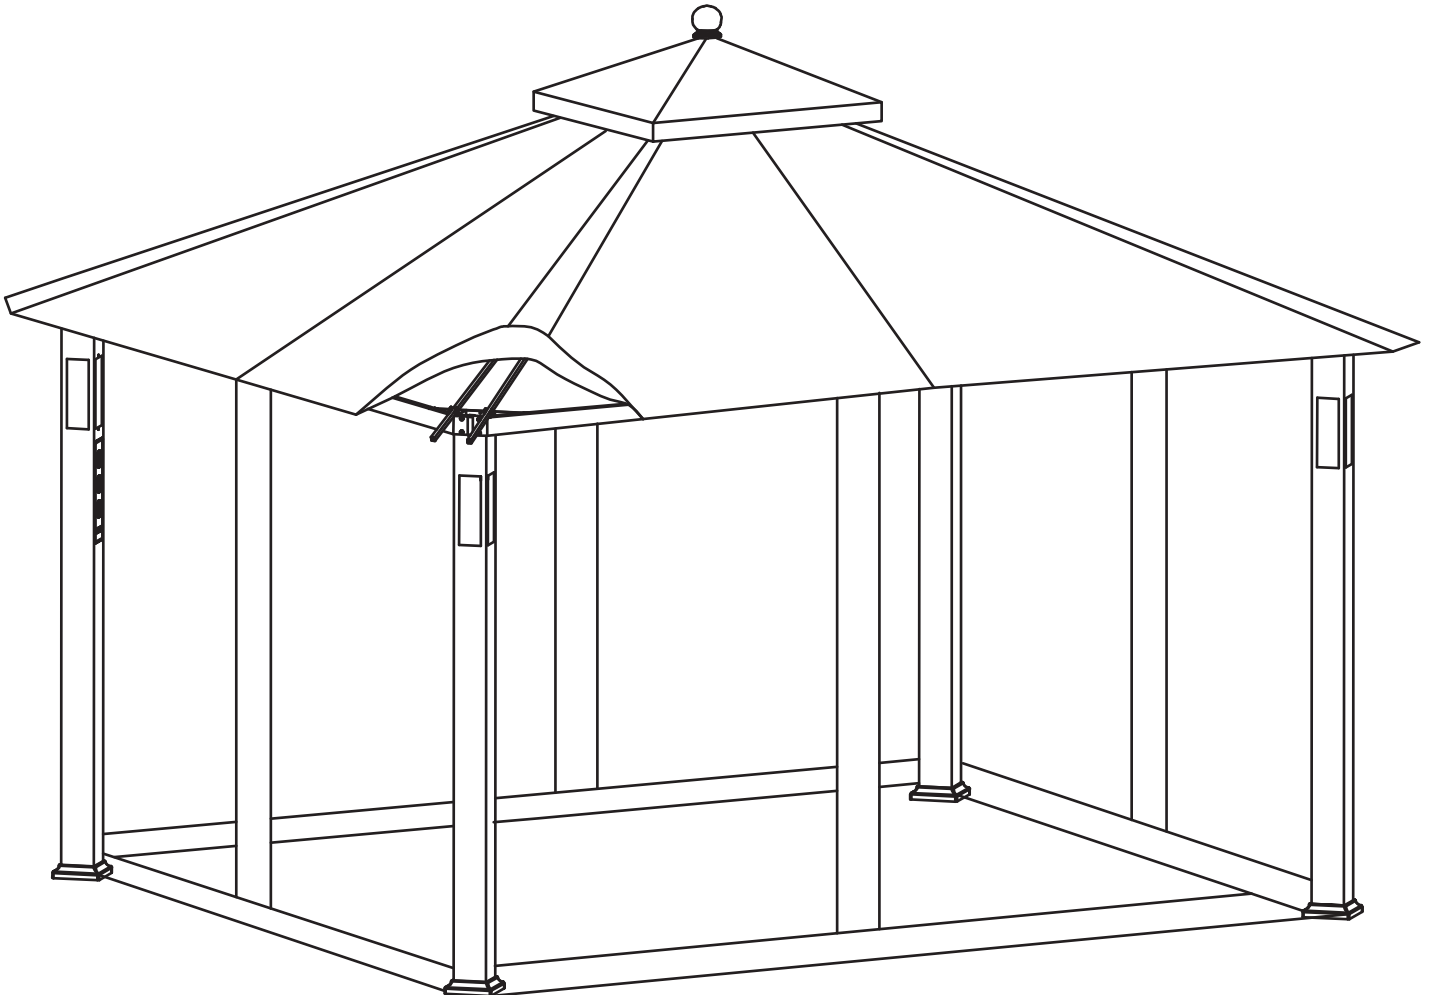


## Assembly Instructions

### Instruction of Replace LED Lights

3. Connect all same color wires together then place back the canopy.

 
 
This LED lights is special design for this product only. Do not replace or modify this product.

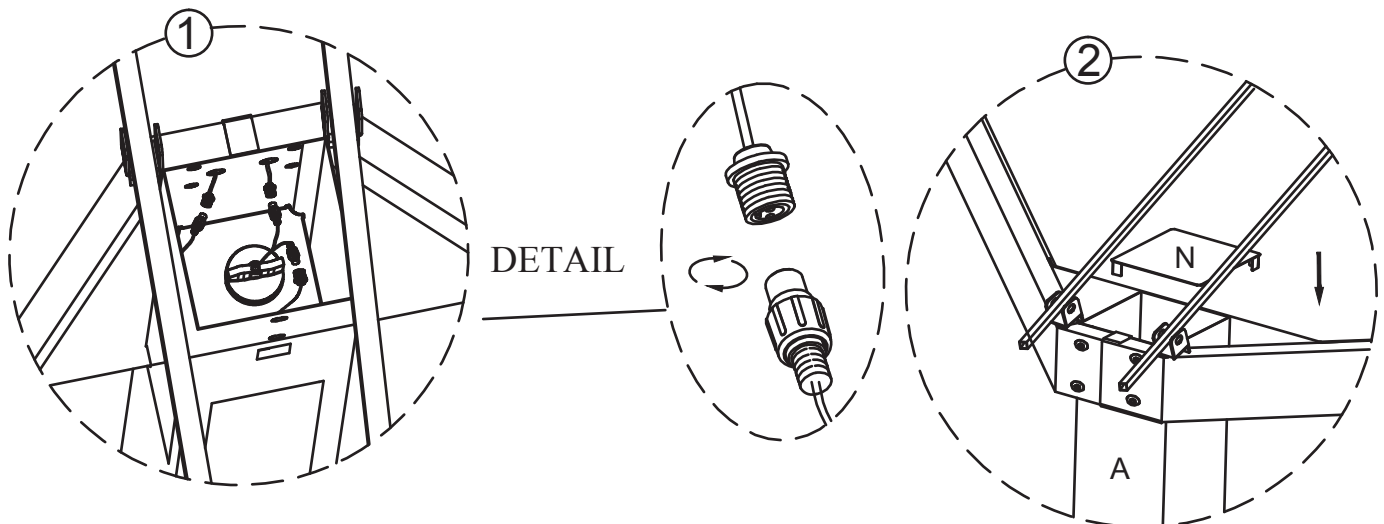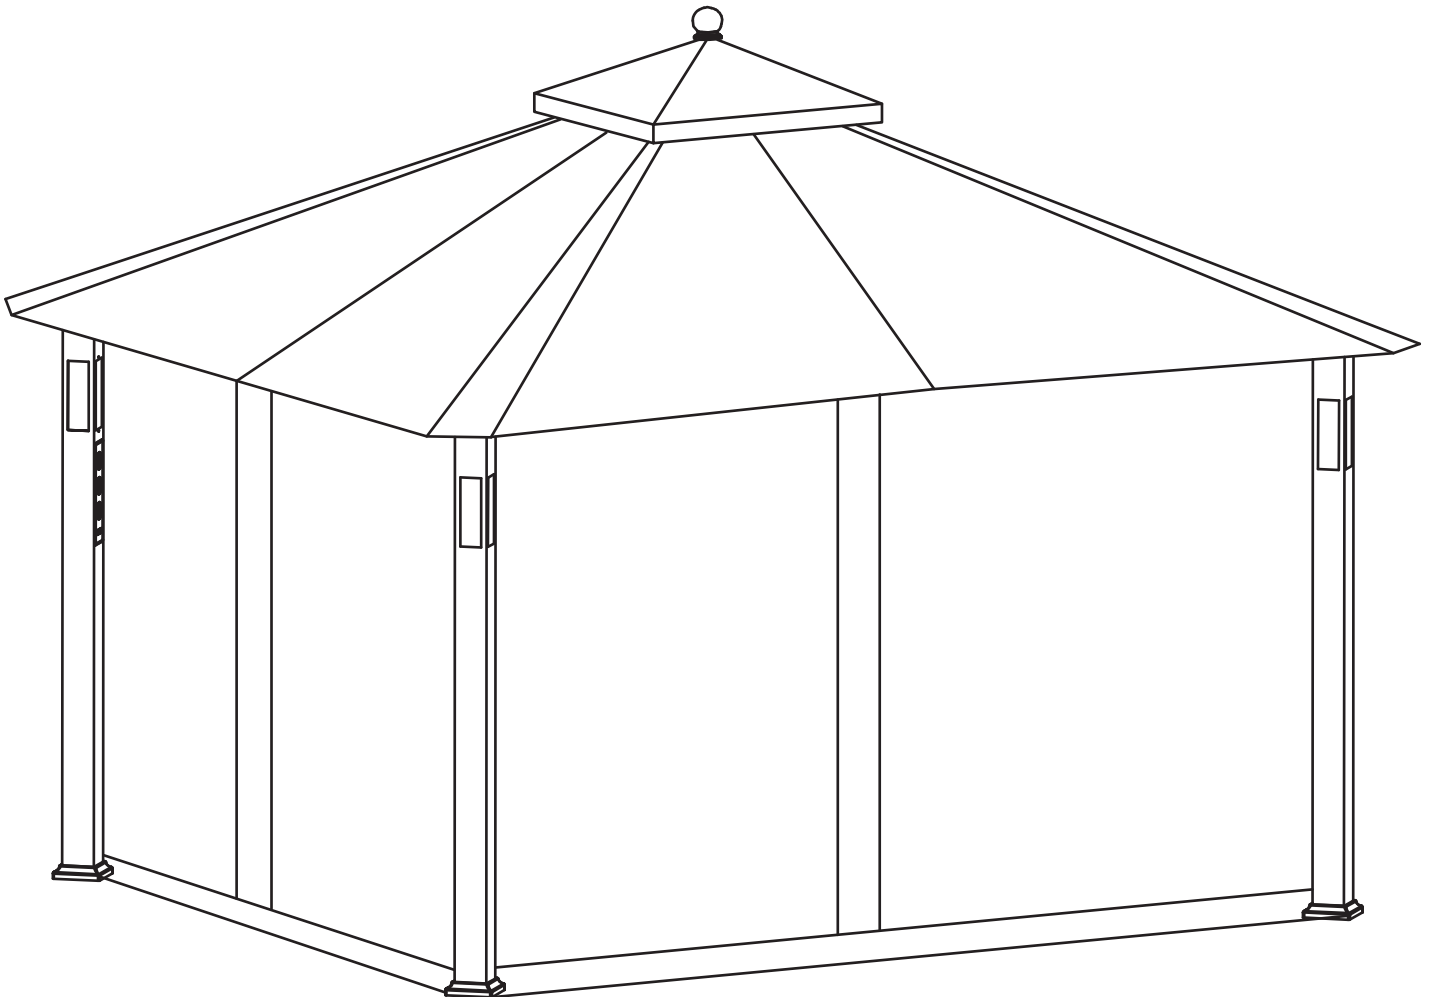

## Assembly Instructions

### Instruction of Replace Speakers

 
 
1. Take off speaker cover then release screws. Take out speaker slowly then disconnect wires. Warning: Please make sure the power is disconnect.

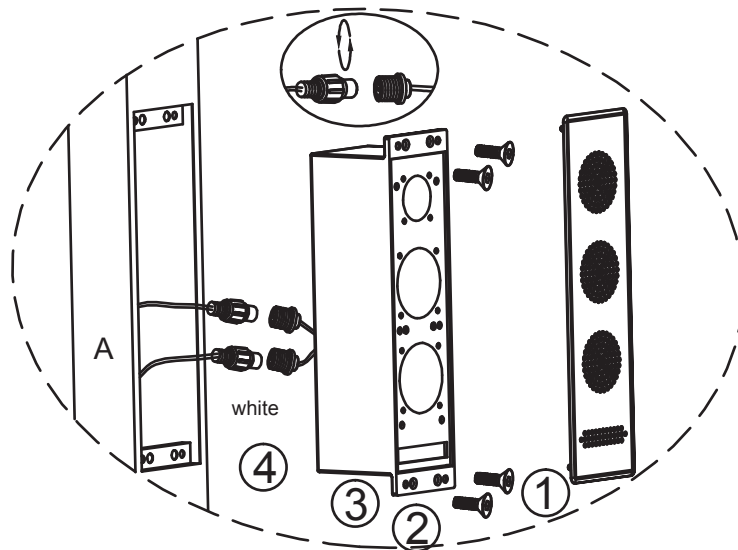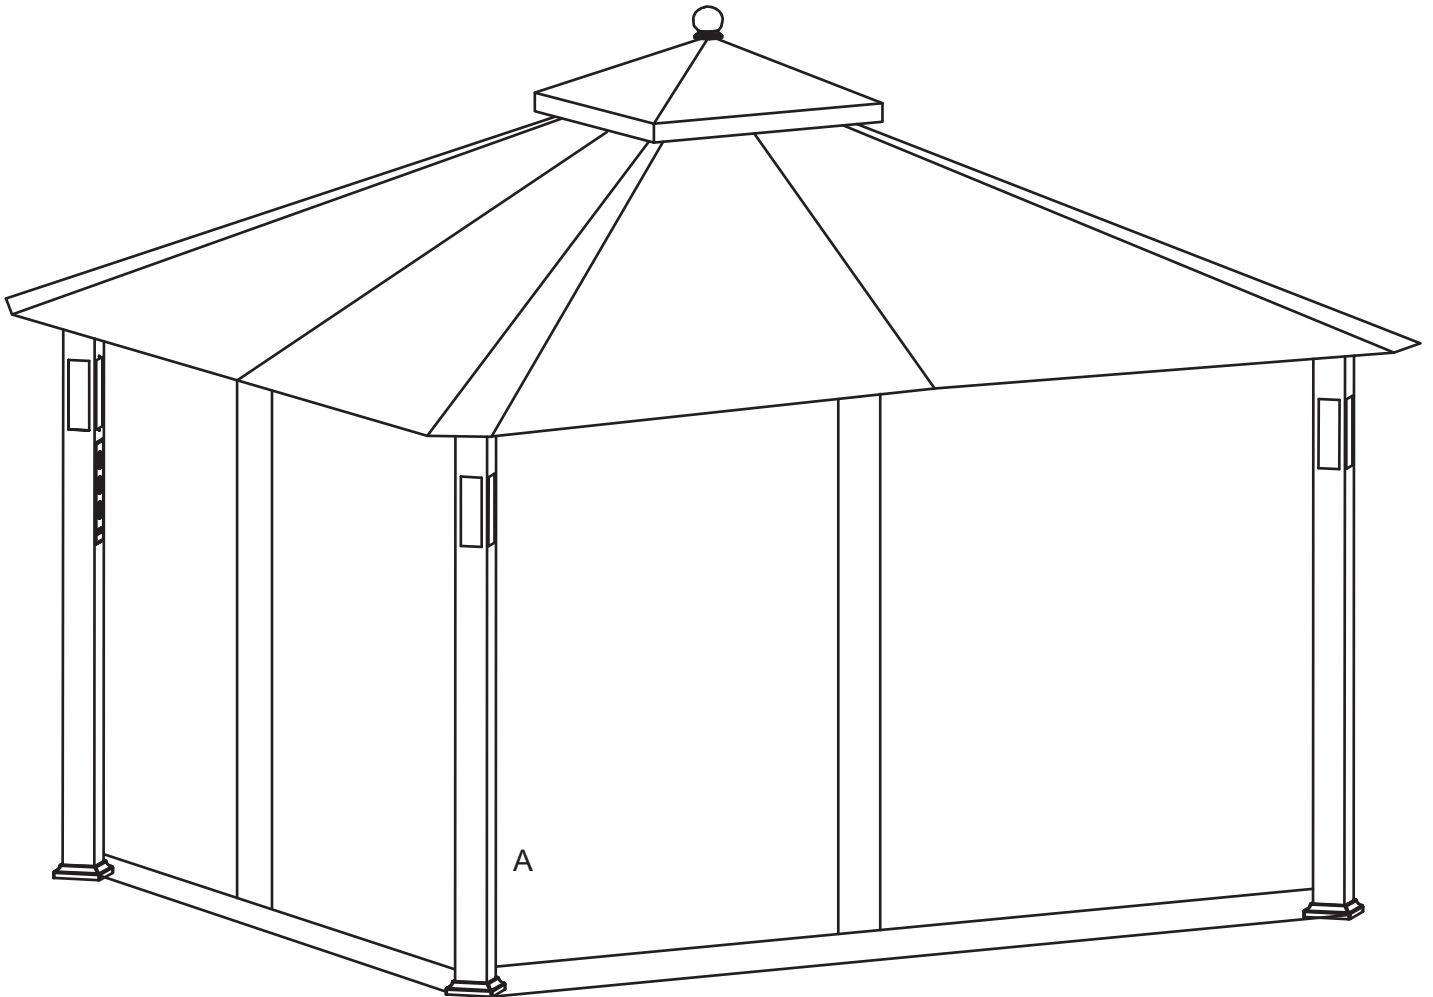

## Assembly Instructions

### Instruction of Replace Speakers

  2. Connect all wires with new speaker, secure speaker on the post. Place back speaker cover.  
Warning: This speaker is special design for this product only. Do not replace or modify this product.

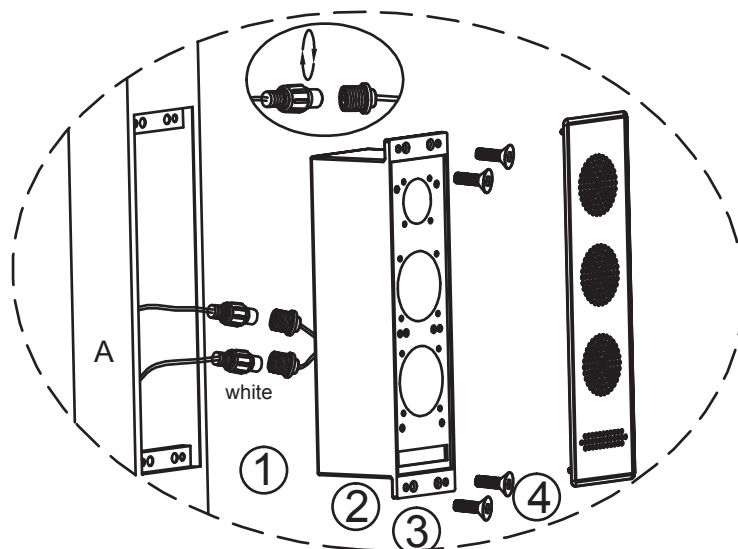
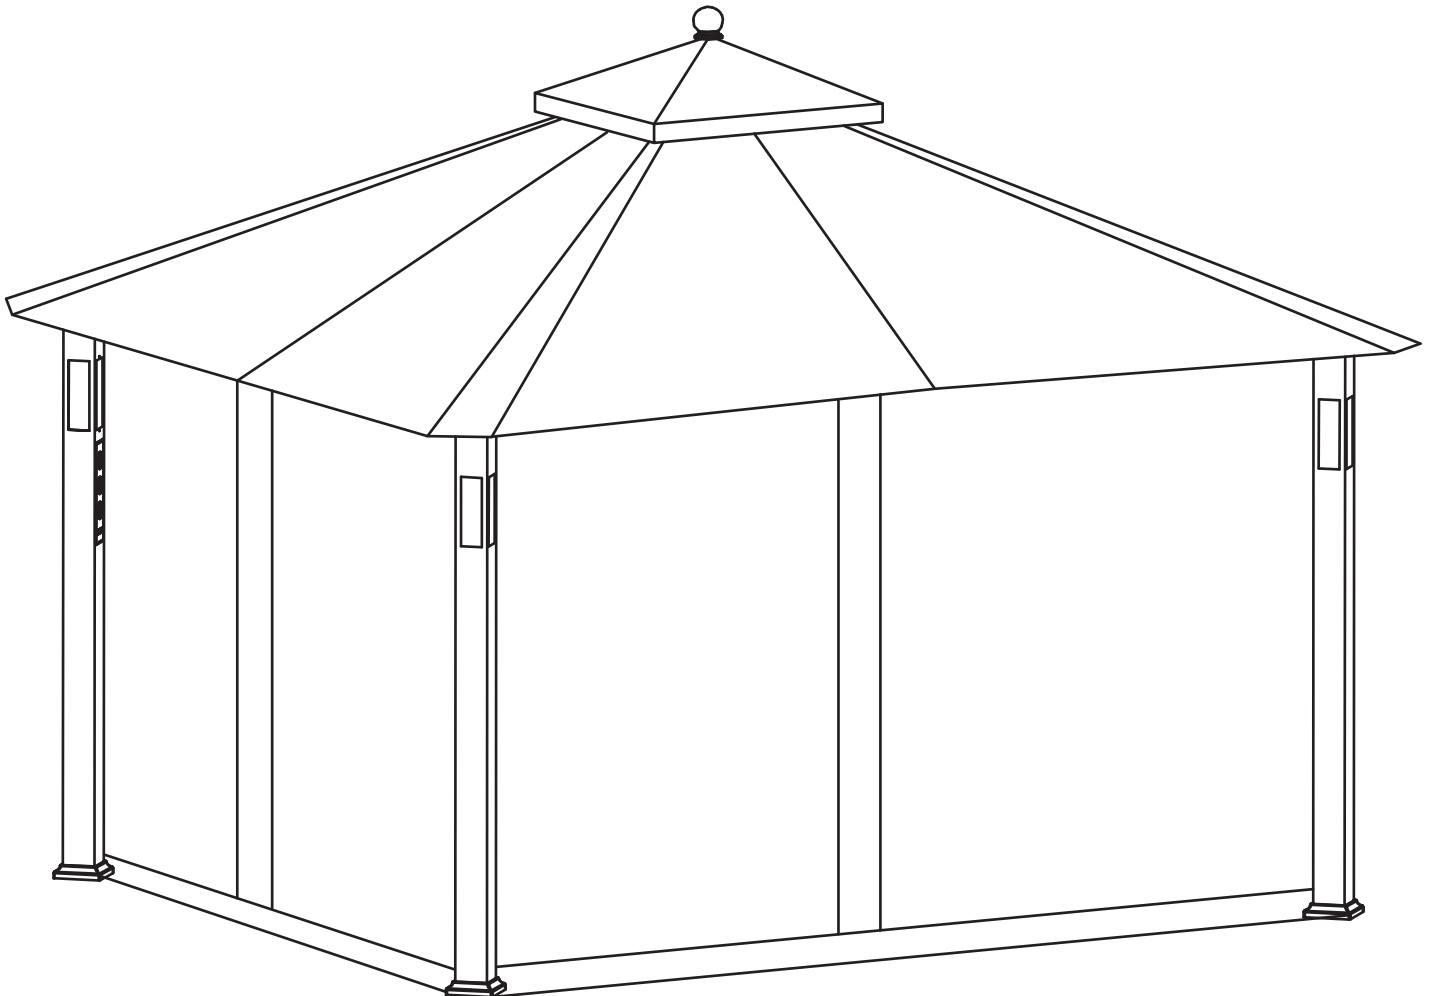


## Assembly Instructions

### Instruction of Replace Audio Controller

1. Take off audio controller cover then release screws. Take out audio controller box slowly then disconnect wires.

  Warning: Please make sure the power is disconnect.

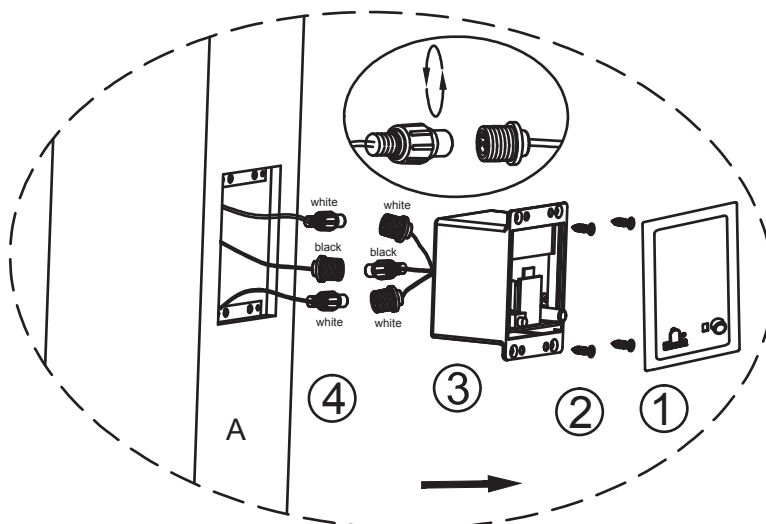
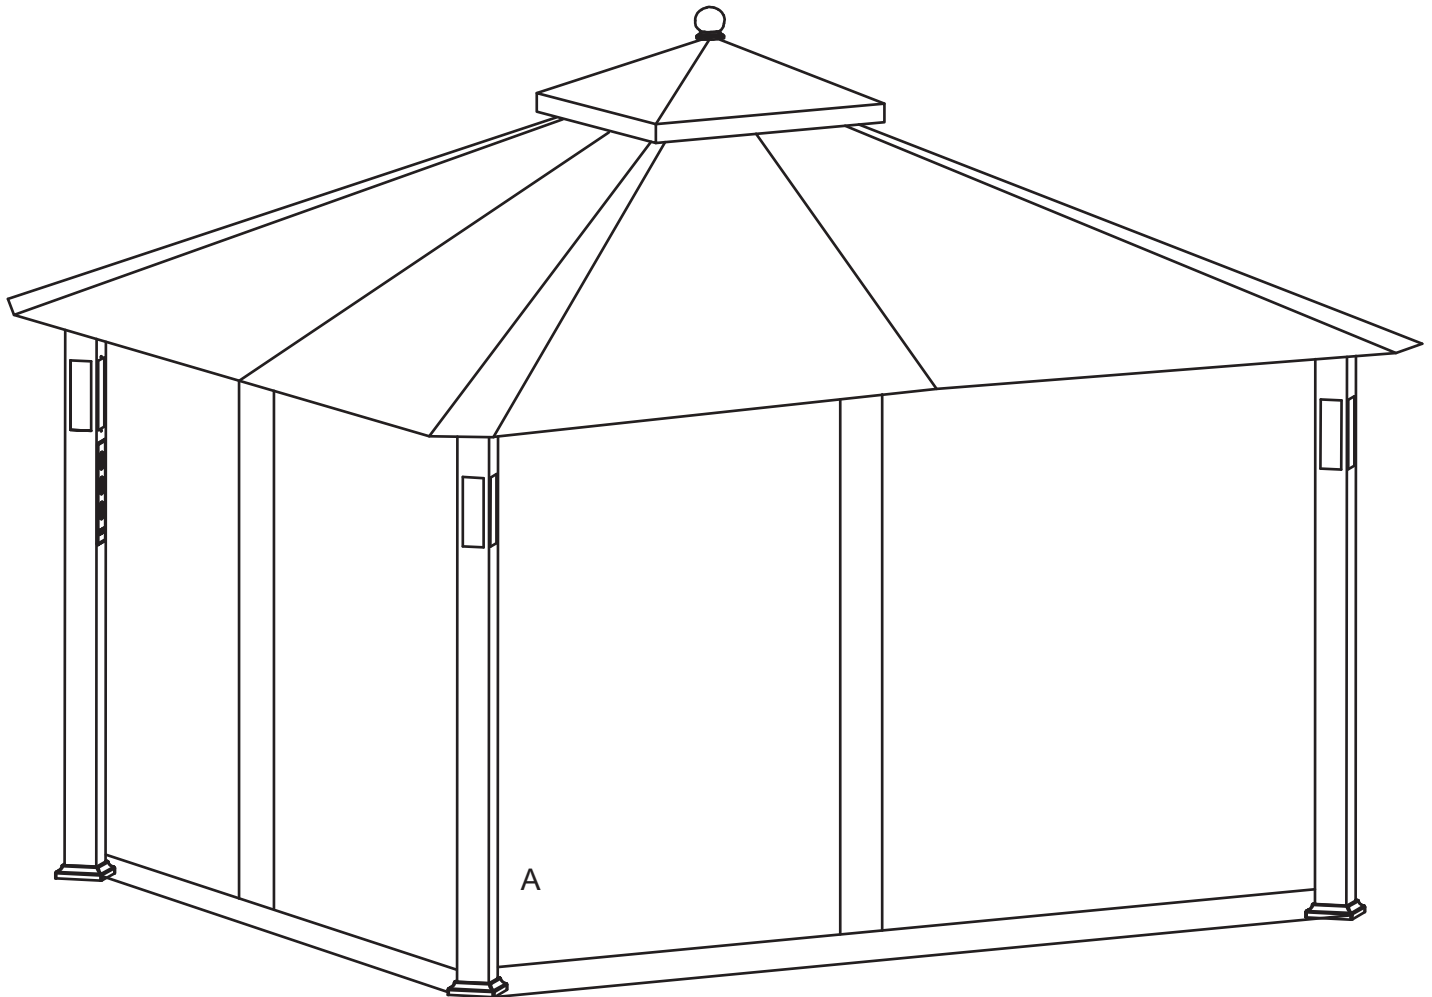


## Assembly Instructions

### Instruction of Replace Audio Controller

2. Connect all wires with new audio controller, secure audio controller box on the post. Place back speaker cover.

  Warning: This audio controller is special design for this product only. Do not replace or modify this product.

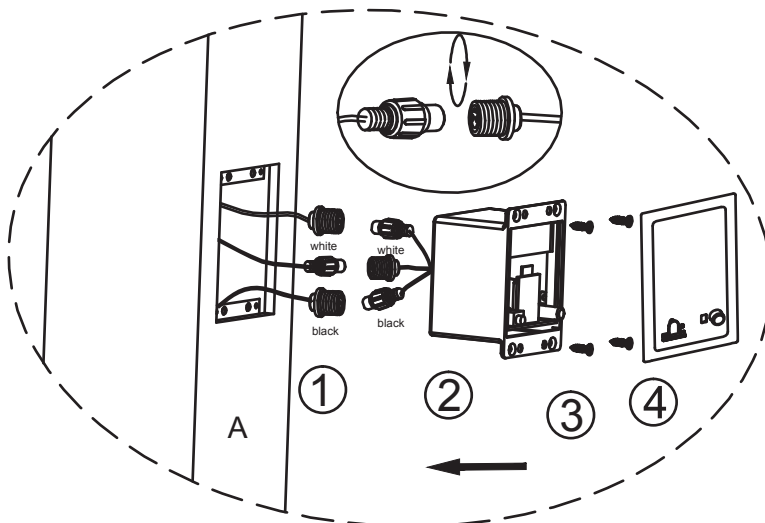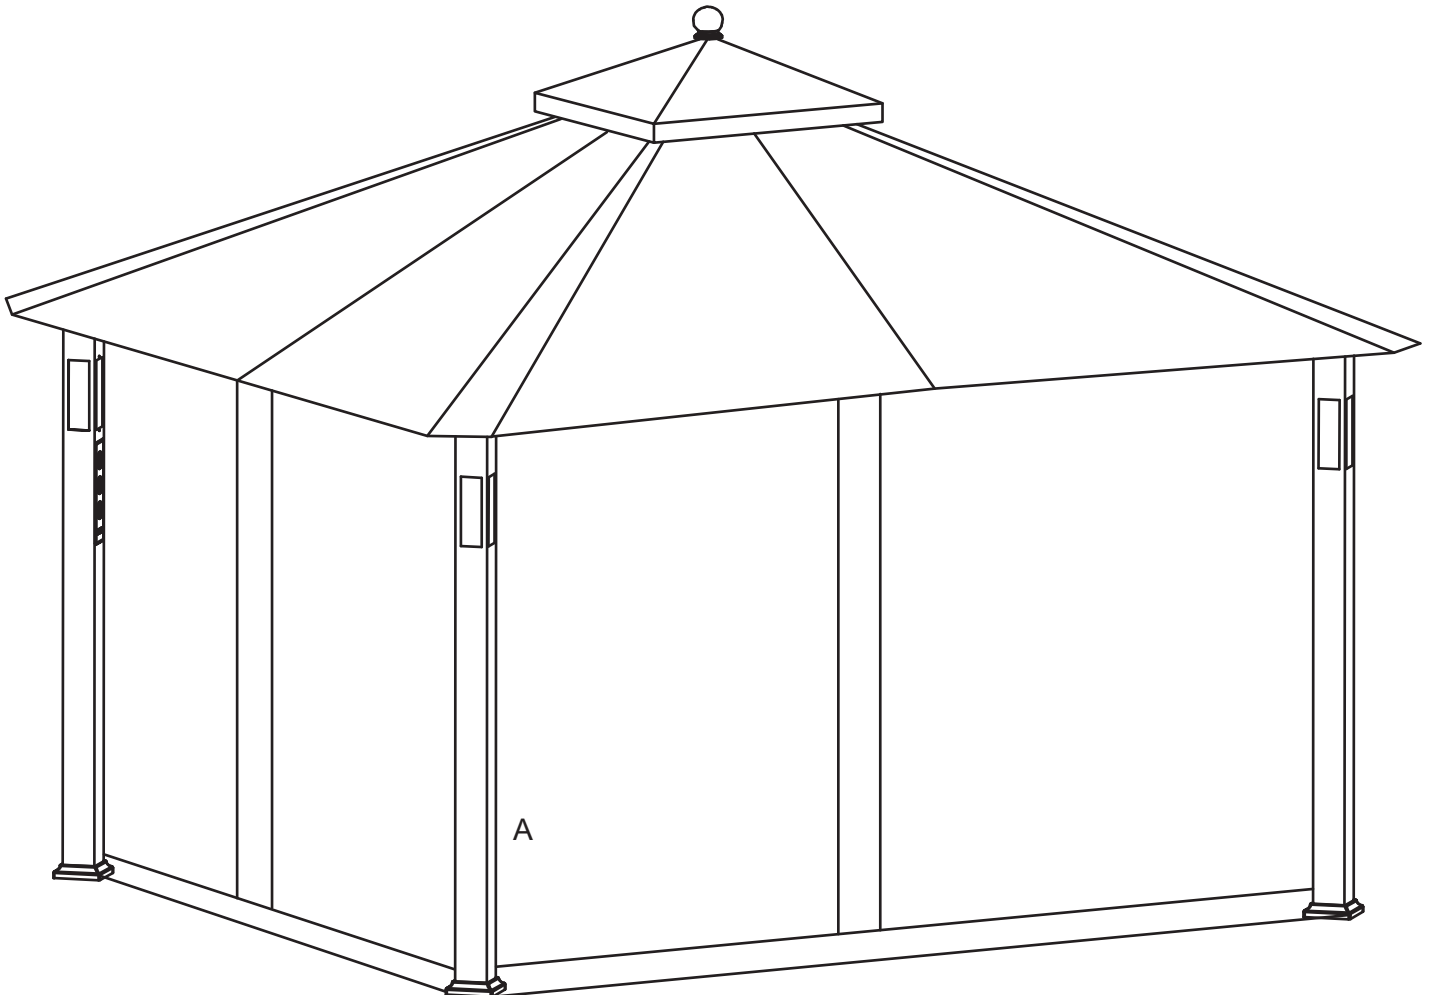



## Solutions to Common Speaker

Phenomenon Problems	Solutions
Several unsuccessful connection attempts	<ol style="list-style-type: none"> <li>1. Ensure the speakers is in standby mode and turn off connection with all Bluetooth devices.</li> <li>2. Or restart.</li> </ol>
Volume too low or sound distorted	<ol style="list-style-type: none"> <li>1. Or reboot change to Turn off the power for 10 seconds.</li> <li>2. Or restart.</li> </ol>
Discontinuous sound for music playing	Move the speaker closer or remove obstacles between speaker and your music playing device. Make sure the distance in between umbrella and device within 10m.
Indicator light not work	<ol style="list-style-type: none"> <li>1. Check power supply voltage.</li> <li>2. Or restart.</li> </ol>

## Important Notes

### WARNING!

Permanent hearing loss may result from long-term exposure to sound at high volumes. Use as low a volume as possible. The volume level may vary based on conditions such as the device you are using, its reception and volume settings, and the environment. Please read below prior to using this product.

None of the components can be replaced or repaired by users. If any parts of your product require replacement for any reason please contact customer service center. Comply with all of the instructions.

Clean the product with a dry cloth.

Do not place the product in a humid environment.

Do not place the product in any liquid.

Do not install the product near a heat source, such as radiator, heater, furnace, or other heating equipment.

Remove batteries when not in use for extended periods of time.

Do not attempt to modify the product in any way.

 
### Works with ANY device with Bluetooth connectivity



WATER  
RESISTANT



NO TOOLS  
REQUIRED

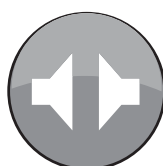

STEREO SOUND



# Remote Control Instruction



**Previous**



**Next**



**Play/Pause**



**Volume - Button**



**Volume + Button**



**Switch to TF or AUX mode**

**0 - 9 Number:**

**In TF mode, select the number of song from your music list**

## FCC ID: 2AC7TGAZEBO60W

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.



## BOND VAST INDUSTRIAL LIMITED

---



No. 174 Ding Tan Pi Tan Vill Lutsao Hsiang, Chla Yi Hsien, Tai Wan, ROC

FAX: 886-5-3651 522

CUSTOMER SERVICE HOT LINE: 1-800-961-9838

SERVICE HOURS: MONDAY - FRIDAY 9:00AM - 5:00PM (PACIFIC TIME)

E-MAIL: [CUSTOMERSERVICE@BONDVAST.COM](mailto:CUSTOMERSERVICE@BONDVAST.COM)

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: [customerservice@bondvast.com](mailto:customerservice@bondvast.com) or Call toll-free: 1-800-961-9838

Made in / Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179  
[sears.com](http://sears.com)

See our extensive assortment of outdoor living products  
on-line at [www.sears.com](http://www.sears.com) and [www.kmart.com](http://www.kmart.com)