

MASON GREENTM



USE AND CARE GUIDE

SOMERVILLE UMBRELLA

Product Code: D71 M20770

KSN: 08837238-8

UPC Code: 885227002682

Date of Purchase: ____/____/____

Thank you for your purchase

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents.....	2
Safety Information.....	3
Set Up Your Furniture Properly... 3	
Examine your furniture.....	3
Warranty.....	3
Care and Maintenance.....	4
Pre-Assembly.....	4
Planning Assembly.....	4
Assembly Instructions	
Umbrella.....	5

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.

EXAMINE YOUR FURNITURE

- Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

This limited warranty is extended to the original purchaser and applies to defects in material and workmanship of your patio furniture, provided your furniture is maintained with care and used only for personal, residential purposes.

WARRANTY

Frames are warranted to be free from defects in material or workmanship for a period of one (1) year.

Resin wicker is warranted to be free from defects in material or workmanship for a period of one (1) year.

Fabric is covered for a period of one (1) year against defects in material or workmanship

Care and Maintenance

- Umbrella-Wash with a mild solution of soap and water, allow umbrella to drip dry in the open position. Dry umbrella pole completely.
- Keep umbrella closed when not in use. To prevent damage to your table, always use an umbrella base with your umbrella.
- In extreme windy conditions, it is recommended that you remove the umbrella from the table and store.

Pre-Assembly




PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 2-3 minutes for one person to complete all the assembly.

Read through all the instructions before beginning assembly. Unpack and identify all the parts. Place them on a flat, non-abrasive surface.

Assembly Instructions

Package Contents


CODE	PARTS	DESCRIPTION	QTY.
A	 A line drawing of the umbrella top assembly, showing the canopy, ribs, and the top of the central pole with a hook.	Umbrella Top	1
B	 A line drawing of a long, thin, vertical pole.	Bottom Pole	1
C	 A line drawing of a small, circular cap.	Umbrella Top Cap	1

Assembly Instructions


IMPORTANT ASSEMBLY TIPS

To avoid damage to your table, an umbrella base must be used at all times.

- 1 **Step 1:** Fix the cap C to the top of the umbrella

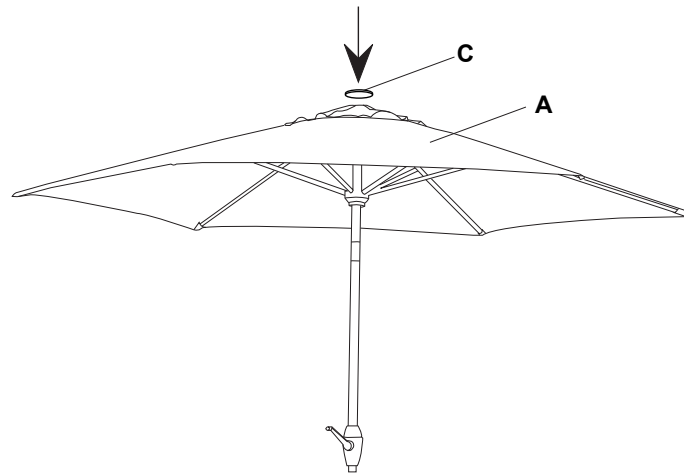

- 2 **Step 2:** Connect Top A to the Pole B

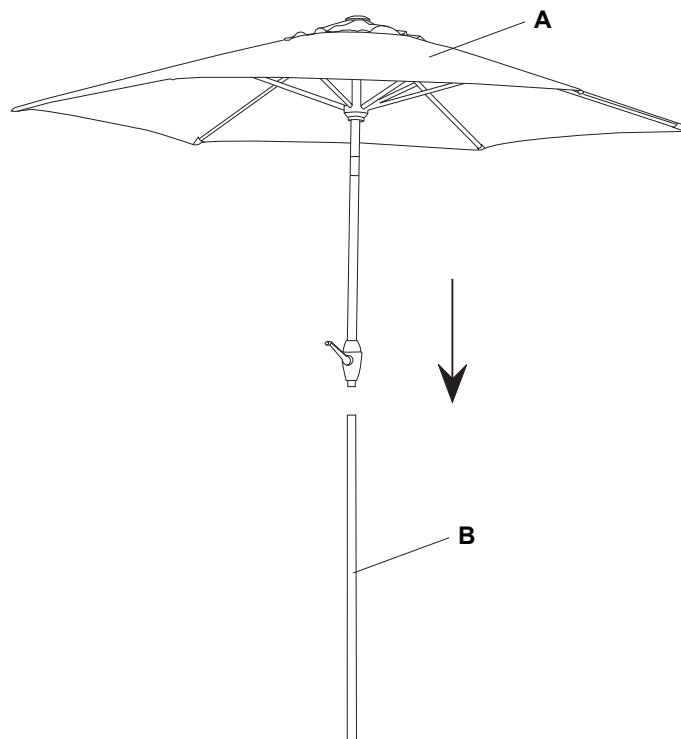

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: acs@americancustomerservice.com or Call toll-free: 1-888-577-9825

Made in / Hech en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com