

Use and Care Guide

PARKSIDE UMBRELLA BASE

Product Code: D71 M20762

KSN: 08837237-0

UPC Code: 885227002699

Date of Purchase: ____/____/____

Thank you for your purchase

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents..... 2

Safety Information..... 3

 Set Up Your Furniture Properly....3

 Examine your furniture..... 3

Warranty..... 3

Care and Maintenance..... 4

Pre-Assembly..... 4

 Planning Assembly..... 4

Assembly Instructions

Umbrella base..... 5

Safety Information

SET UP YOUR FURNITURE PROPERLY

- ☐ Ensure that all parts are assembled properly and fully tightened as per the instructions.
- ☐ When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.

EXAMINE YOUR FURNITURE

- ☐ Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

This limited warranty is extended to the original purchaser and applies to defects in material and workmanship of your patio furniture, provided your furniture is maintained with care and used only for personal, residential purposes.

WARRANTY

Frames are warranted to be free from defects in material or workmanship for a period of one (1) year.

Resin wicker is warranted to be free from defects in material or workmanship for a period of one (1) year.

Care and Maintenance

- ☐ When not in use, protecting furniture from the elements is highly recommended.
- ☐ Wipe frame with a lightly damp cloth and dry completely, do not use bleach or solvents.

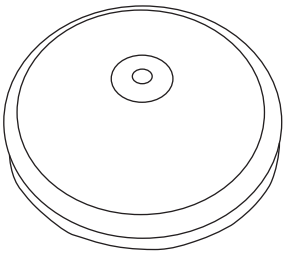
 
 
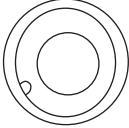
Pre-Assembly

 

 

PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 2-3 minutes for one person to complete all the assembly.

Assembly Instructions


Package Contents

CODE	PARTS	DESCRIPTION	QTY.
A		BASE	1
B		TUBE	1
C		SHORT SCREW	1
D		SPACER	1

CODE	PARTS	DESCRIPTION	QTY.
E		WASHER	1
F		SPRING HOLDER PAD	1
G		LONG SCREW	1
H		TUBE CAP (PREASSEMBLED)	1



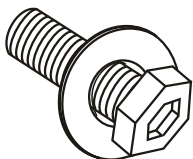
Safety Information




1. EVERY BOLT NEEDS TO BE USED WITH A WASHER.
2. DO NOT TIGHTEN BOLTS ALL THE WAY UNTIL YOU HAVE ASSEMBLED THE CHAIR. ONCE ASSEMBLY IS COMPLETE, GO BACK AND TIGHTEN EACH BOLT.

Assembly Instructions

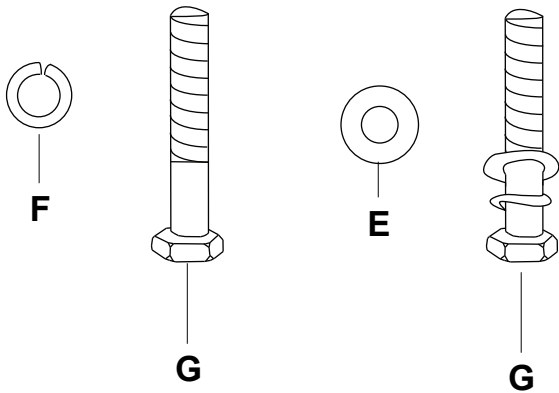
- 1 Step 1:** Thread the long screw (G) through the spring holder pad (F) and then the washer (E).



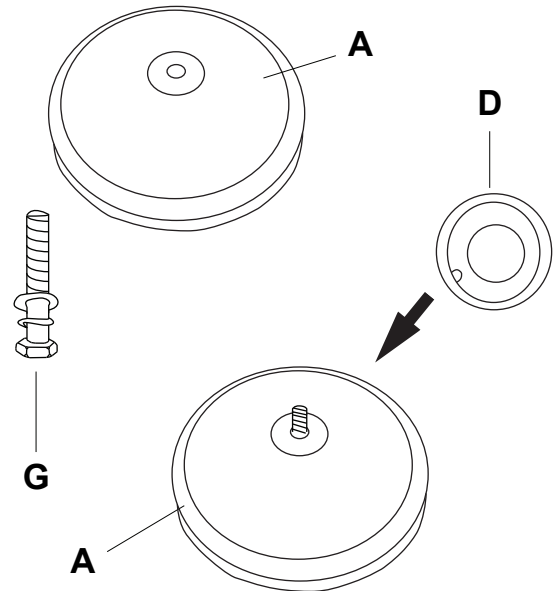- 2 Step 2:** Place the base (A) on level ground. Feed the long screw (G) through the bottom of the base (A). Place the spacer (D) on the top center of the base (A).



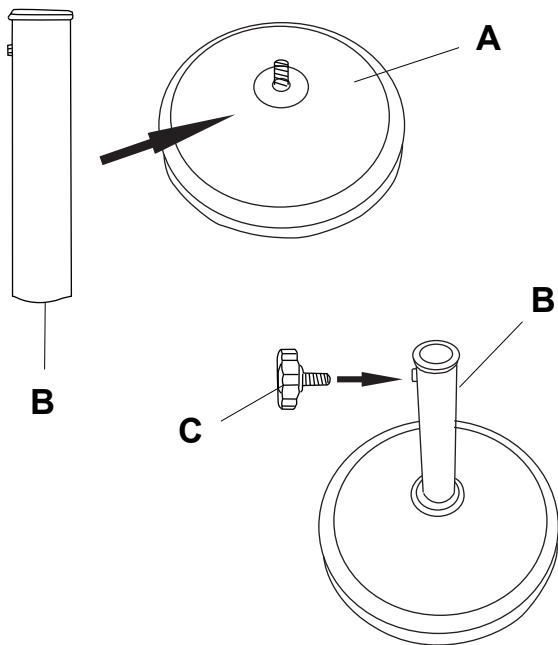- 3 Step 3:** Attach the tube (B) to the base (A). Attach the short screw (C) to the tube (B).



sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: acs@americancustomerservice.com or Call toll-free: 1-888-577-9825

Made in / Hech en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com