

Use and Care Guide

MARCO ISLAND CHAISE LOUNGE

Product Code: D71 M20760

KSN: 08837122-4

UPC Code: 885227002668

Date of Purchase: ____/ ____/

Thank you for your purchase

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents 2	2
Safety Information	3
Set Up your Furniture Properly	3
Examine your furniture	3
Warranty	3
Care and Maintenance	ļ
Pre-Assembly	4
Planning Assembly	1
Observe weight Limits	1
Assembly Instructions	
Chaise	5

Safety Information

SET UP YOUR FURNITURE PROPERLY

- □ Ensure that all parts are assembled properly and fully tightened as per the instructions.
- □ When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.

EXAMINE YOUR FURNITURE

□ Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

This limited warranty is extended to the original purchaser and applies to defects in material and workmanship of your patio furniture, provided your furniture is maintained with care and used only for personal, residential purposes.

WARRANTY

Frames are warranted to be free from defects in material or workmanship for a period of one (1) year.

Resin wicker is warranted to be free from defects in material or workmanship for a period of one (1) year.

Cushions are covered for a period of one (1) year against defects in material or workmanship

Care and Maintenance

When not in use, protecting furniture from the elements is highly recommended.
 Wipe frame with a lightly damp cloth and dry completely, do not use bleach or solvents.
 Wash cushions with mild solution of soap and water, rinse thoroughtly. Do not machine wash.

Pre-Assembly

PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 15 minutes for two person to complete all the assembly.

OBSERVE WEIGHT LIMITS

The recommended weight limits for the following products are listed below:

- □ Chair: 250lbs
- □ Swivel Chair: 250lbs□ Loveseat: 450lbs□ Ottoman: 150lbs
- □ Table: 50lbs
 □ Sofa: 650lbs
 □ Chaise: 250lbs





CAUTION: If you overload your furniture, injuries can occur.

Assembly Instructions

Package Contents

CODE	PARTS	DESCRIPTION	QTY.
A		RIGHT ARM	1
В		LEFT ARM	1
С		SEAT OF LOUNGE	1
D		BACK OF LOUNGE	1
E		SEAT CUSHION	1
F		BACK CUSHION	1

CODE	PARTS	DESCRIPTION	QTY.
G	(O) (((()) M6x20mm	BOLTS & WASHERS	6
н	⊕ ((()) (()) (()) (()) (()) (()) (()) (BOLTS & WASHERS	4
I		WASHERS	2
J		CAPS FOR BOLTS	12
K		CAPS FOR BOLTS	2
L	M6	ALLEN WRENCH	1




Safety Information




- 1. EVERY BOLT NEEDS TO BE USED WITH A WASHER.
- 2 .DO NOT TIGHTEN BOLTS ALL THE WAY UNTIL YOU HAVE ASSEMBLED THE CHAIR. ONCE ASSEMBLY IS COMPLETE, GO BACK AND TIGHTEN EACH BOLT.

Assembly Instructions

Step 1: Connect right arm A to the seat C, and connect left arm B to the seat

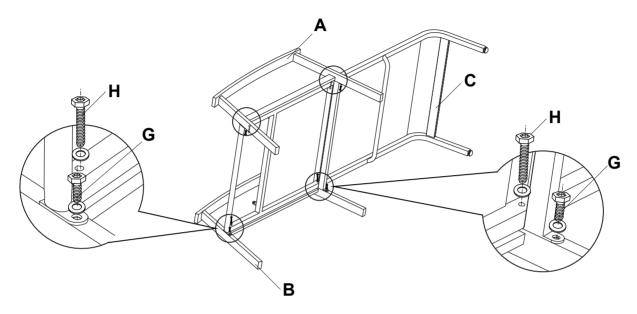

- 2 Step 2: Connect the back D to the Seat C
- **3 Step 3:** Fully tighten all the bolts then check and make adjustment as needed. Cover the bolts with caps K.

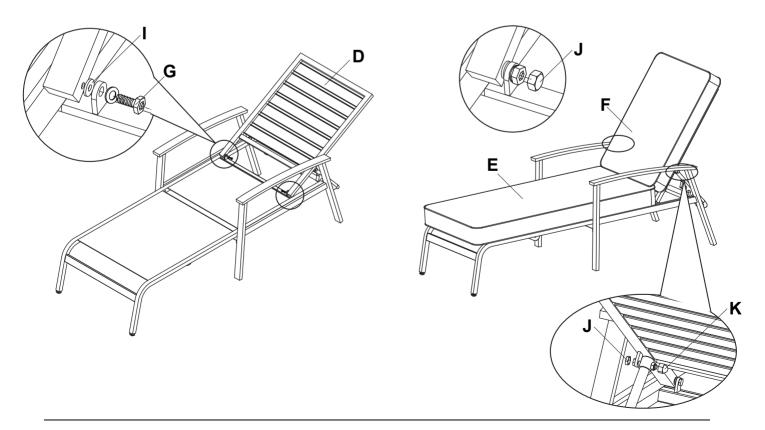

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: acs@americancustomerservice.com or Call toll-free: 1-888-577-9825

Made in / Hech en CHINA
Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products on-line at www.sears.com and www.kmart.com