

# Use and Care Guide

## PARKSIDE 5PC BAR SET

Product Code: D71 M20765

KSN: 08837235-4

UPC Code: 885227002729

Date of Purchase: \_\_\_\_/\_\_\_\_/\_\_\_\_

# Thank you for your purchase

---

**Thank you for your purchase!**

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

# Table of Contents

---

**Table of Contents..... 2**

**Safety Information..... 3**

    Set Up Your Furniture Properly... 3

    Examine your furniture..... 3

**Warranty..... 3**

**Care and Maintenance..... 4**

**Pre-Assembly..... 4**

    Planning Assembly..... 4

    Observe weight Limits..... 4

**Assembly Instructions**

**Bar Chair..... 5**

**Bar table..... 9**

## Safety Information

---

### SET UP YOUR FURNITURE PROPERLY

- ☐ Ensure that all parts are assembled properly and fully tightened as per the instructions.
- ☐ When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.

### EXAMINE YOUR FURNITURE

- ☐ Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

## Warranty

---

This limited warranty is extended to the original purchaser and applies to defects in material and workmanship of your patio furniture, provided your furniture is maintained with care and used only for personal, residential purposes.

### WARRANTY

Frames are warranted to be free from defects in material or workmanship for a period of one (1) year.

Resin wicker is warranted to be free from defects in material or workmanship for a period of one (1) year.

Cushions are covered for a period of one (1) year against defects in material or workmanship

**Exclusions:** Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly is not covered. Discoloration and fading of the finish or fabrics as a result of chemicals or spills are not covered. Glass table top breakage and corrosion or rusting of hardware is not covered. If, within the stated warranty period, this product is found to be defective in material or workmanship, the purchaser must contact the customer service department at 1-888-577-9825. The manufacturer, at its option, will repair or replace the defective parts. Proof of purchase (date register receipt) is required for warranty claims. It remains the customer's responsibility to pay for freight and packing charges to and from the service center. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

**Customer service 1-888-577-9825**

---

## Care and Maintenance

---

- ☐ When not in use, protecting furniture from the elements is highly recommended.
- ☐ Wipe frame with a lightly damp cloth and dry completely, do not use bleach or solvents.
- ☐ Wash cushions with mild solution of soap and water, rinse thoroughly. Do not machine wash.

## Pre-Assembly

---

### PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 45 minutes for two person to complete all the assembly.

### OBSERVE WEIGHT LIMITS

The recommended weight limits for the following products are listed below:




 

- ☐ Chair: 250lbs
- ☐ Swivel Chair: 250lbs
- ☐ Loveseat: 450lbs
- ☐ Ottoman: 150lbs
- ☐ Table: 50lbs
- ☐ Sofa: 650lbs
- ☐ Chaise: 250lbs







**CAUTION:** If you overload your furniture, injuries can occur.

# Assembly Instructions

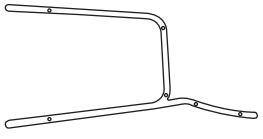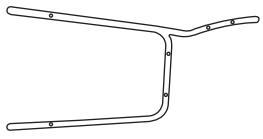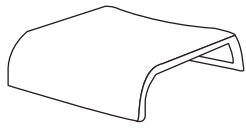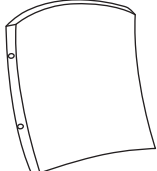
## Package Contents

 CODE	PARTS	DESCRIPTION	QTY.
<b>A</b>		RIGHT FRAME	4
<b>B</b>		LEFT FRAME	4
<b>C</b>		SEAT OF CHAIR	4
<b>D</b>		SET SUPPORTER	4
<b>E</b>		BACK OF CHAIR	4

CODE	PARTS	DESCRIPTION	QTY.
<b>F</b>	 M6X15MM	BOLTS & WASHERS	16
<b>G</b>	 M6X35MM	BOLTS & WASHERS	32
<b>H</b>	 M6	CAPS FOR BOLTS	48
<b>I</b>	 M6	ALLEN WRENCH	1



## Safety Information

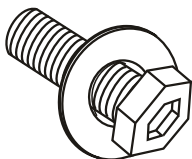


1. EVERY BOLT NEEDS TO BE USED WITH A WASHER.
2. DO NOT TIGHTEN BOLTS ALL THE WAY UNTIL YOU HAVE ASSEMBLED THE CHAIR. ONCE ASSEMBLY IS COMPLETE, GO BACK AND TIGHTEN EACH BOLT.


# Assembly Instructions

Note: Do not tighten bolts all the way until you have assembled the chair. Once assembly is complete, go back and tighten each bolt.

## 1 Step 1: Connect back panel E to frame A

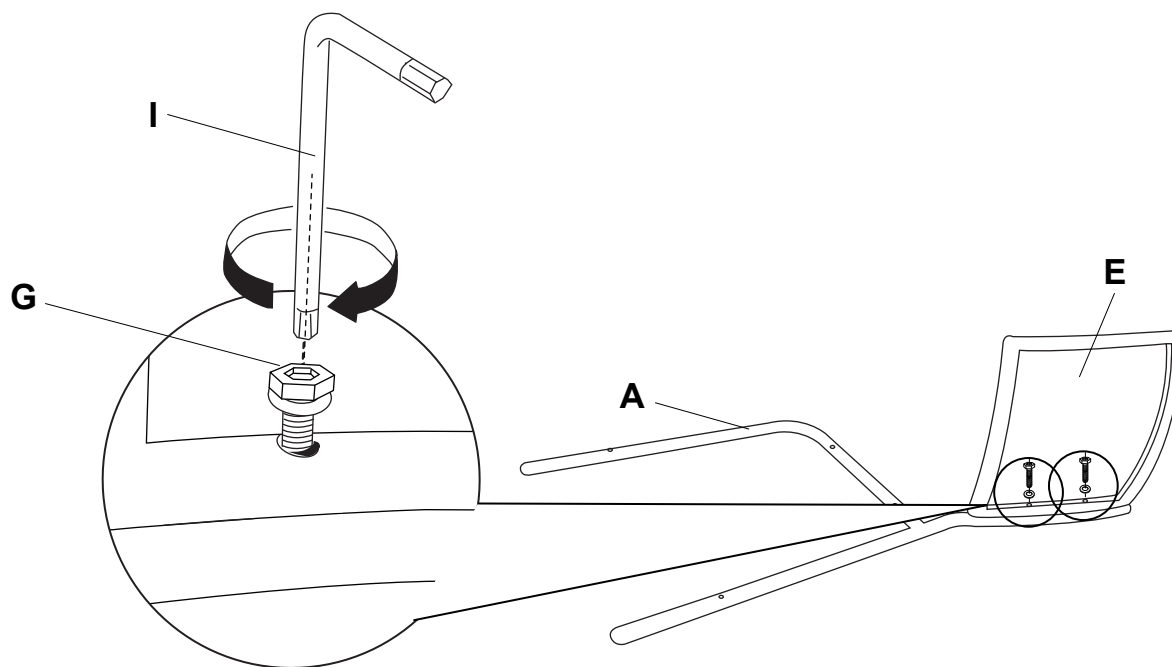


## 2 Step 2: Connect seat panel C to frame A

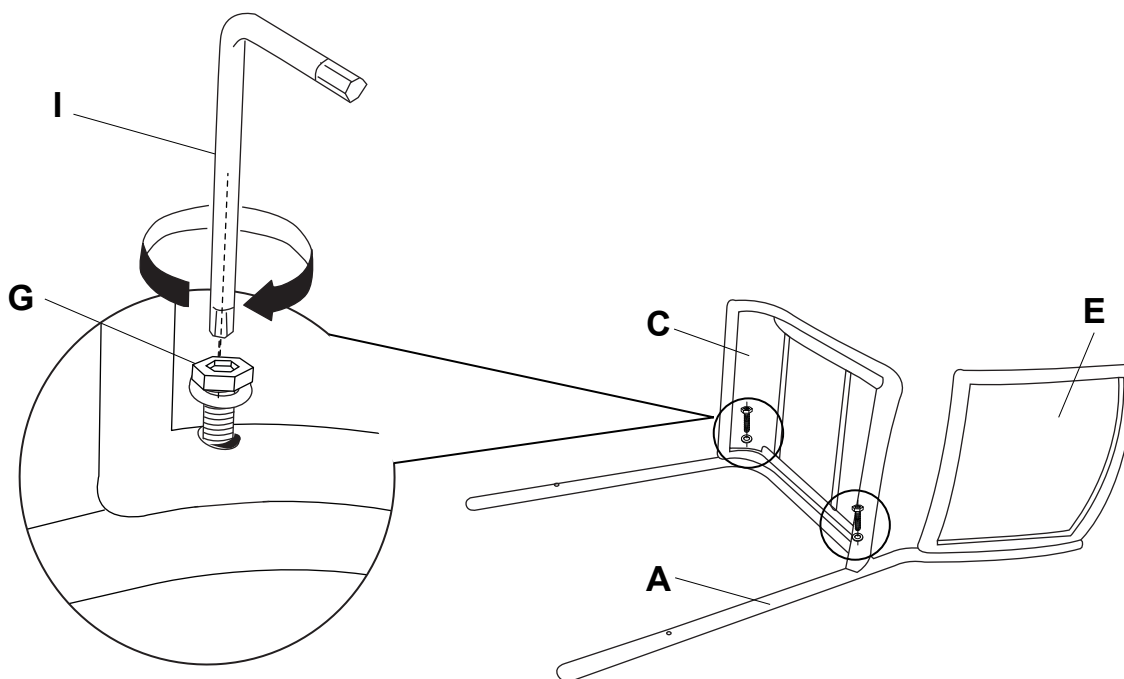


## Assembly Instructions

### ③ Step 3: Connect footrest D to frame A

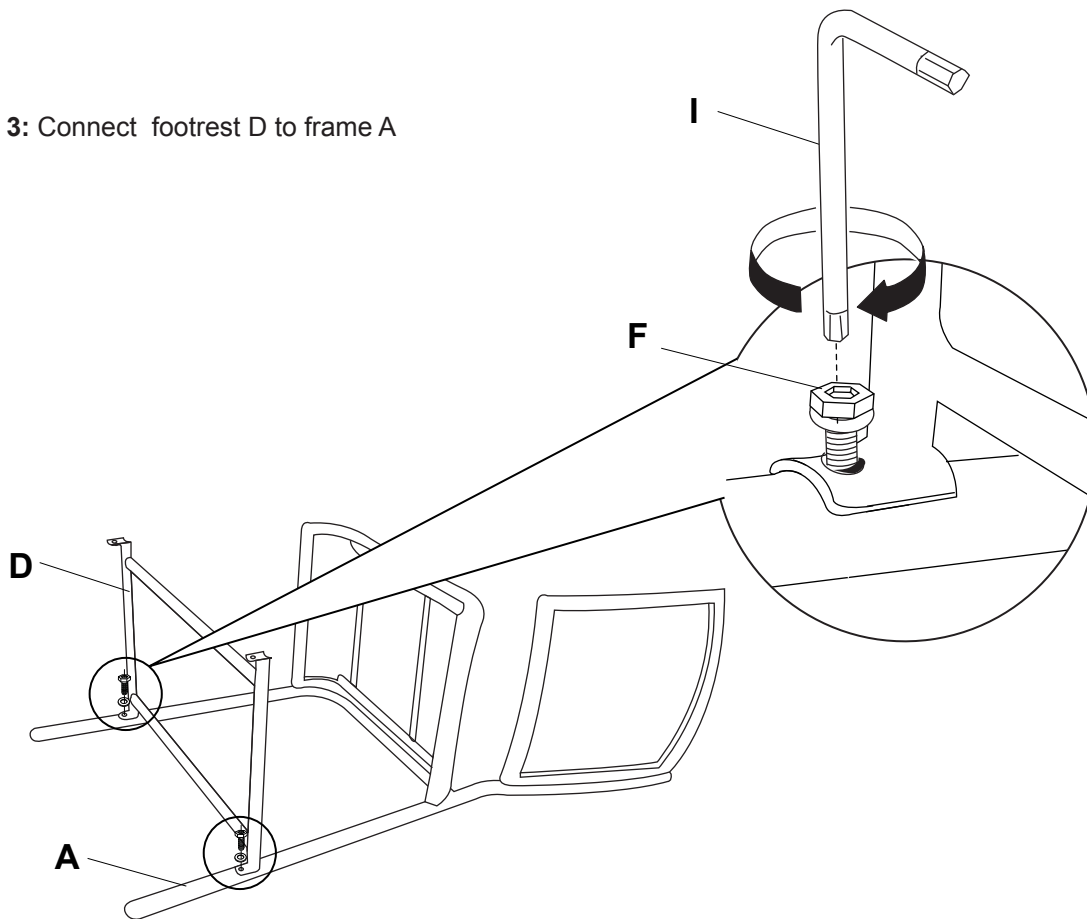


### ④ Step 4: Connect frame B to back panel E

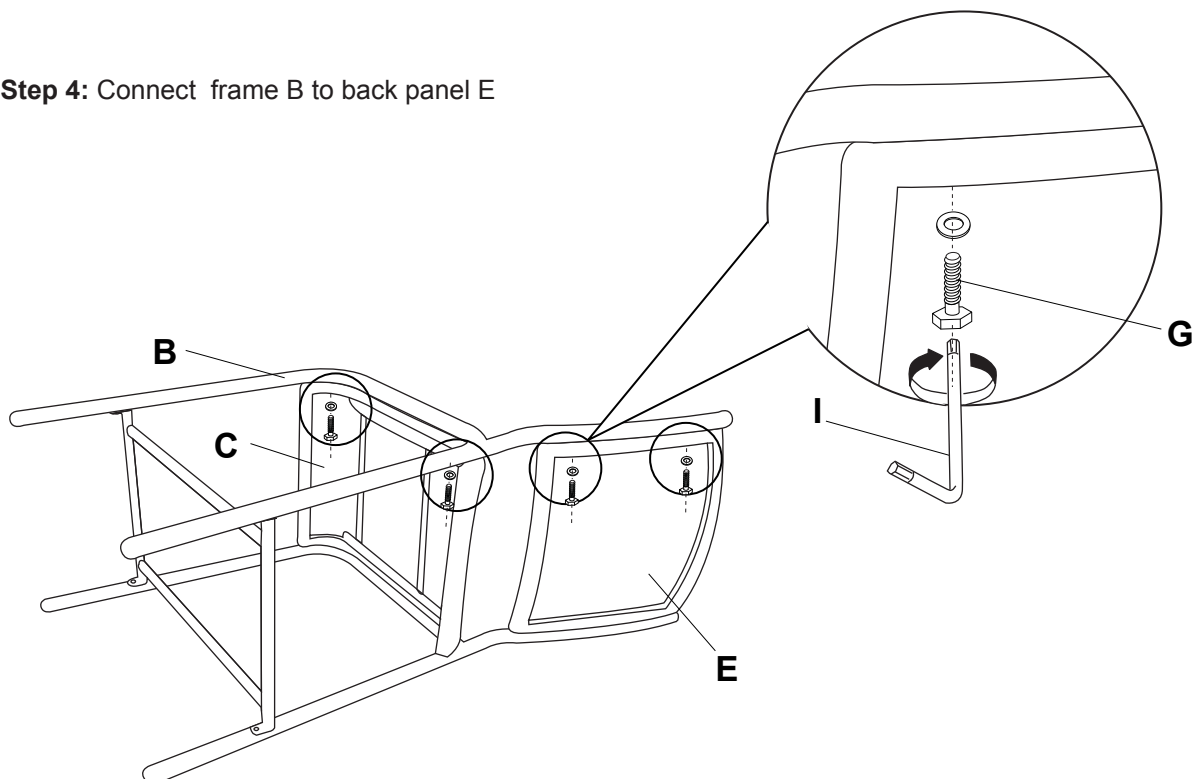


# Assembly Instructions

## 5 Step 5: Connect frame B to set support D

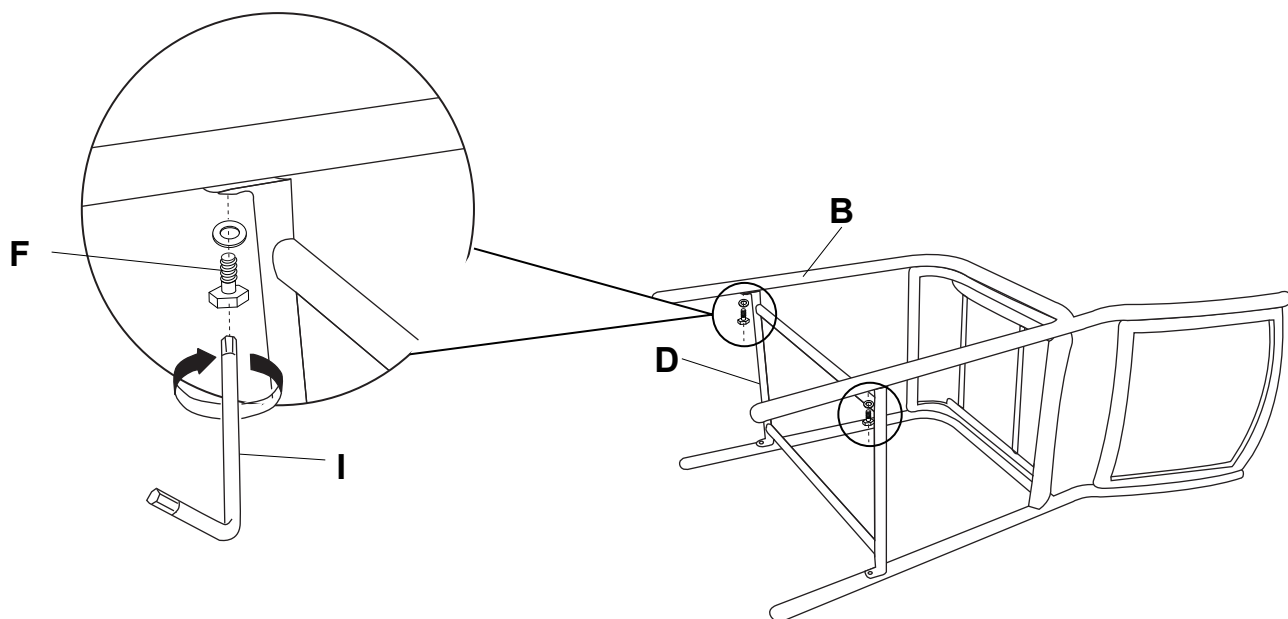




## 6 Step 6: Cover the bolts with caps H


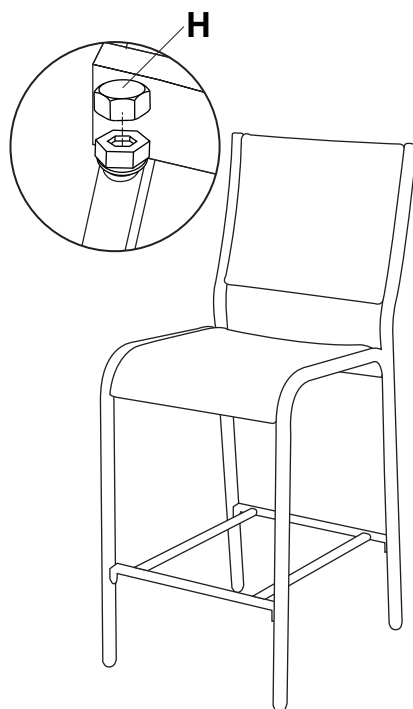







# Assembly Instructions

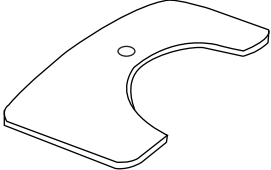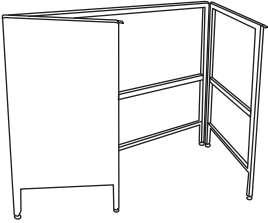 
## Package Contents

  CODE	PARTS	DESCRIPTION	QTY.
<b>A</b>		TABLE TOP	1
<b>B</b>		TABLE SIDE PANEL	1
<b>C</b>		TABLE SHELF	1

 CODE	PARTS	DESCRIPTION	QTY.
<b>D</b>	 M6x15mm	BOLTS & WASHERS	2
<b>E</b>	 M6X20mm	BOLTS & WASHERS	7
<b>F</b>	 M6x40mm	BOLTS & WASHERS	2
<b>G</b>	 M6	CAPS FOR BOLTS	11
<b>H</b>	 M6	ALLEN WRENCH	1



## Safety Information

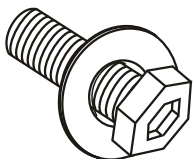


1. EVERY BOLT NEEDS TO BE USED WITH A WASHER.
- 2 .DO NOT TIGHTEN BOLTS ALL THE WAY UNTIL YOU HAVE ASSEMBLED THE CHAIR.  
ONCE ASSEMBLY IS COMPLETE, GO BACK AND TIGHTEN EACH BOLT.

# Assembly Instructions


Note: Do not tighten bolts all the way until you have assembled the table. Once assembly is complete, go back and tighten each bolt.

**Step 1/2/3:** Connect folding wicker panel B to glass top A


**1**

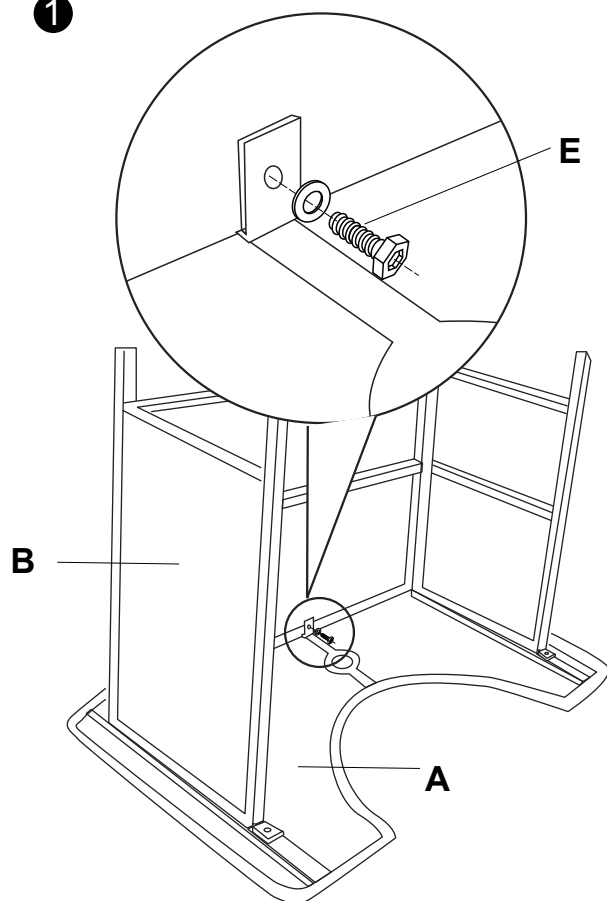

**2**

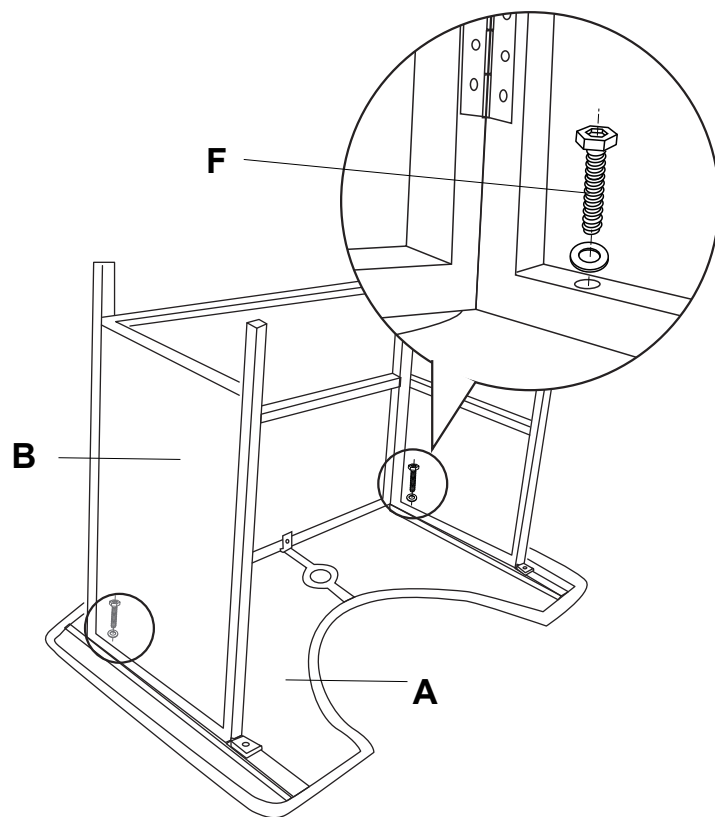


**3**

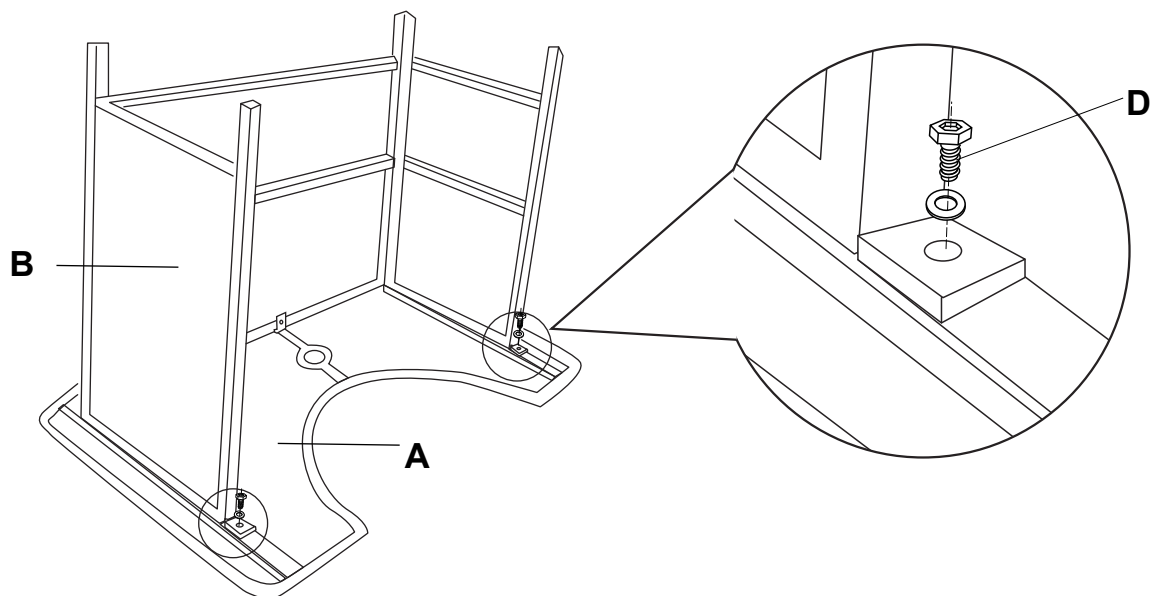


# Assembly Instructions

Step 4/5: Connect shelf C to folding wicker panel B

4

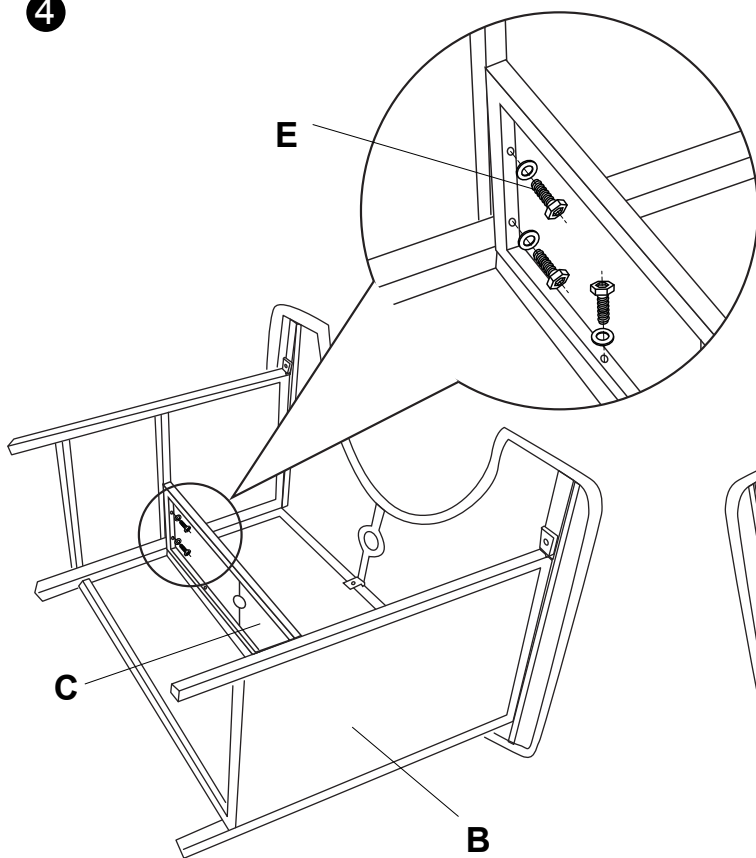


5

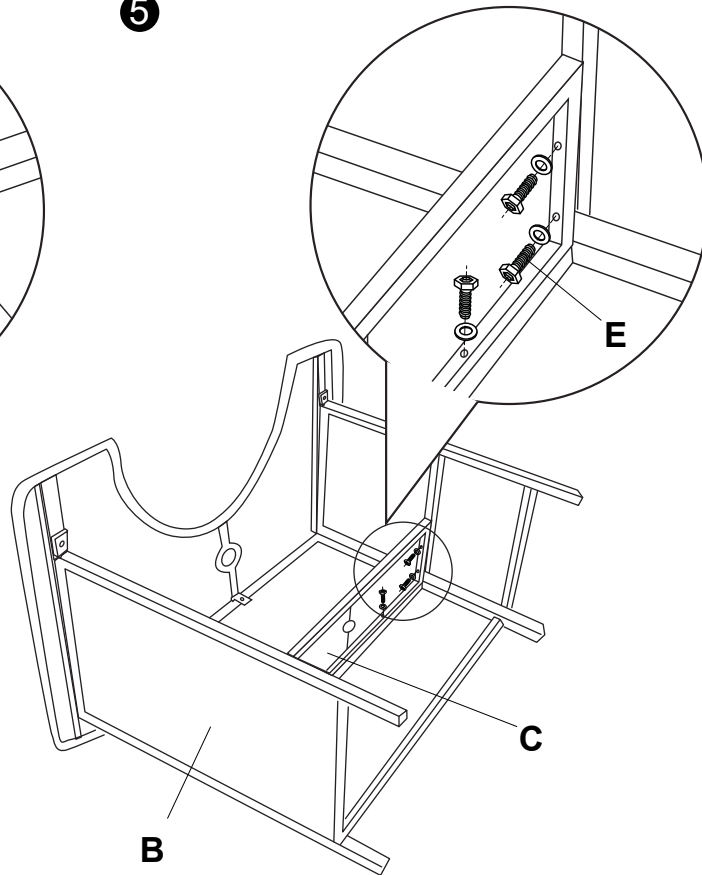

6 Step 6: Cover the bolts with caps G.

6

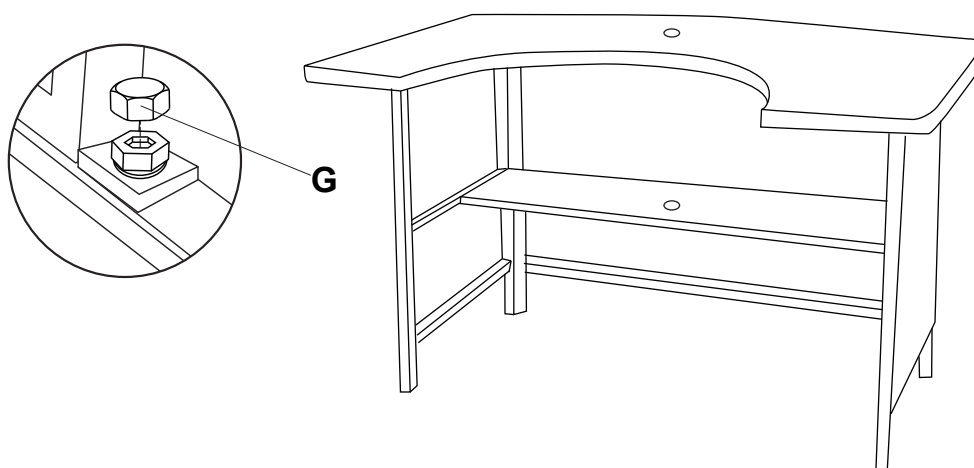

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: [acs@americancustomerservice.com](mailto:acs@americancustomerservice.com) or Call toll-free: 1-888-577-9825

SERVICE HOURS: Monday – Friday 8:00AM to 8:00PM EST

Made in / Hech en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products  
on-line at [www.sears.com](http://www.sears.com) and [www.kmart.com](http://www.kmart.com)