
MASON GREEN

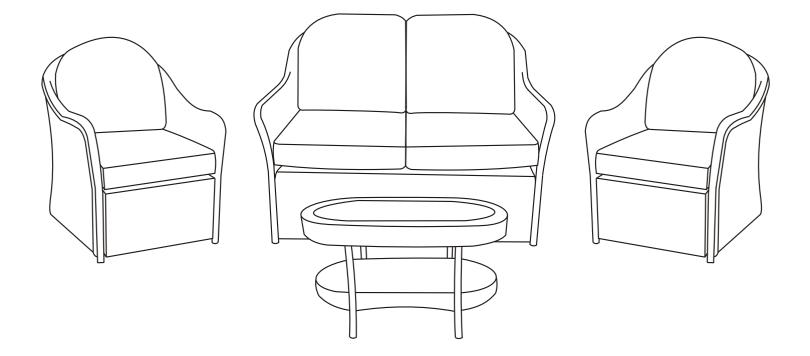

USE AND CARE GUIDE

DURHAM 4 PC DEEP SEATING SET

Product Code: D71 M34646 KSN:0-05623665-6 UPC Code: 0-28776-12139-2

Date of Purchase: ____/ ____/

Thank you for your purchase

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents
Safety Information 3
Set Up Your Furniture Properly 3
Examine Your Furniture
Warranty 3
What is Covered 3
What is Not Covered 3
Care and Maintenance 4
Pre-Assembly 5
Planning Assembly5
Hardware Included5
Observe Weight Limits5
Package Contents6
Assembly Instructions
Chair7

Loveseat	10
Coffee Table	13

SET UP YOUR FURNITURE PROPERLY

- □ Ensure that all parts are assembled properly and fully tightened as per instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a stable position.

EXAMINE YOUR FURNITURE

□ Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before further use.

Warranty

1 YEAR WARRANTY FOR FRAME, RESIN WEAVE AND CUSHIONS WHAT IS COVERED

We warrant to the original purchaser for one year, from the date of purchase, that the frame, resin weave and cushions will be free from manufacturing defects. This warrant also covers peeling, crackling, blistering, discoloration, or fading for this one year period.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, acts of nature, fire, freezing, and abusive use. Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered. Glass tabletop breakage and corrosion or rusting of hardware are not covered. In addition, purchased parts are not covered under this warranty. Proof of purchase (dated register receipt) is required for warranty claims. We reserve the right to make substitutions with similar merchandise, if the model is no longer in production. Warranty is to the original purchaser and is not transferable. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

WARRANTY

This limited warranty is extended to the original purchaser and applies to defects in material and workmanship of your patio furniture, provided your furniture is maintained with care and used only for personal, residential purposes.

Resin wicker is warranted to be free from defects in material or workmanship for a period of one (1) year.

Warranty

Cushions are covered for a period of one (1) year against defects in material or workmanship.

Frames are warranted to be free from defects in material or workmanship for a period of one (1) year.

Exclusions: Items used for commercial, contract, or other nonresidential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly is not covered. Discoloration and fading of the finish or fabrics as a result of chemicals or spills are not covered. Glass table top breakage and corrosion or rusting of hardware is not covered. If, within the stated warranty period, this product is found to be defective in material or workmanship, the purchaser must contact the customer service department at 1-800-327-2978. The manufacturer, at its option, will repair or replace the defectives parts. Proof of purchase (date register receipt) is required for warranty claims. It remains the customer's responsibility to pay for freight and packing charges to and from the service center. Warranty is to the original purchaser and is nontransferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Care instructions: Protecting furniture from the elements, when not in use is highly recommended. Wipe frame With a lightly damp cloth and dry completely, do not use bleach or solvents. Wash cushions with mild solution of soap and water, rinse thoroughly. Do not machine wash. **Customer service 1-800-327-2978**

Care and Maintenance

- □ Wash the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly.
- Cushions may also be cleaned by hand with a mild solution of soap and water. Rinse the cushion cover thoroughly and allow to drip dry. The back cushion and pillow should be spot cleaned with a soft cloth. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics. Never use cleaners that contain acid or abrasive materials.
- Use and operation: To improve the lifespan of this furniture, cover when not use and store in a dry place in the off season.

PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 90 minutes for two people to complete all the assembly.

OBSERVE WEIGHT LIMITS

The recommended weight limits for the following products are listed below:

- □ Chair: 250 lbs
- □ Loveseat: 450 lbs
- □ Table: 50 lbs



CAUTION: If you overload your furniture, injuries can occur.



 
NOTED:Hardware not shown to actual size.



....











Part	Description	Size	QTY.
AA	LOCKING NUTS	(Φ8mm)	10
BB	WASHERS	(Φ8mm)	22
СС	CAPS FOR NUTS	(Φ8mm)	10
DD	WRENCH	(13#)	1
11	BOLTS	(Ф8x12mm)	4
JJ	ALLEN WRENCH	(5mm)	1
MM	BOLTS	(Ф8x20mm)	12
NN	CAPS FOR BOLTS	(Φ8mm)	16

Package Contents

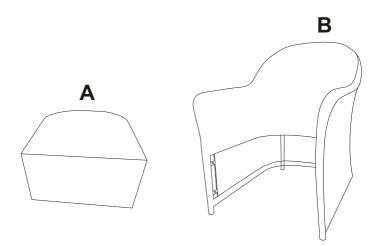


PART	DESCRIPTION	QUANTITY
A	THE SEAT OF CHAIR	1
В	THE BACK OF CHAIR	1

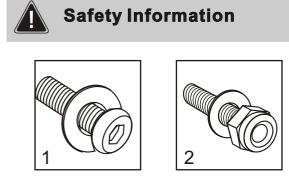

 EVERY BOLT NEEDS TO BE USED WITH A WASHER.
WHEN SCREWING THE LOCKING NUT "AA" INTO PLACE, THE WHITE SIDE SHOULD FACE TO THE OUTSIDE.


Attaching the seat to the back


- □ INSERT TWO PINS ON SEAT "A" IN TO HOLES ON BACK "B",FASTEN WITH LOCKING NUT "AA" HALF THE WAY USING WRENCH "DD".
- □ FIXED BOLTS ON INNER SIDES OF "B" GOING THROUGH THE BRACKET HOLES ON "A". TIGHTEN WITH BOLTS "MM" HALFWAY USING ALLEN WRENCH "JJ".

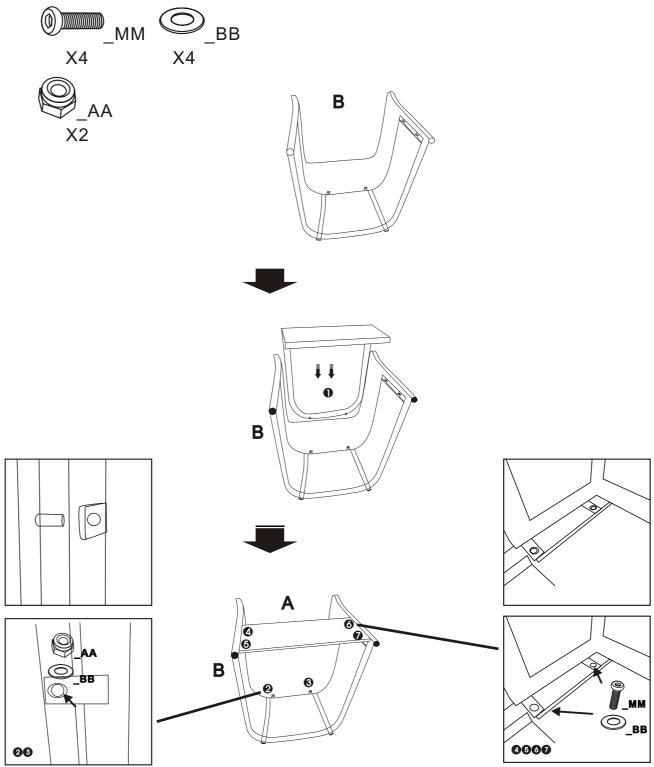


2Adding the caps

□ CHECK AND MAKE ADJUSTMENT AS NEEDED, FULLY TIGHTEN THE NUTS "AA" WITH WRENCH "DD" AND BOLTS WITH ALLEN WRENCH "JJ". COVER THE NUTS WITH CAPS "CC" AND THE BOLTS WITH CAPS "NN"

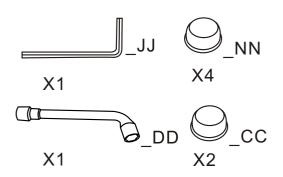


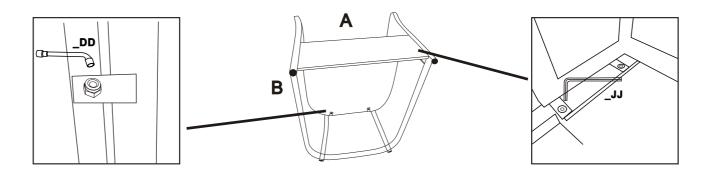




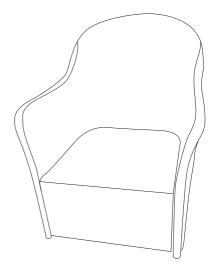

Package Contents

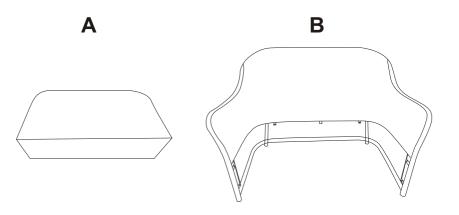


PART	DESCRIPTION	QUANTITY
A	THE SEAT OF LOVESEAT	1
В	THE BACK OF LOVESEAT	1

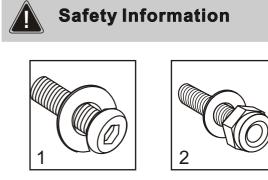

 EVERY BOLT NEEDS TO BE USED WITH A WASHER.
WHEN SCREWING THE LOCKING NUT "AA" INTO PLACE, THE WHITE SIDE SHOULD FACE TO THE OUTSIDE.


Attaching the seat to the back


- $\hfill\square$ INSERT TWO PINS ON SEAT "A" IN TO HOLES ON BACK "B", FASTEN WITH LOCKING NUT "AA" HALF THE WAY USING WRENCH "DD" .
- □ FIXED BOLTS ON INNER SIDES OF "B" GOING THROUGH THE BRACKET HOLES ON "A". TIGHTEN WITH BOLT "MM" HALFWAY USING ALLEN WRENCH "JJ".

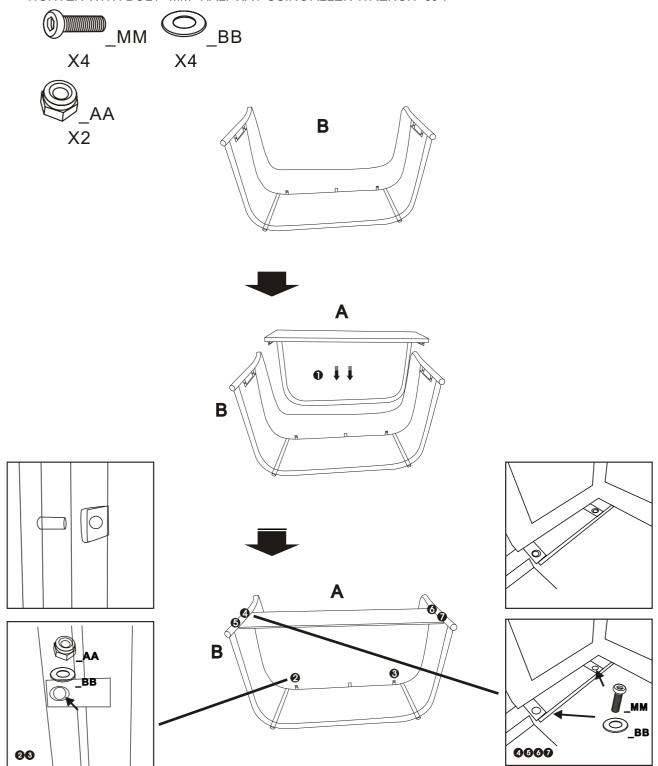


2Adding the caps

 CHECK AND MAKE ADJUSTMENT AS NEEDED, FULLY TIGHTEN THE NUTS "AA" WITH WRENCH "DD" AND BOLTS WITH ALLEN WRENCH "JJ".
COVER THE NUTS WITH CAPS "CC" AND THE BOLTS WITH CAPS "NN"

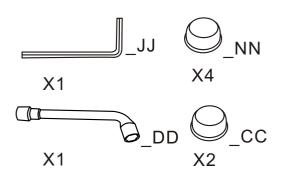


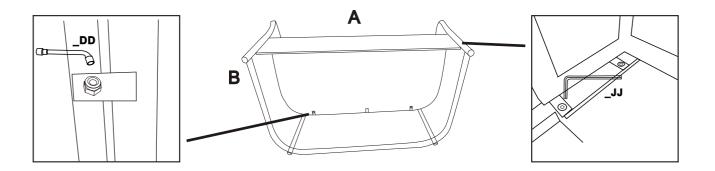




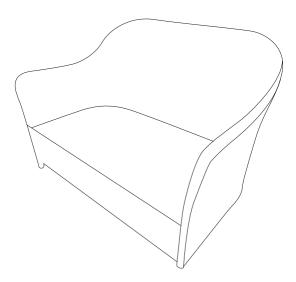

Package Contents

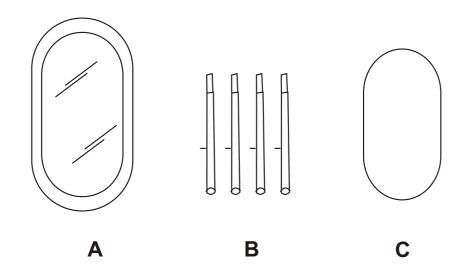

PART	DESCRIPTION	QUANTITY
A	TABLE TOP	1
В	LEGS	4
С	LOWER SHELF	1

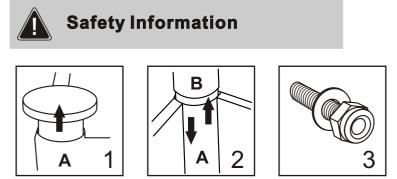

1.REMOVE THE PLASTIC PROTECTIVE CAPS BEFORE ASSEMBLY. 2. YOU MAY NEED TO MAKE ADJUSTMENTS TO THE FOUR LEGS ENSURE THAT THE TABLE IS LEVEL. 3.EVERY NUT NEEDS TO BE WITH A WASHER.


Assembly Instructions


Attaching the leg to the top

PUT THE LEGS "B" METAL SIDE INTO THE FOUR HOLES OF TOP "A".

ATTENTION: THE LEGS "B" MUST BE PUT AS ILLUSTRATED.


FASTEN WITH BOLTS "II" AND TIGHTEN.

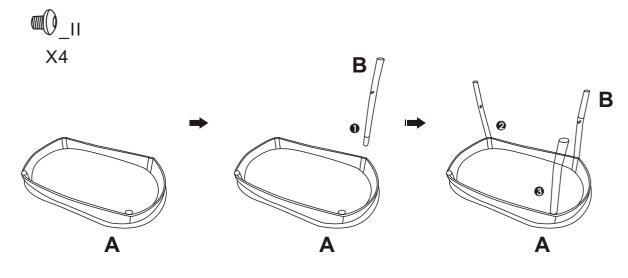

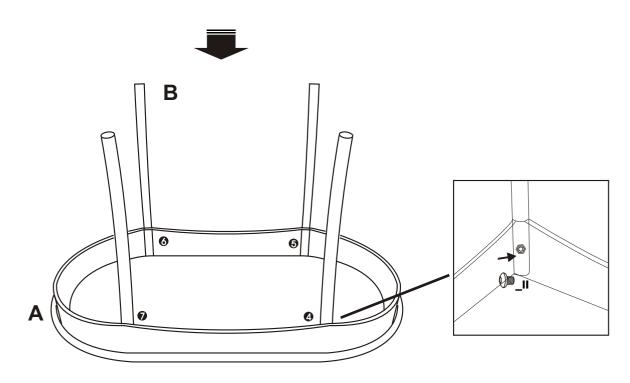


2Attaching the shelf

□ FIX THE BOLTS ON THE SHELF "C" AND USE LOCKING NUTS "AA" TIGHTEN IT BY HAND.

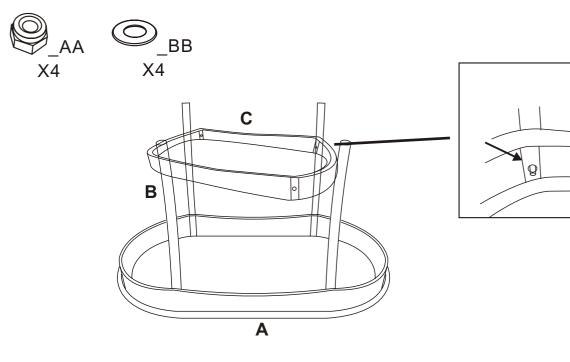




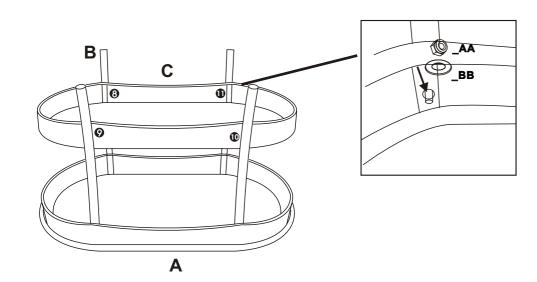

Assembly Instructions

3Adding the caps

- CHECK AND MAKE ADJUSTMENT AS NEEDED, FULLY TIGHTEN THE NUTS "AA" WITH WRENCH "DD" AND BOLTS WITH ALLEN WRENCH "JJ".
- $\hfill\square$ \hfill COVER THE NUTS WITH CAPS "CC".

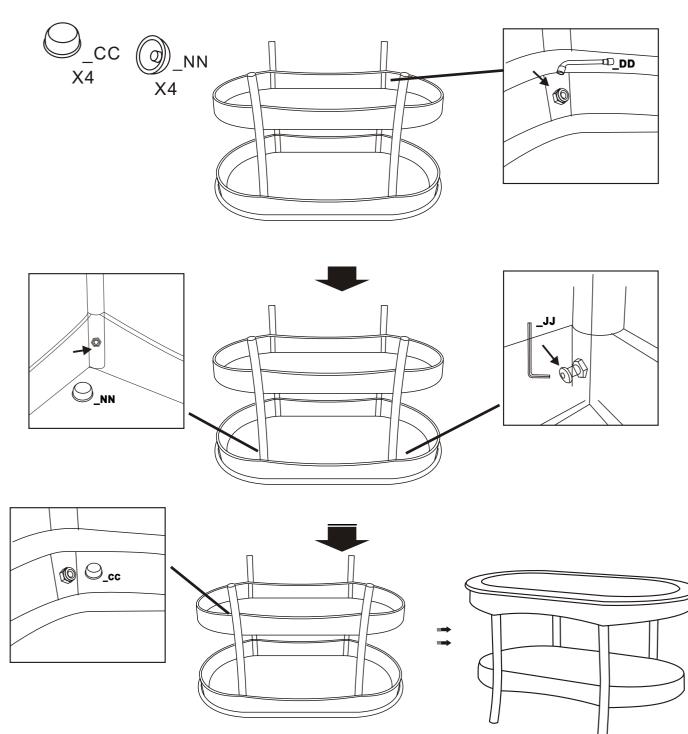

Customer Service





HOME OFFICE: 53-06 GRAND AVENUE, MASPETH, NY 11378 FAX: (718) 417-0910 CUSTOMER SERVICE HOT LINE: 1-800-327-2978 SERVICE HOURS: MONDAY-FRIDAY 9:00AM-4:30PM (EST) E-MAIL: info@grandbasketco.com



Please refer to part numbers when reordering For questions or comments about product: Email: info@grandbasketco.com or Call toll-free: 1-800-327-2978

Made in / Hecho en CHINA Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179 sears.com See our extensive assortment of outdoor living products on-line at www.sears.com and www.kmart.com