

Use and Care Guide

10' x 12' Privacy Gazebo

Product Code: D71 M34521

UPC Code: 6939622430039

Date of Purchase: __/__/__

Thank you for your purchase

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort and style of your new gazebo. This unit is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furnishing needs, so, from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents	2
Safety Information	3
Regulations	3
Pre-Assembly	3
Heat sources	3
Assembly precaution	3
Warranty	4
What is Covered	4
Exclusions	4
Care and Maintenance	5
Operation	5
Maintenance	5
Care and Cleaning	5
Pre-Assembly	5-6
Planning Installation	5
Tools required	6
Hardware package	6
Parts List	7
Assembly Instructions	8-14

Safety Information

Regulations

IMPORTANT: *It is the consumer's responsibility to comply with any building codes, ordinances, zoning limitations or local homeowner's restrictions and obtain any required permit before purchase and installation of this product.*

Pre-Assembly

- When assembling and using this product, basic safety precautions must always be followed to reduce risk of personal injury and damage to the product or surroundings.

Heat Sources

- **WARNING:** *KEEP ALL FLAME AND HEAT SOURCES AWAY FROM TENT FABRICS AND CURTAINS. The fabric(s) meet the flammability requirements of CPAI-84, however, the fabric(s) may burn if left exposed to any continuous flame source. Also, the application of any foreign substance to the fabric(s) may render the flame-resistant properties ineffective.*

Assembly Precautions

- Be sure to keep all children and pets away from assembly area.
- Some parts contain sharp edges. Wear protective gloves when handling these items.
- It is recommended that, for safety issues, at least 2 people assemble the gazebo. This unit will take approximately 3 hours to set up. You must schedule enough time to complete the assembly. You cannot leave the unit unattended if it is not fully assembled, even if it is already anchored to the ground.
- You should begin the assembly no less than 6 feet from any fixed obstruction such as fences, a garage, a house, overhanging branches, electrical wires or laundry lines.
- You must assemble your unit on level ground or platform. The unit must be anchored to either wood, stone tiles or concrete using appropriate screws for that flooring, or anchored into the earth or grass with proper camp nails or anchors (See Page 13: Step 6.3) Failure to do so may nullify the Warranty.
- Check that all screws are tight before and during usage.
- Do not place any type of heat conductor under, or within 5 feet of, the unit including, but not limited to a barbeque or space heater.
- If at any time you require assistance to assemble your gazebo contact the Hengya Trade customer service team at 1-855-379-7070 or email service@hengyatrade.com.

Warranty

We warrant to the original purchaser for one year, from the date of purchase, that the frame, roof canopy and all curtains and screen netting will be free from manufacturing defects. Warranty is to the original purchaser and is not transferable.

Your gazebo has been created for three seasons. The frame structure may be left out year-round however the roof will not resist to cold and heavy and/or continuous snow accumulation therefore you **MUST** remove the roof canopy, mosquito netting (and curtain if you have purchased it) and store them safely in a dry area throughout these conditions. Failure to do so will nullify the Warranty.

What is Covered

The 10'X12' Privacy Gazebo is guaranteed against defective materials from the factory or based on normal use of the product as follows:

- 1 year on the frame
- 1 year on the frame's finish (rust)
- 1 year on the fabrics (discoloration)
- Limited warranty applicable on parts only

Exclusions

The following is not covered:

It remains the consumer's responsibility for freight and packaging charges to and from our service center.

The gazebo used for commercial, contract, or other non-residential purposes, or items damaged due to acts of Nature, or extreme weather conditions such as thunderstorms, windstorms or hailstorms, vandalism, misuse, or improper assembly is not covered.

Discoloration and fading of the finish or fabrics as a result of chemicals or spills are not covered. Corrosion or rusting of hardware is not covered. Damages due to the gazebo not anchored down properly are not covered. Holes in the Polycarbonate roof panels or water infiltration are not covered.

In addition, purchased parts are not covered under this warranty. Proof of purchase (dated register receipt) is required for warranty claims. We reserve the right to make substitutions with similar merchandise, if the model is no longer in production.

As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

For any inquiries concerning the Warranty of your gazebo contact the Hengya Trade customer service team at 1-855-379-7070 or email service@hengyatrade.com.

Care and Maintenance

Operations

- ❑ Your 10'X12' Privacy Gazebo has been created for three seasons however the roof will not resist to cold and heavy and / or continuous snow accumulation. The frame may be left up year-round however you **MUST** remove the roof canopy during winter. For areas where there is severe cold during winter it is recommended that you remove the Roof Canopy, Mosquito Netting (and Curtain if you have purchased it) and store them safely in a dry area throughout these conditions.
- ❑ The unit must always remain anchored properly to the floor or ground using the appropriate screws to enjoy safe usage of the gazebo.
- ❑ Check periodically that all screws are tight to maintain the solidity of the structure.

Maintenance

If this shelter needs repairs, DO NOT RETURN THE PRODUCT TO SEARS.

- ❑ In case of defective parts or if a problem occurs while using the product, please contact the Hengya Trade customer service team at 1-855-379-7070 or email service@hengyatrade.com
- ❑ Have your USE AND CARE GUIDE ready and the part(s) number from the Package Contents list to order replacement parts.

Care and Cleaning

- ❑ For cleaning, use a domestic soap or detergent and wash with warm water using a sponge or fabric. Rinse with clean water.
- **IMPORTANT:** *DO NOT USE ANY ABRASIVE-TYPE DETERGENTS AND / OR ROUGH SPONGES OR FABRICS TO CLEAN THE POLYESTER ROOF CANOPY.*
- ❑ Do not put any Mosquito Netting (and Curtain) in any washing machine or dryer.

Pre-Assembly

Planning Installation

- ❑ Make sure that all the parts are in the box before starting the assembly.
- ❑ Some parts may contain sharp edges. Wear protective gloves when handling these items.
- ❑ Follow all assembly instructions to assure proper construction.
- ❑ In order to avoid damage to the shelter and its components, place all parts on a soft surface and use appropriate tools. Do not use the structure as a support; a stepladder is recommended.
- ❑ Keep this USE AND CARE GUIDE and parts list for future reference.

Pre-Assembly con't

Tools Required

Tools Required (Not included in boxes)



LEVEL



PHILLIPS SCREW DRIVER



STEPLADDER

You may also need:



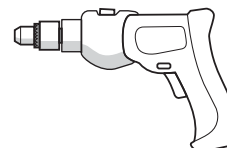 
SAFETY GOGGLES



SAFETY HAT



GLOVES



DRILL

 
 
 
 
 
 
 
 
 
 
 
 

 
 


Hardware Package Included

■ **NOTE:** *Hardware shown is not actual size.*

1#		8
Standard Bolt (M5x15)		
2#		48
Bolt (M6x16)		
3#		8
Bolt / Dome Nut (M6x50)		
4#		12
Camp Nails		
5#		1
Allen Key		
6#		1
Wrench		

Pre-Assembly con't

Parts List

A		Qty 4
Column		
B		Qty 4
Base		
C		Qty 4
Column Cap		
D		Qty 2
Short Track		
D1		Qty 2
Short Track		
E		Qty 2
Long Track		
E1		Qty 2
Long Track		
F		Qty 4
Corner Roof Bar		
G		Qty 4
Roof Bar		
H		Qty 1
Central Roof		
P		Qty 2
Corner Roof Connector		
J		Qty 1
Central Roof Connector		
K		Qty 1
Roof Canopy		
L		Qty 4
Curtain		
M		Qty 4
Mosquito Netting		
M1		Qty 4
Band		
N		Qty 104
Hooks		

Assembly Instructions

Tips

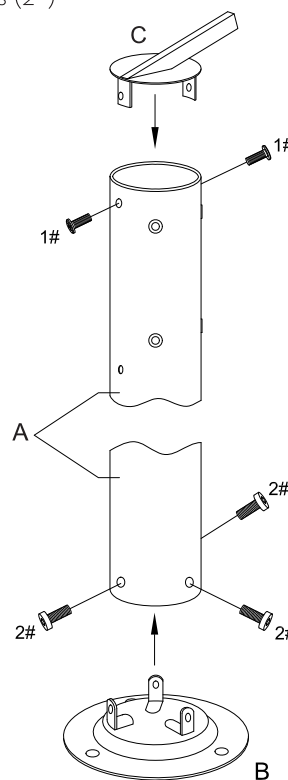 
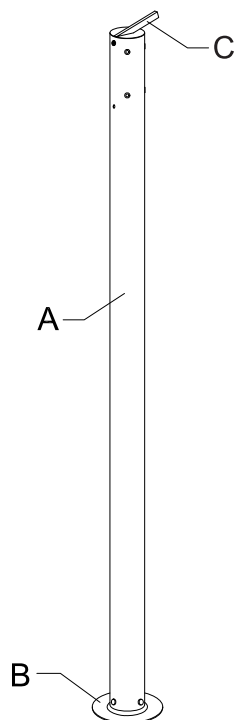 
- You should begin the assembly no less than 6 feet from any fixed obstruction such as fences, a garage, a house, overhanging branches, electrical wires or laundry lines.
- While assembling the unit do not always tighten the bolts until the entire step is completed.
- Use a drill that has a narrow body or has an extension adaptor for certain connections and be sure to use low torque so as not to damage the bolt heads.

STEP 1

 

1.1: Connect the Column Caps (C) to each of 4 Columns (A) using Bolts (1#)

1.2: Connect Bases (B) to each of 4 Columns (A) using Bolts (2#)


 
 
- **NOTE:** Screws to anchor your gazebo into the floor or ground are not included.



HARDWARE REQUIRED

1#		Qty 8
Bolt M6x16		
2#		Qty 12
Bolt M6x16		

PARTS REQUIRED


A		Qty 4
Base		
B		Qty 4
Base		
C		Qty 4
Base		

Assembly Instructions con't

STEP 2

2.1: Connect the Short Track (D) to the Short Track (D1) and attach using Bolts / Dome Nuts (3#). Repeat for other Tracks (D and D1).

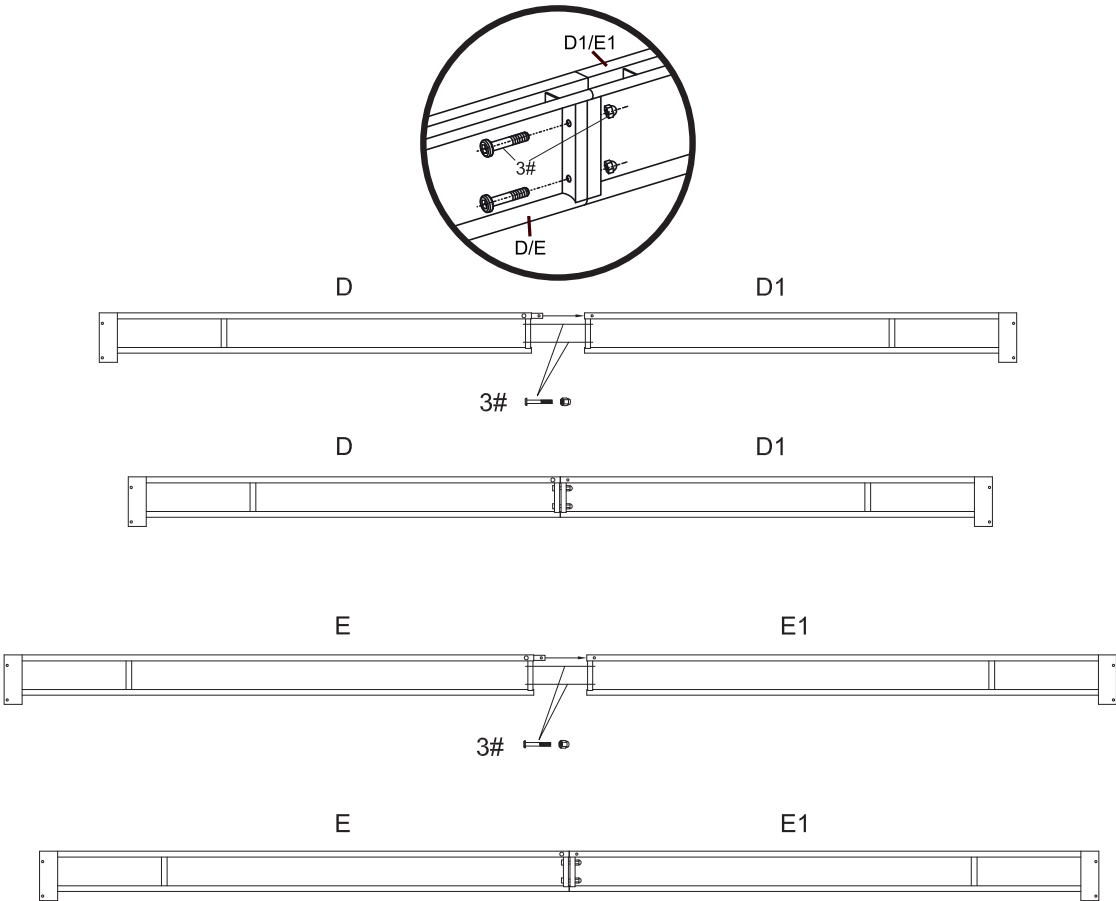 2.2: Connect the Long Track (E) to the Long Track (E1) and attach using Bolts / Dome Nuts (3#). Repeat for other Tracks (E and E1).



HARDWARE REQUIRED

3#		Qty 8
Bolt / Dome Nut (M6x50)		

PARTS REQUIRED


D		Qty 2
Short Track		
D1		Qty 2
Short Track		

E		Qty 2
Long Track		
E1		Qty 2
Long Track		


Assembly Instructions con't

STEP 3

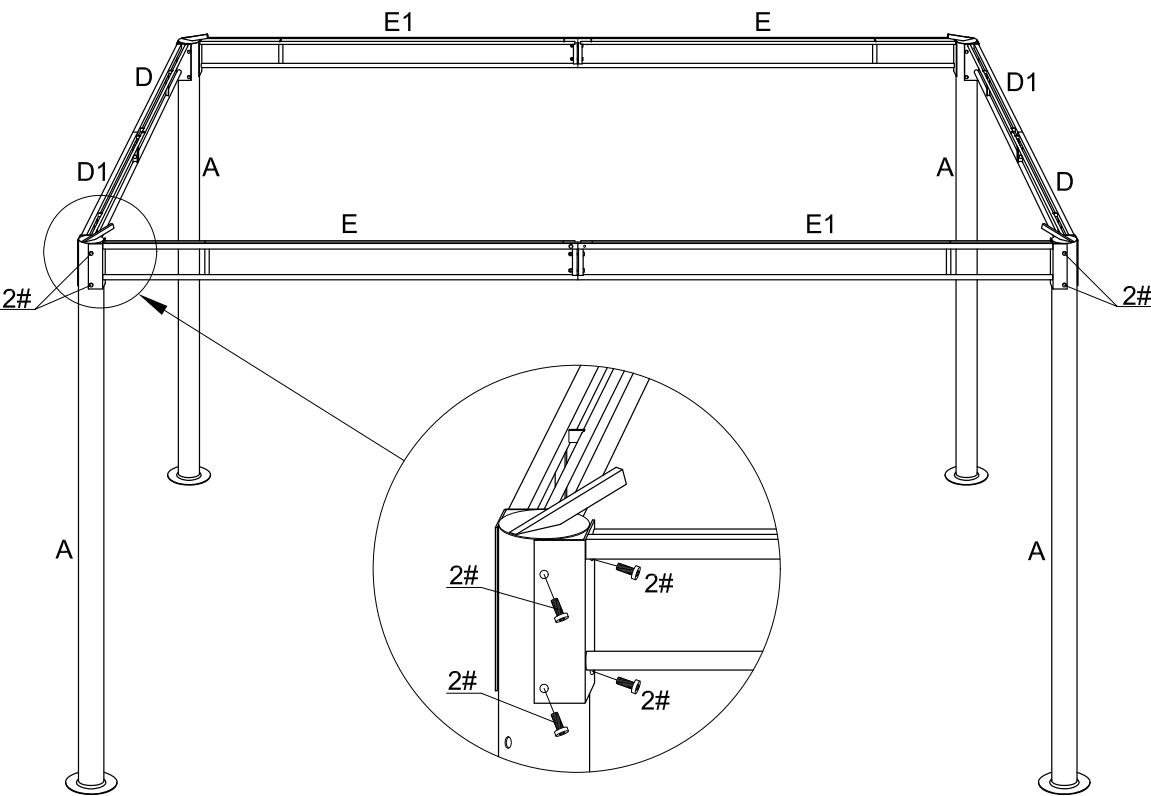 3.1: Connect the assembled tracks (from steps 2.1 and 2.2) to the columns (A) using Bolts (2#) as illustrated .




HARDWARE REQUIRED

2#		Qty 32
Bolt M6x16		

Assembly Instructions con't

STEP 4

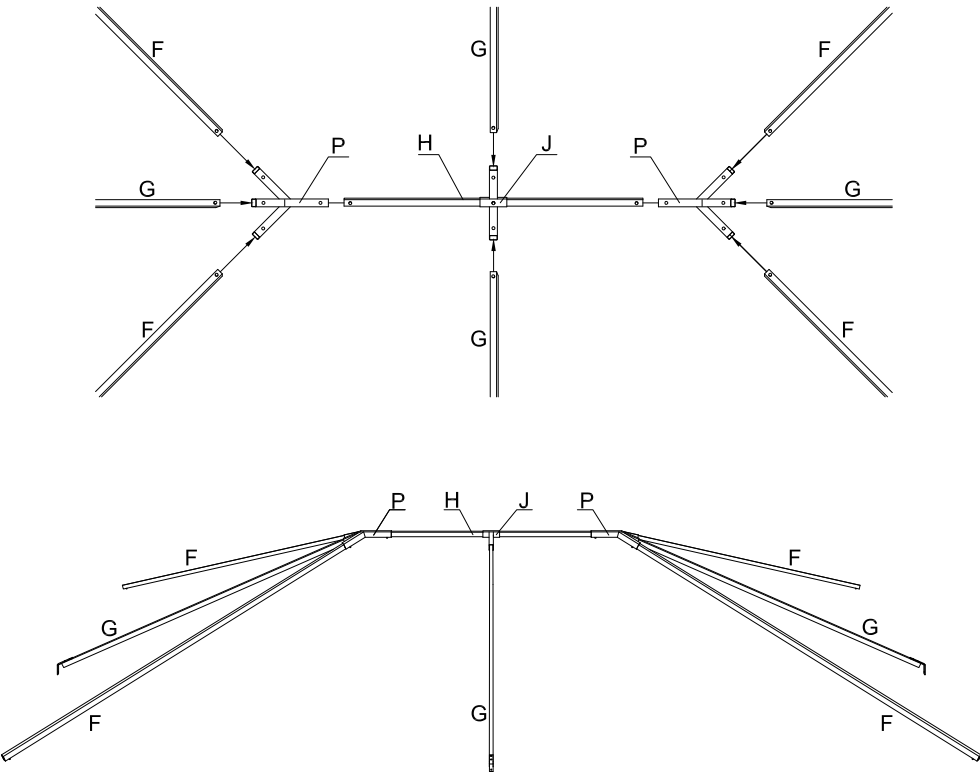 - 4.1: Slide the 2 Central Roof Bars (H) on both ends of the Central Roof Connector (J).
- 4.2: Insert the Corner Roof Connectors (P) on the ends of the Central Roof Bars (H).
- 4.3: Insert the Roof Bars (G) and the Corner Roof Bars (F) on the ends of the central roof bar, central roof connector and corner roof bar as illustrated.



PARTS REQUIRED

F		Qty 4
Corner Roof Bar		
G		Qty 4
Roof Bar		
H		Qty 1
Central Roof Bar		


P		Qty 2
Corner Roof Connector		
J		Qty 1
Central Roof Connector		

Assembly Instructions con't

STEP 5

5.1: Insert the Corner Roof Bars (F) into the ends of the Column Caps (C).

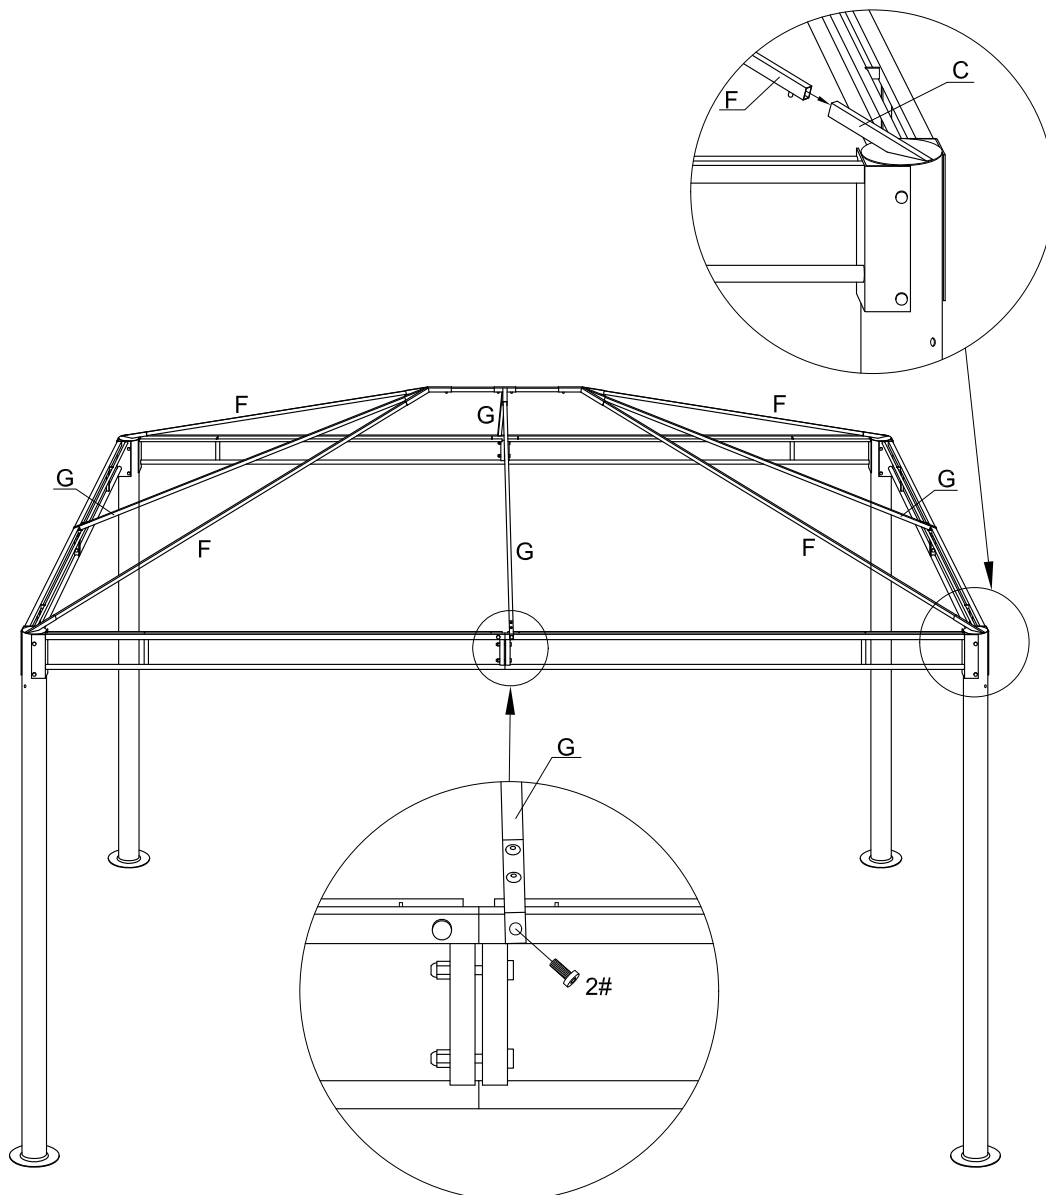 5.2: Insert the Roof Bars (G) into the Short and Long Tracks (D, D1 and E, E1) as illustrated.
Do not tighten Bolts 2#. You will be required to remove them while you place the roof canopy (Step 6).




HARDWARE REQUIRED

2#		Qty 4
Bolt M6x16		

Assembly Instructions con't

STEP 6

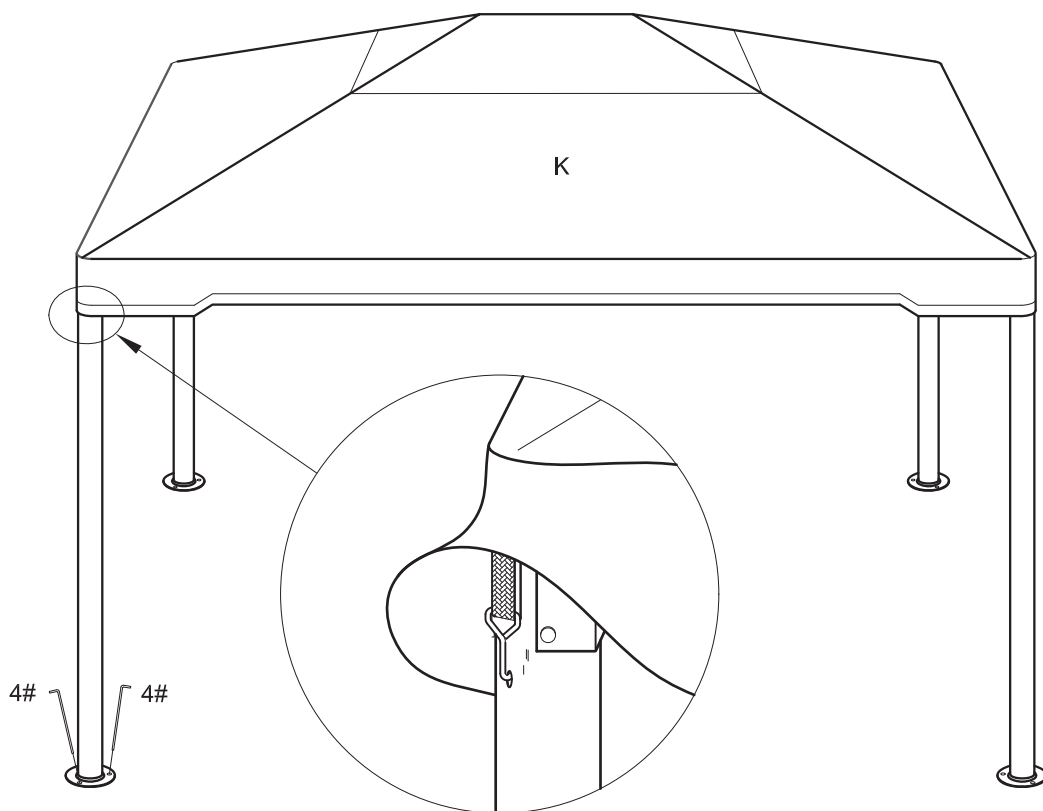 - 6.1: Place the Roof Canopy (K) over the roof structure and attach it using the pre-sewn Velcro straps as illustrated.
- 6.2: Align the openings in the side flaps of the canopy with the ends of the Roof Bars (G) (previously done in Step 5.2), remove the Bolts (2#), overlap the flap with the opening and re-insert and tighten the bolt so that the canopy is secured onto the tracks.
- 6.3: Secure the gazebo firmly to the floor or ground it is placed on. The unit must be anchored to either wood floor (using adequate length wood screws), stone tiles or concrete (using Tapcon screws,) or, anchored into the earth or grass with appropriate camp nails* or anchors. Failure to do so may nullify the Warranty.
*THE CAMP NAILS SUPPLIED CANNOT BE USED FOR PERMANENT ANCHORING. YOU MUST USE PROPER ANCHORS IF YOU WISH TO KEEP YOUR SUN SHELTER ANCHORED IN EARTH OR GRASS.



HARDWARE REQUIRED

4#		Qty 12
Camp Nails		

PARTS REQUIRED

K		Qty 1
Roof Canopy		

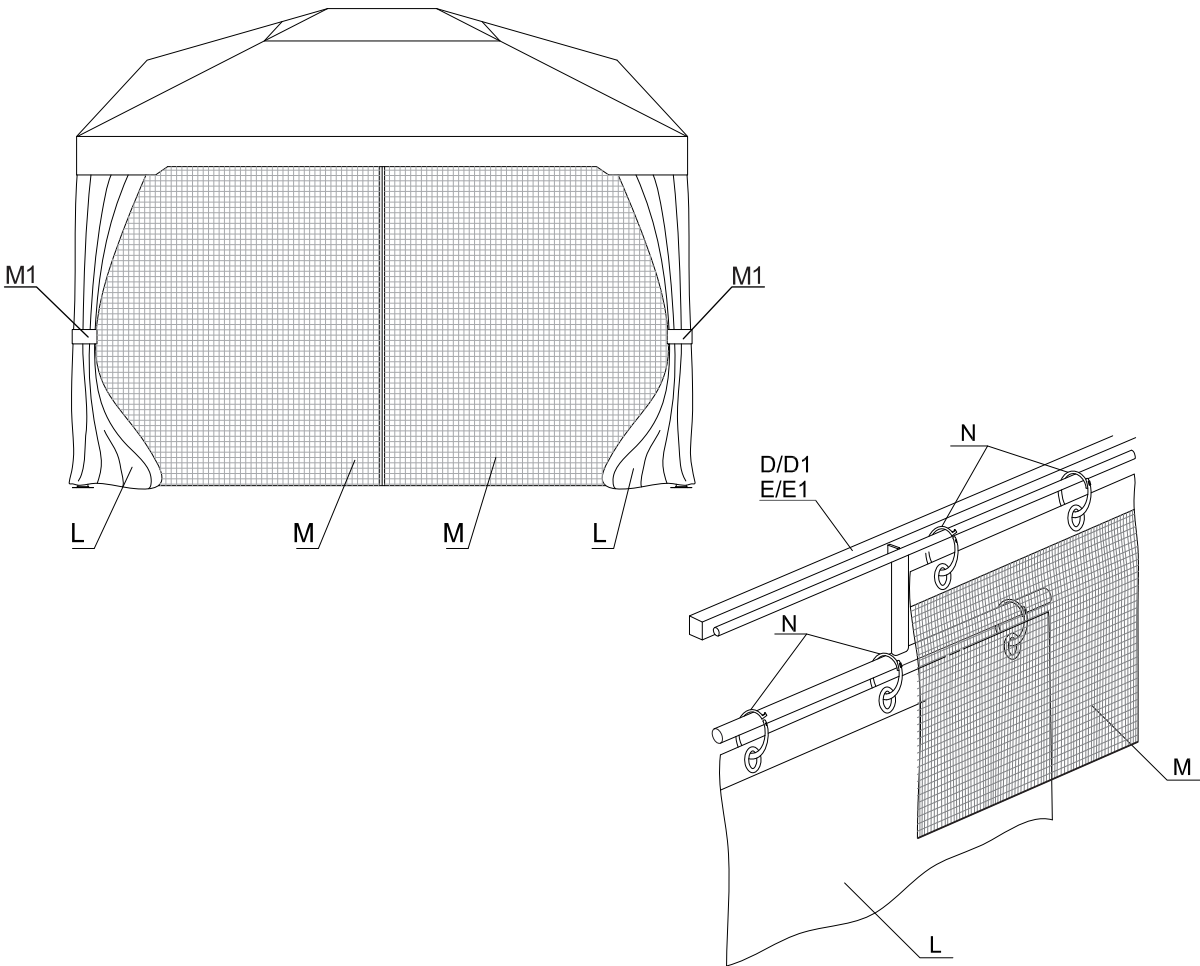 
Assembly Instructions con't

STEP 7





■ **NOTE:** Each 10ft side of the shelter will use 12 hooks for the Mosquito Netting and 12 hooks for the Curtains. Each 12ft side will use 14 hooks for each.
Insert Hooks (N) in the eyelets of the Curtain (L) and Mosquito Netting (M).

7.1: Install Curtains (L) on the inside of the sun shelter along the assembled lower tracks of Track as illustrated.

7.2: Install the Mosquito Netting (M) on the inside of the sun shelter along the assembled upper tracks of Track as illustrated.



  PARTS REQUIRED

L		Qty 4	M1		Qty 4
Curtains			Band		
M		Qty 4	N		Qty 104
Mosquito Netting			Hooks		

Assembly Instructions con't

NOTES

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: service@hengyatrade.com or Call toll-free: 1-855-379-7070

Made in / Hech en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com