
GRAND RESORT®



Use and Care Guide

Oak Hill 9' Crank Tilt Umbrella - Red Fabric

Product Code: D71 M20571

UPC Code: 848306051148

Date of Purchase: ___/___/___

Thank you for your purchase

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table Of Contents.....	2
Safety Information.....	3
Set Up Your Furniture Properly..	3
Examine Your Furniture.....	3
Warranty.....	3
What Is Covered.....	3
What Is Not Covered.....	4
Care And Maintenance.....	4
Pre-Assembly.....	4
Planning Assembly.....	4
Package Contents.....	5
Assembly Instructions	
Umbrella.....	6
Customer Service.....	8

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.

EXAMINE YOUR FURNITURE

- Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

WHAT IS COVERED

- This product is covered under the manufacturer's 1-Year Limited Warranty against defects in materials and workmanship. If your furniture frame fails structurally due to inferior metals or welds during normal use within five years of purchase, the manufacturer will repair or replace the defective piece. Resin weave and cushions are warranted for 1-Year from date of purchase. Peeling, crackling, blistering, discoloration or fading are also warranted for 1-Year from the date of purchase. Warranty is to the original purchaser and is non-transferable. Proof of purchase (dated register receipt) and in some cases, photos of product are required for warranty claims. Lack of original receipt will void the warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Warranty

WHAT IS NOT COVERED

- This warranty excludes: furniture used for commercial use, contract or other non-residential purposes, freight damage, furniture damaged by acts of nature, abuse or lack of proper care, vandalism or improper assembly. Discoloration or fading of straps or fabric or finish as a result of chemicals or spills is not covered. Glass, tile, and stone are not covered against breakage; frames and hardware are not covered against corrosion or rusting. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Exclusion also includes time for loss of use, inconvenience, travel, packaging or any other incidental or consequential damages. It remains the customer's responsibility for freight and packaging charges to and from our service center. If, within the stated warranty period, this product is found to be defective in material or workmanship, the purchaser must contact the customer service department at 1-877-931-7378. Email: custserv@huayueusa.net
Customer Service hours: Monday to Friday 9:00AM -4:00PM Eastern

Care and Maintenance

 
- Wash the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly.
- Cushions may also be cleaned by hand with a mild solution of soap and water. Rinse the cushion cover thoroughly and allow to drip dry. The back cushion and pillow should be spot cleaned with a soft cloth. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics. Never use cleaners that contain acid or abrasive materials.
- Use and operation: To improve the lifespan of this furniture, cover when not use and store in a dry place in the off season.

Pre-Assembly

PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 90 minutes for two people to complete the assembly.


Package Contents

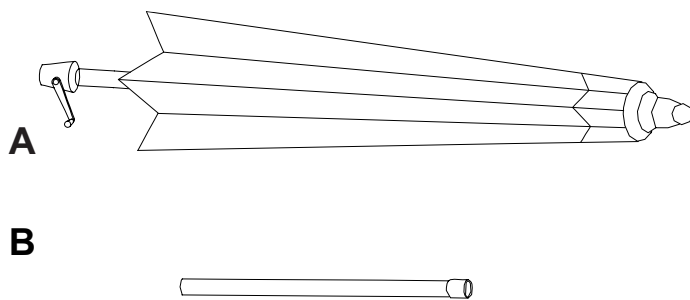

PART	DESCRIPTION	QUANTITY
A	UMBRELLA	1
B	LOWER POLE	1


1 Attaching the upper frame to the lower pole

 - Insert the upper umbrella frame (A) into the lower umbrella pole (B). Make sure the spring button pops into place.

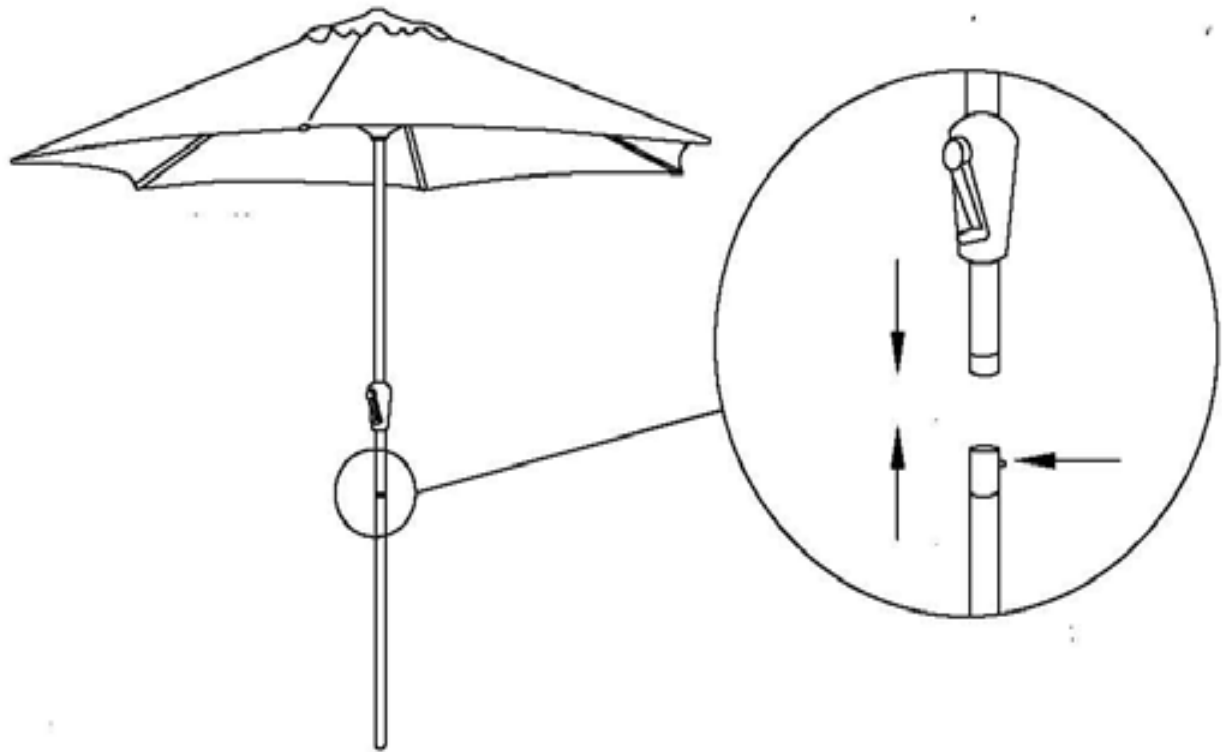

2 Opening the umbrella

 - Before opening the umbrella, turn upside down and gently shake to separate the ribs. To open the umbrella: Turn the crank handle in a clockwise direction until fully opened. Note: Do not attempt to close the umbrella in the tilt position. This will cause the umbrella to break.

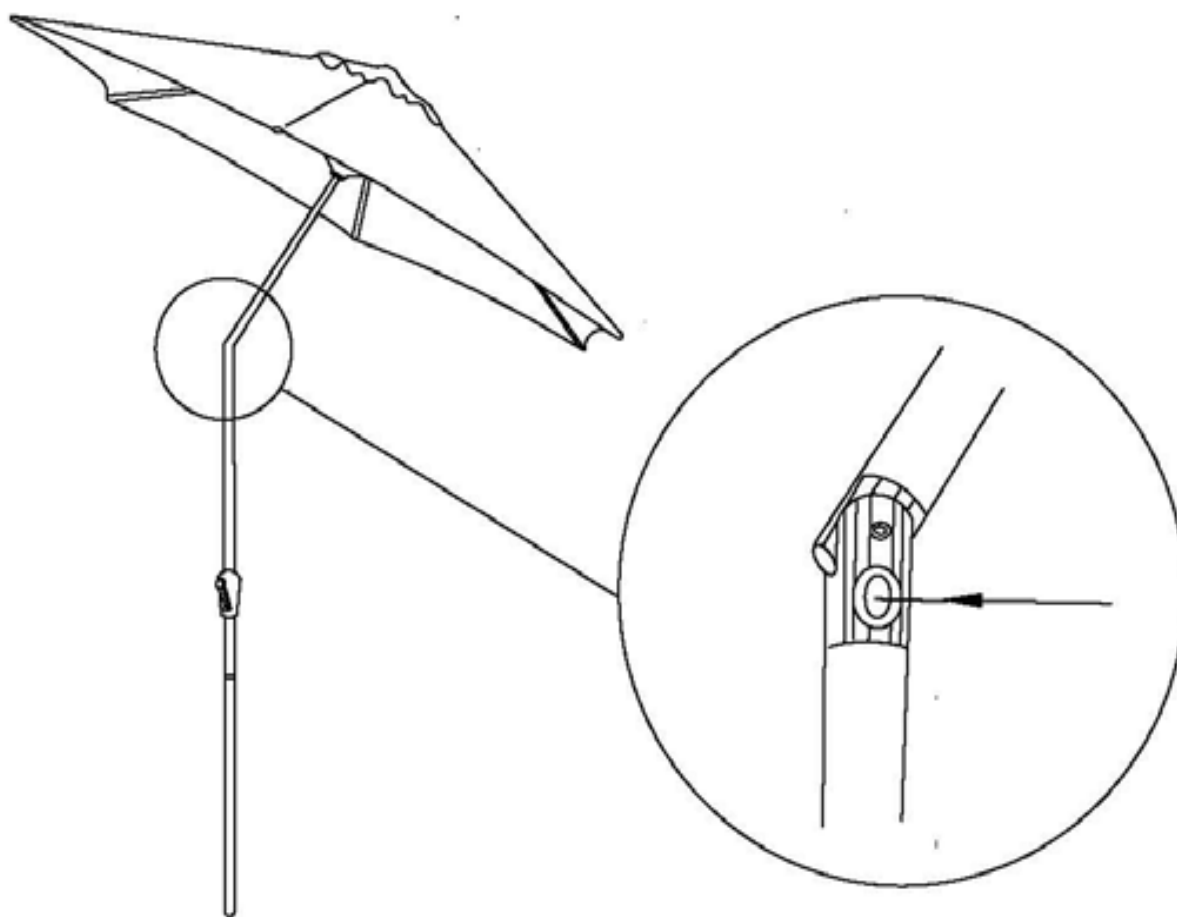

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: custserv@huayueusa.net or Call toll-free: 1-877-931-7378

Made in / Hech en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com

2015