 

GRAND RESORT®

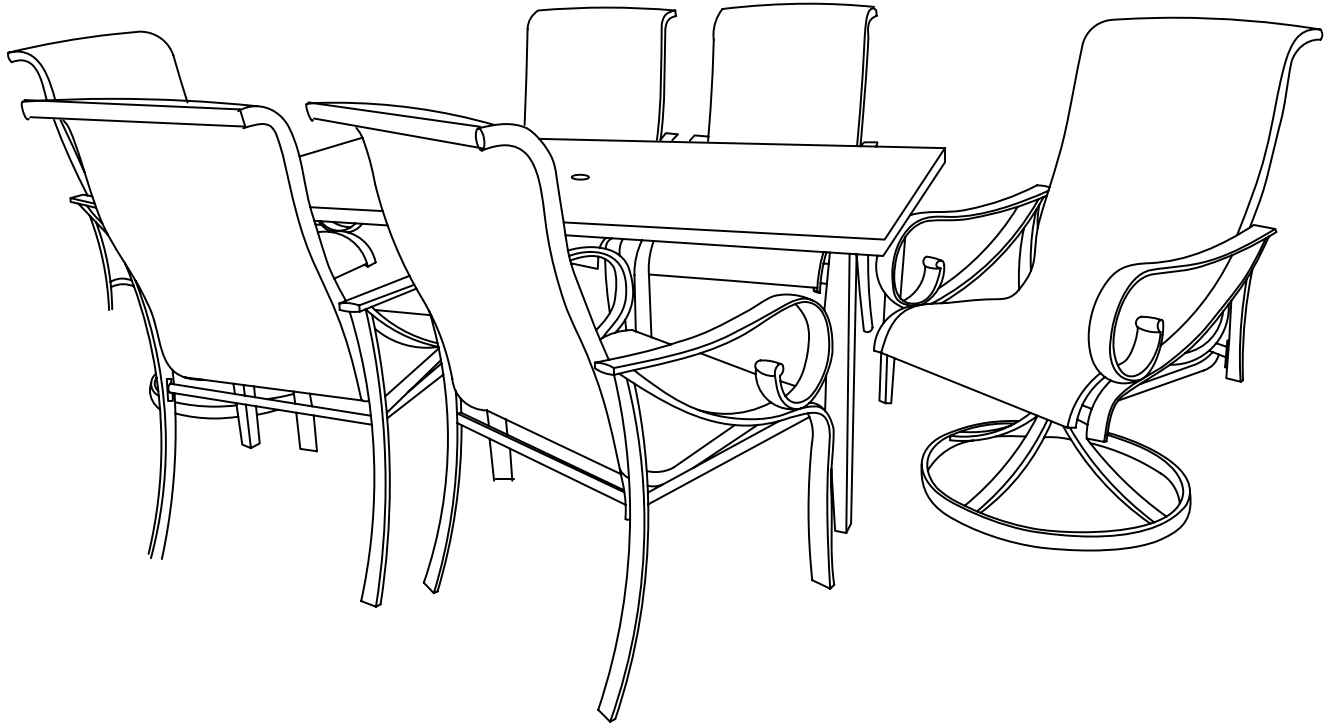

Use and Care Guide

Aspen 7pc Wicker Bucket Dining Set-Table

Product code: D71 M10305
UPC Code: 848306050516

Date of Purchase: __/ __/ __

Thank you for your purchase

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table Of Contents.....	2
Safety Information.....	3
Set Up Your Furniture Properly...	3
Examine Your Furniture.....	3
Warranty.....	3
What Is Covered.....	3
What Is Not Covered.....	4
Care And Maintenance.....	5
Pre-Assembly.....	6
Planning Assembly.....	6
Hardware Included.....	6
Package Contents.....	7
Assembly Instructions	
Table.....	8
Customer Service.....	10

Safety Information

SET UP YOUR FURNITURE PROPERLY

- ☐ Ensure that all parts are assembled properly and fully tightened as per the instructions.
- ☐ When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a rigid position.

EXAMINE YOUR FURNITURE

- ☐ Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

WHAT IS COVERED

- ☐ This product is covered under the manufacturer's 5-Year Limited Warranty against defects in materials and workmanship. If your furniture frame fails structurally due to inferior metals or welds during normal use within five years of purchase, the manufacturer will repair or replace the defective piece. Resin weave and cushions are warranted for 1-Year from date of purchase. Peeling, crackling, blistering, discoloration or fading are also warranted for 1-Year from the date of purchase. Warranty is to the original purchaser and is non-transferable. Proof of purchase (dated register receipt) and in some cases, photos of product are required for warranty claims. Lack of original receipt will void the warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Warranty

WHAT IS NOT COVERED

- This warranty excludes: furniture used for commercial use, contract or other non-residential purposes, freight damage, furniture damaged by acts of nature, abuse or lack of proper care, vandalism or improper assembly. Discoloration or fading of straps or fabric or finish as a result of chemicals or spills is not covered. Glass, tile, and stone are not covered against breakage; frames and hardware are not covered against corrosion or rusting. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Exclusion also includes time for loss of use, inconvenience, travel, packaging or any other incidental or consequential damages. It remains the customer's responsibility for freight and packaging charges to and from our service center. If, within the stated warranty period, this product is found to be defective in material or workmanship, the purchaser must contact the customer service department at 1-877-931-7378. Email: custserv@huayueusa.net
Customer Service hours: Monday to Friday 9:00AM -4:00PM Eastern

Care and Maintenance

- Wash the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly.
- Cushions may also be cleaned by hand with a mild solution of soap and water. Rinse the cushion cover thoroughly and allow to drip dry. The back cushion and pillow should be spot cleaned with a soft cloth. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics. Never use cleaners that contain acid or abrasive materials.
- Use and operation: To improve the lifespan of this furniture, cover when not use and store in a dry place in the off season.

Pre-Assembly

PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 90 minutes for two people to complete the assembly.

 


CAUTION: If you overload your furniture, injuries can occur.

HARDWARE INCLUDED




NOTED: Hardware not shown to actual size.



AA



 BB

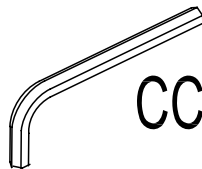

CC




DD


PART	DESCRIPTION	SIZE(MM)	QUANTIT
AA	BOLT	M6*20	16
BB	METAL WASHER	Φ6.5*1.0	16
CC	ALLEN WRENCH	M6	1
DD	BOLT CAP	M6	16

Pre-Assembly(continued)

 Package Contents

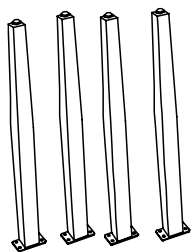

A

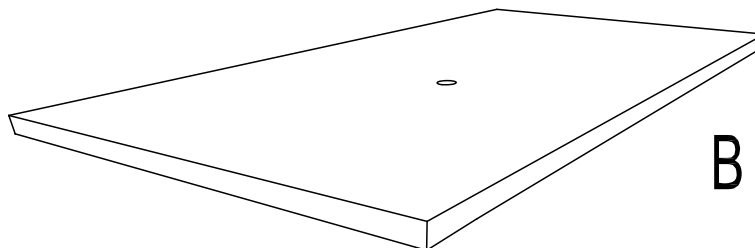 


B

PART	DESCRIPTION	QUANTITY
A	TABLE LEG	4
B	TABLE TOP	1



 Safety Information

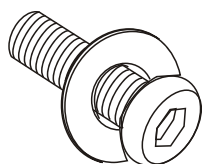


Every bolt needs to be used with a washer.
Do not remove the package on the table top until fully assembled.

Assembly Instructions

1 Attaching the table legs to the table top

 
- ☐ Attach the table legs "A" to the table top "B" using 16 bolts "AA" and metal washers "BB".
- ☐ Tighten all the bolts using the Allen wrench "CC".

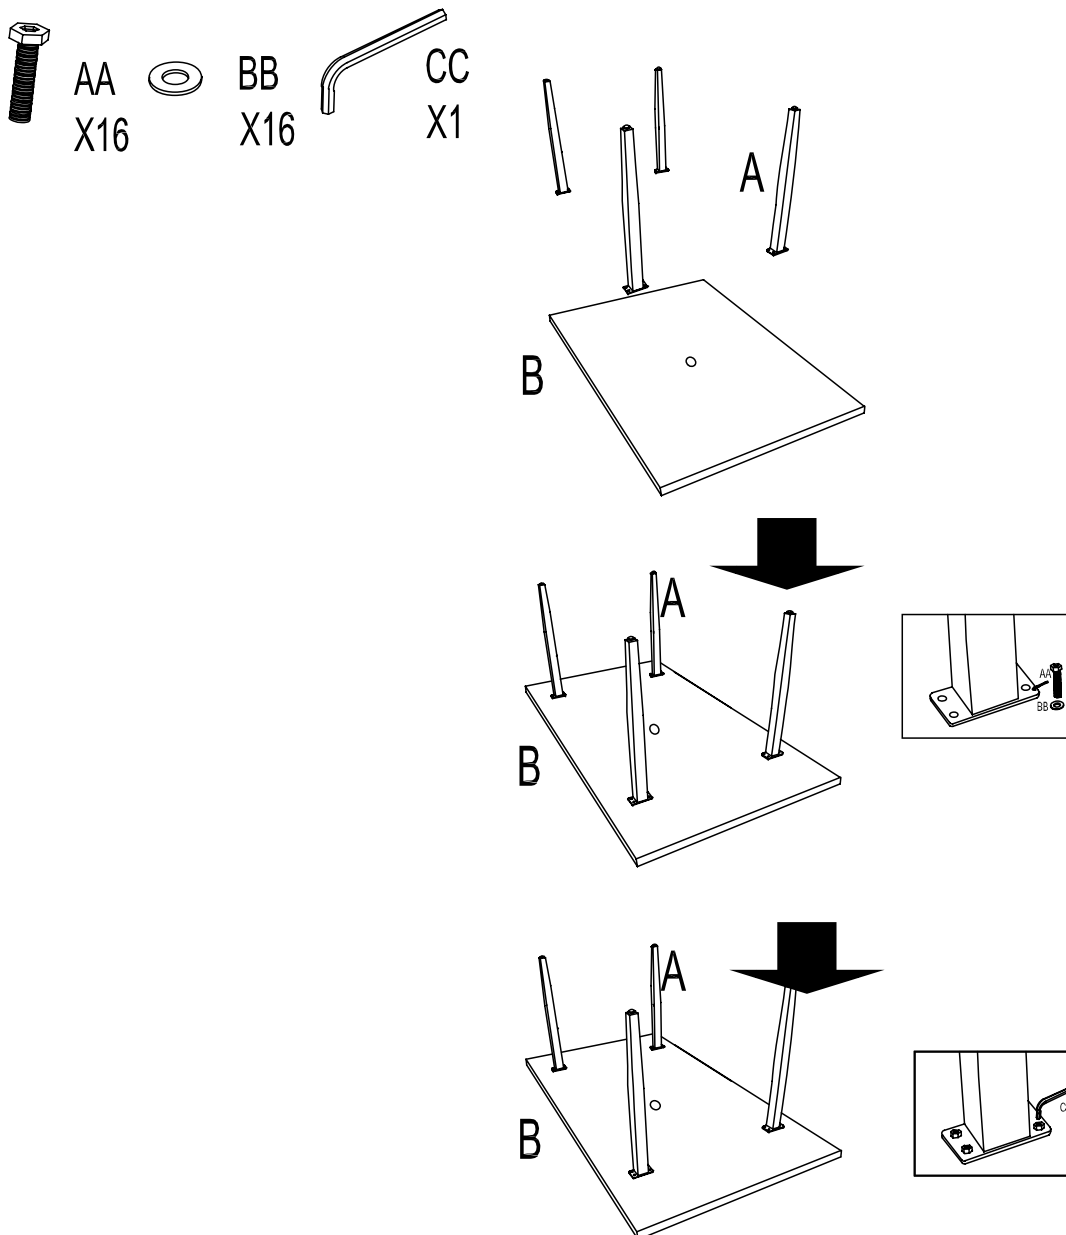

Assembly Instructions

2 Attaching the bolt caps

 - ☐ Cover all the bolts with the plastic bolt caps "DD".
- ☐ Turn the table into the upright position.

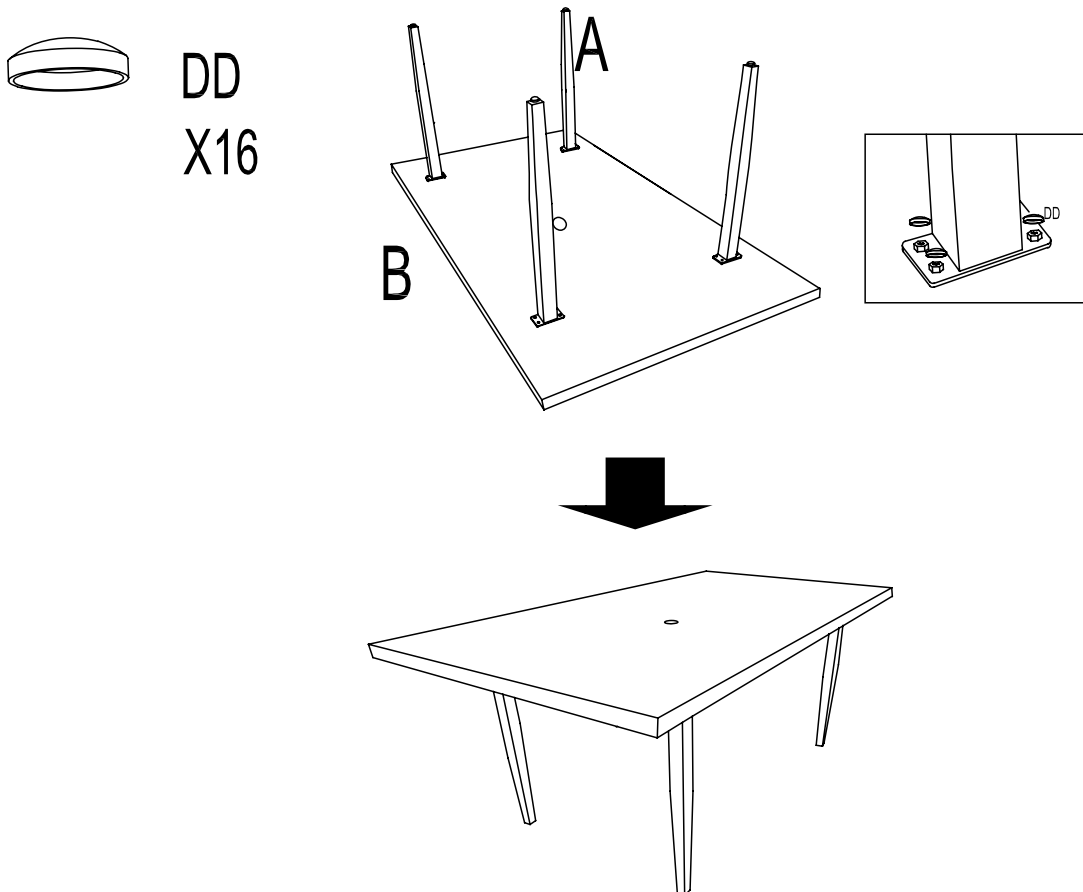

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: custserv@huayueusa.net or Call toll-free: 1-877-931-7378

 
Made in / Hech en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com

2015

GRAND RESORT®

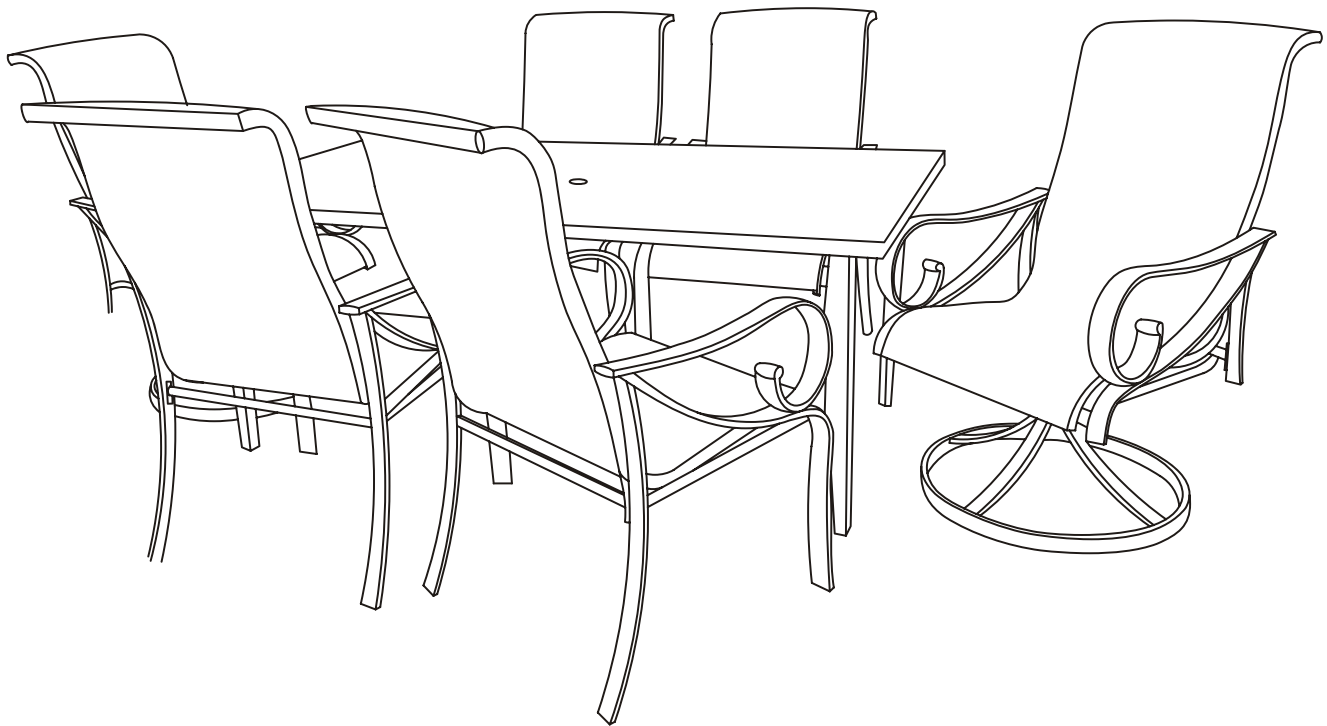

Use and Care Guide

Aspen 7pc Wicker Bucket Dining Set-Chair

Product code: D71 M10305
UPC Code: 848306050516

Date of Purchase: ___/___/___

Thank you for your purchase

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table Of Contents.....	2
Safety Information.....	3
Set Up Your Furniture Properly....	3
Examine Your Furniture.....	3
Warranty.....	3
What Is Covered.....	3
What Is Not Covered.....	4
Care And Maintenance.....	4
Pre-Assembly.....	5
Planning Assembly.....	5
Observe Weight Limits.....	5
Hardware Included.....	6
Package Contents.....	7
Assembly Instructions	
Stationary Chair.....	8
Swivel Rocker Chair.....	11
Customer Service.....	15

Safety Information

SET UP YOUR FURNITURE PROPERLY

- ☐ Ensure that all parts are assembled properly and fully tightened as per the instructions.
- ☐ When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a rigid position.

EXAMINE YOUR FURNITURE

- ☐ Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

WHAT IS COVERED

- ☐ This product is covered under the manufacturer's 5-Year Limited Warranty against defects in materials and workmanship. If your furniture frame fails structurally due to inferior metals or welds during normal use within five years of purchase, the manufacturer will repair or replace the defective piece. Resin weave and cushions are warranted for 1-Year from date of purchase. Peeling, crackling, blistering, discoloration or fading are also warranted for 1-Year from the date of purchase. Warranty is to the original purchaser and is non-transferable. Proof of purchase (dated register receipt) and in some cases, photos of product are required for warranty claims. Lack of original receipt will void the warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Warranty

WHAT IS NOT COVERED

- This warranty excludes: furniture used for commercial use, contract or other non-residential purposes, freight damage, furniture damaged by acts of nature, abuse or lack of proper care, vandalism or improper assembly. Discoloration or fading of straps or fabric or finish as a result of chemicals or spills is not covered. Glass, tile, and stone are not covered against breakage; frames and hardware are not covered against corrosion or rusting. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Exclusion also includes time for loss of use, inconvenience, travel, packaging or any other incidental or consequential damages. It remains the customer's responsibility for freight and packaging charges to and from our service center. If, within the stated warranty period, this product is found to be defective in material or workmanship, the purchaser must contact the customer service department at 1-877-931-7378. Email: custserv@huayueusa.net
Customer Service hours: Monday to Friday 9:00AM -4:00PM Eastern

Care and Maintenance

- Wash the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly.
- Cushions may also be cleaned by hand with a mild solution of soap and water. Rinse the cushion cover thoroughly and allow to drip dry. The back cushion and pillow should be spot cleaned with a soft cloth. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics. Never use cleaners that contain acid or abrasive materials.
- Use and operation: To improve the lifespan of this furniture, cover when not use and store in a dry place in the off season.

Pre-Assembly

PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 90 minutes for two people to complete the assembly.

OBSERVE WEIGHT LIMITS

The recommended weight limits for the following products are listed below:

- ☐ Chair: 250 lbs
- ☐ Swivel Chair: 250 lbs



 
CAUTION: If you overload your furniture, injuries can occur.

Pre-Assembly

HARDWARE INCLUDED




NOTED:Hardware not shown to actual size.

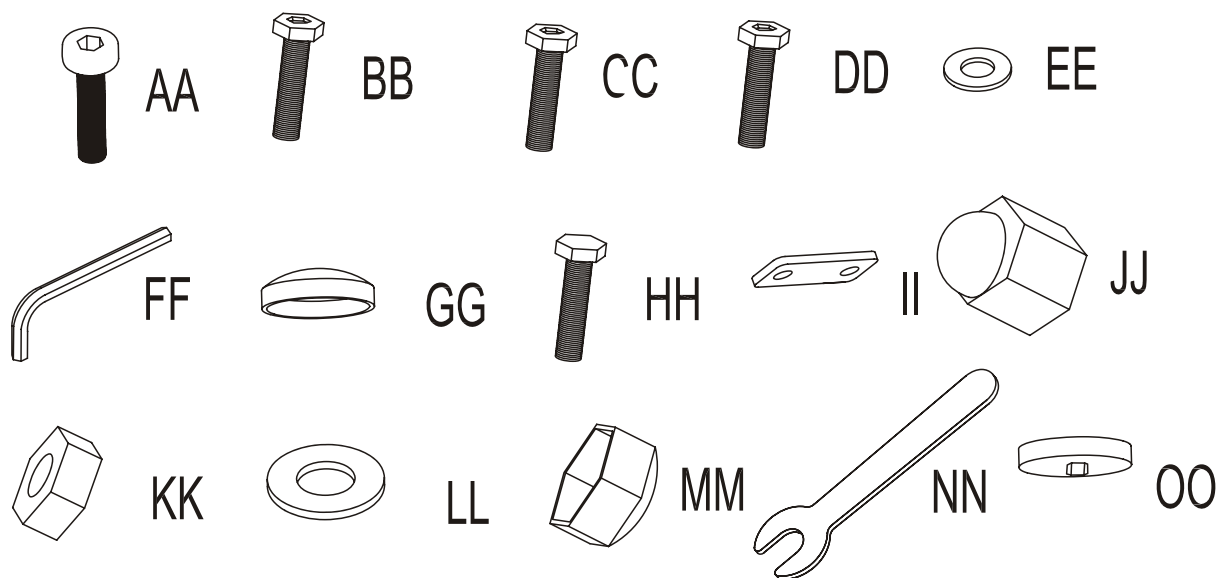

PART	DESCRIPTION	SIZE(MM)	QUANTIT
AA	ALLEN BOLT	M6x15	24
BB	BOLT	M6x12	24
CC	BOLT	M6x40	12
DD	BOLT	M6x50	12
EE	METAL WASHER	M6	48
FF	ALLEN WRENCH	M6	4
GG	PLASTIC BOLT CAP	M6	48
HH	HEX BOLT	M8x38	8
II	RECTANGULAR STEEL PLATE		8
JJ	NUT CAP	M8	8
KK	HEX NUT	M8	8
LL	LOCK WASHER	M8	8
MM	HEX BOLT CAP	M8	8
NN	HEX WRENCH	M8	2
OO	ALLEN BOLT CAP	M6	24

Pre-Assembly(continued)

 
Package Contents

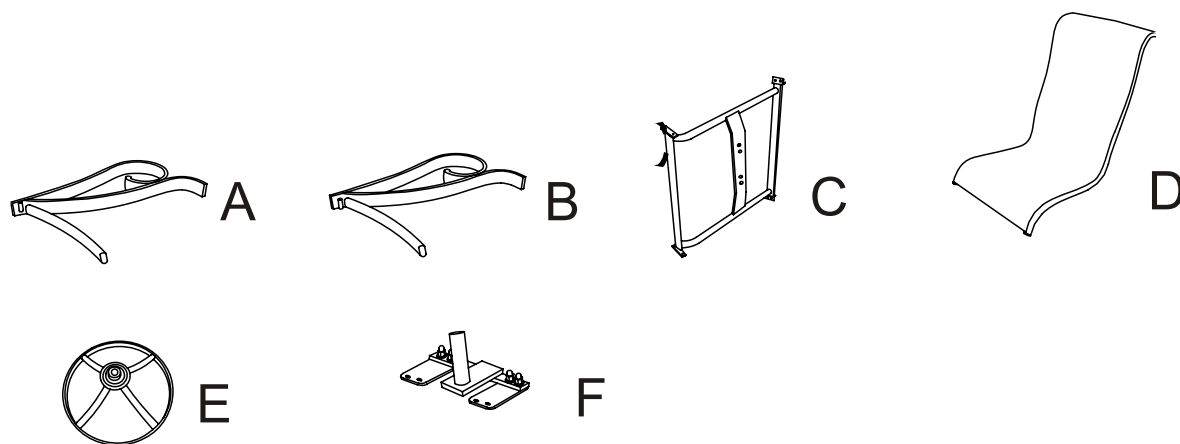

PART	DESCRIPTION	QUANTITY
A	LEFT ARM (when sitting)	1
B	RIGHT ARM (when sitting)	1
C	CHAIR SEAT	1
D	CHAIR FRAME	1
E	CHAIR BASE	1
F	T- ROCK	1



 Safety Information


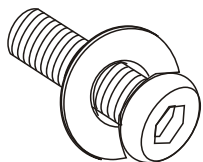


Every bolt needs to be used with a washer.

Assembly Instructions

1 Attaching the arms to the chair seat

  
- Attach the back of the arms "A and B" to the chair seat "C" using the Allen bolts "AA" and metal washers "EE". Do not tighten completely.
- Attach the front of the arms "A and B" to the chair seat "C" using the bolts "BB" and metal washers "EE". Do not tighten completely.
- Tighten each bolt a few revolutions at a time in a cross x pattern to ensure chair parts are evenly distributed for proper assembly.

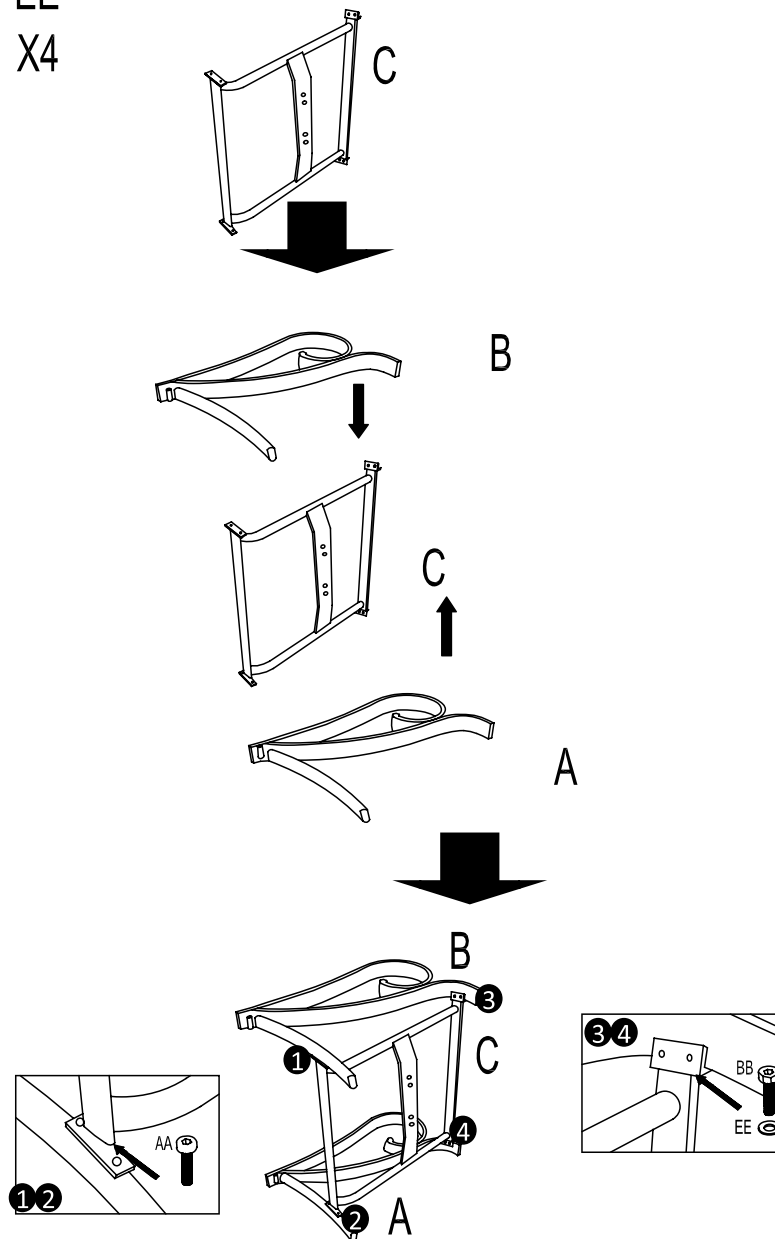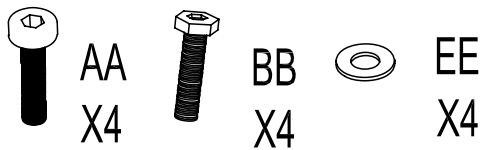

Assembly Instructions

2 Attaching the chair frame to the arms

 
- Turn the chair face up. Attach the chair frame "D" to the back of chair arms "A" and "B" using the bolts "DD" and metal washers "EE".
- Turn the chair face down. Attach the chair back "D" to the front of the chair arms "A" and "B" using the bolts "CC" and metal washers "EE".
- Using the Allen wrench "FF", tighten each bolt a few revolutions at a time in a cross x pattern to ensure chair parts are evenly distributed for proper assembly.
- Cover the Allen bolts "AA" with the plastic bolt caps "OO". Cover the remaining bolts with plastic bolt caps "GG".

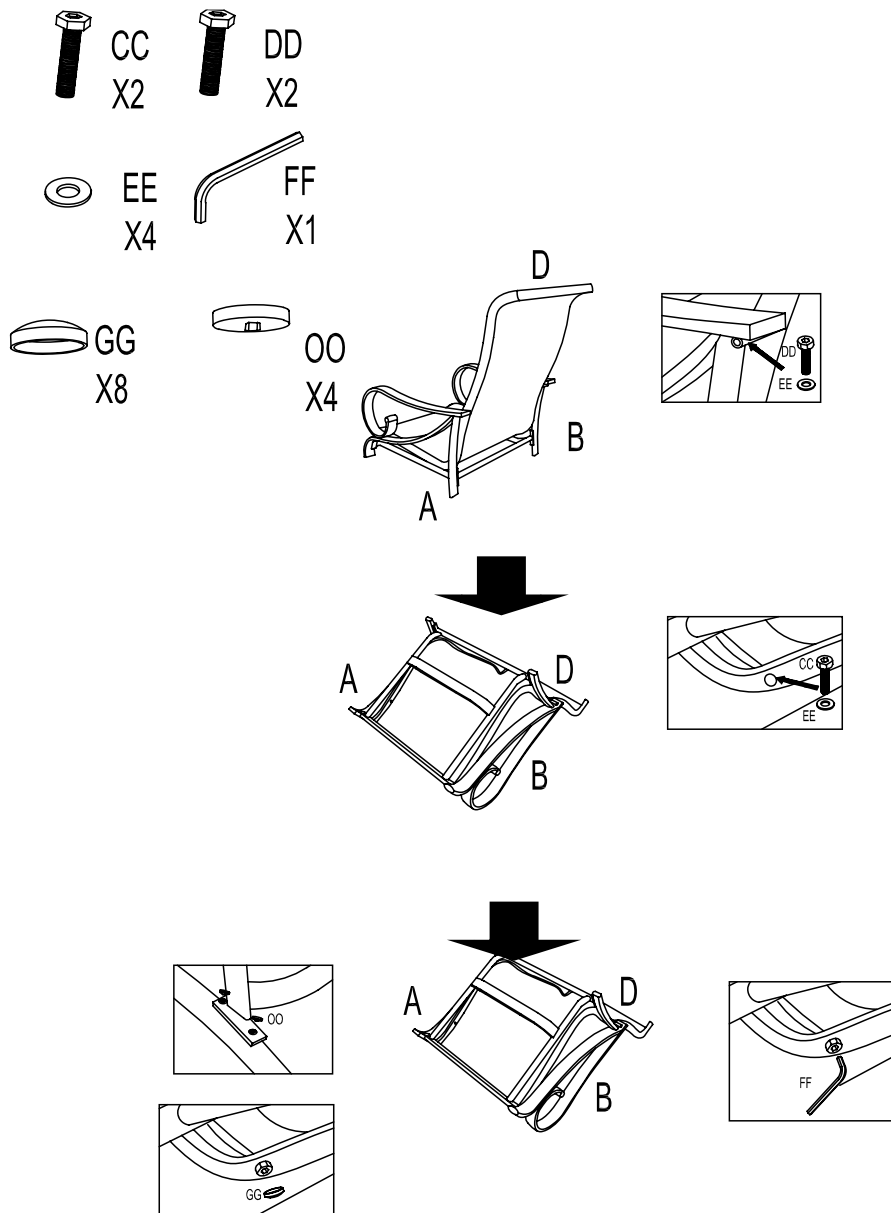

Assembly Instructions


3 Attaching the chair base to the chair seat

 - Attach the t-rock "F" to the chair seat "C" in order of hex bolts "HH", rectangular steel plate "II", chair seat "C" crossbar, t-rock "F", rectangular steel plate "II", lock washers "LL" and nuts "KK".
- Note: Bolts must be inserted from underneath the seat (closest to the seat fabric or straps) through the crossbar into the t-rock.
- Tighten all the bolts using hex wrench "NN". Cover the bolts with plastic bolt and nut caps "MM and JJ."
- Remove the protective plastic cap from the t-rock before inserting the end into the chair base. Place the chair seat into the chair base by inserting the shaft directly into the plastic bushing of the chair base. Use a twisting motion if necessary. Make sure you have inserted it all the way and that the base is locked onto the shaft.

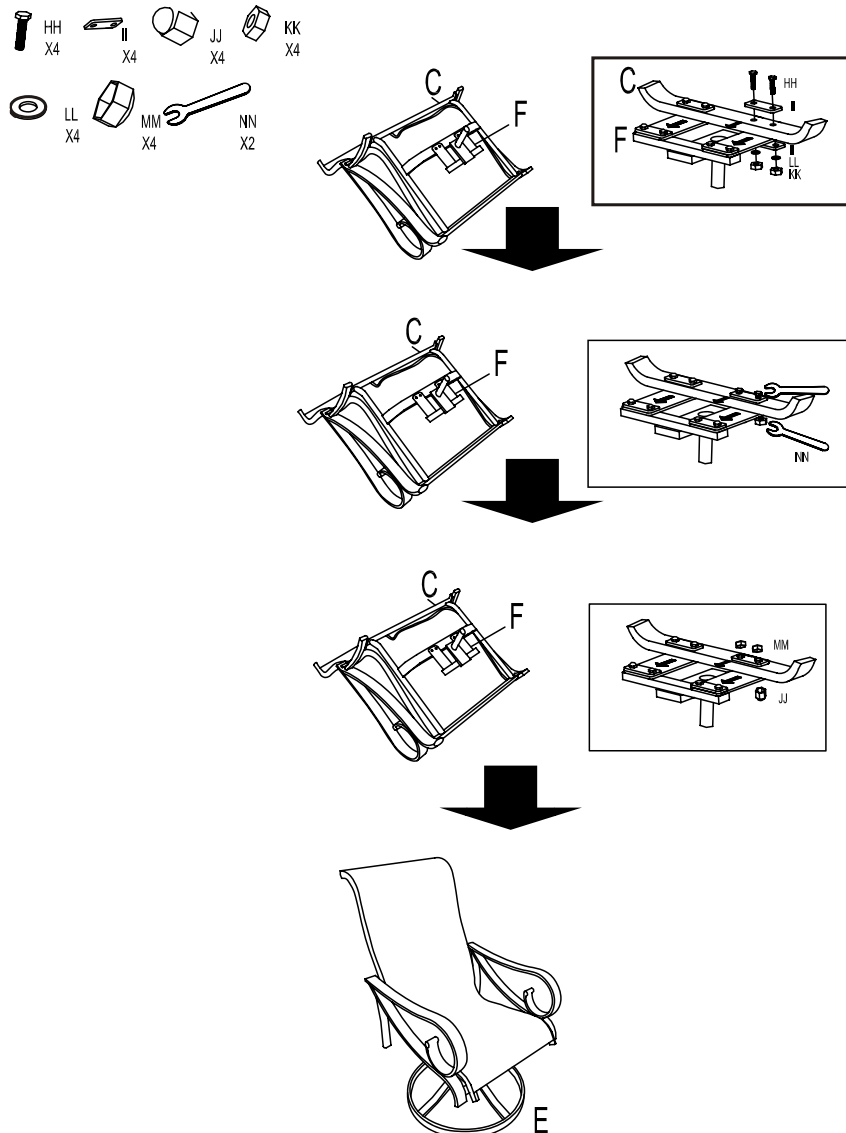

Pre-Assembly(continued)

 
Package Contents

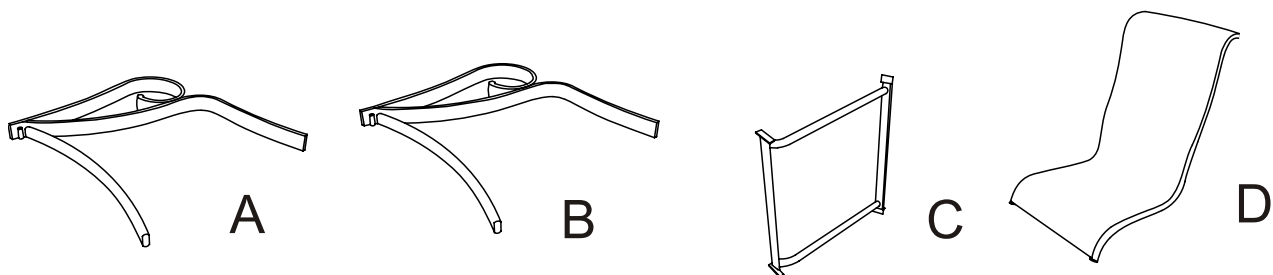

PART	DESCRIPTION	QUANTITY
A	LEFT ARM (when sitting)	1
B	RIGHT ARM (when sitting)	1
C	CHAIR SEAT	1
D	CHAIR FRAME	1



 Safety Information

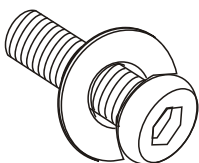

Every bolt needs to be used with a washer.

Assembly Instructions

1 Attaching the arms to chair seat

- Attach the back of the arms "A and B" to the chair seat "C" using the Allen bolts "AA" and metal washers "EE". Do not tighten completely.
- Attach the front of the arms "A and B" to the chair seat "C" using bolts "BB" and metal washers "EE". Do not tighten completely.
- Tighten each bolt a few revolutions at a time in a cross x pattern to ensure chair parts are evenly distributed for proper assembly.



 
 
 
 
 
 
 
AA
X4



BB
X4






EE
X4

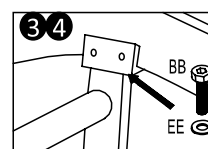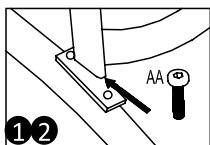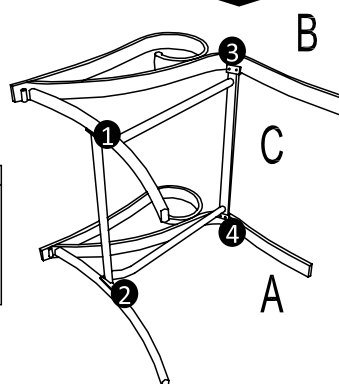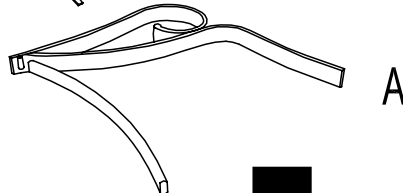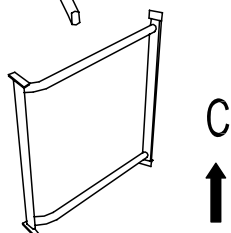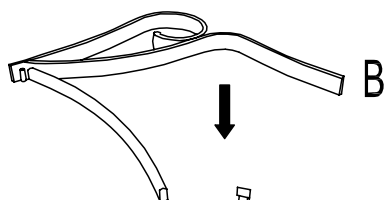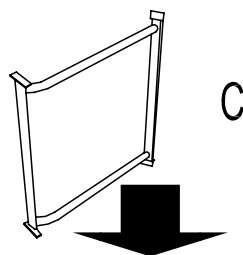

Assembly Instructions

2 Attaching the chair frame to the arms

   
- Turn the chair faceup. Attach the chair frame "D" to the back of the chair arms "A and B" using the bolts "DD" and metal washers "EE".
- Turn chair the facedown. Attach the chair frame "D" to the front of the chair arms "A and B" using the bolts "CC" and metal washers "EE".
- Using the Allen wrench "FF", tighten each bolt a few revolutions at a time in a cross x pattern to ensure chair parts are evenly distributed for proper assembly.

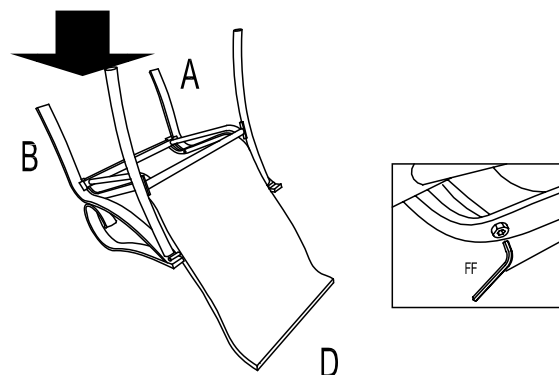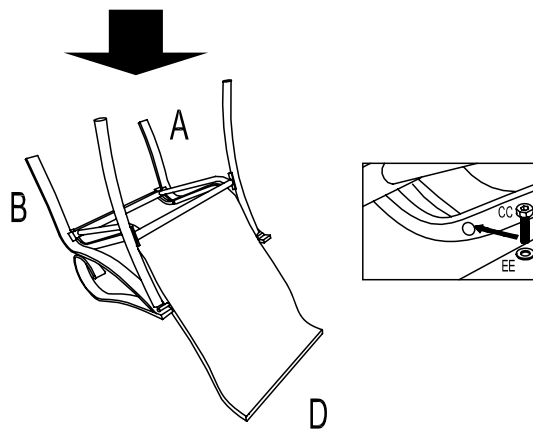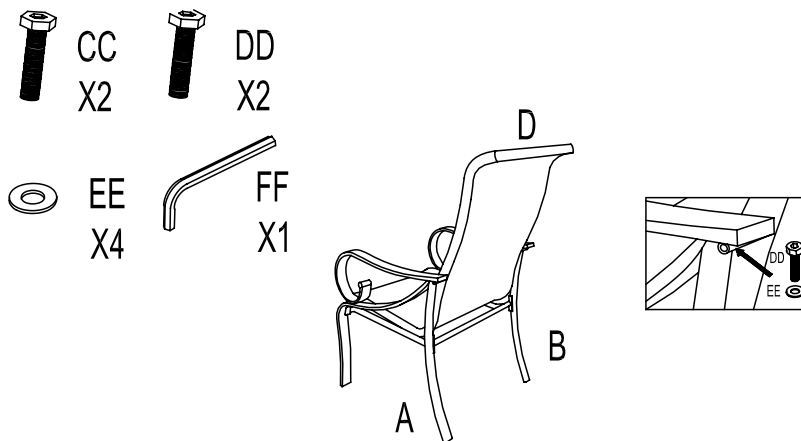

Assembly Instructions

3 Attaching the bolt caps

 - Cover the Allen bolts "AA" with the plastic bolt caps "OO". Cover the remaining bolts with the plastic bolt caps "GG".

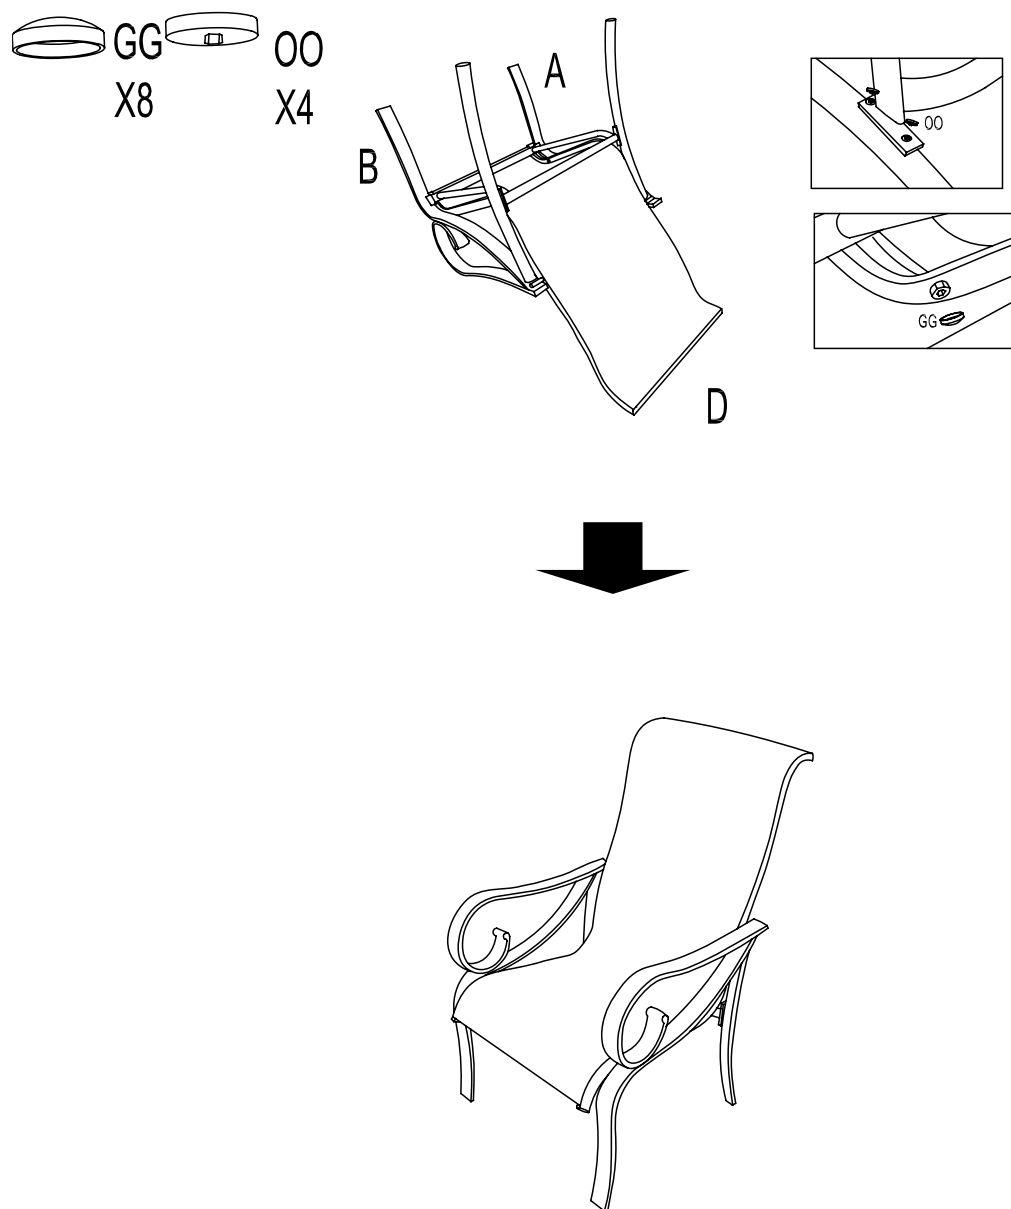

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: custserv@huayueusa.net or Call toll-free: 1-877-931-7378

Made in / Hech en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com

2015