

USE AND CARE GUIDE

Brookner Sling Swivel Rocker

Product code: 0-08721103-3 UPC code: 471 333112 156 1 Vendor Item: AS-K-239NR - 2015

Date of purchase: ____/ ____/

Thank you for your purchase

Thank you for your purchase

We are pleased that you have chosen Kmart for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents 2					
Safety Information	3				
Set Up your Furniture Properly	.3				
Examine your furniture	3				
Warranty	3				
Care and Maintenance	4				
Pre-Assembly	4				
Planning Assembly	4				
Observe weight Limits	4				
Hardware Included	4				
Assembly Instructions					
Package Contents 5	,				
Chair 5	;				
Customer Service 6					

Safety Information

SET UP YOUR FURNITURE PROPERLY

Ensure that all parts are assembled properly and fully tightened as per the instructions
When placing in the desired location, ensure that all legs are resting on the same
surface. You may adjust the legs levelers as required to ensure that the item stands
in a rigid position.

EXAMINE YOUR FURNITURE

Examine occasionally to ensure that there are no loose parts. If loose parts are found,
they must be retightened fully before additional use.

Warranty

WARRANTY

We warrant our products to be free of manufacturing defects to the original purchaser for the period listed below. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

EXCLUSIONS

This warranty does not cover: Furniture used for commercial or non-residential purposes; failures caused by improper care; unreasonable or abusive use; freeze damage; acts of nature. Steel products are not covered against rust. Tempered glass table tops are not covered against breakage.

FINISH

Frame finish is warranted to be free of manufacturing defects for a period of one (1) year. Discoloration or fading of the finish as a result of exposure to the elements, chemicals, or spills is not covered.

FABRIC

Fabric is warranted to be free of manufacturing defects for a period of one (1) year. Discoloration or fading of the finish as a result of exposure to the elements, chemicals, or spills is not covered.

FRAMES

Frame is warranted to be free from defects in material or workmanship for a period of five (5) years for aluminum frame.

FREIGHT & PACKAGING

Freight and packaging are the responsibility of the original purchaser.

CUSTOMER SERVICE

In case of a problem, call 1-800-457-4652 between 9:00 am to 5:00 pm Eastern standard time Monday through Friday or contact us at www.numarkcustomerservice.com for any question or problems you may have.

Care and Maintenance

- ☐ Aluminum frames will never rust. In case of scratches to the powder-coated paint finish, lightly sand the affected area and apply touch-up paint.
- □ Wash frames with a mild solution of soap and water; rinse thoroughly. Do not use bleach or solvents.

Pre-Assembly

PLANNING ASSEMBLY

Read through all the instructions before beginning assembly. Unpack and identify all the parts. Place them on a flat, non-abrasive surface. Assembly by two people is recommended.

OBSERVE WEIGHT LIMITS

The recommended weight limits for the following products are listed below:

□ Chair: 225 lbs



CAUTION: If you overload your furniture, injuries can occur.

HARDWARE INCLUDED



NOTED: Hardware not shown to actual size.

Da (2) Bolt	Dd (2) Nut	
Db (2) Metal Washer	De (1) Open Hex Wrench	
Dc (2) Locker Washer	Df (1) Hex Wrench	



Safety Information


Do not completely tighten bolts and nuts until indicated in assembly step.

Assembly Instructions

Package Contents

ITEM	DESCRIPTION	QUANTITY	
Α	Rocker Top	1	
В	B Rocker BaseC "T" Shaped Connector	1	
C		1	1
	C B	A	


1 Attaching the "T" shaped connector to the rocker top

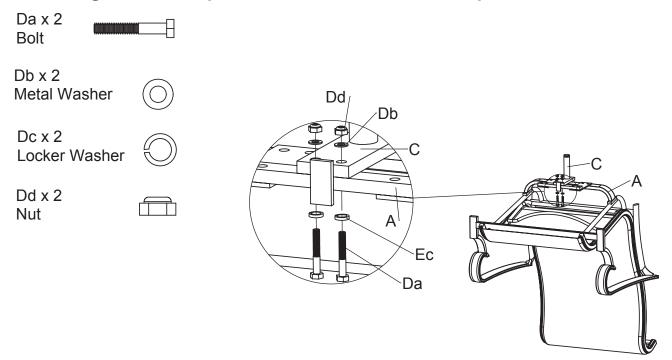

• Securely tighten all bolts and nuts.

Assembly Instructions

2 Pushing the rocker top into the rocker base and twisting left and right if necessary

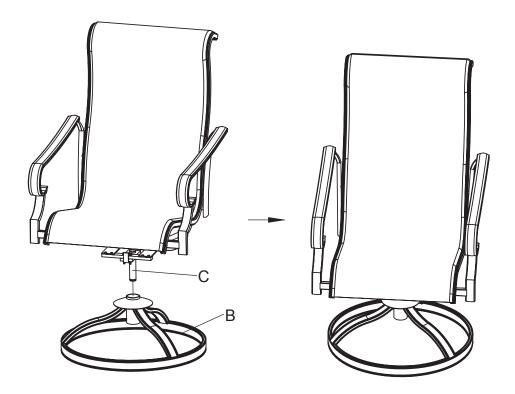

· Your chair is now ready for use. Enjoy!



Please refer to part numbers when reordering
For questions or comments about product:
Call toll-free: 1-800-457-4652
between 9:00 am to 5:00 pm Eastern standard time Monday through Friday
or contact us at www.numarkcustomerservice.com

Made in / Hecho en CHINA for Kmart Corporation, Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products on-line at www.sears.com and www.kmart.com