

USE AND CARE GUIDE

EMERY 2 PERSON SWING

Product code: D71 M20355
UPC code: 471 333112 178 3
Vendor Item: SC-K-429N-1GS

Date of purchase: ____/____/____

Thank you for your purchase

Thank you for your purchase

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents	2
Safety Information	3
Set Up your Furniture Properly.....	3
Examine your furniture.....	3
Warranty	3
Care and Maintenance	4
Pre-Assembly	4
Planning Assembly.....	4
Hardware Included.....	4
Assembly Instructions	
Package Contents	5
Swing	6
Customer Service	11

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.

EXAMINE YOUR FURNITURE

- Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

WARRANTY

We warrant our products to be free of manufacturing defects to the original purchaser for the period listed below. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

EXCLUSIONS

This warranty does not cover: Furniture used for commercial or non-residential purposes; failures caused by improper care; unreasonable or abusive use; freeze damage; acts of nature. Steel products are not covered against rust. Tempered glass table tops are not covered against breakage.

FINISH

Frame finish is warranted to be free of manufacturing defects for a period of one (1) year. Discoloration or fading of the finish as a result of exposure to the elements, chemicals, or spills is not covered.

FABRIC

Fabric is warranted to be free of manufacturing defects for a period of one (1) year. Discoloration or fading of the finish as a result of exposure to the elements, chemicals, or spills is not covered.

FRAMES

Frame is warranted to be free from defects in material or workmanship for a period of one (1) year for steel frame.

FREIGHT & PACKAGING

Freight and packaging are the responsibility of the original purchaser.

CUSTOMER SERVICE

In case of a problem, call 1-800-457-4652 between 9:00 am to 5:00 pm Eastern standard time Monday through Friday or contact us at www.numarkcustomerservice.com for any question or problems you may have.

Care and Maintenance

- Though its powder-coated finish is rust-resistant, steel is prone to rust over time with exposure to the elements. In case of rust or scratches, lightly sand the affected area and apply touch-up paint. To maintain the finish, periodically apply wax with a soft cloth.
- Wash frames and cushions with a mild solution of soap and water; rinse thoroughly. Dry completely and drip-dry cushions. Do not use bleach or solvents.

Pre-Assembly

PLANNING ASSEMBLY

Read through all the instructions before beginning assembly. Unpack and identify all the parts. Place them on a flat, non-abrasive surface. Assembly by two people is recommended.

HARDWARE INCLUDED



NOTED: Hardware not shown to actual size.

Ja (8 + 1 spare)
M6 x 20L Bolt



Jb (4)
M6 x 36L Bolt



Jc (4)
M6 x 70L Bolt



 
Jd (12 + 1 spare)
M8 x 45L Bolt



Je (2)
M8 x 50L Bolt



Jf (4)
M8 x 105L Bolt



Jg (20)
M6 Metal Washer



Jh (20)
M8 Metal Washer



Ji (10 + 1 spare)
M8 Nut



Jj (4)
M6 Nut



Jk (2)
Triangle Bracket



Jl (4)
Hook



Jm(2)
Knob



 
Jn (2)
Open Hex Wrench



Jo (2)
Allen Wrench



Jp (1)
Assembly
Instructions Sheet



Pre-Assembly




Safety Information

Do not completely tighten bolts and nuts until indicated in assembly step.

Assembly Instructions

Package Contents


ITEM	DESCRIPTION	QUANTITY	ITEM	DESCRIPTION	QUANTITY
A	Leg Post	4	F1	Left Arm	2
B	Top Beam	1	F2	Right Arm	2
C	Leg Connection Bar	2	G	Seat	2
D	Hanging Bar	8	H	Canopy	1
E	Back	2	I	Cushion	2

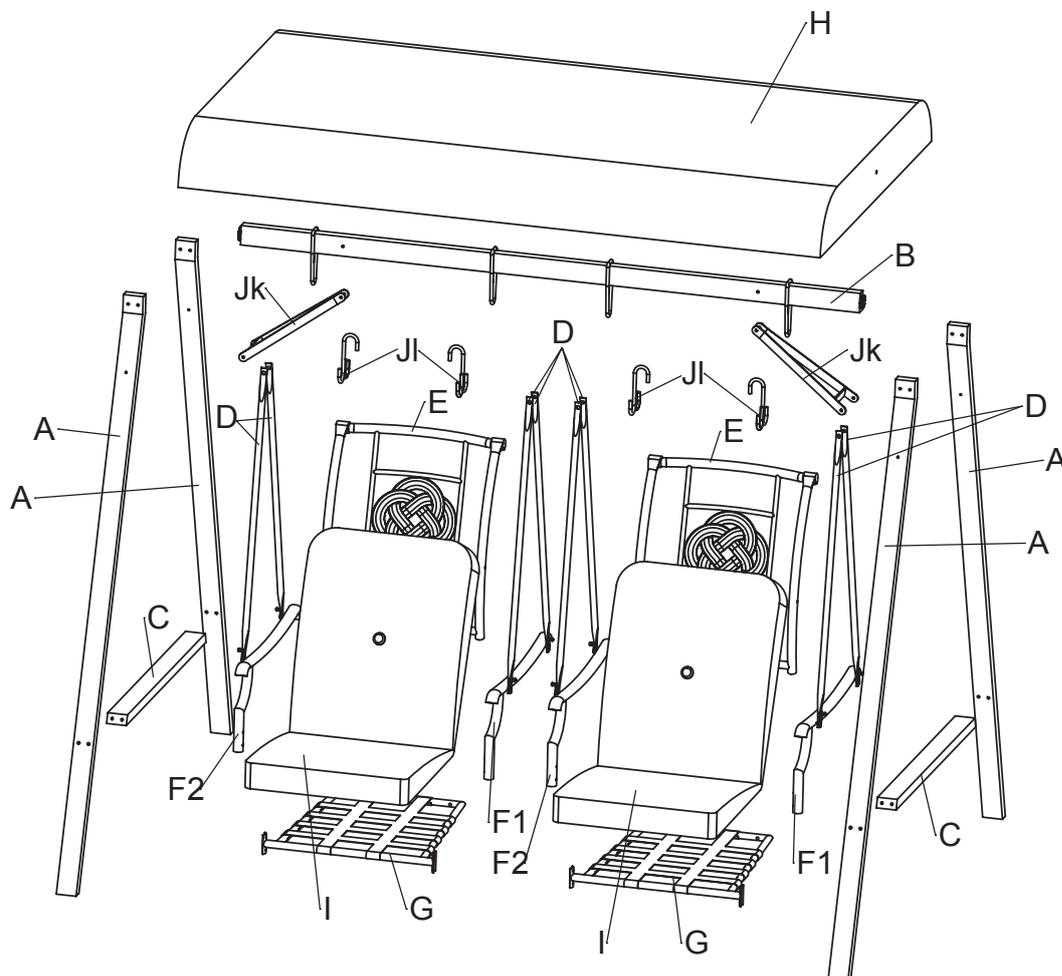

Assembly Instructions

1 Attaching the top beam to the leg post

 
Jf x 4
M8 x 105L Bolt



Jh x 8
M8 Metal Washer



Ji x 4
M8 Nut

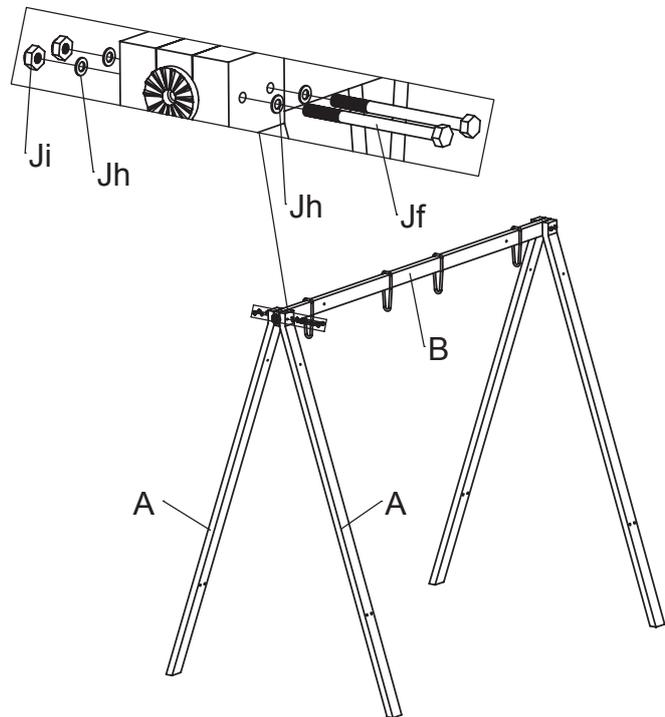


- Don't tighten completely.
- Repeat procedure for the other side.

2 Attaching the leg connection bar to the leg post

Jd x 8
M8 x 45L Bolt



Jh x 8
M8 Metal Washer

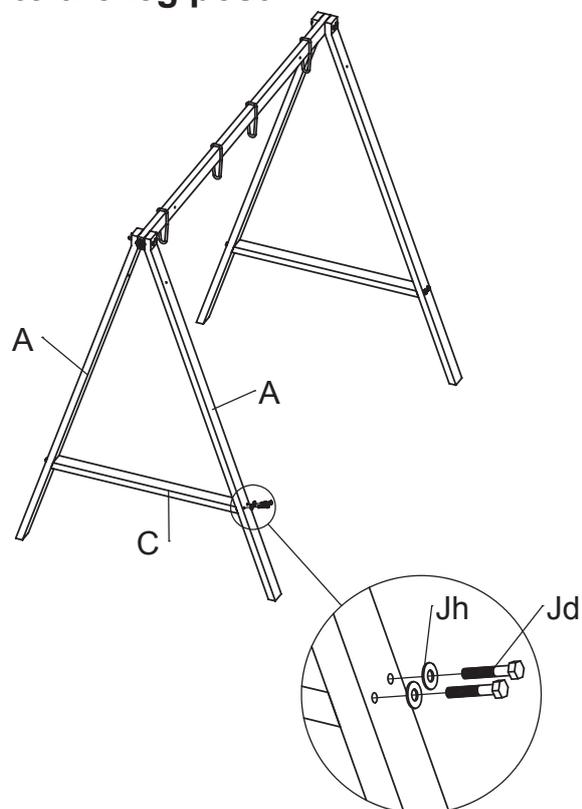

- Don't tighten completely.
- Repeat procedure for the other side and leg post.

Assembly Instructions

3 Attaching the triangle bracket to the top beam


Je x 2
M8 x 50L Bolt



Ji x 2
M8 Nut



Jk x 2
Triangle Bracket

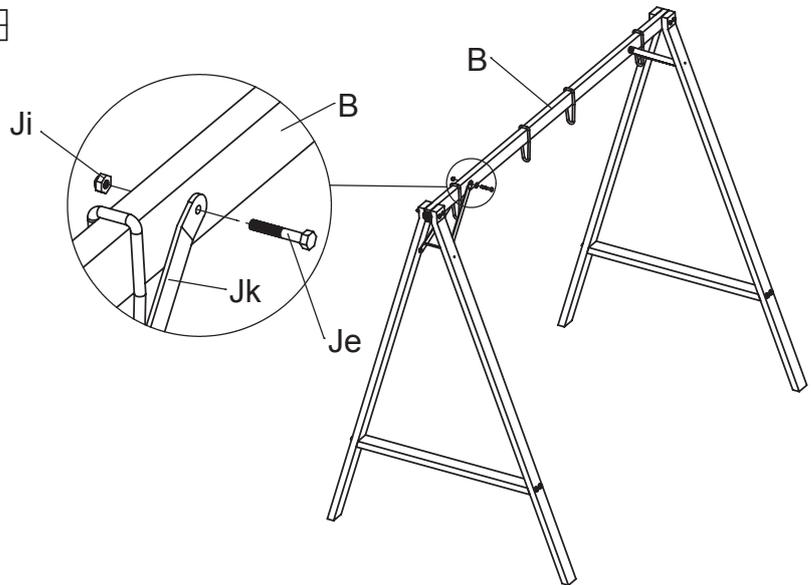

- Don't tighten completely.
- Repeat procedure for the other side.

4 Attaching the triangle bracket to the leg post


Jd x 4
M8 x 45L Bolt



Jh x 4
M8 Metal Washer



Ji x 4
M8 Nut

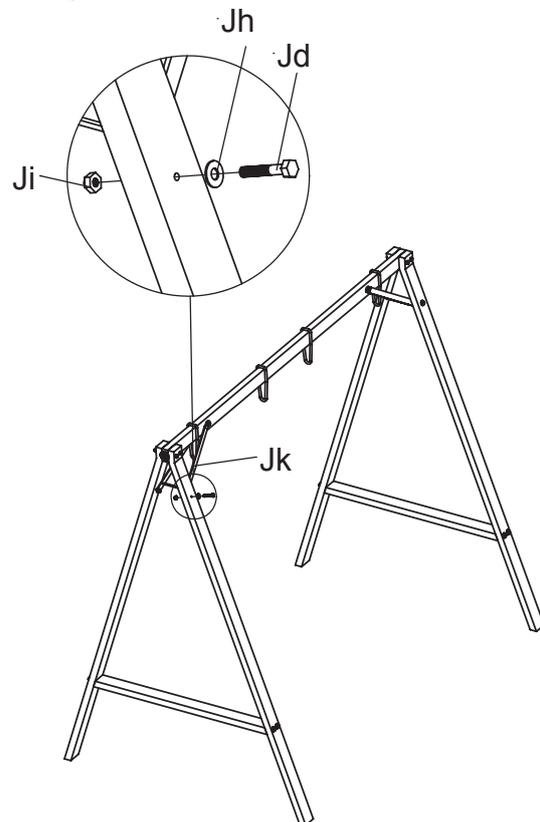

- Don't tighten completely.
- Repeat procedure for the other side.
- Repeat procedure for the other triangle.
- Securely tighten all bolts and nuts on above steps.


Assembly Instructions

5 Attaching the back to the seat

Jb x 4
M6 x 36L Bolt



Jg x 4
M6 Metal Washer

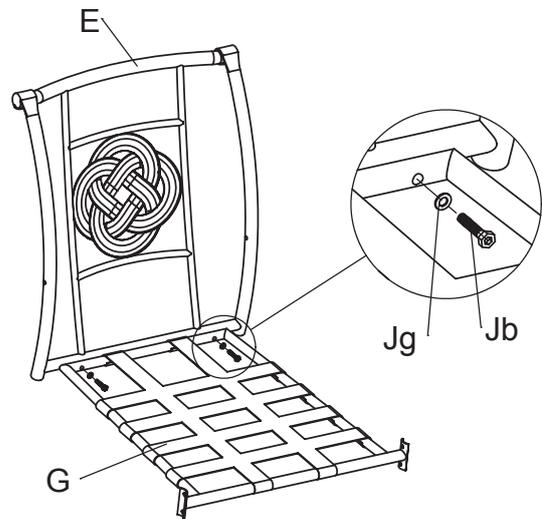

- Don't tighten completely.
- Repeat procedure for the other side.
- Repeat procedure for the other chair frame

6 Attaching the arm to the back


Jc x 4
M6 x 70L Bolt



Jg x 8
M6 Metal Washer



Jj x 4
M6 Nut

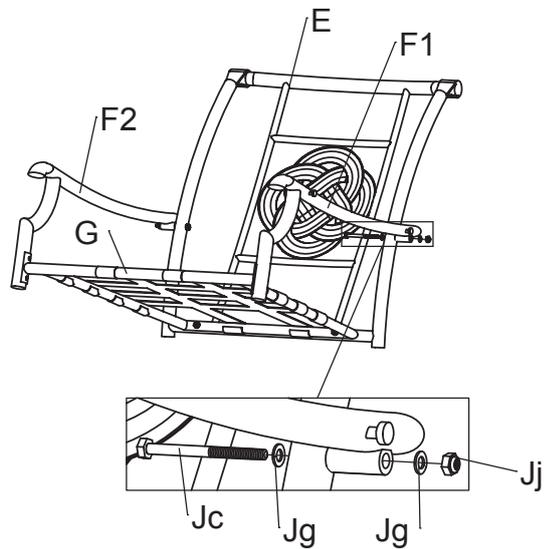

- Don't tighten completely.
- Repeat procedure for the other side.
- Repeat procedure for the other chair frame


Assembly Instructions

7 Attaching the arm to the seat

Ja x 8
M6 x 20L Bolt





Jg x 8
M6 Metal Washer

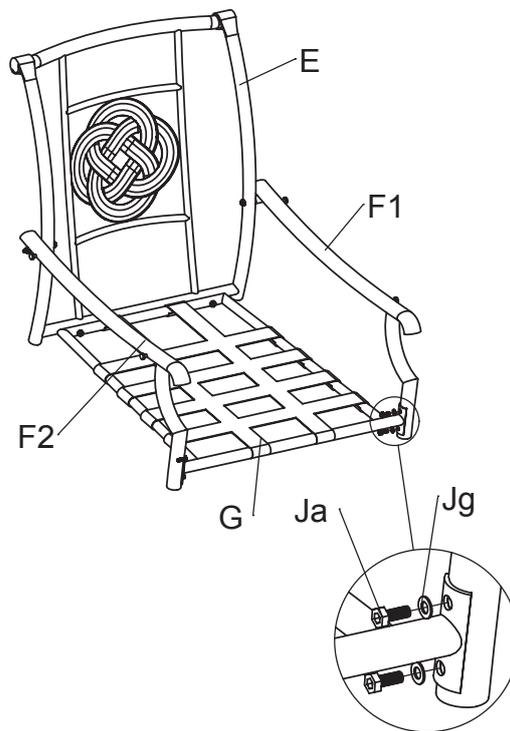

- Don't tighten completely.
- Repeat procedure for the other side.
- Repeat procedure for the other chair frame.
- Securely tighten all bolts and nuts on above steps.


8 Attaching the hook to the hanging bar

 Jl x 4
Hook

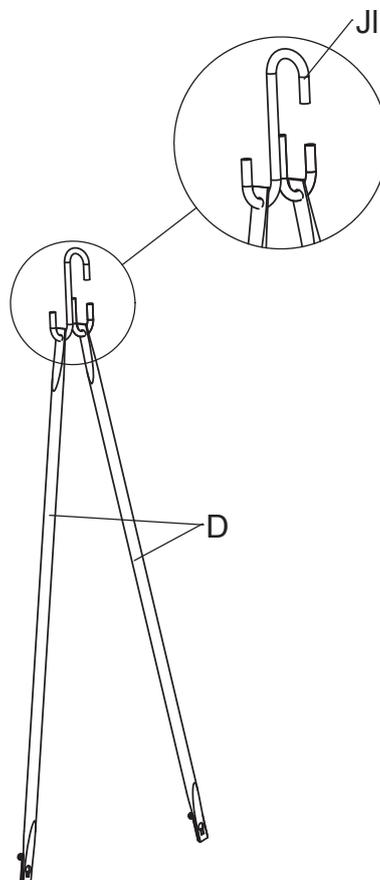


Assembly Instructions

9 Attaching the hanging bar to the chair arm

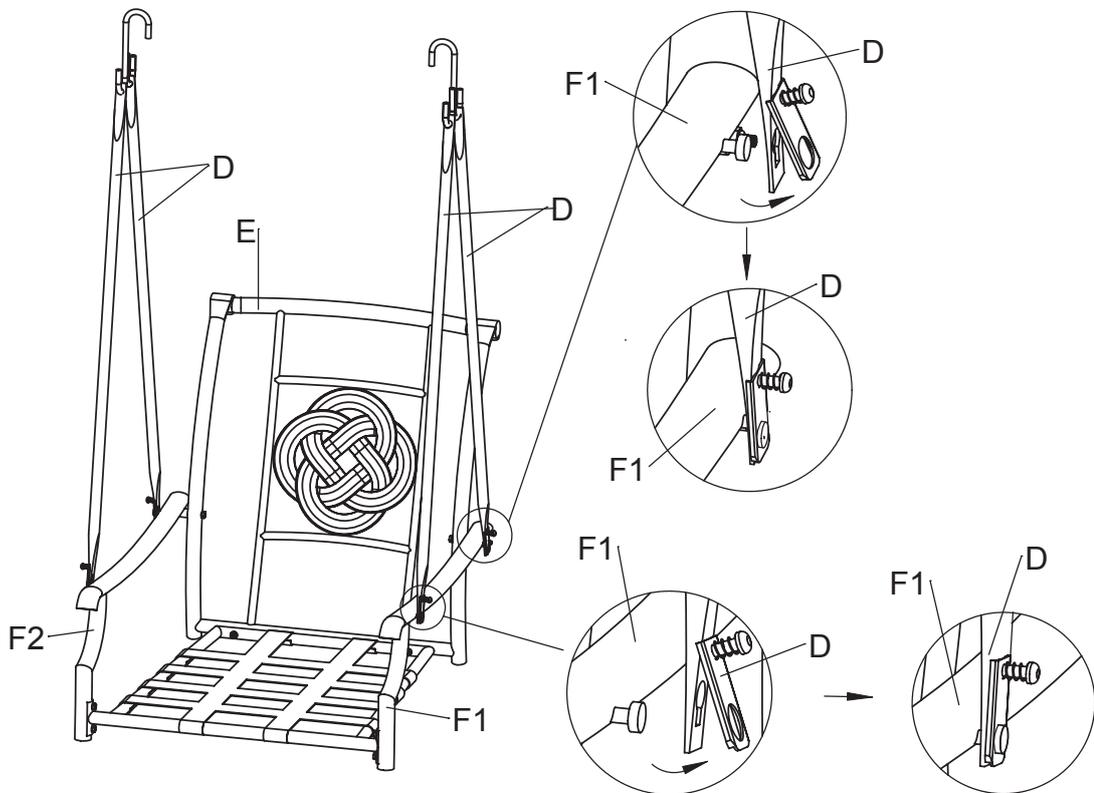


10 Attaching the hook to the ring of top beam

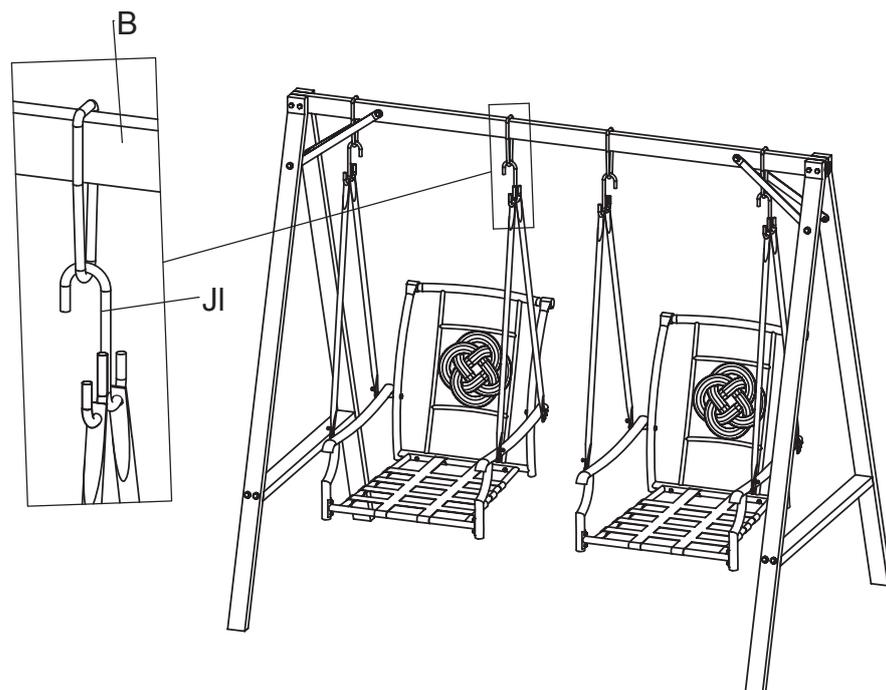

Assembly Instructions

11 Putting on the canopy and attaching the knob to the canopy and top beam

Jm x 2
Knob

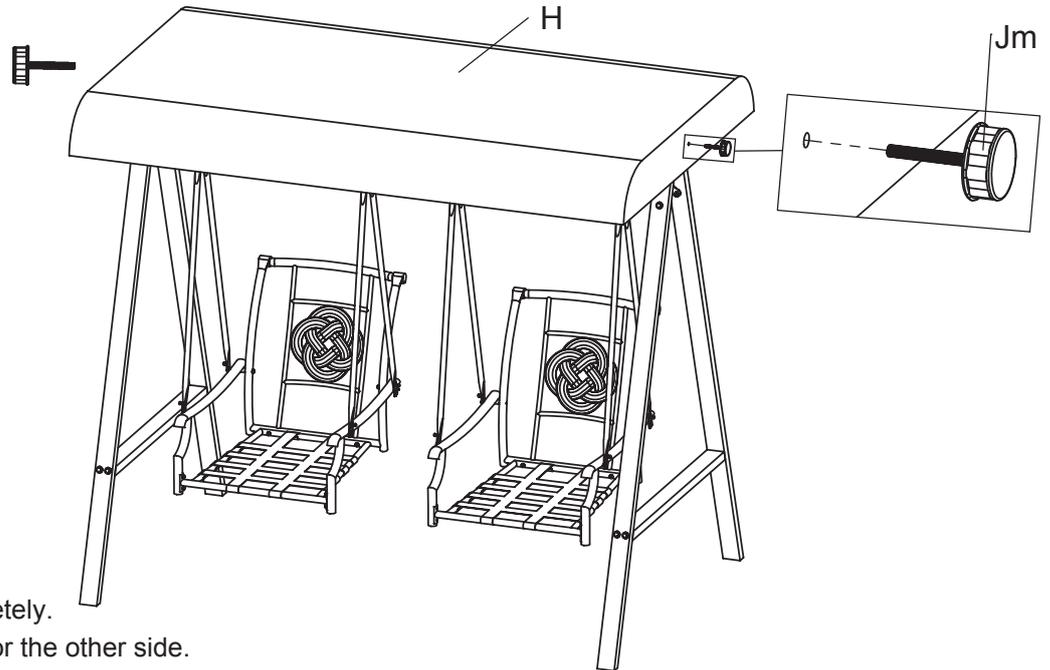

- Don't tighten completely.
- Repeat procedure for the other side.

12 Putting cushions onto the chair and fasten all bolts and nuts



sears

Please refer to part numbers when reordering
For questions or comments about product:
Call toll-free: 1-800-457-4652
between 9:00 am to 5:00 pm Eastern standard time Monday through Friday
or contact us at www.numarkcustomerservice.com

Made in / Hecho en CHINA
Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com