

USE AND CARE GUIDE

Arch Swing

Product Code: D71 M34522

KSN: 05220156-3

UPC Code: 849275000915

Date of Purchase: ____/____/____

Thank you for your purchase

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

- Table of Contents..... 2
- Safety Information..... 3
 - Set Up your Furniture Properly..... 3
 - Examine your Furniture..... 3
- Warranty..... 3
 - What is Covered..... 3
 - What is Not Covered..... 3
- Care and Maintenance..... 4
- Pre-Assembly..... 4
 - Planning Assembly..... 4
 - Observe weight Limits..... 5
 - Parts included..... 5
 - Hardware Contents..... 5
 - What you Need..... 5
- Assembly Instructions..... 6
- Customer Service..... 10

Safety Information

SET UP YOUR FURNITURE PROPERLY

Ensure that all parts are assembled properly and fully tightened as per the instructions.

When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.

EXAMINE YOUR FURNITURE

Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

1 YEAR WARRANTY

Frame warrant only!

We warrant to the original purchaser for one year from the date of purchase.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, acts of nature, fire, freezing, and abusive use. Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.

Proof of purchase (dated register receipt) is required for warranty claims.

We reserve the right to make substitutions with similar merchandise, if the model is no longer in production. Warranty is to the original purchaser and is not transferable. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. this warranty gives you specific rights, and you may also have other rights, which vary from state to state.

WARRANTY


This limited warranty is extended to the original purchaser and applies to defects in material and workmanship of your Patio furniture, provided your furniture is maintained with care and used only for personal, residential purposes.

Warranty

Exclusions: Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of Nature, vandalism, misuse, or improper assembly is not covered. Discoloration and fading of the finish or fabrics as a result of chemicals or spills are not covered. If, within the stated warranty period, this product is found to be defective in material or workmanship, the purchaser must contact the customer service department at 1-877-747-3660. The manufacturer, at its option, will repair or replace the defective parts. Proof of purchase (date register receipt) is required for warranty claims. It remains the customer's responsibility to pay for freight and packing charges to and from the service center. Warranty is to The original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.
Customer service 1-877-747-3660

Care and Maintenance

For daily care, wipe with soft dry cloth. Wipe spills with clean dry cloth. Avoid the use of harsh cleaners and abrasives. Store indoors during long period of inclement weather. Make sure furniture is completely dry before storage. Use a proper outdoor cover when left outside during inclement weather or when not in use.

 **WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source.

Pre-Assembly

PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 60 minutes for 3 persons to complete all the assembly.

Pre-Assembly

OBSERVE WEIGHT LIMITS

 

 



 

 

 

 

 



 







The recommended weight limits for the Arch Swing is 440 lbs.

⚠ Caution: if you overload your furniture, injuries can occur.

HARDWARE INCLUDED

PARTS INCLUDED

Noted: Hardware and parts not shown to actual size.

ITEM#	HARDWARE	DESCRIPTION	Q'TY	ITEM#	PARTS	DESCRIPTION	Q'TY
A		Eye Bolt	4	P		Right Arch Leg	2
B		Eye Bolt	4	Q		Left Arch Leg	2
C		Hook	8	R		Arch Top	2
D		Chain	4	S		Stand Stop	3
E		Bolt	4	T		Bed Stop	2
F		Bolt	12	U		Bed Stretcher	2
G		Bolt	14	V		Bottom Stop	2
H		Thread Bolt	4	W		Bottom Connector	2
I		Thread Bolt	2	X		Bed	1
J		Bolt Cap	6	Y		Canopy	1
K		Nut	38	Z		Pillow	2
L		Washer	68				
M		Handle	2				
N		Wrench	2				
O		Allen Wrench	2				

WHAT YOU NEED

Screwdriver required(not included).

Allen wrench required(included).

Assembly Instructions

 



1 ATTACHING ARCH FRAME

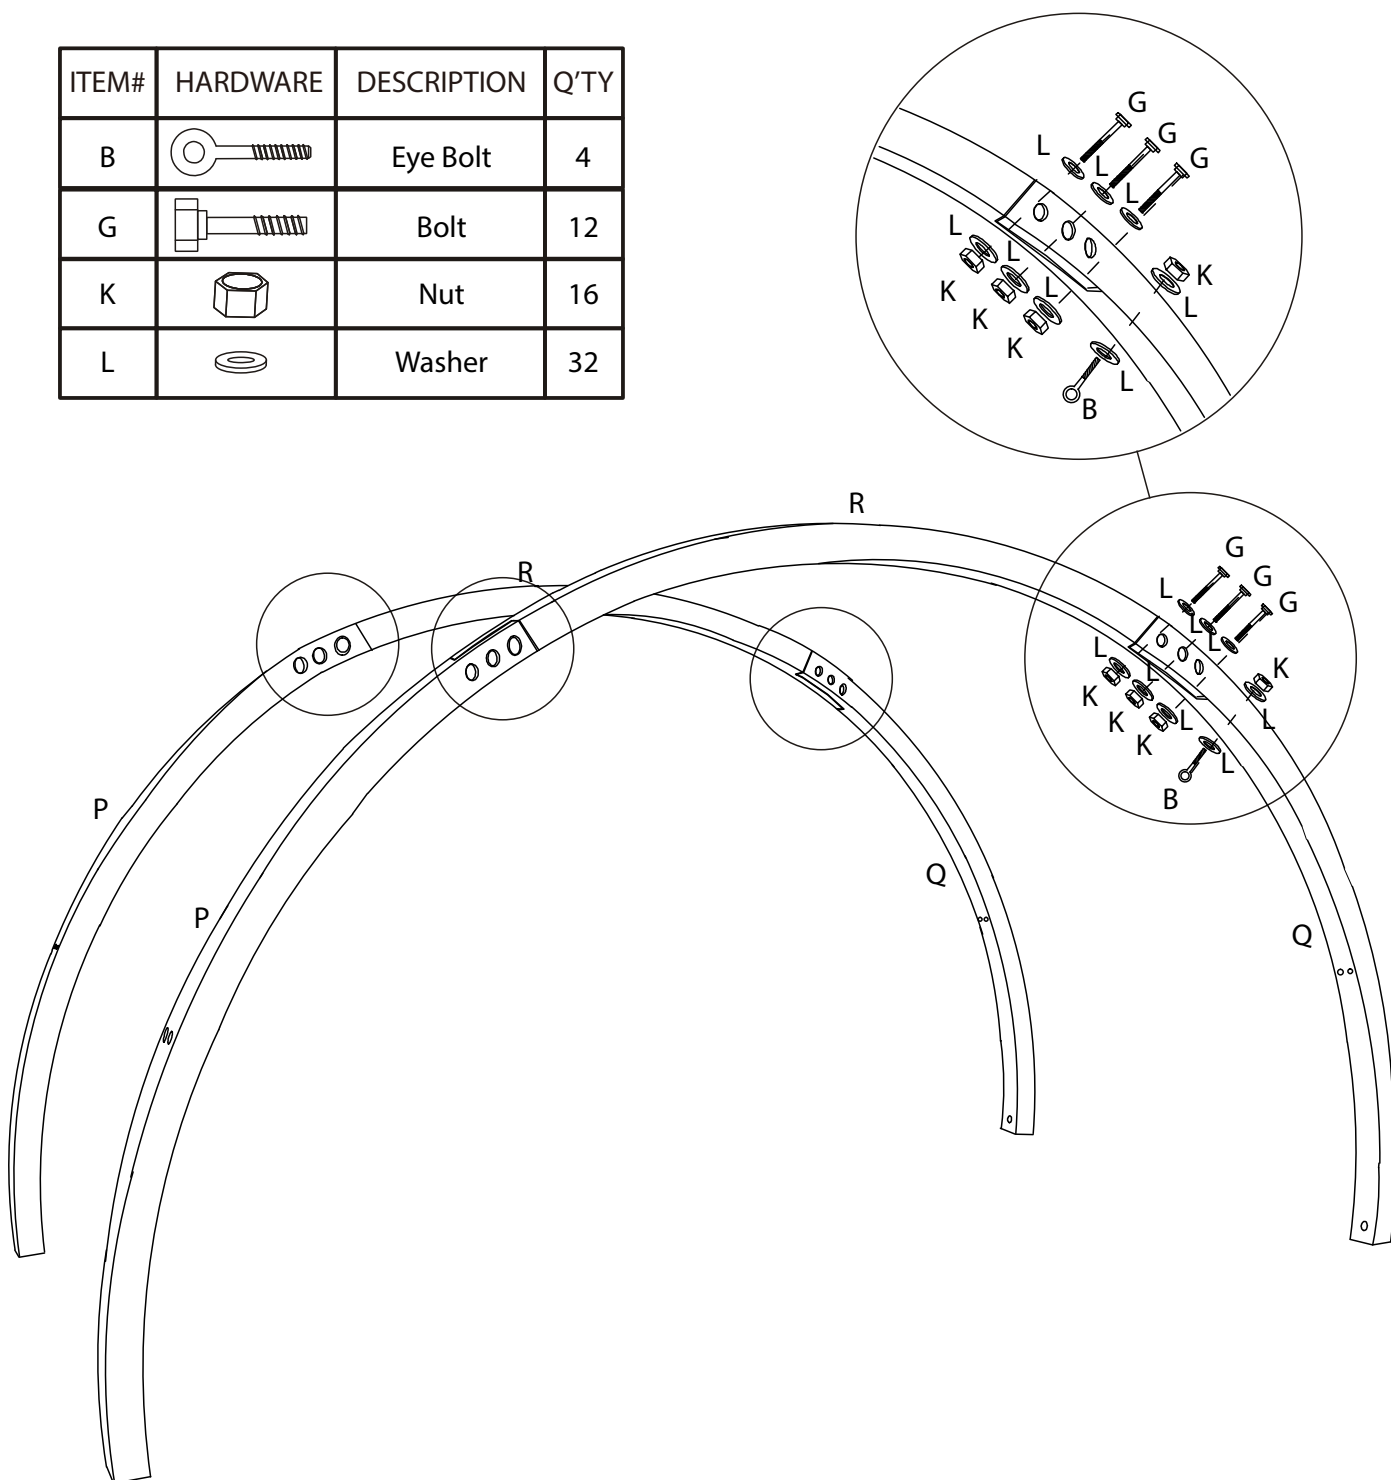
Attach left arch leg "Q" to arch top "R" and right arch leg "P" to arch top "R" and repeat the step for another side.

Fasten bolt "G" and nut "K". Fasten eye bolt "B" and nut "K".

Every bolt needs to be used with 2 washers.

Repeat the assembly on other 3 joint(circled) area.

ITEM#	HARDWARE	DESCRIPTION	Q'TY
B		Eye Bolt	4
G		Bolt	12
K		Nut	16
L		Washer	32



Assembly Instructions

 
 
 

 

 
2 ATTACHING ARCH FRAMES AND STAND

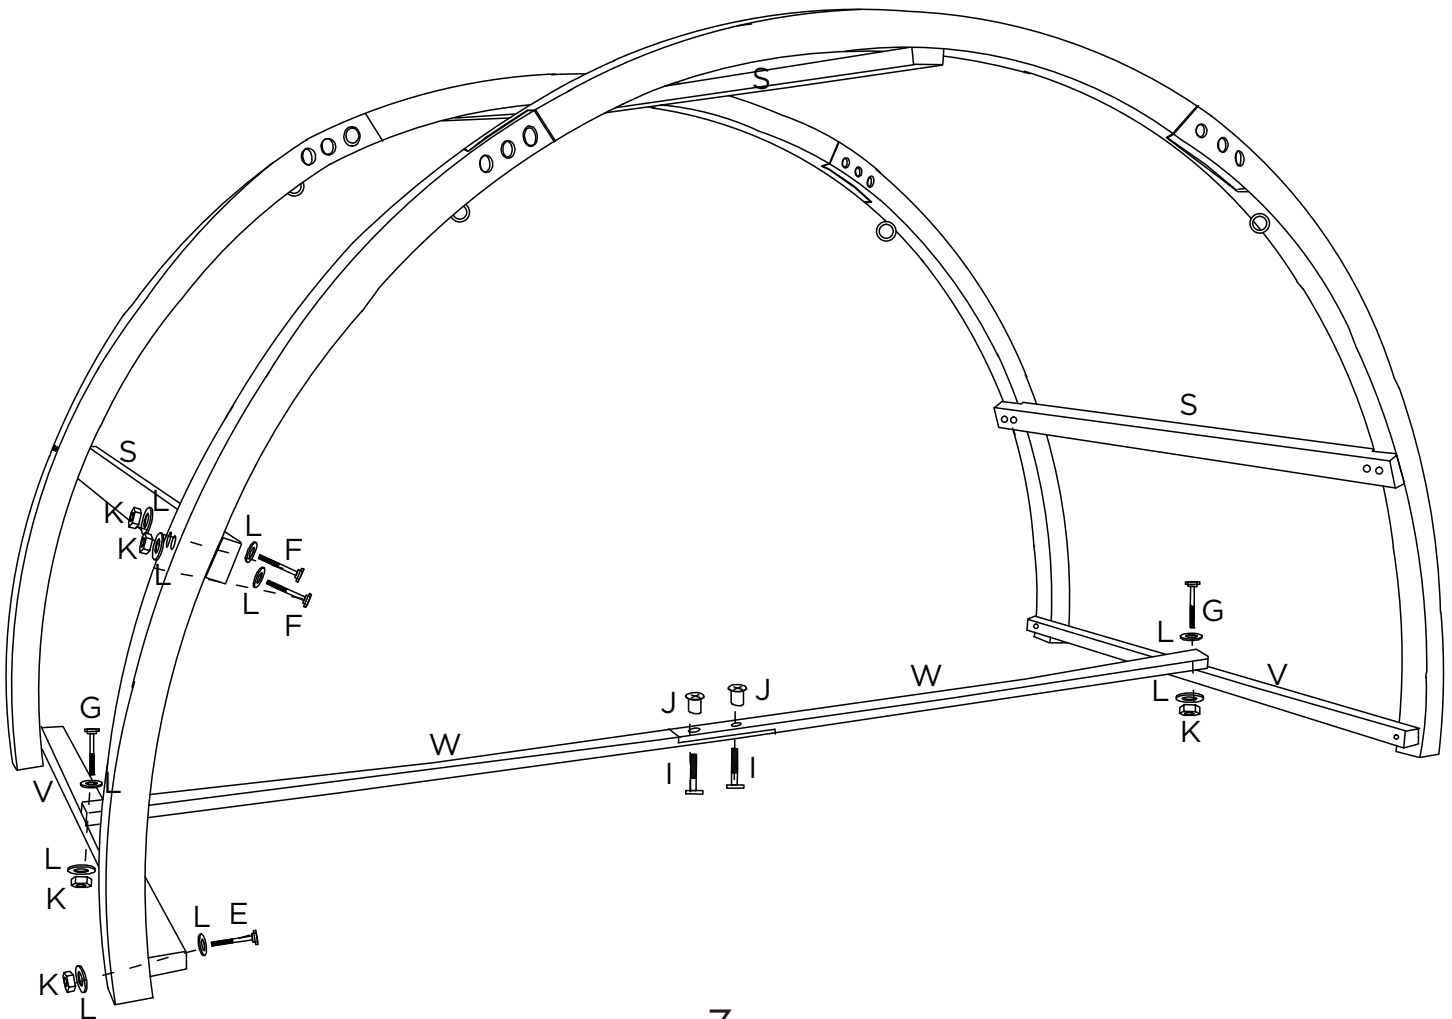
Attach stand stop "S" onto the 2 arch frames and fasten bolt "F" and nut "K". Repeat this step for the other 5 places.

Attach bottom stop "V" onto the 2 arch frames and fasten bolt "E" and nut "K". Repeat this step for the other 3 places.

Attach bottom connector "W" and fasten thread bolt "I" and bolt cap "J" then attach to the bottom stop "V". Fasten bolt "G" and nut "K". Repeat this step on another side.

Every bolt needs to be used with 2 washers except for thread bolt "I".

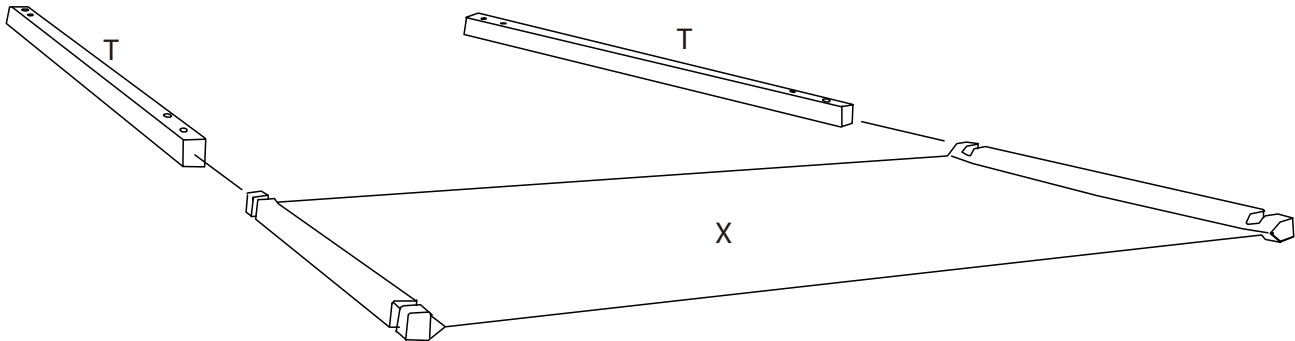
ITEM#	HARDWARE	DESCRIPTION	Q'TY	ITEM#	HARDWARE	DESCRIPTION	Q'TY
E		Bolt	4	J		Bolt Cap	2
F		Bolt	12	K		Nut	16
G		Bolt	2	L		Washer	32
I		Thread Bolt	2				



Assembly Instructions



 

 
3 ATTACHING CANVAS BED

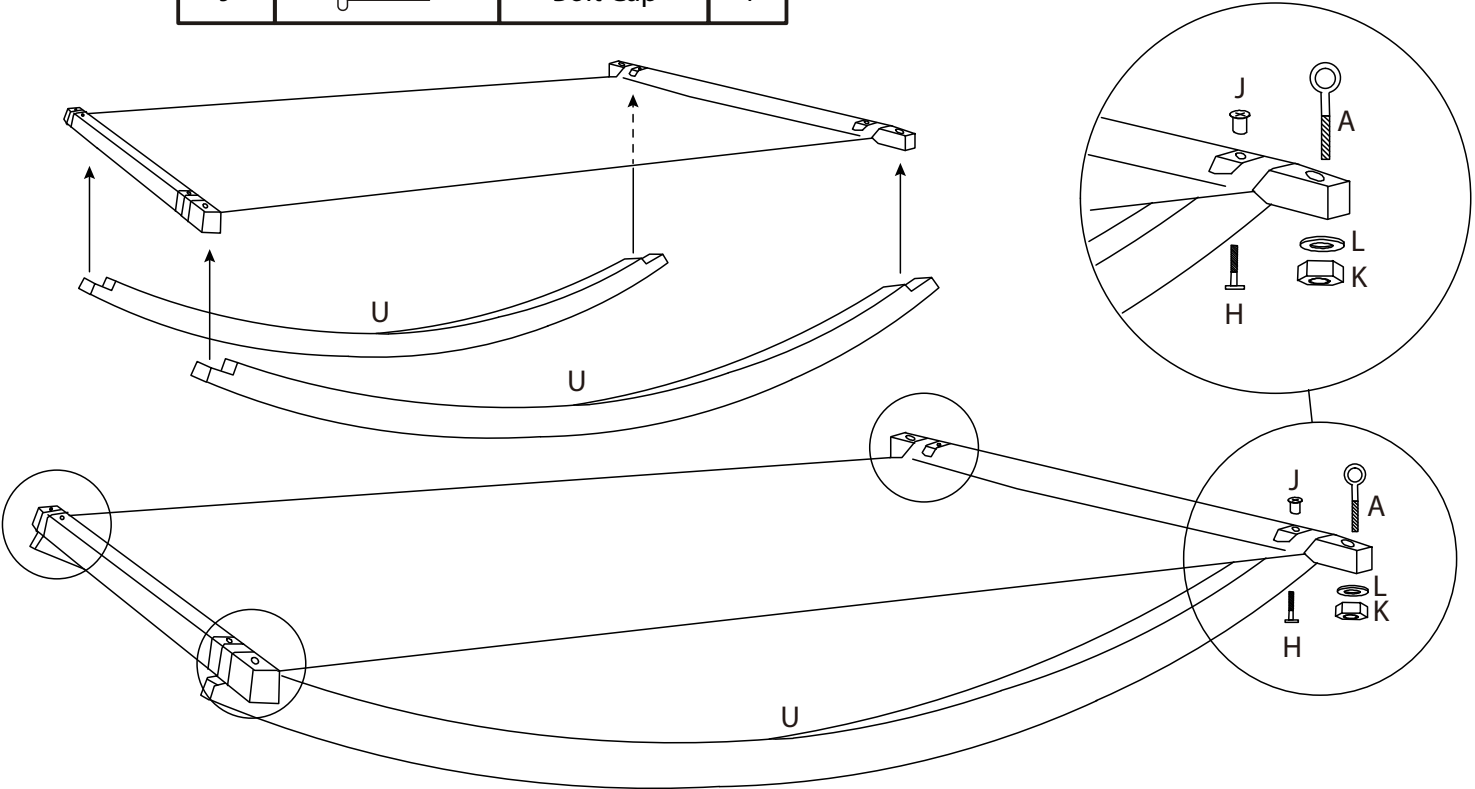
Insert bed stop "T" into the end sides of the canvas bed "X".



4 ATTACHING BED STRETCHER

Attach bed stretcher "U" with canvas bed(from step 3).
Fasten thread bolt "H" and bolt cap "J". Fasten eye bolt "A" with nut "K", need to be used with 1 washer.
Repeat the step for other 3 circled areas.


 
ITEM#	HARDWARE	DESCRIPTION	Q'TY	ITEM#	HARDWARE	DESCRIPTION	Q'TY
A		Eye Bolt	4	K		Nut	4
H		Thread Bolt	4	L		Washer	4
J		Bolt Cap	4				

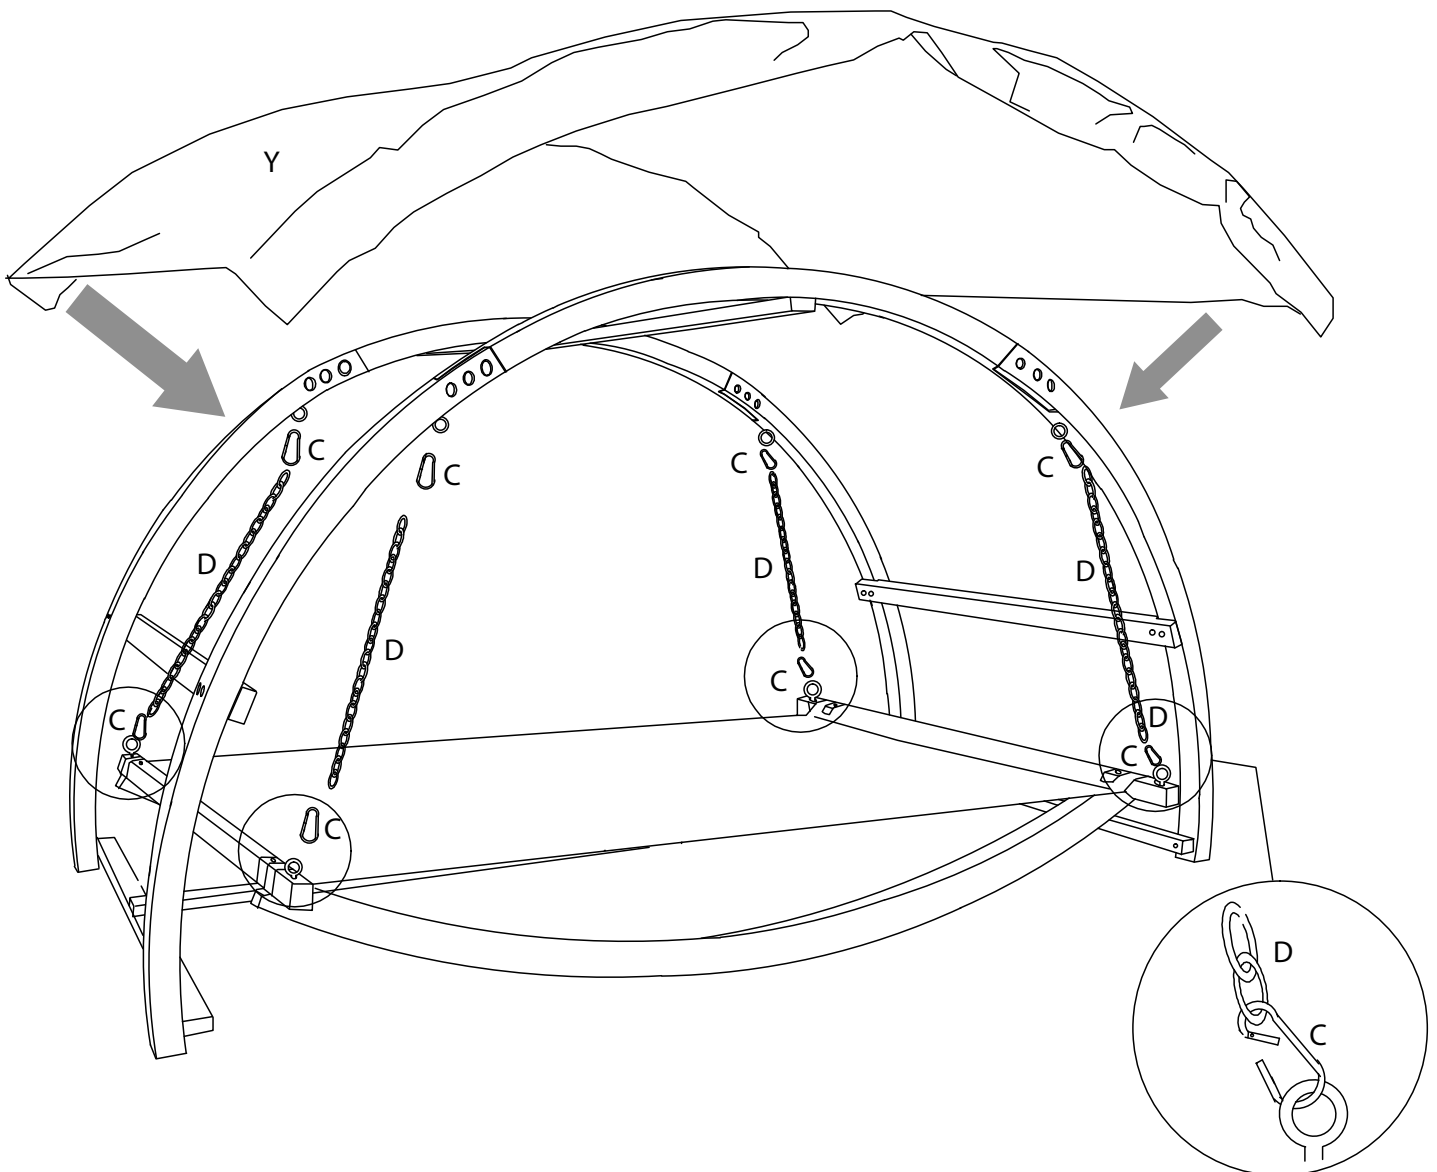


Assembly Instructions

5 ATTACHING BED AND CANOPY

Attach canvas bed onto the arch frames with hook "C" and chain "D". Cover canopy onto the top of the arch frames and affixed by Velcro which on insides of the canopy.

ITEM#	HARDWARE	DESCRIPTION	Q'TY
C		Hook	8
D		Chain	4



sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: sourcepop7@gmail.com or Call toll-free: 1-877-747-3660

Monday thru Friday from 8:30am - 5:00pm Central time

Made in / Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com