

NOTE:  
Please read all  
instructions carefully  
before using this product

Table of Contents

Safety Notice

Hardware Pack

Assembly Instruction

Parts List

Warranty

Ordering Parts

Model  
NS-40501E


Retain This  
Manual for  
Reference

140926

ASSEMBLY &  
OWNER'S  
MANUAL

# MARCY®

## Magnetic-Resistance Elliptical Exerciser NS-40501E

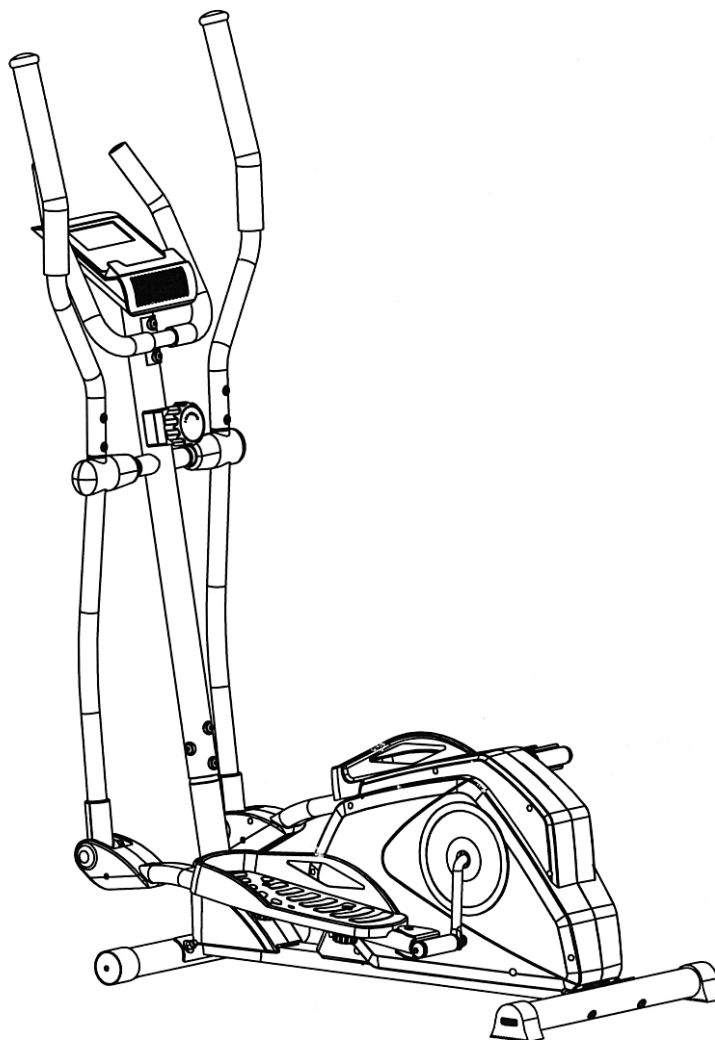

**IMPEX® INC.**

2801 S. Towne Ave, Pomona, CA 91766  
Tel: (800) 999-8899 Fax: (626) 961-9966

[www.impex-fitness.com](http://www.impex-fitness.com)

[support@impex-fitness.com](mailto:support@impex-fitness.com)

## TABLE OF CONTENTS

BEFORE YOU BEGIN.....	1
IMPORTANT SAFETY NOTICES.....	2
WARNING LABEL PLACEMENT.....	3
HARDWARE PACK .....	4
ASSEMBLY INSTRUCTIONS.....	7
EXPLODED DIAGRAM.....	15
PARTS LIST.....	17
CARE, MAINTENANCE, AND STORAGE.....	19
OPERATING NOTES.....	19
COMPUTER.....	20
EXERCISE GUIDELINES.....	21
WARRANTY.....	23
ORDERING PARTS.....	23

---

## BEFORE YOU BEGIN

Thank you for selecting the MARCY Magnetic-Resistance Elliptical Exerciser NS-40501E by IMPEX® INC. For your safety and benefit, read this manual carefully before using the bike. As a manufacturer, we are committed to provide you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts, we guarantee you complete satisfaction through direct assistance from our factory. To avoid unnecessary delays, *please call our TOLL-FREE customer service number*. Our Customer Service Agents will provide immediate assistance to you.

**Toll-Free Customer Service Number**

**1-800-999-8899**

**Mon. - Fri. 9 a.m. - 5 p.m. PST**

**[www.impex-fitness.com](http://www.impex-fitness.com)**

**[support@impex-fitness.com](mailto:support@impex-fitness.com)**

## IMPORTANT SAFETY NOTICE


### **PRECAUTIONS**

This exercise machine is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble or operate your machine. In particular, note the following safety precautions:

1. **Keep children and pets away from the machine at all times. DO NOT leave children unattended in the same room with the machine.**
2. Only one person at a time should use the machine.
3. If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
4. Position the machine on a clear, leveled surface. DO NOT use the machine near water or outdoors.
5. Keep hands away from all moving parts.
6. Always wear appropriate workout clothing when exercising. DO NOT wear robes or other clothing that could become caught in the machine. Running or aerobic shoes are also required when using the machine.
7. Use the machine only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
8. Do not place any sharp object around the machine.
9. Disabled person should not use the machine without a qualified person or physician in attendance.
10. Before using the machine to exercise, always do stretching exercises to properly warm up.
11. Never operate the machine if the machine is not functioning properly.
12. Read all warnings posted on the exercise bike.
13. Inspect the exercise bike for worn or loose component prior to use. Tighten/replace any loose or wore components prior to use.
14. Care should be taken in mounting or dismounting the exercise bike.
15. **This exercise bike is for consumer and home use only.**

**WARNING: BEFORE BEGINNING ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH PROBLEMS. READ ALL INSTRUCTIONS BEFORE USING ANY FITNESS EQUIPMENT. IMPEX INC. ASSUMES NO RESPONSIBILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE SUSTAINED BY OR THROUGH THE USE OF THIS PRODUCT. SAVE THESE INSTRUCTIONS.**

## WARNING LABEL PLACEMENT

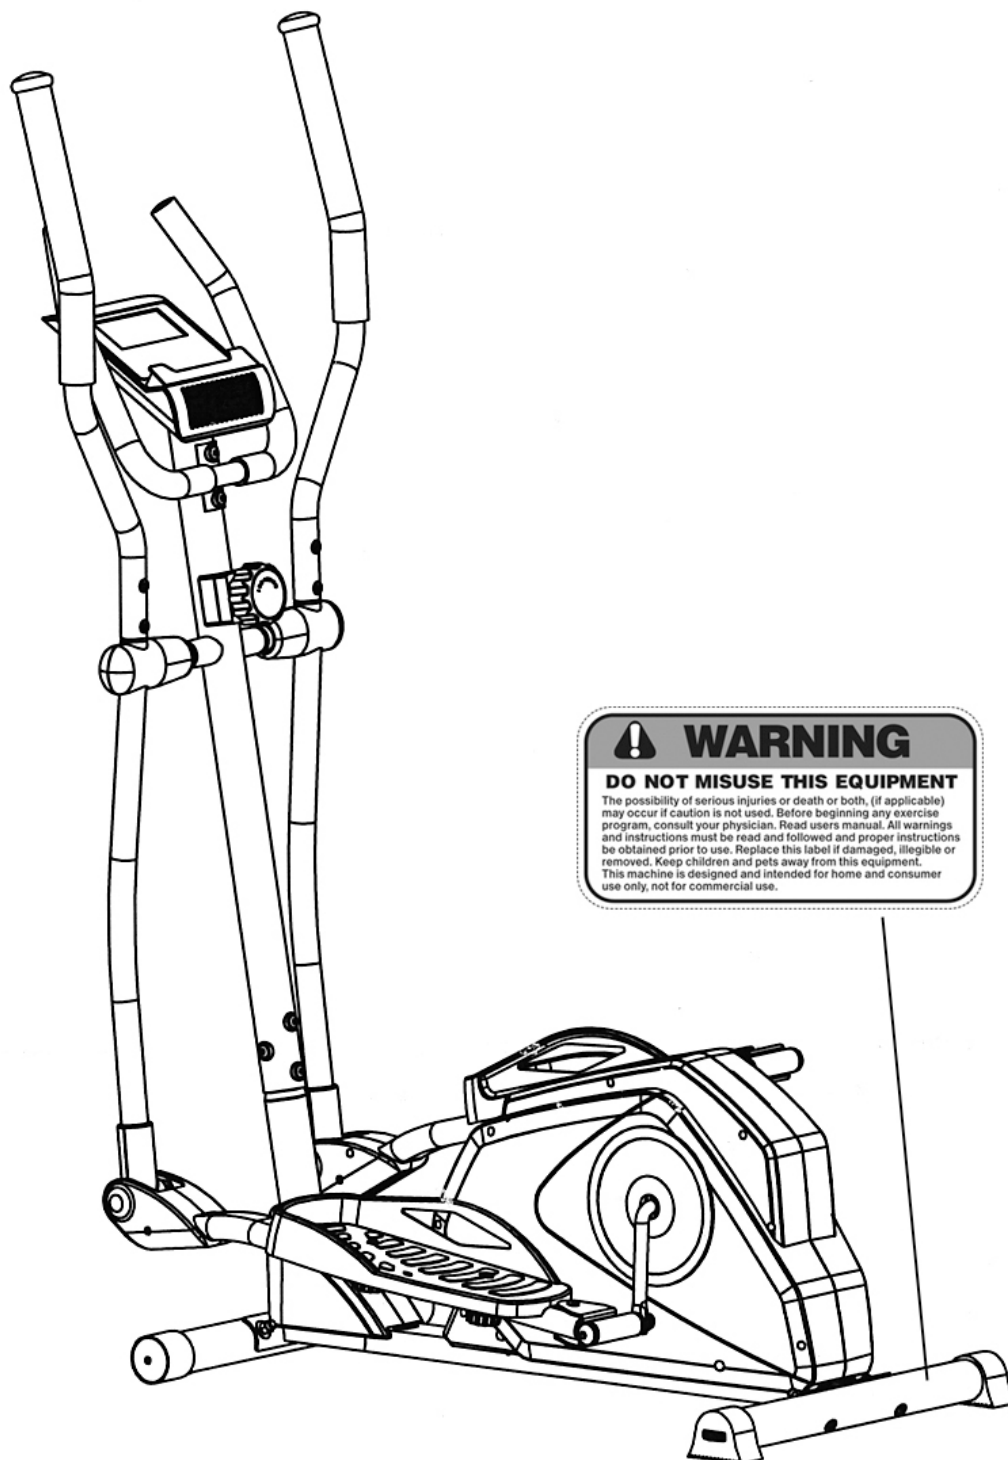

 








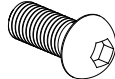
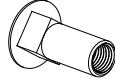
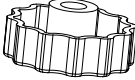







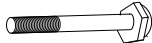



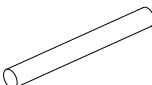
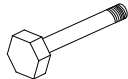
The Warning Labels shown here has been placed on the Rear Stabilizer.

 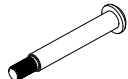If the labels are missing or illegible, please call customer service at 1-800-999-8899 for replacement. Apply the labels in location shown.


## HARDWARE PACK

**NOTE:** The following parts are not drawn to scale. Please use your own ruler to measure the size.


NO.	DESCRIPTION	Q'TY	Drawings
6	Carriage M10 x 3"	4	
7	Curved washer Ø 7/8"	4	
8	Acorn Nut M10	4	
16	Aircraft Nut M10	2	
17	Flat Washer Ø 3/4"	2	
18	Sleeve	2	
20	Hex Bolt M10 x 3 1/8"	2	
14	Hex Bolt M8 x 1 3/4"	4	
23	Allen Bolt M8 x 5/8"	6	
10L/R	Pedal Axle Bolt	1/1	
11	Wrinkled Washer	2	
35	Allen Bolt M6 x 1/2"	4	
36	Carriage Bolt M6 x 3/4"	4	
15	Lock knob	4	

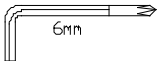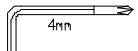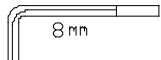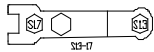29	Hex Bolt M10 x $\frac{3}{4}$ "	2	
30	Lock Washer $\varnothing \frac{3}{8}$ "	2	
31	$\varnothing 1 \frac{1}{4}$ " x $\varnothing \frac{3}{8}$ "	2	
32	D Washer	2	
12	Flat Washer $\varnothing 1 \frac{1}{8}$ "	2	
51L/R	Hex Nut	1/1	
41	Curve Washer $\varnothing \frac{3}{4}$ " x $\varnothing \frac{3}{8}$ "	6	
	Allen key L6	1	
	Allen key L4	1	
	Allen key L8	1	
	Allen wrench	2	


## COMPONENTS FOR ASSEMBLY

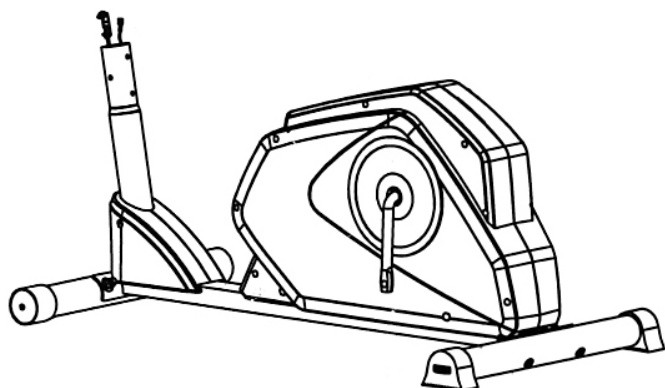


N0:1

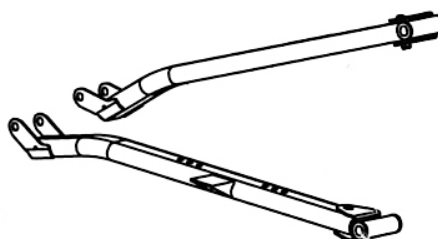

N0:9L/R

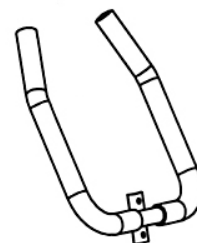


N0:39

 

N0:2




N0:3

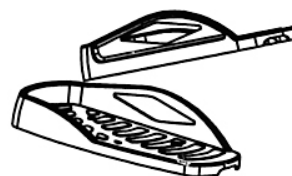

N0:13L/R



N0:38

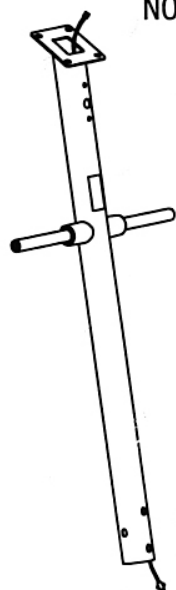


N0:22



N0:25



N0:37L/R

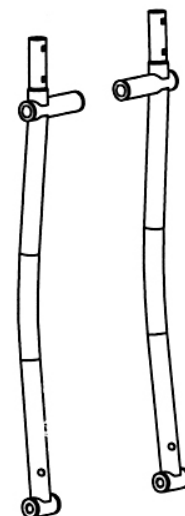

N0:21L/R



N0:47



N0:52




N0:54L/R

## ASSEMBLY INSTRUCTION

- **Tools Required For Assembling the Machine:** One Crossing Wrench and Allen Wrench, provided by manufacturer.
- **NOTE:** It is strongly recommended that two or more people assemble this machine to avoid possible injury.

### STEP-1


- A.) Attach the Rear Stabilizer (#2) to the Main Frame (#1). Secure it with two M8 x 3" Carriage Bolts (#6), two Ø 7/8" Curved Washers (#7), and two Acorn Nuts (#8).
- B.) Attach the Front Stabilizer (#3) to the Main Frame. Secure it with two M8 x 3" Carriage Bolts (#6), two Ø 7/8" Curved Washers (#7), and two Acorn Nuts (#8).

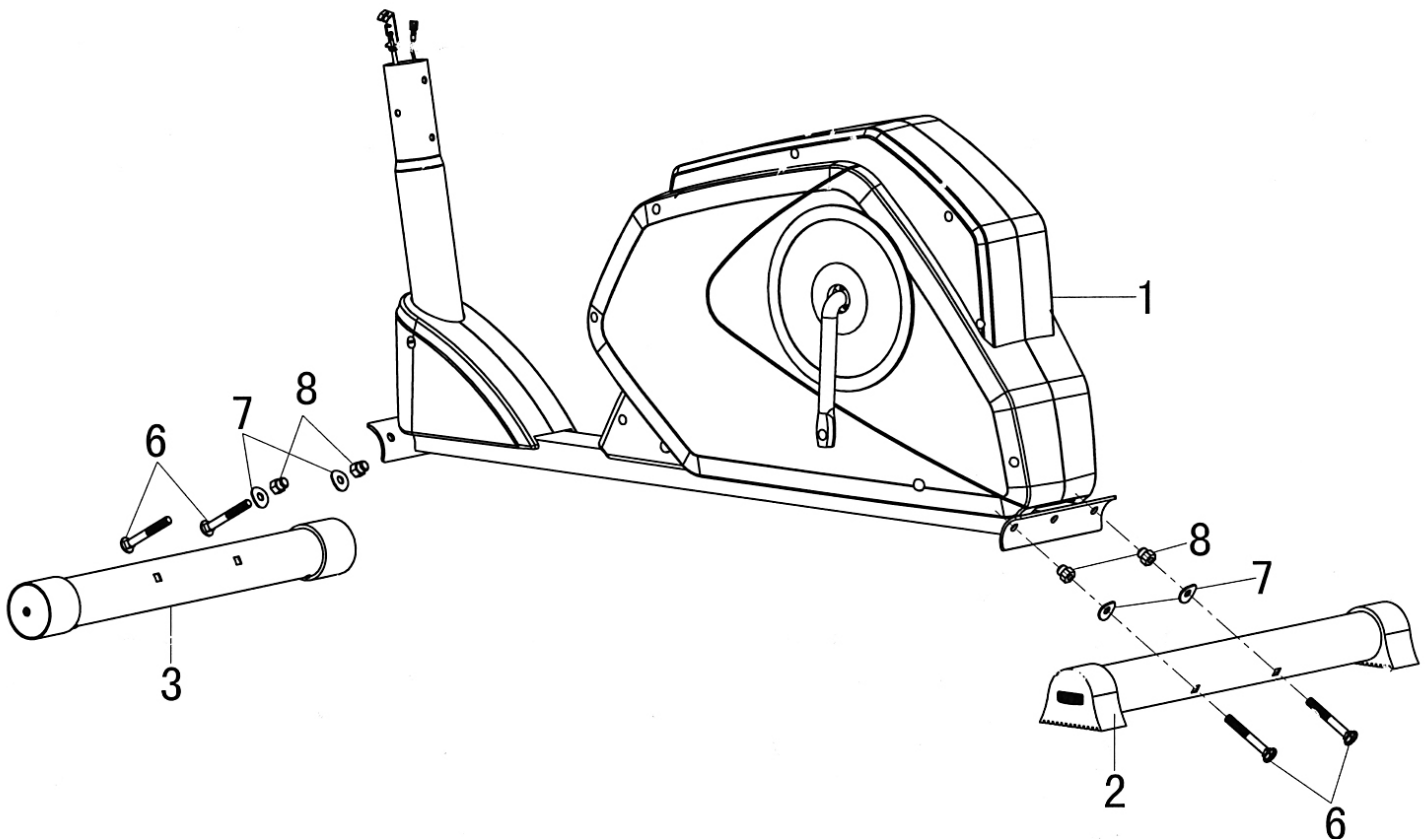




## STEP-2

- A.) Remove the Tension Knob Screw (#50) and Ø ½" Washer (#49) from the Tension Knob.
- B.) Insert the Upper Tension Cable (#25) through the opening on Front Post to the bottom of the Front Post.
- C.) Plug the Tension Knob (#25) into the opening, secure the Tension Knob to Front Post with the Tension Knob Screw (#50) and the Ø ½" Washer (#49).

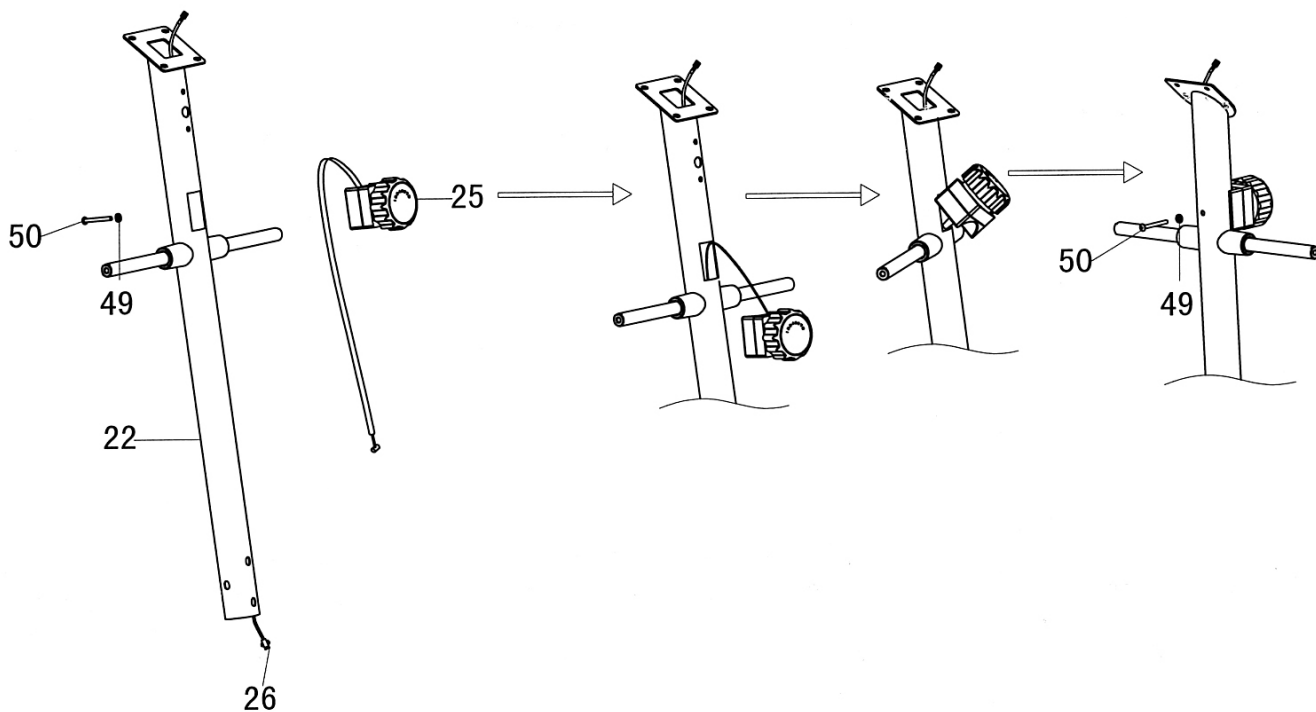


### STEP-3

- A.) **NOTE: Extra help may be needed to hold the Front Post (#22) while connecting the cables and wires.**
- B.) Attach the Front Post (#22) to the Main Frame (#1). Connect the Upper Computer Wire (#26) from the bottom of the Front Post to the Lower Computer Wire (#28) from the Main Frame.
- C.) Pull the tension connector from the Upper Tension Cable (#25) and slide in between the opening on the connector on the Lower Tension Cable (#27). Pull the Upper Tension Cable upward and slide the wire through the slot on the bracket.
- D.) Drop down the Upper Tension Cable so the fitting sits firmly on top of the bracket.
- E.) Secure the Front Post to the Main Frame with four M8 x 5/8" Allen Bolts (#23), and four Ø 3/4" x Ø 3/8" Curved Washers (#41).

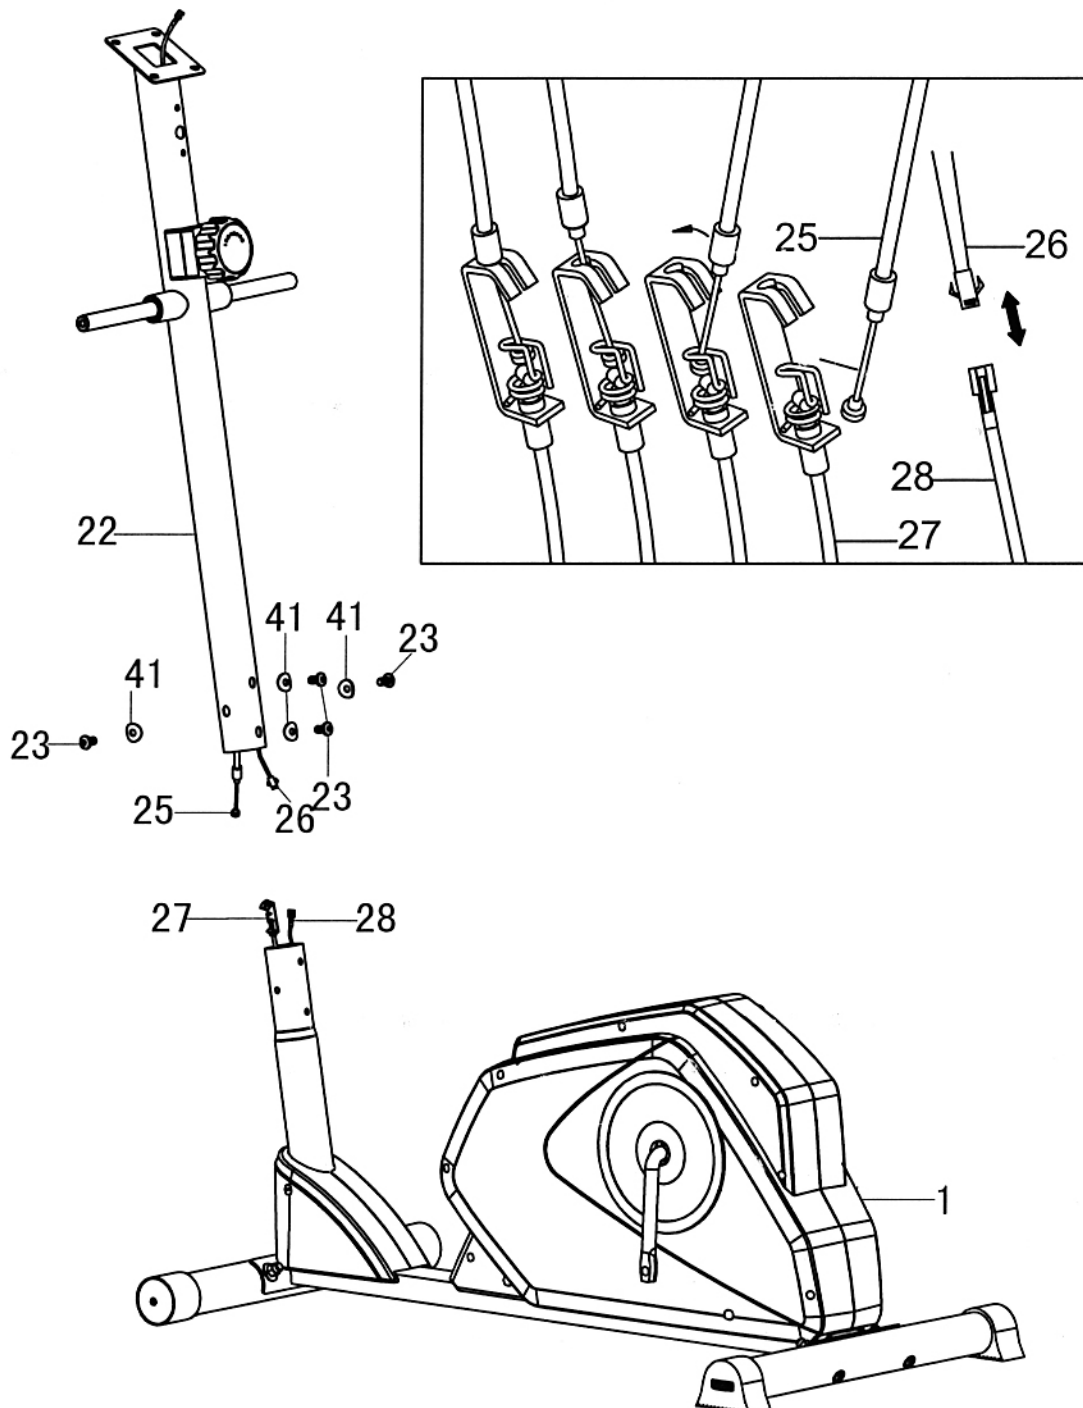


## STEP-4

- A.) Attach left Stride Tube (#21L) to the left axle on Front Post (#22).
- B.) Secure the Stride Tube (#21L) to Front Post with one D Washer (#32), one  $\varnothing 1 \frac{1}{4}$ " x  $\varnothing \frac{3}{8}$ " Flat Washer (#31), one  $\varnothing \frac{3}{8}$ " Lock Washer (#30), and one M10 x  $\frac{3}{4}$ " Hex Bolt (#29).
- C.) Cover the pivot joint with two left Stride Tube Covers (#47L) and secure them together with two ST5 x  $\frac{5}{8}$ " Self Tapping Screws (#33).
- D.) Cover the bottom of Left Stride Tube with one Stride Tube Bottom Cover Set (#52) and secure with two ST4 x  $1 \frac{1}{8}$ " Self Tapping Screws (#53).
- E.) Repeat A, B, C, and D to install Right Stride Tube (#21R) to Front Post.

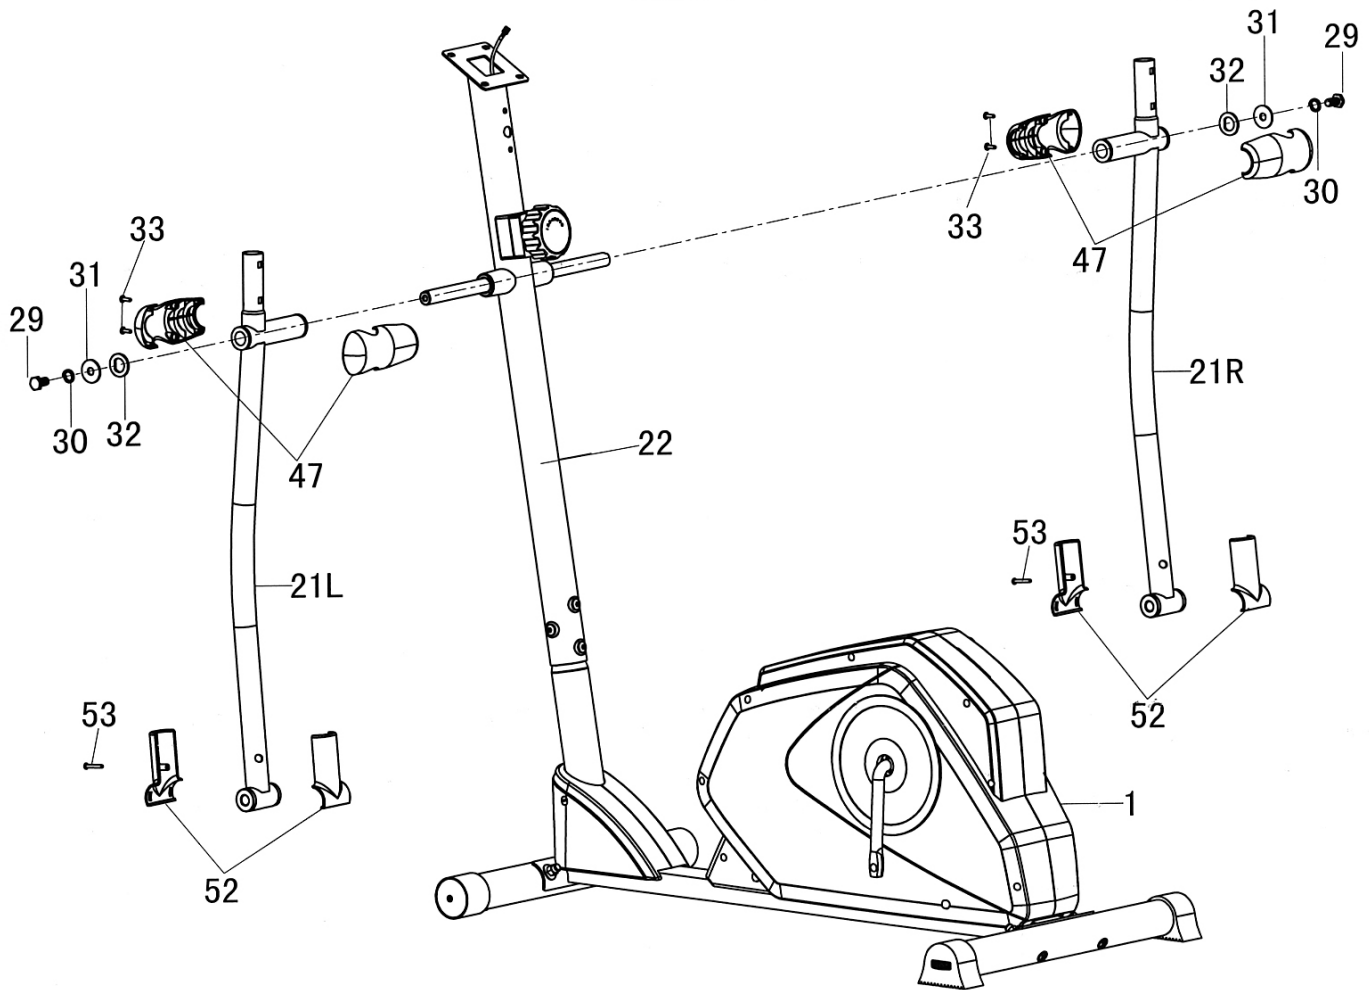


## STEP-5

- A.) **Do not tighten Nuts and Bolts until instructed to do so.**
- B.) Place the pivot on bottom of left Stride Tube (#21L) to the open bracket on Left Pedal Support (#9L). Secure the Tube to the Left Pedal Support with one M10 x 3 1/8" Hex Bolt (#20), one Sleeve (#18), one Ø 3/4" Washer (#17), and one M10 Aircraft Nut (#16).
- C.) Attach the Left Pedal Support rear pivot to the Crank (#24). Secure it with one Left Pedal Axle Bolt (#10L), one Wrinkled Washer (#11), one Ø 1 1/8" Flat Washer (#12), and one left Hex Nut (#51L).
- D.) **Securely tighten all Nuts and Bolts.**
- E.) Cover the bottom of left Stride Tube and front Left Pedal Support with two left Pedal Support Covers (#54L), secure them with two M5 x 3/8" Self Tapping Screws (#55).
- F.) Place the Left Pedal (#13L) onto Left Pedal Support, secure with two M8 x 1 3/4" Hex Bolts (#14) and two Lock Knobs (#15).

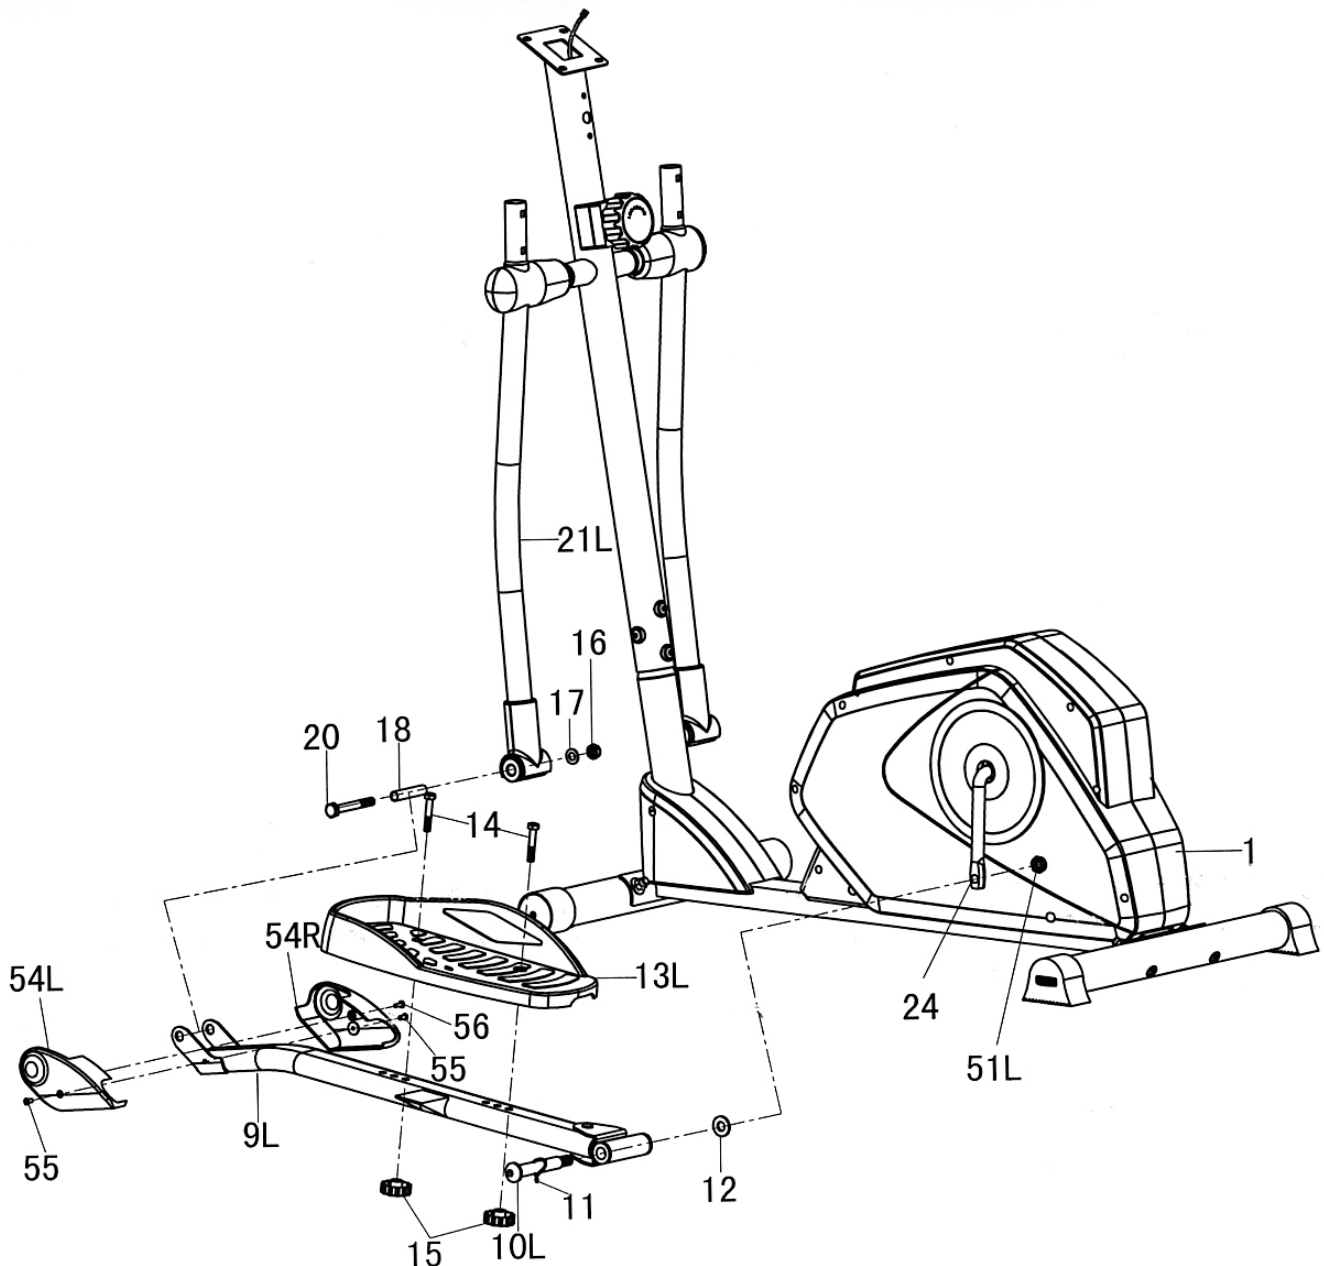


## STEP-6

- A.) **Do not tighten Nuts and Bolts and Nuts until instructed to so.**
- B.) Place the pivot on bottom of right Stride Tube (#21R) to the open bracket on Right Pedal Support (#9R). Secure the Tube to the right Pedal Support with one M10 x 3 1/8" Hex Bolt (#20), one Sleeve (#18), one Ø 3/4" Washer (#17), and one M10 Aircraft Nut (#16).
- C.) Attach the Right Pedal Support rear pivot to the Crank (#24). Secure it with one Right Pedal Axle Bolt (#10R), one Wrinkled Washer (#11), one Ø 1 1/8" Flat Washer (#12), and one right Hex Nut (#51R).
- D.) **Securely tighten all Nuts and Bolts.**
- E.) Cover the bottom of right Stride Tube and front Right Pedal Support with two right Pedal Support Covers (#54R), secure them with two M5 x 3/8" Self Tapping Screws (#55).
- F.) Place the Right Pedal (#13R) onto the Right Pedal Support, secure with two M8 x 1 3/4" Hex Bolts (#14) and two Lock Knobs (#15).

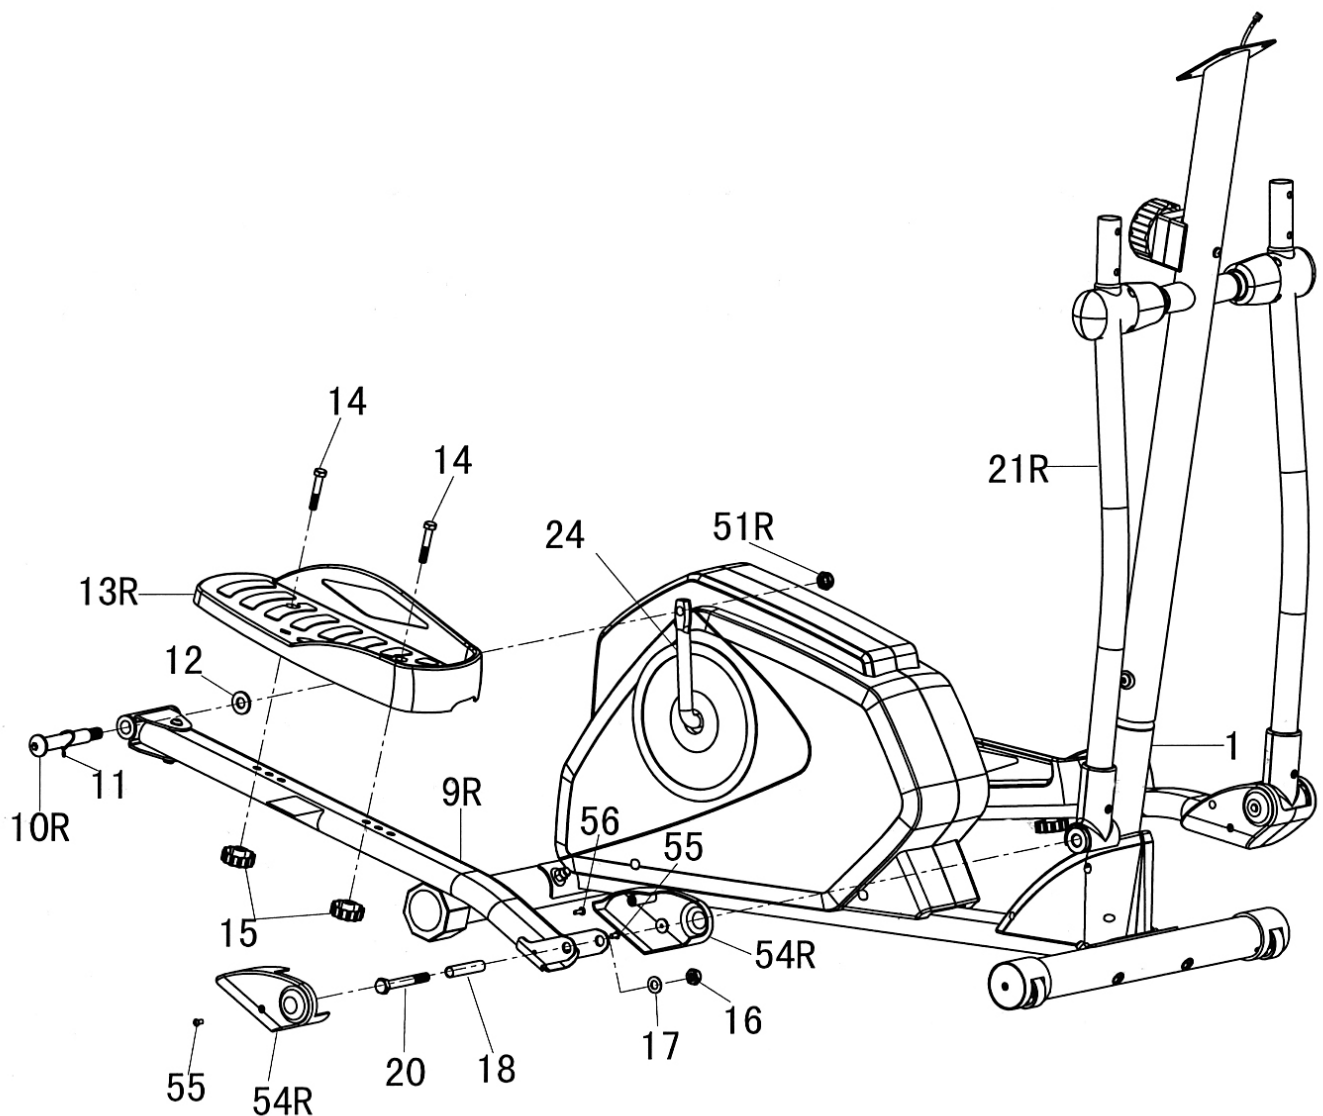


## STEP-7

- A.) Attach the Stationary Handle (#39) to Front Post (#22). Secure it with two M8 x  $\frac{5}{8}$ " Allen Bolts (#23) and two  $\varnothing \frac{3}{4}$ " x  $\varnothing \frac{3}{8}$ " Curve Washers (#41).
- B.) Remove four M5 x  $\frac{1}{2}$ " Philips Screws (#48) from Computer (#38). Connect the computer wire from Computer to the Upper Computer Wire (#26) from Front Post. Slide the computer onto the bracket on Front Post. Secure the Computer to the bracket with the four M5 x  $\frac{1}{2}$ " Philips Screws (#48).

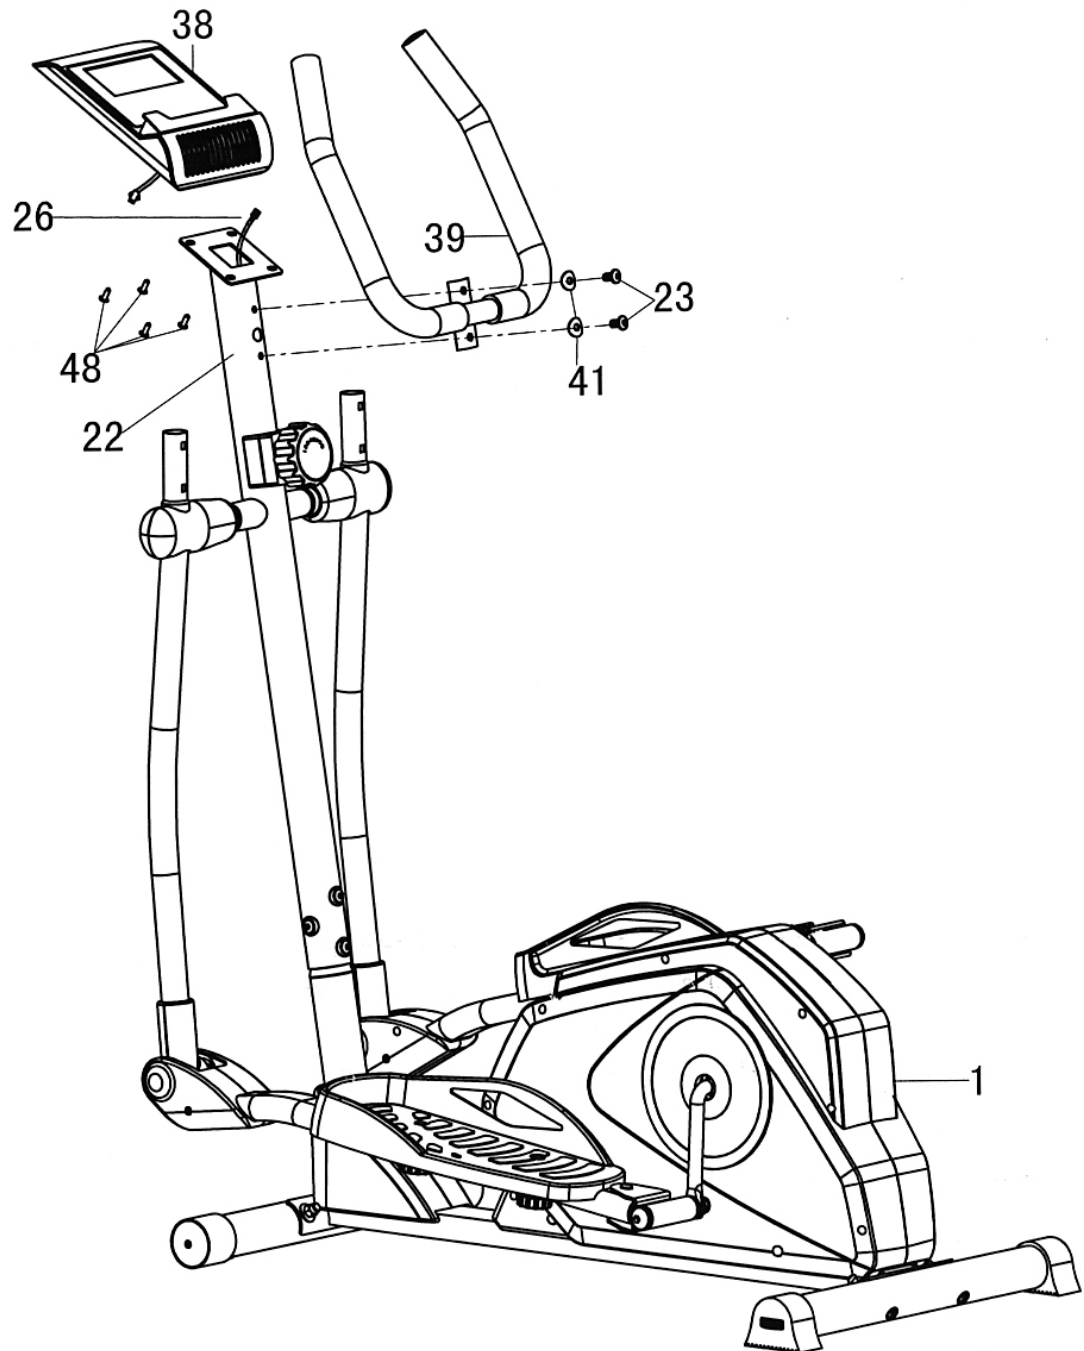


### STEP-8

- A.) Place the left Stride Handle (#37L) onto left Stride Tube (#21L). Secure it with two M6 x  $\frac{3}{4}$ " Carriage Bolts (#36) and two M6 x  $\frac{1}{2}$ " Allen Bolts (#35).
- B.) Repeat A to install right Stride Handle (#37R) to right Stride Tube (#12R).

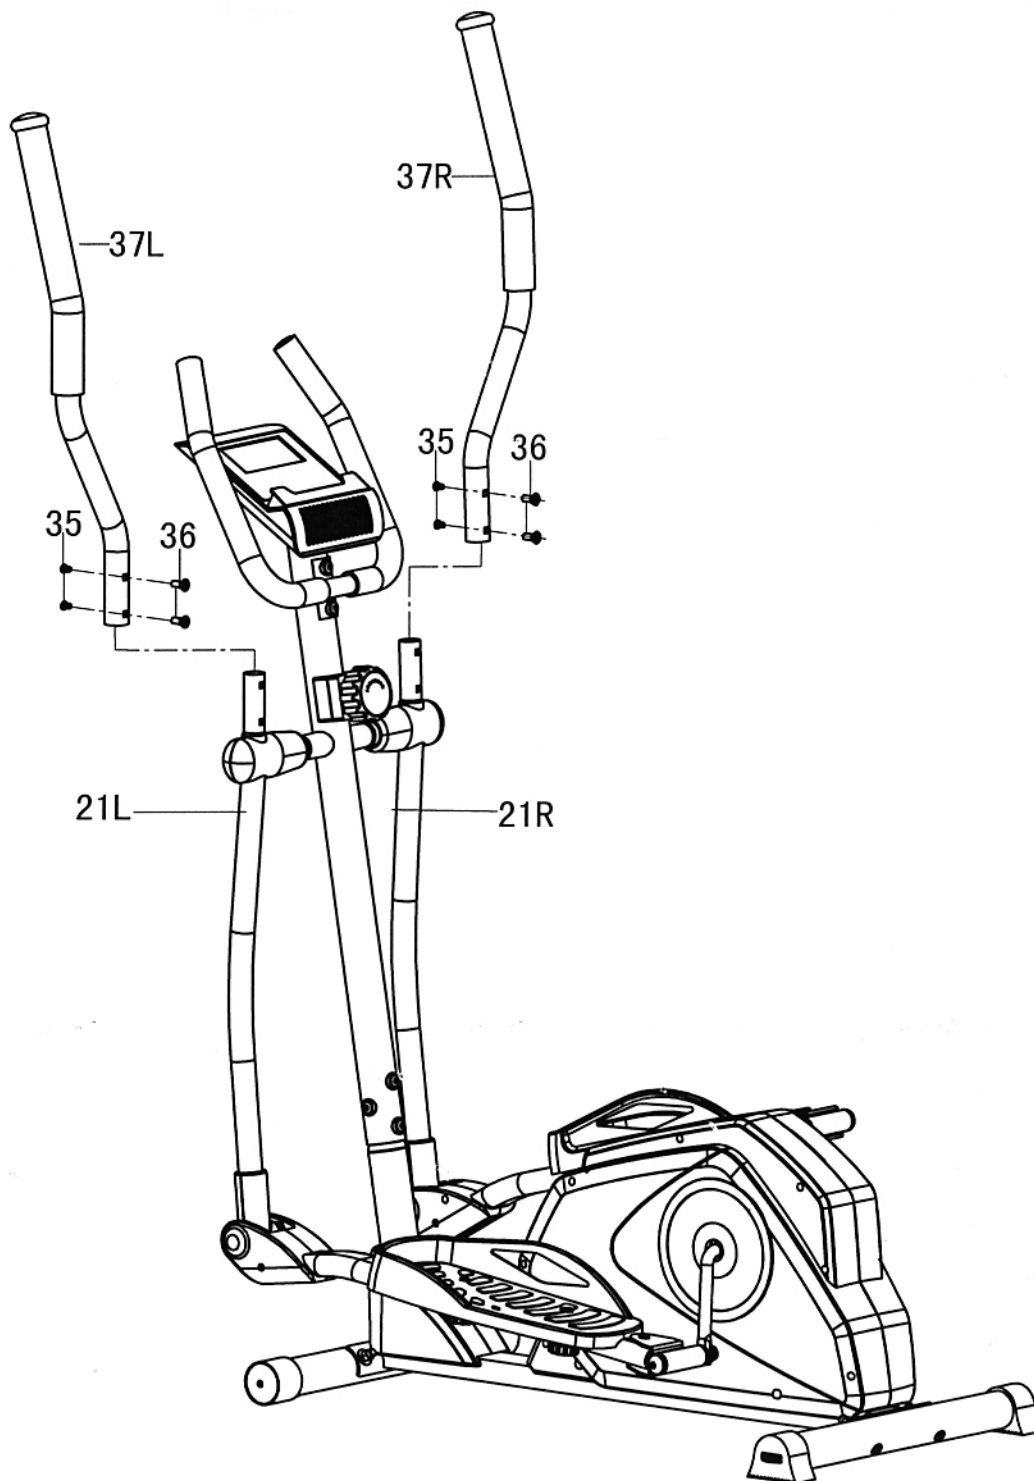




# EXPLODED DIAGRAM

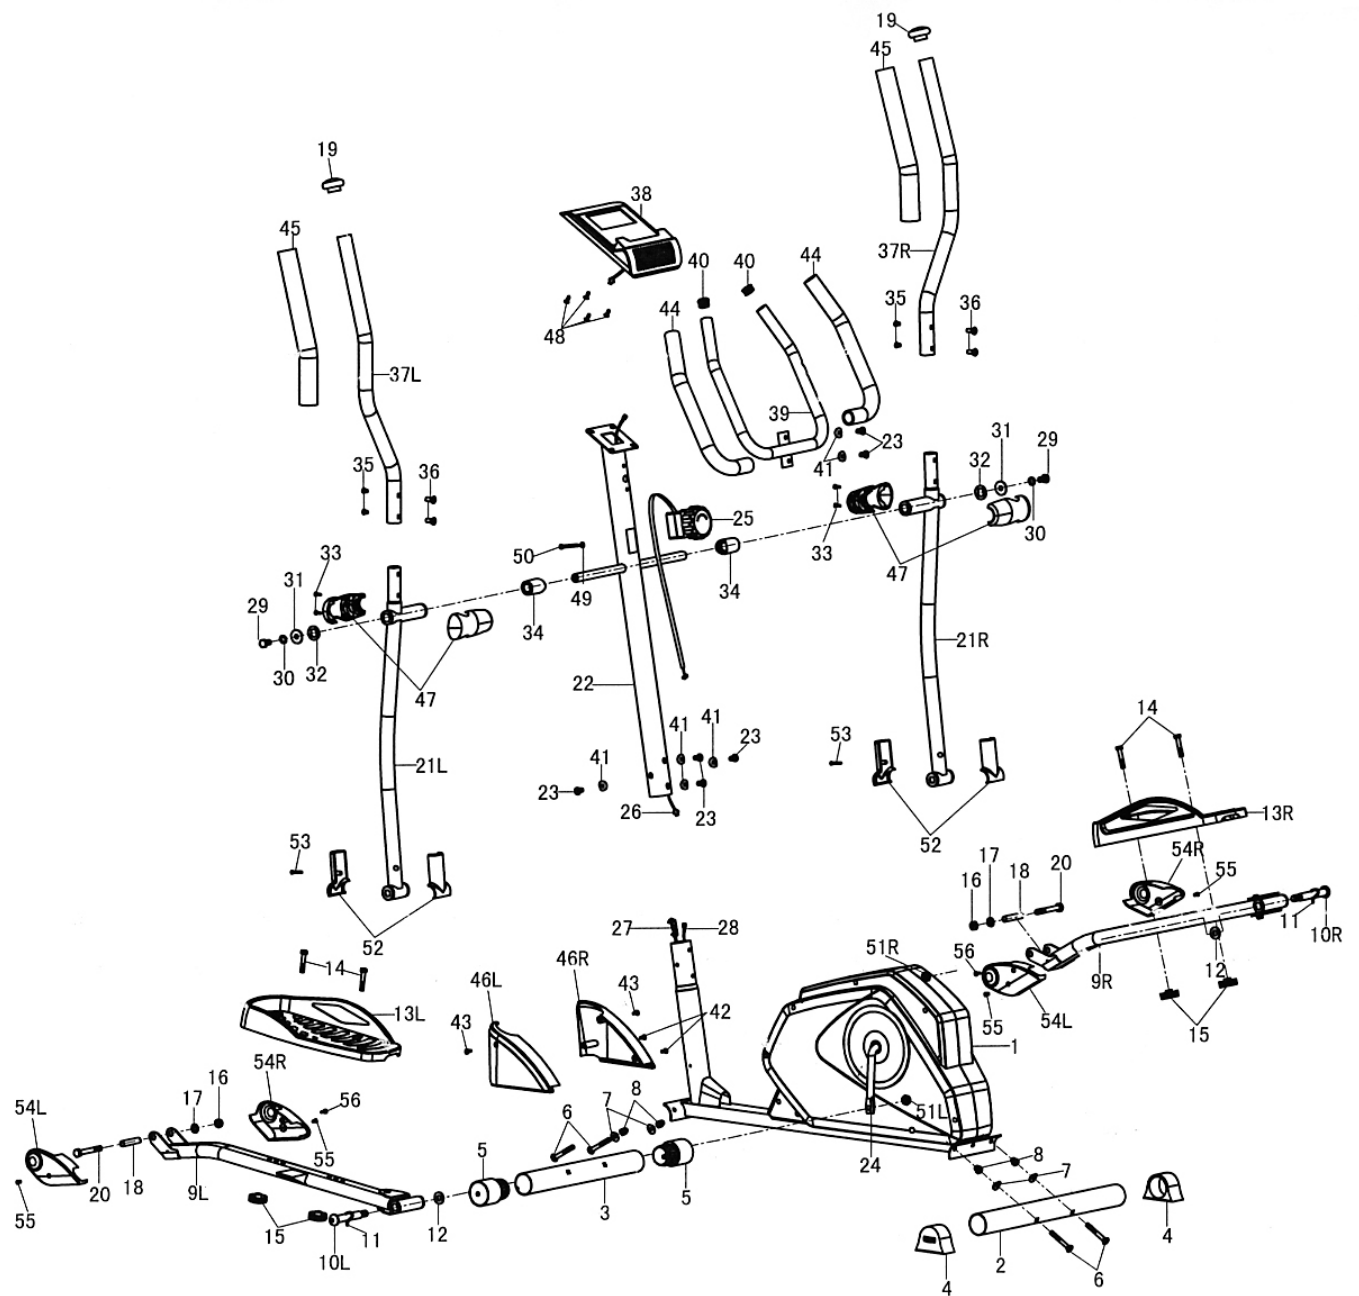



# EXPLODED DIAGRAM

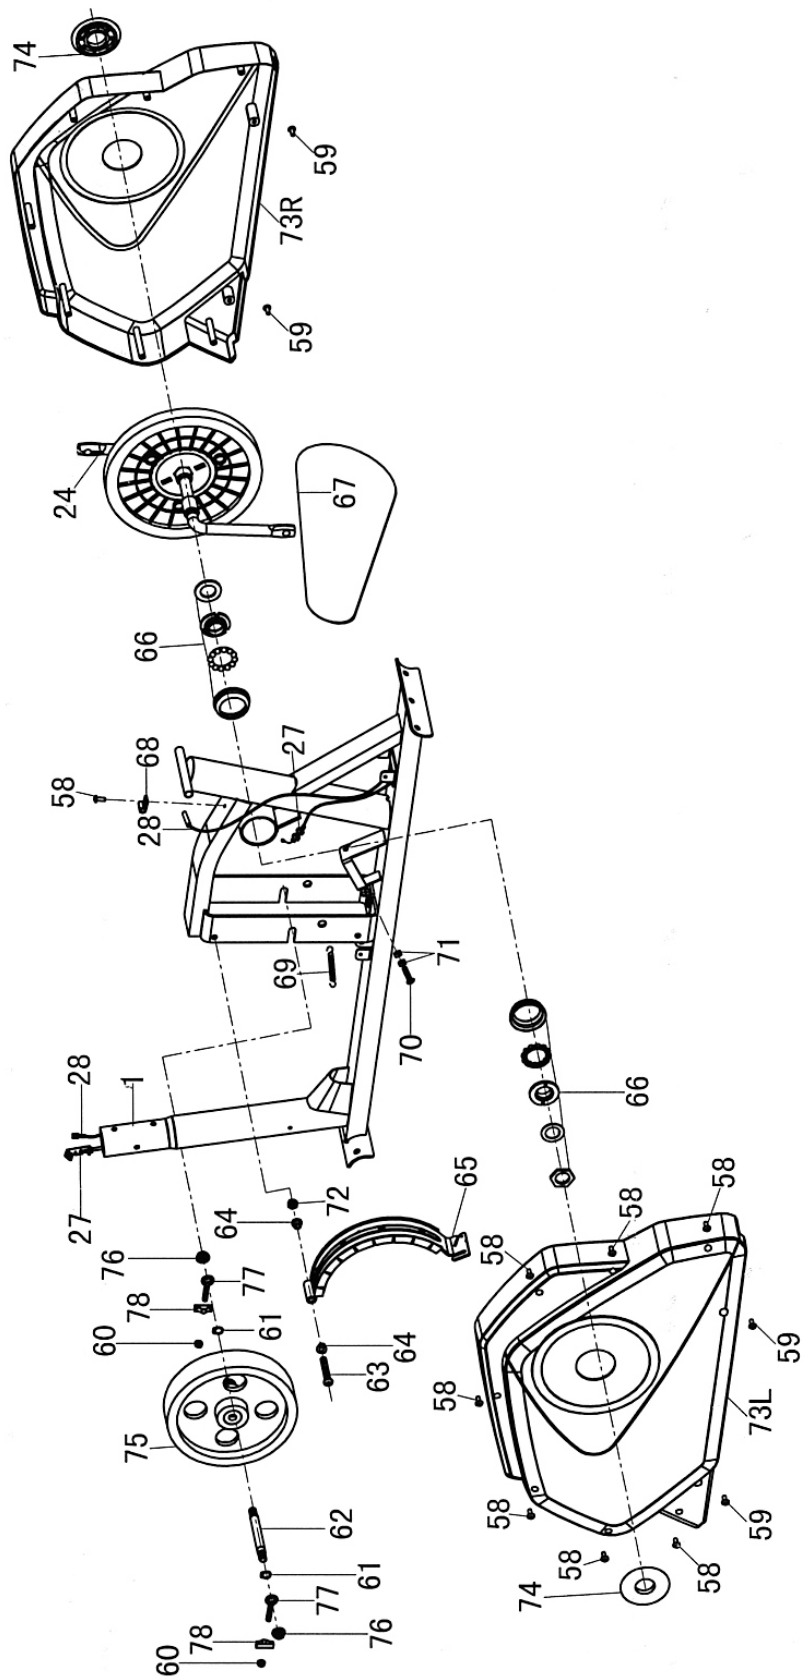

## NS-40501E PARTS LIST

PART NO.	DESCRIPTION	SPEC.	QUANTITY
1	Main Frame		1
2	Rear Stabilizer		1
3	Front Stabilizer		1
4	Rear Stabilizer End Cap		2
5	Front Stabilizer End Cap		2
6	Carriage Bolt	M10 x 3"	4
7	Curve Washer	Ø 7/8"	4
8	Acorn Nut	M10	4
9L	Left Pedal Support		1
9R	Right Pedal Support		1
10L	Left Pedal Axle Bolt		1
10R	Right Pedal Axle Bolt		1
11	Wrinkled Washer		2
12	Flat Washer	Ø 1 1/8"	2
13L	Left Pedal		1
13R	Right Pedal		1
14	Hex Bolt	M8 x 1 3/4"	4
15	Lock Knob		4
16	Aircraft Nut	M10	2
17	Washer	Ø 3/4"	2
18	Sleeve		2
19	Upper Stride Handle End Cap		2
20	Hex Bolt	M10 x 3 1/8"	2
21L/R	Stride Tube		1/1
22	Front Post		1
23	Allen Bolt	M8 x 5/8"	6
24	Crank		1
25	Tension Knob/Upper Tension Cable		1
26	Upper Computer Wire		1
27	Lower Tension Cable		1
28	Lower Computer Wire		1
29	Hex Bolt	M10 x 3/4"	2
30	Lock Washer	Ø 3/8"	2
31	Flat Washer	Ø 1 1/4" x Ø 3/8"	2
32	D Washer		2
33	Self Tapping Screw	ST5 x 5/8"	4
34	Plastic Spacer		2
35	Allen Bolt	M6 x 1/2"	4
36	Carriage Bolt	M6 x 3/4"	4
37L/R	Stride Handle		1/1

38	Computer		1
39	Stationary Handle		1
40	Stationary Handle End Cap	Ø 1"	2
41	Curve Washer	Ø ¾" Ø ⅜"	6
42	Counter Sunk Self Tapping Screw	ST5 x ⅝"	2
43	Flat Self Tapping Screw	ST5 x ⅝"	2
44	Stationary Handle Grip		2
45	Stride Handle Grip		2
46L/R	Front Post Cover		1/1
47L/R	Stride Tube Cover		2/2
48	Philips Screw	M5 x ½"	4
49	Washer	Ø ½"	1
50	Tension Knob Screw	M5 x 1 ⅝"	1
51L/R	Hex Nut		1/1
52	Stride Tube Bottom Cover Set		2
53	Self Tapping Screw	ST4 x 1 ⅛"	4
54L/R	Pedal Support Cover		2/2
55	Philips Screw	M5 x ⅜"	4
56	Self Tapping Screw	ST4 x ⅝"	2
57	Hardware Pack		1
58	Button Head Self Tapping Screw	ST5 x ⅝"	8
59	Flat Head Self Tapping Screw	ST5 x ⅝"	4
60	Nylon Nut	M6	2
61	Flywheel Axle Lock Washer		2
62	Flywheel Axle		1
63	Hex Bolt	M8 x 4 ⅛:	1
64	Magnet Assembly Bushing		2
65	Magnet Assembly		1
66	Ball Bearing Set		1
67	Belt		1
68	Computer Wire Sensing Base		1
69	Magnet Assembly Spring		1
70	Hex Bolt	M6 x 1"	1
71	Hex Nut	M6	2
72	Nylon Nut	M8	1
73	Main Frame Cover L/R		1/1
74	Crank End Cover		2
75	Flywheel		1
76	Flange Nut		2
77	Ring Bolt		2
78	Locking Clamp		2

## CARE, MAINTENANCE AND STORAGE

1. Inspect and tighten all parts each time you use the machine. Replace any worn parts immediately.
2. The machine can be cleaned using a damp cloth and mild non-abrasive detergent. Do not use solvents.
3. Store the bike IN-DOOR. Excess moisture and water would cause rust on the frame.
4. The Bike shall be placed at least 24 inches away from the wall or/and any other object such as furniture to provide safe access to and passage around the machine.
5. To avoid possible injury, the help of two or more people are needed when moving the machine around.
6. Disposal Instructions – The equipment can be safely disassembled and disposed without unreasonable hazards. Call your local recycle agency regarding details of recycling.
7. **The maximum user weight is 300 lbs.**
8. **Assembled Dimension: 49" x 24" x 64.25"**

## OPERATING NOTES

### Tension Adjustment

Use the Tension Knob on Front Post to adjust the exercising resistance.

### FOOT POSITIONING

Step with both feet on the two Pedals and hold the Stride Handles with two hands, and then start to exercise. **NOTE: DO not stand on one Pedal with both feet, or just step one foot on one Pedal during exercise.**

### TRANSPORT

The Bike has a pair of roller wheels on Front Stabilizer End Cap.  
To move, carefully hold and tilt the machine, and roll.



### **AUTO START / STOP**

When exercise starts, the monitor will automatically turn on and display the progress. When exercise stops, the monitor will automatically turn off after 4 minutes to save energy.

### **MODE-**

1. Press "MODE" key, will automatically scan Time, Speed, Distance, Calories, and ODO for every 4 seconds.
2. When Computer is in Scan mode, press "MODE" key to select Time, Distance, or Calories function.

### **SET-**

Press SET key to set the targeted exercises value of Time, Distance, and Calories.

### **RESET-**

Press RESET key to reset Time, Distance, or calories value to zero.

### **DISPLAY:**

<b>Time</b>	Display the elapsed time. Max value is up to 99:59
<b>Speed</b>	Display the current speed in miles per hour.
<b>Distance</b>	Display the distance traveled in Miles. Max value is 99.99 miles.
<b>Calories</b>	Display the calorie consumption in cal.
<b>(ODO) Odometer</b>	Display the accumulation of distance from previous and current exercises. Max value is 9999 miles.

### **REPLACE BATTERY:**

1. Always purchase the correct size and grade of battery most suitable for the intended use.
2. Replace all batteries of a set at the same time.
3. Clean the battery contacts and also those of the device prior to battery installation.
4. Ensure the batteries are installed correctly with regard to polarity (+ and -).
5. Remove batteries from equipment when not in use for extended periods of time.
6. Remove used batteries promptly.
7. The Computer requires two 1.5V (AA) batteries. Batteries are not included in packaging.
8. If the display is not clear or only partial segments appeared, remove the batteries and wait for 15 seconds before re-install them.
9. The battery life is approx. 3 months under normal usage.
10. **When the batteries are removed, all the functional values will reset to zero.**

### **Note:**


**Please note all values on this computer are approximate and they are for comparison purpose only. Do not use these values for any medical or rehabilitation purpose.**

## EXERCISE GUIDELINES

Using your **MAGNETIC BIKE** will provide you with several benefits, it will improve your physical fitness, tone muscle and in conjunction with calorie controlled diet help you lose weight.


### 1. The Warm Up Phase

This stage helps get the blood flowing around the body and the muscles working properly. It will also reduce the risk of cramp and muscle injury. It is advisable to do a few stretching exercises as shown below. Each stretch should be held for approximately 30 seconds, do not force or jerk your muscles into a stretch - if it hurts, STOP.

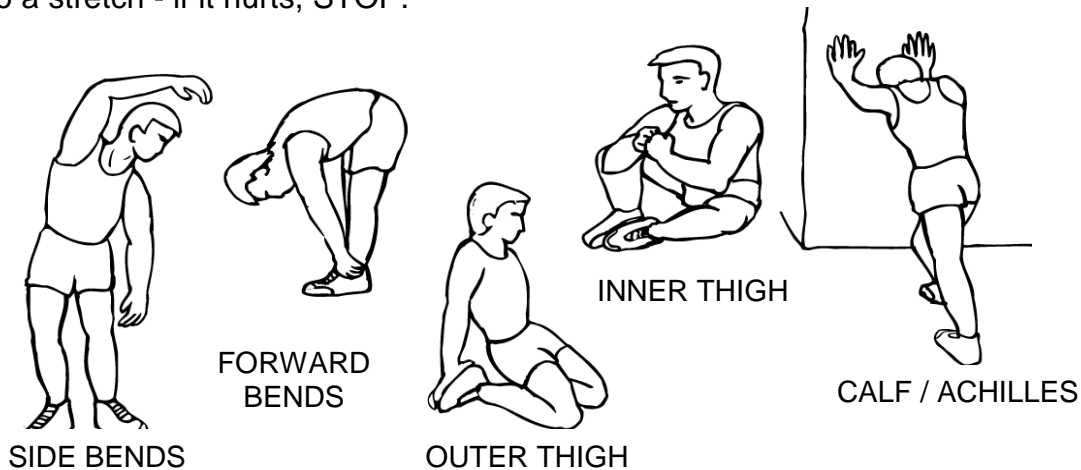

### 2. The Exercise Phase

This is the stage where you put the effort in. After regular use, the muscles in your legs will become more flexible. Work to your but it is very important to maintain a steady tempo throughout. The rate of work should be sufficient to raise your heartbeat into the target zone shown on the graph below.

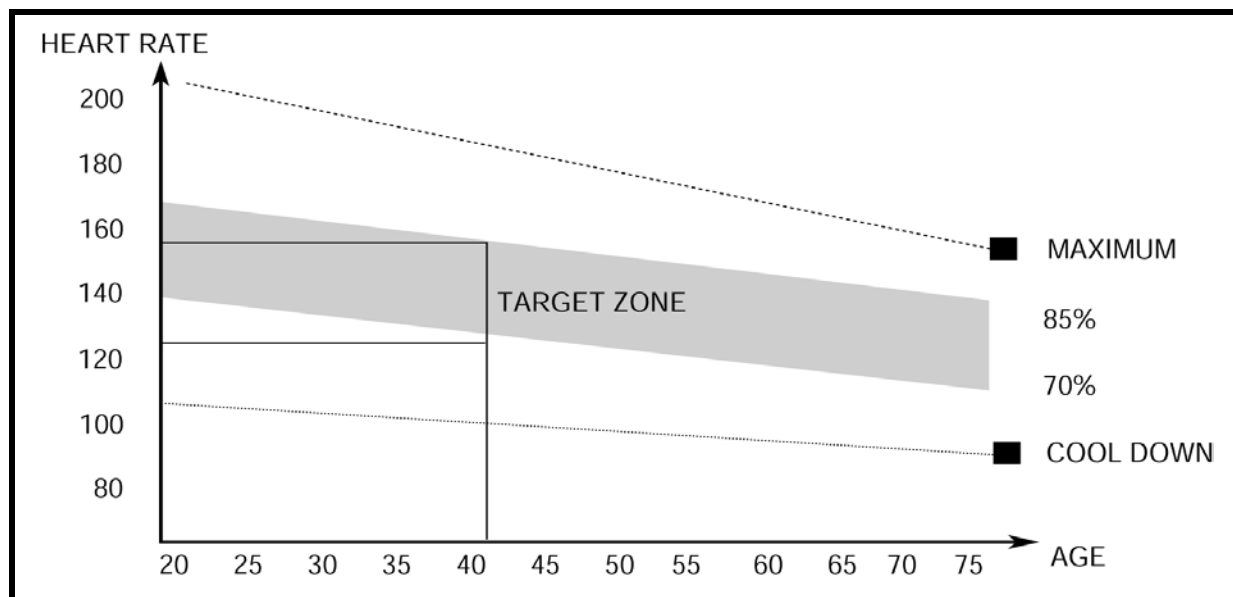

This stage should last for a minimum of 12 minutes though most people start at about 15-20 minutes

### 3. The Cool Down Phase

This stage is to let your Cardio-vascular System and muscles wind down. This is a repeat of the warm up exercise e.g. reduce your tempo, continue for approximately 5 minutes. The stretching exercises should now be repeated, again remembering not to force or jerk your muscles into the stretch.

As you get fitter you may need to train longer and harder. It is advisable to train at least three times a week, and if possible space your workouts evenly throughout the week.

## MUSCLE TONING

To tone muscle while on your **MAGNETIC BIKE** you will need to have the resistance set quite high. This will put more strain on our leg muscles and may mean you cannot train for as long as you would like. If you are also trying to improve your fitness you need to alter your training program. You should train as normal during the warm up and cool down phases, but towards the end of the exercise phase you should increase resistance making your legs work harder. You will have to reduce your speed to keep your heart rate in the target zone.

## WEIGHT LOSS

**The important factor here is the amount of effort you put in. The harder and longer you work the more calories you will burn. Effectively this is the same as if you were training to improve your fitness, the difference is the goal.**

# **IMPEX<sup>®</sup> INC.**

## **LIMITED WARRANTY**

IMPEX Inc. ("IMPEX<sup>®</sup>") warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of two years on the Frame from the date of purchase. This warranty extends only to the original purchaser. IMPEX's obligation under this Warranty is limited to replacing or repairing, at IMPEX's option.

All returns must be pre-authorized by IMPEX. Pre-authorization may be obtained by calling IMPEX Customer Service Department at 1-800-999-8899. All freights for products return to IMPEX must be prepaid by the customer. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an IMPEX authorized service center or for products used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by IMPEX.

IMPEX is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyments or use, costs of removal, installation or other consequential damages or whatsoever natures. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal right. You may also have other rights which vary from state to state. **Register on-line [www.impex-fitness.com](http://www.impex-fitness.com)**

**IMPEX<sup>®</sup> INC.  
2801 S. Towne Ave.  
Pomona, CA 91766**

### **ORDERING REPLACEMENT PARTS**

Replacement parts can be ordered by calling our Customer Service Department toll-free at **1-800-999-8899** during our regular business hours: Monday through Friday, 9 am until 5 pm Pacific standard time.

**[support@impex-fitness.com](mailto:support@impex-fitness.com)**

When ordering replacement part, always give the following information.

1. Model
2. Description of Parts
3. Part Number
4. Date of Purchase