


essential  **garden**™

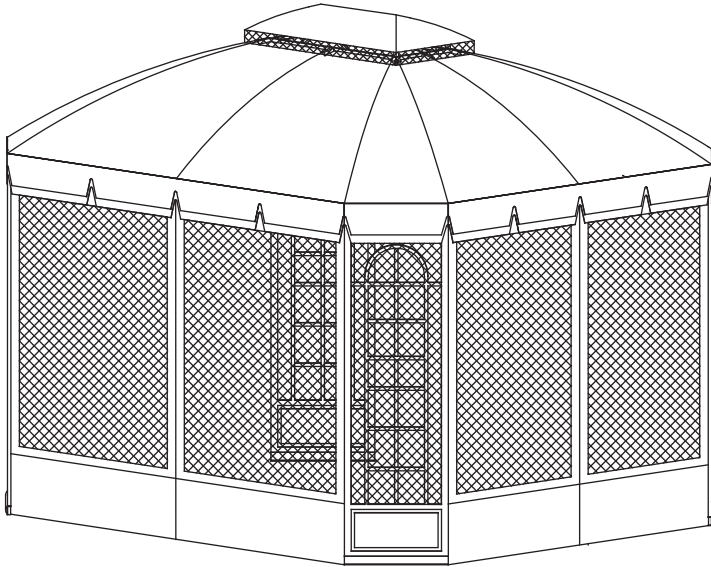

USE AND CARE GUIDE

TERRACE GAZEBO

CAUTION: Carefully Read Instructions and Procedures
for Safe Operation

Product Code: 0-06298316-8

UPC Code: 846822013220

Date of Purchase: ____/____/____

Thank you for your purchase!

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor gazebo purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio item. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio gazebo needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents	1
Safety Information	2
Warranty	2/3
Limited Warranty	2
Exclusions	3
Care and Maintenance	3
Pre-Assembly	3
Planning Assembly	3
Hardware Included	3
Package Contents	4
Assembly Instructions	5~8
Customer Service	8

Safety Information

WARNING

- When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
- Some parts may contain sharp edges, wear protective gloves if necessary. At least three or more people are recommended for safe assembly.
- Keep all children and pets away from assembly area.
- Begin assembly not less than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry line or electrical wires.
- Install on level ground. This gazebo cannot be permanently staked or attached to concrete floor or platform. The provided stakes are for soft ground use only. If assembling on a hard surface like a deck or concrete, other forms of attachment must be used such as expansion bolts that can be purchased locally.
- This gazebo is intended for decorative and sunshade purposes only and is not meant to withstand inclement weather including high winds, rain and snow. Gazebo fabric is water resistant, not water proof and may leak during exposure to precipitation.
- Please lay out all parts before assembling, checking to make sure all parts are there. If any parts are missing, please call 1-866-578-6569 and parts will be expedited to you.
- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This Tent meets the flammability requirements of CPAI - 84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Assembly Tools Required: a ladder and a hammer (not provided)

Warranty

1 YEAR WARRANTY FOR FRAME AND FINISH

Limited Warranty

The item is warranted to be free from defects in material or workmanship for a period of 1 year. However, we don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product. This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item, provided the item is maintained with care and used only for personal, residential purposes.

Warranty

Exclusions

It remains the customer's responsibility for freight and packaging charges to and from our service center. Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Care and Maintenance

 



 
It is advised that the Canopy should be removed in the winter for best protection and length of use. Our steel components for garden accessories and furniture are treated with rust inhibiting paint that protects them from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, it is strongly recommended that consumers buy touch up paint prior to the assembly process so that any parts they scratch during assembly are touched up. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if the measure is taken to keep the product from oxidizing. Also the use of wax candle to lubricate the zippers once a year will keep them running smoothly.

Pre-Assembly

PLANNING ASSEMBLY







 
 



 







To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 60 minutes for four persons to complete all the assembly.

HARDWARE INCLUDED


NO.	IMAGE	DESCRIPTION	QTY
AA		M6X15 Bolt	56 PCS
BB		M6 Flat Washer	56 PCS
DD		plastic loop	52 PCS
EE		Φ8*180 stake	8 PCS
W		M6 Wrench	1 PC

 

 
Pre-Assembly (continued)

Package contents

NO.	IMAGE	DESCRIPTION	QTY
A		Screen	4
B		Long Beam	2
C		Long Beam	2
D		Short Beam	2
E		Short Beam	2
F		Big Top Long Pole	2
G		Big Top Short Pole	2
H		Corner Connector	4
I		Corner Supporting Pole	8
J		Middle Supporting Pole	4
K		Small Top Connector	1
L		Top Beam	4
M		Top Hook	1
N		Long Mosquito Netting Pipe	4
O		Short Mosquito Netting Pipe	4
P		Screen Mosquito Netting Pipe	4
S		Big Canopy	1
T		Small Canopy	1
U		Mosquito Netting	1

Assembly Instructions

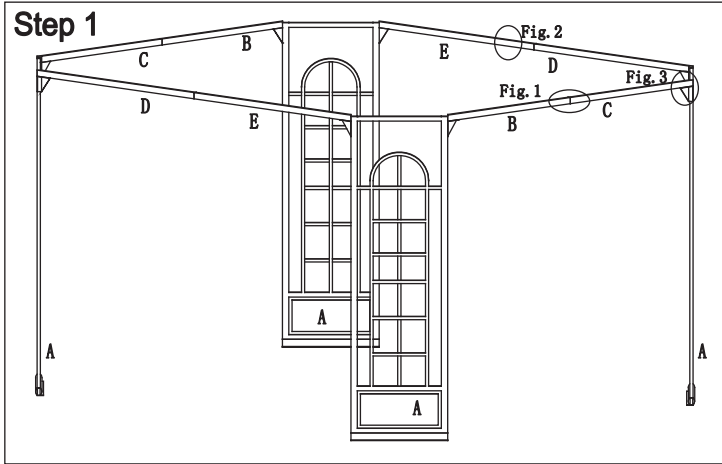

NO.	IMAGE	DESCRIPTION	QTY
AA		M6X15 Bolt	44 PCS
BB		M6 Flat Washer	44 PCS
W		M6 Wrench	1 PC




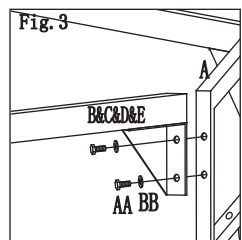


 

Fig.1: Connect Long Beam (B) and Long Beam (C) , Short Beam (D) and Short Beam (E) by using Bolt (AA) and Flat Washer (BB).

Fig.2: Tighten Long Mosquito Netting Pipe (N) to Long Beam (B)/(C), Short Mosquito Netting Pipe (O) to Short Beam (D)/(E) and Screen Mosquito Netting Pipe (P) to screen (A) by using Bolt (AA) and Flat Washer (BB).

Fig.3: Tighten the assembled triangle pieces of the beams onto Screen (A) by using Bolt (AA) and Flat Washer (BB). Then a frame is formed.

Assembly Instructions

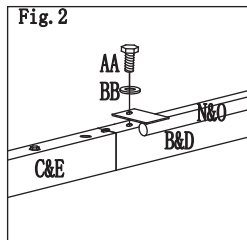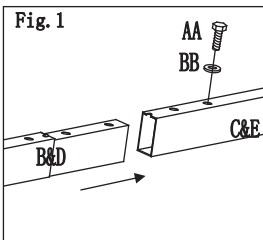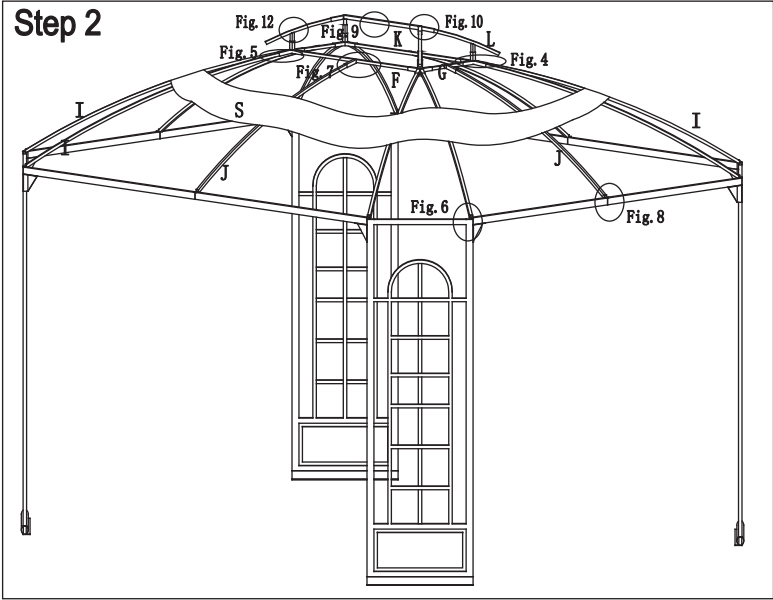

NO.	IMAGE	DESCRIPTION	QTY
AA		M6X15 Bolt	12 PCS
BB		M6 Flat Washer	12 PCS

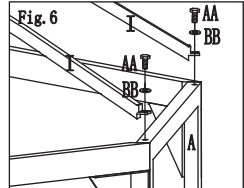
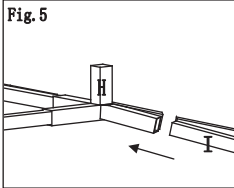
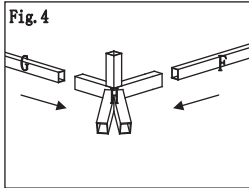


Fig.4: Insert Big Top Long Pole (F) and Big Top Short Pole (G) into Corner Connector (H) to form a frame.

Fig.5: Insert Corner Supporting Pole (I) into the assembled Corner Connector (H).

Fig.6: Connect the end of Corner Supporting Pole (I) and Screen (A) by using Bolt (AA) and Flat Washer (BB).

Assembly Instructions

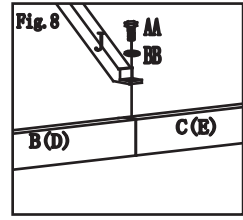
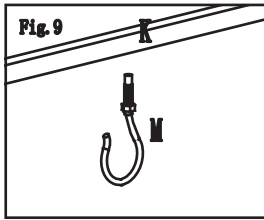
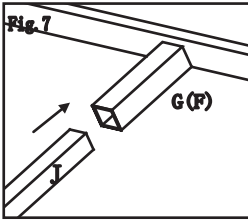


Fig. 7: Insert Middle Supporting pole (J) into Big Top Pole (G/F).

Fig. 8: Connect the end of Middle Supporting pole (J) and the middle of Beams (B/D & C/E) by using Bolt (AA) and Flat Washer (BB).

Fig. 9: Attach Top Hook (M) to Small Top Connector (K).




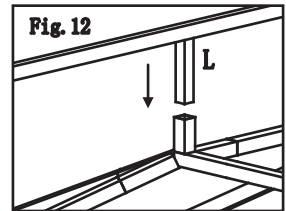




Fig. 10: Insert Top Beam (L) into Small Top Connector (K).

Fig. 11: Attach Small Canopy (T) to small top.

Fig. 12: Attach Big Canopy (S) to big top (Do not fully spread), then insert the assembled small top into big top frame.

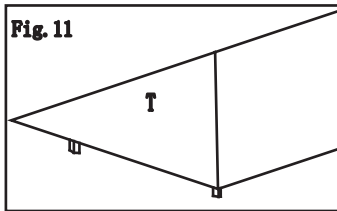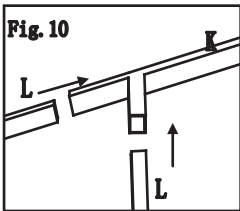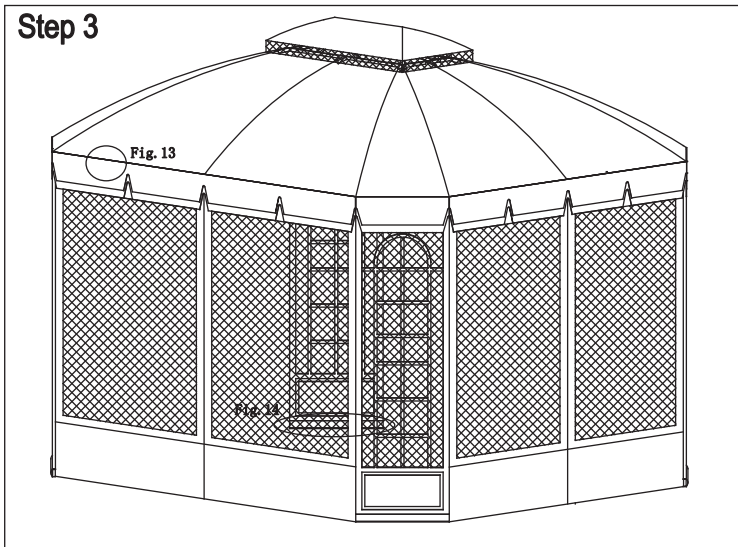

Assembly Instructions

NO.	IMAGE	DESCRIPTION	QTY
DD		plastic loop	52 PCS
EE		Φ8*180 stake	8 PCS


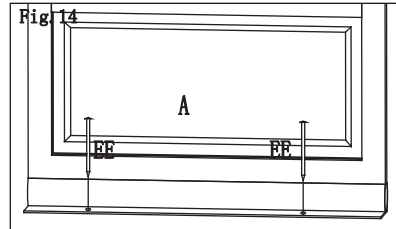


Fig.13: Spread Big Canopy (S) and attach the hook onto the beams, attach mosquito netting (U) with plastic loop (DD).

Fig.14: Fix the assembled gazebo on ground with stake (EE).



SUNJOY INDUSTRIES GROUP LIMITED.

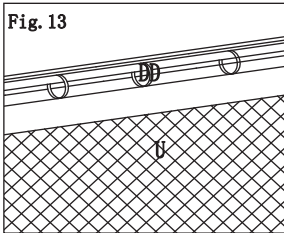

HOME OFFICE: SUITE 2802, LIPPO CENTRE TOWER 2, 89
 QUEENSWAY, ADMIRALTY
 CUSTOMER SERVICE HOT LINE: 1-866-578-6569
 SERVICE HOURS: MONDAY-FRIDAY 8:30 AM to 4:30 PM (EST)
 EMAIL: kmart@sunjoygroup.com



Please refer to part numbers when reordering

For questions or comments about product:

Email: kmart@sunjoygroup.com or Call toll-free: 1-866-578-6569

Made in / Hecho en CHINA for Kmart Corporation, Hoffman Estates , IL 60179

See our extensive assortment of outdoor living products

on-line at www.sears.com and www.kmart.com