

USE & CARE GUIDE

OFFSET UMBRELLA TABLE - WICKER

Product Code: 08808305-0

UPC Code: 8-48681-03666-2

Date of Purchase: ____/____/____

Thank you for your purchase

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of Contents

Table of Contents	2
Safety information	3
Furniture Set Up	3
Examine Your Furniture	3
Warranty	3
What is Covered	3
What is Not Covered	3
Care and Maintenance	4
Pre- Assembly	5
Planning Assembly	5
Weight Limit	5
Hardware Included	5
Package Contents	6
Assembly Instruction	7
Side Table.....	7
Customer Service	10

Safety Information

Furniture Set Up

- ☐ Ensure that all parts are assembled properly and fully tightened as per the instructions.
- ☐ When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the legs levelers as required to ensure that the item stands in a rigid position.

Examine Your Furniture

- ☐ Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

Warranty

1 YEAR WARRANTY FOR FRAME, RESIN WICKER AND POLY WOOD

WHAT IS COVERED

We warrant to the original purchaser for one year, from the date of purchase, that the frame, resin wicker and poly wood will be free from manufacturing defects. This warrant also covers peeling, crackling, blistering, discoloration, or fading for this one year period.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, acts of nature, fire, freezing, and abusive use. Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered. Corrosion or rusting of hardware are not covered. In addition, purchased parts are not covered under this warranty. Proof of purchase (dated register receipt) is required for warranty claims. We reserve the right to make substitutions with similar merchandise, if the model is no longer in production. Warranty is to the original purchaser and is not transferable. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

WARRANTY

This limited warranty is extended to the original purchaser and applies to defects in material and workmanship of your Patio furniture, provided your furniture is maintained with care and used only for personal, residential purposes.

Warranty

Frames are warranted to be free from defects in material or workmanship for a period of one (1) year.

Exclusions: items used for commercial, contract, or other non- residential purposes, or items damaged due to acts of Nature, vandalism, misuse, or improper assembly is not covered. Discoloration and fading of the finish or fabrics as a result of chemicals or spills are not covered. Corrosion or rusting of hardware is not covered. If within the stated warranty period, this product is found to be defective in material or workmanship, the Purchaser must contact the customer service department at 1-866-905-4107. The manufacturer, at its option, will repair or replace the defective part(s). Proof of purchase (date register receipt) is required for warranty claims. It remains The customer's responsibility to pay for freight and packing charges to and from the service center. Warranty is to The Original Purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Care Instructions: Protecting your furniture from the elements when not in use is highly recommended. Wipe frame with a lightly damp cloth and dry completely. Customer service 1-866-905-4107

Care and Maintenance

- ☐ Wipe the frame lightly with a mild solution of soap and water, rinse with clean water, and dry thoroughly.
- ☐ Do not use too much water to wipe Poly Wood table top.
- ☐ Cover your furniture when not in use during off season. Store in a cool dry place away from direct sunlight.

Pre-Assembly

PLANING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. It takes about 60 minutes for two person to complete all the assembly.

WEIGHT LIMIT

The recommended weight limit for the following product is listed below:

- Side Table: 200 lbs



CAUTION: Furniture overload may result in injuries.

HARDWARE INCLUDED



_AA



_BB



_CC

Part	Description	Size	QTY.
AA	SCREW	(M6x30mm)	24
BB	WASHER	M6	24
CC	ALLEN WRENCH		1


Pre-Assembly (continued)

Package Contents


A




B

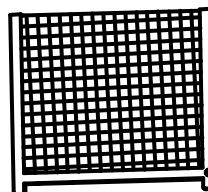

D

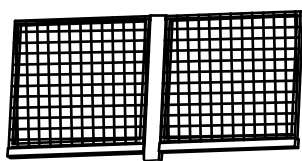


C

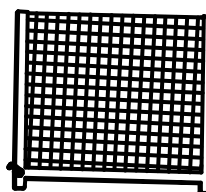

PART	DESCRIPTION	QUANTITY
A	POLY WOOD TABLE TOP	2
B	RIGHT SIDE PANEL	2
C	LEFT SIDE PANEL	2
D	LARGE SIDE PANEL	2



Safety Information


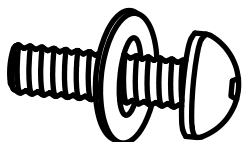


1. EVERY SCREW NEEDS TO BE USED WITH A WASHER.
2. DO NOT FULLY TIGHTEN SCREW UNTIL INDICATED IN STEP 3.

Assembly Instruction

1 Attaching the large side panel and the left panel to the poly wood table top



- ATTACH THE LARGE SIDE PANEL "D" TO THE POLY WOOD TABLE TOP "A". FASTEN WITH SCREW "AA" AND WASHER "BB". TIGHTEN HALF WAY USING THE ALLEN WRENCH "CC".
- ATTACH LEFT SIDE PANEL "C" TO THE POLY WOOD TABLE TOP "A". FASTEN WITH SCREW "AA" AND WASHER "BB". TIGHTEN HALF WAY USING THE ALLEN WRENCH "G".

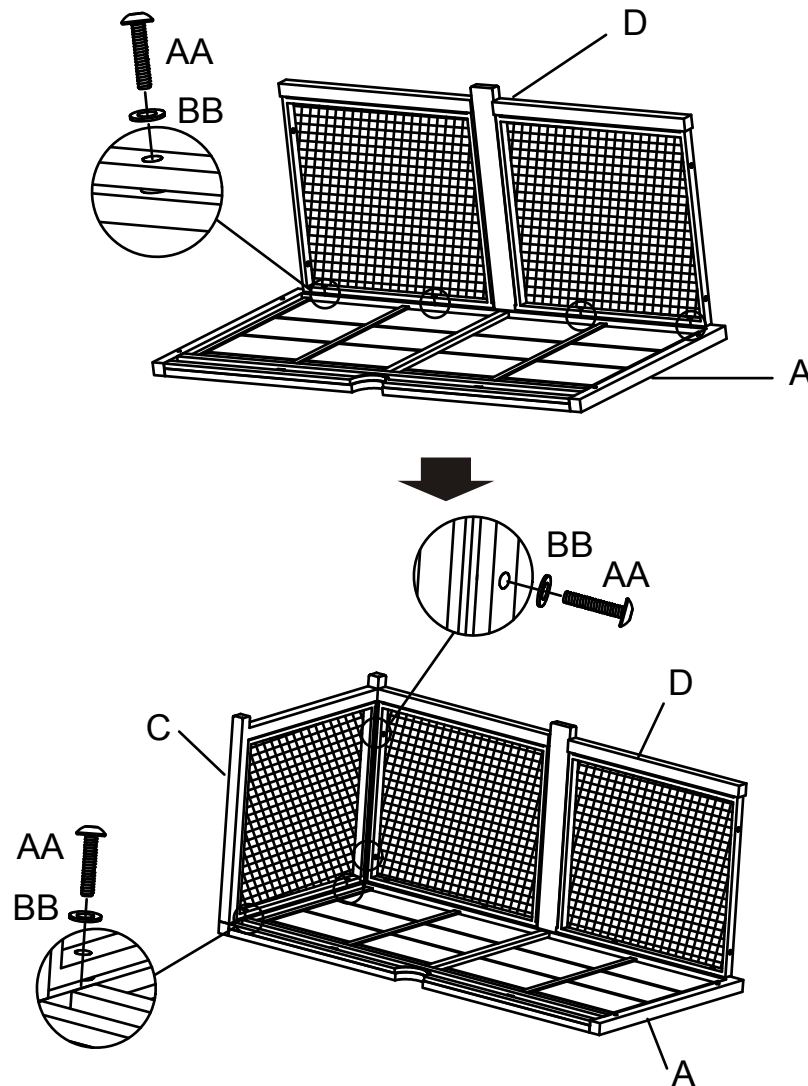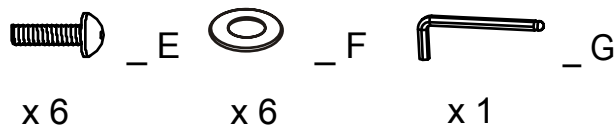

Assembly Instruction (continued)

2 Attaching the right side panel and the left side panel to the table top and to the large side panel


- ATTACH THE RIGHT SIDE PANEL "B" AND LEFT SIDE PANEL TO TABLE TOP "A" AND LARGE SIDE PANEL "D". FASTEN WITH SCREW "AA" AND WASHER "BB". TIGHTEN HALF WAY USING THE ALLEN WRENCH "CC".

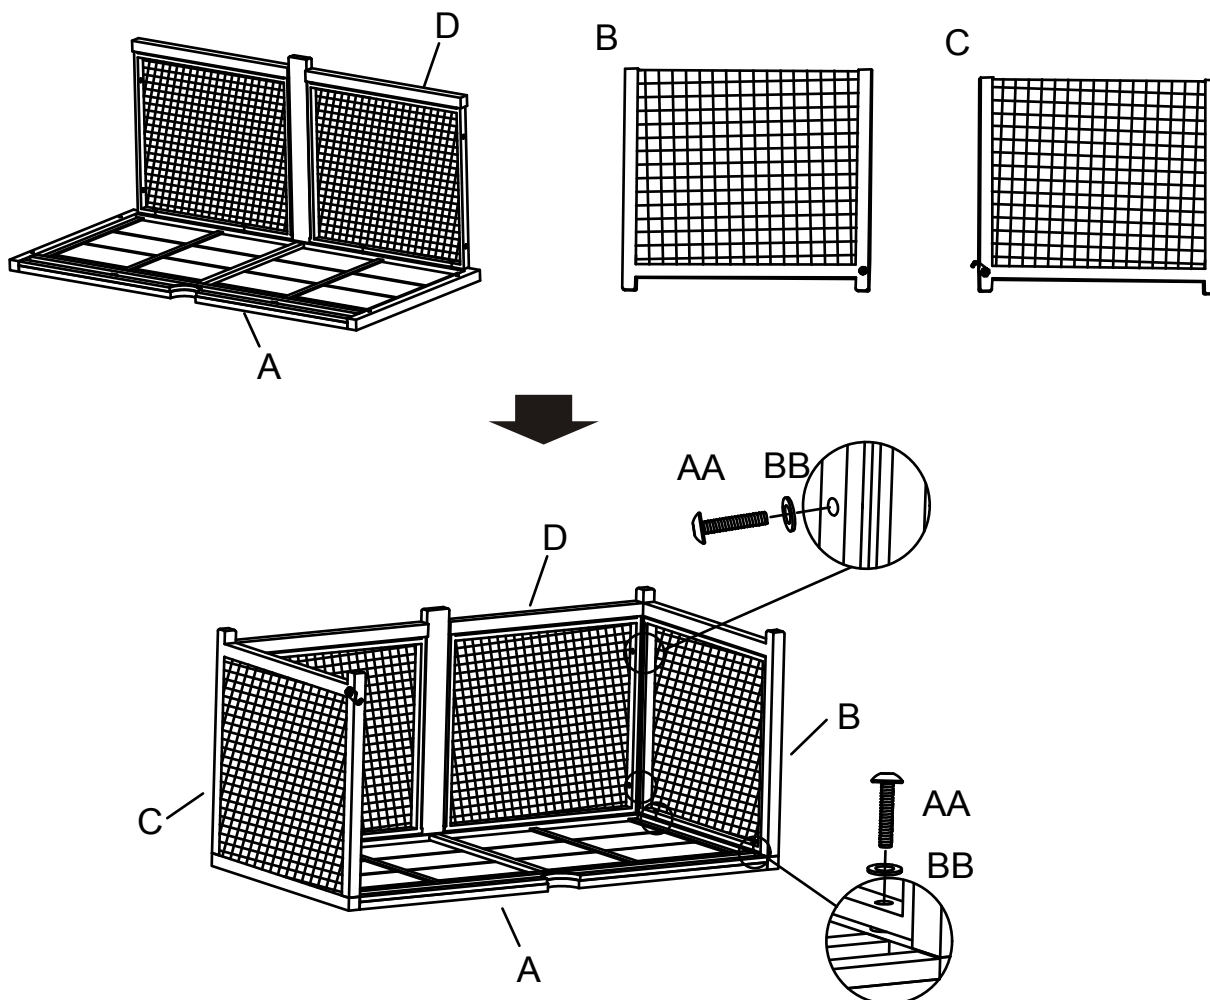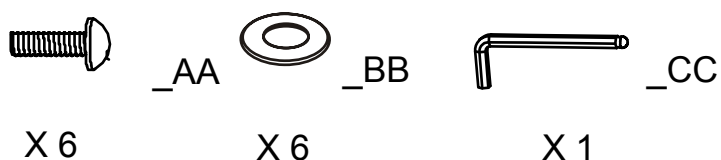

Assembly Instruction (continued)

3 Tightening all the screws and locking the two parts of the table

- CHECK AND MAKE ADJUSTMENTS AS NEEDED. USING THE ALLEN WRENCH “CC” FULLY TIGHTEN ALL THE SCREWS.
- REPEAT ABOVE STEPS 1 AND 2 FOR THE OTHER HALF OF THE TABLE.
- AS SHOWN BELOW, USE LOCKING MECHANISM TO LOCK THE TWO PARTS.

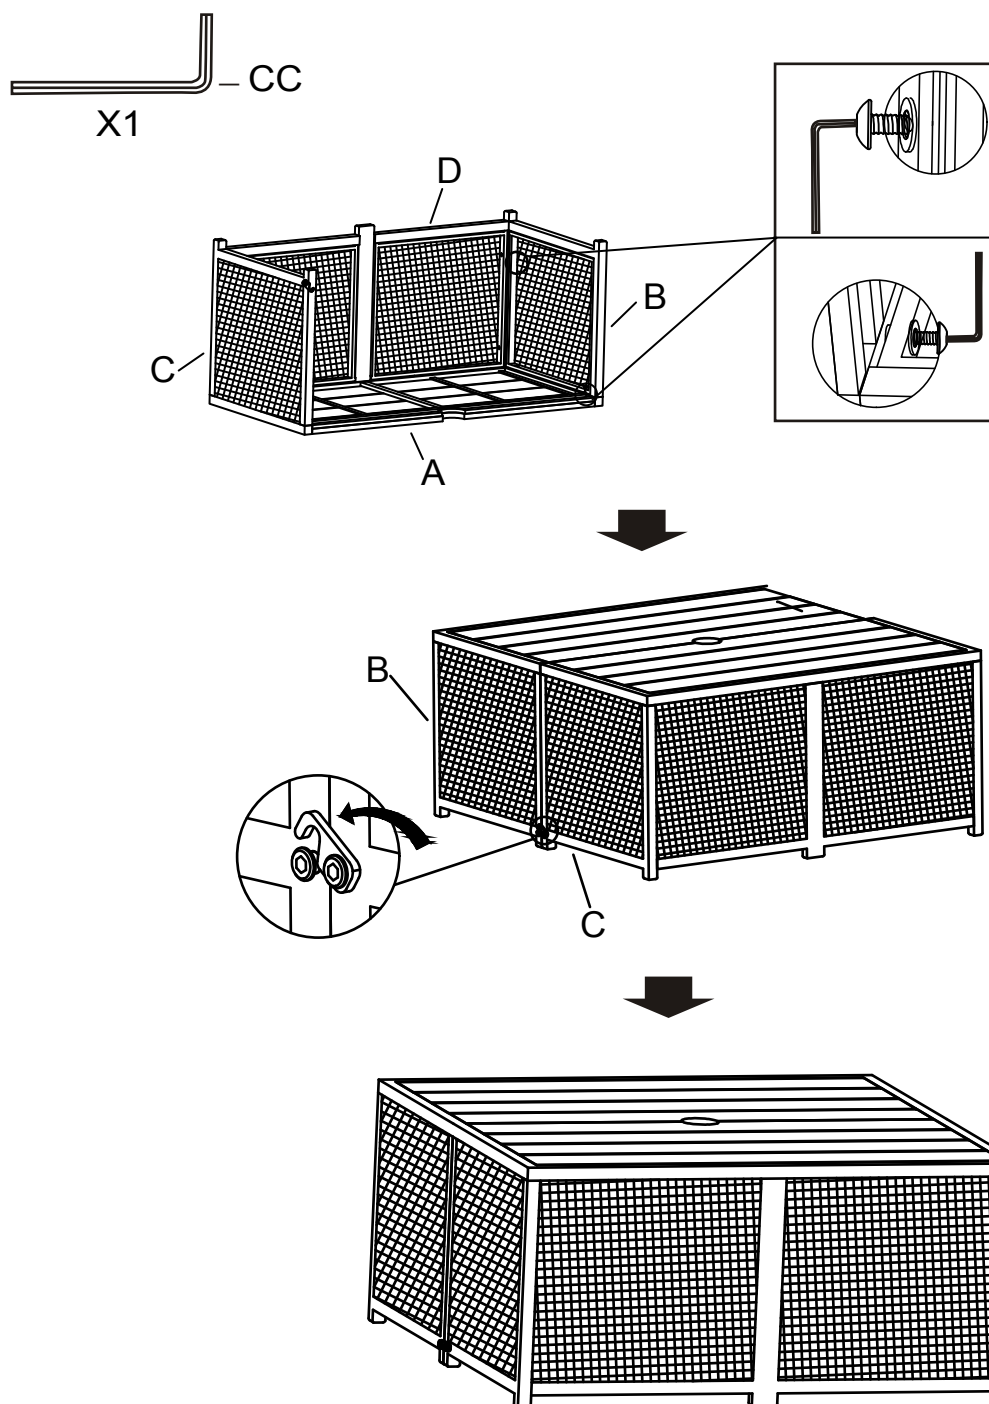



HOME OFFICE: 1100 Coiner Ct., City of Industry, CA 91748

FAX: 1-626-269-6399

CUSTOMER SERVICE HOT LINE: 1-866-905-4107

SEVICE HOURS: MONDAY-FRIDAY 8:30 AM TO 5:00 PM PST
/ 11:30 AM TO 8:00PM EST

E-MAIL: customerservice@yotrious.com

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: customerservice@yotrious.com or Call toll-free: 1-866-905-4107

Made in CHINA / Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com