

Use and Care Guide

Sunset Beach Deluxe Lighted & Music Hardtop Bar
w/ 4 stools

Product Code: D71 M20530
KSN: 0-08770597-6
UPC Code: 749241315213

Date of purchase: ____/____/____



Thank you for your purchase

Thank you for your purchase!

We are pleased that you have chosen Sears for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

Table of contents

Table of Contents	2
Safety Information	3
Set Up your Shelter Properly	3
Examine your Shelter	3
 Warranty	3
Excluded	3
Service Center	3
Care and Maintenance	4
 Pre-Assembly	5
Hardware Included	5
Package Contents	6
 Assembly Instructions	9
 Customer Service	35

Safety Information

SET UP YOUR SHELTER PROPERLY

- ☐ Please read and understand this entire manual before attempt to assemble, operate, or install the product.
- ☐ If any part is missing or damaged. Do not attempt to assemble the product.
- ☐ Two to four people are needed for assembly.
- ☐ In order to avoid damage to the gazebo and its components please use appropriate tools.
- ☐ Do not use the structure as support.
- ☐ Check all bolts on a regular basis to maintain the solidity of the structure.
- ☐ Keep instructions for future use.
- ☐ Approximate time: 3 – 4 hours

EXAMINE YOUR SHELTER

- ☐ Examine occasionally to ensure there are no loose parts. If loose parts are found, they should be retightened immediately.

Warranty

1 YEAR WARRANTY FOR FRAME AND FABRIC

Limited warranty is applicable on parts only. Warranty extends solely to the original purchaser who must offer original sales receipt for record.

WHAT IS COVERED

Limited warranty is applicable on parts only. We warranty to the original purchase for one year limited from the date of purchase that the frame, fabric, speaker, audio controller LED light and AC adapter will be free from manufacturing defects.

WHAT IS NOT COVERED

Product used for commercial, contract, or other non-residential purposes, or damage due to acts of nature, vandalism, misuse, or improper assembly is not covered. Corrosion or rusting of hardware is not covered. Warranty is to the original purchase and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued.

SERVICE CENTER

The purchaser must contact our customer service center directly if this product is found to be defect in material or workmanship. The manufacturer, as its option, will repair or replace the defectives parts.

Please contact us via 1-800-961-9838, 9AM-5PM, Pacific Time Zone, Monday-Friday, or customerservice@bondvast.com

Care and Maintenance

- For cleaning, use a mild detergent solution and rinse with water. Do not use acetone abrasive or others special detergents to clean and air dry only.
- Due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.

SPECIAL CARE SHEET:

Do NOT use the AC adapter during precipitation or inclement weather.

Do NOT leave the AC adapter outside, place and store in dry place.

Keep the AC adapter away from babies and children.

In order to protect the LED lights, do NOT break the Acryl panel of the post.

All lighting equipment is designed to prevent humidity and moisture, please do not disassemble.

Please always keep the speaker cover on the right position, the speaker is waterproof.

When NOT using period of time, please turn off the power switch and unplug the AC adapter.

Please connect all cables securely before plugging in power cable into power outlet.

All the parts are special design for this product only, changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacture will not be held liable for any direct, indirect, incidental or consequential damages.

Pre-Assembly

PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly.

 
Tools required for assembly (not included): Allen wrench (included), a screwdriver, stepladder (min. 5ft.) and other safety items such as gloves, safety eyewear, and hardhat. To avoid injury from exposed sharp edges, it may be necessary to use the above safety equipment.

Do not leave it unattended if not fully assembled even if bolted to the ground.

HARDWARE INCLUDED




NOTED: Hardware not shown to actual size.

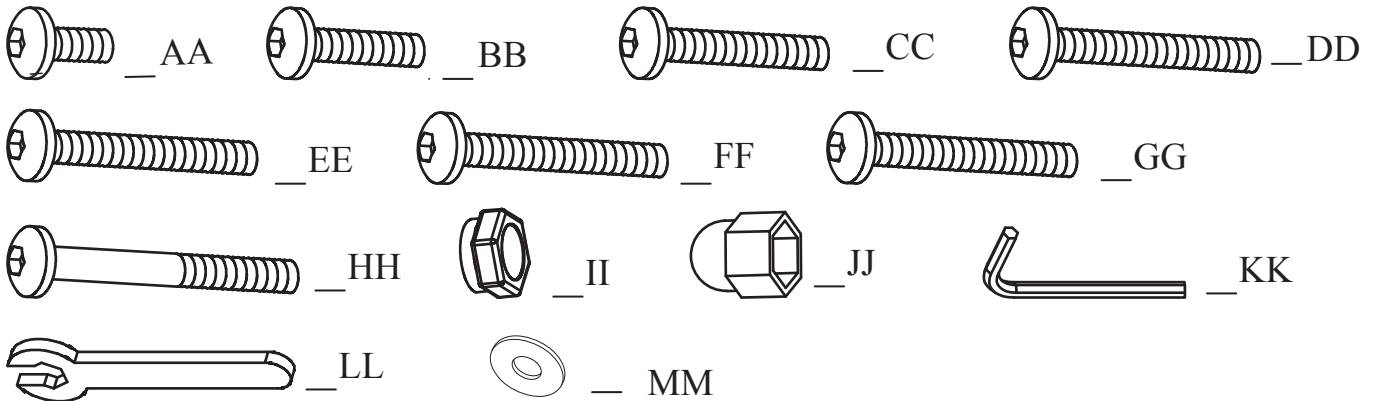

Part	Description	Size	QTY.
AA	BOLT	(Φ 6 x 15mm)	111
BB	BOLT	(Φ 6 x 25mm)	26
CC	BOLT	(Φ 6 x 35mm)	27
DD	BOLT	(Φ 6 x 45mm)	8
EE	BOLT	(Φ 6 x 48mm)	4
FF	BOLT	(Φ 6 x 55mm)	20
GG	BOLT	(Φ 6 x 58mm)	4
HH	BOLT	(Φ 6 x 65mm)	8
II	BOLT NUT		15
JJ	CAP		15
KK	ALLEN WRENCH		1
LL	SPANNER		1
MM	WASHER		10


Pre-Assembly (continued)

  Package Contents

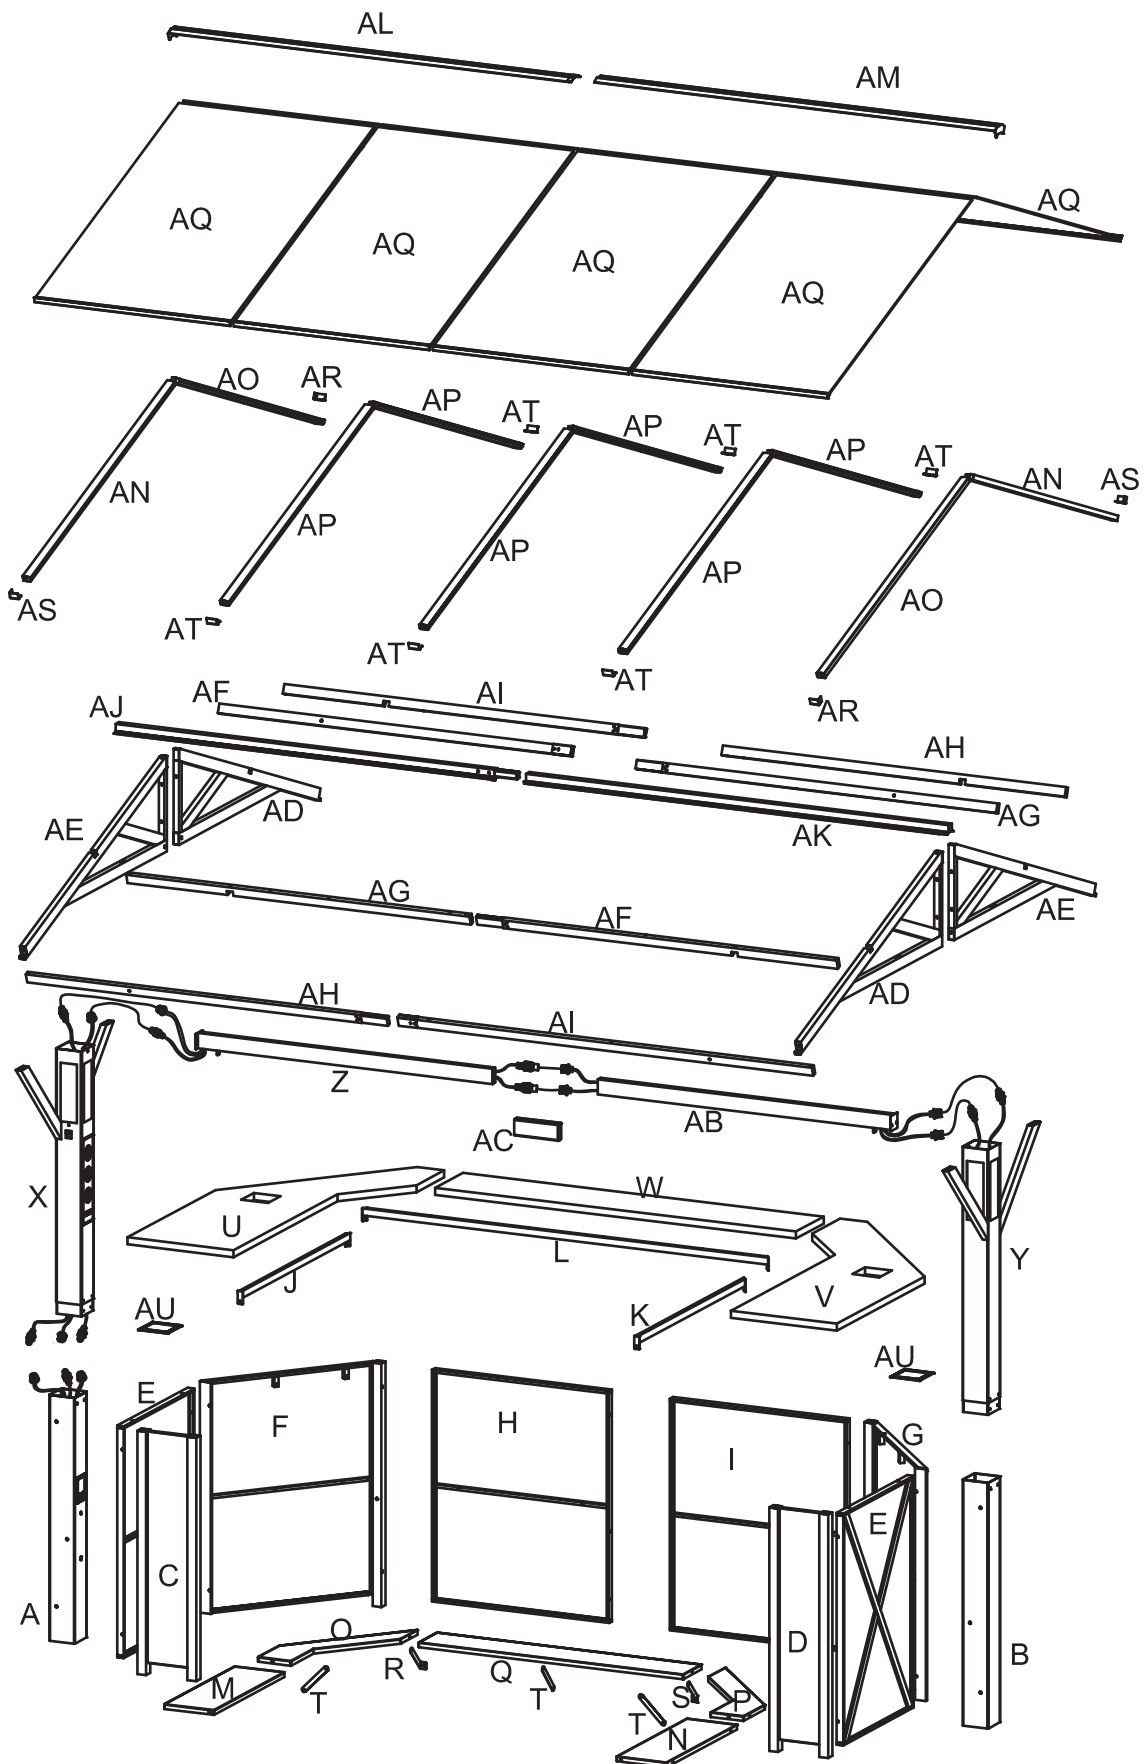



 


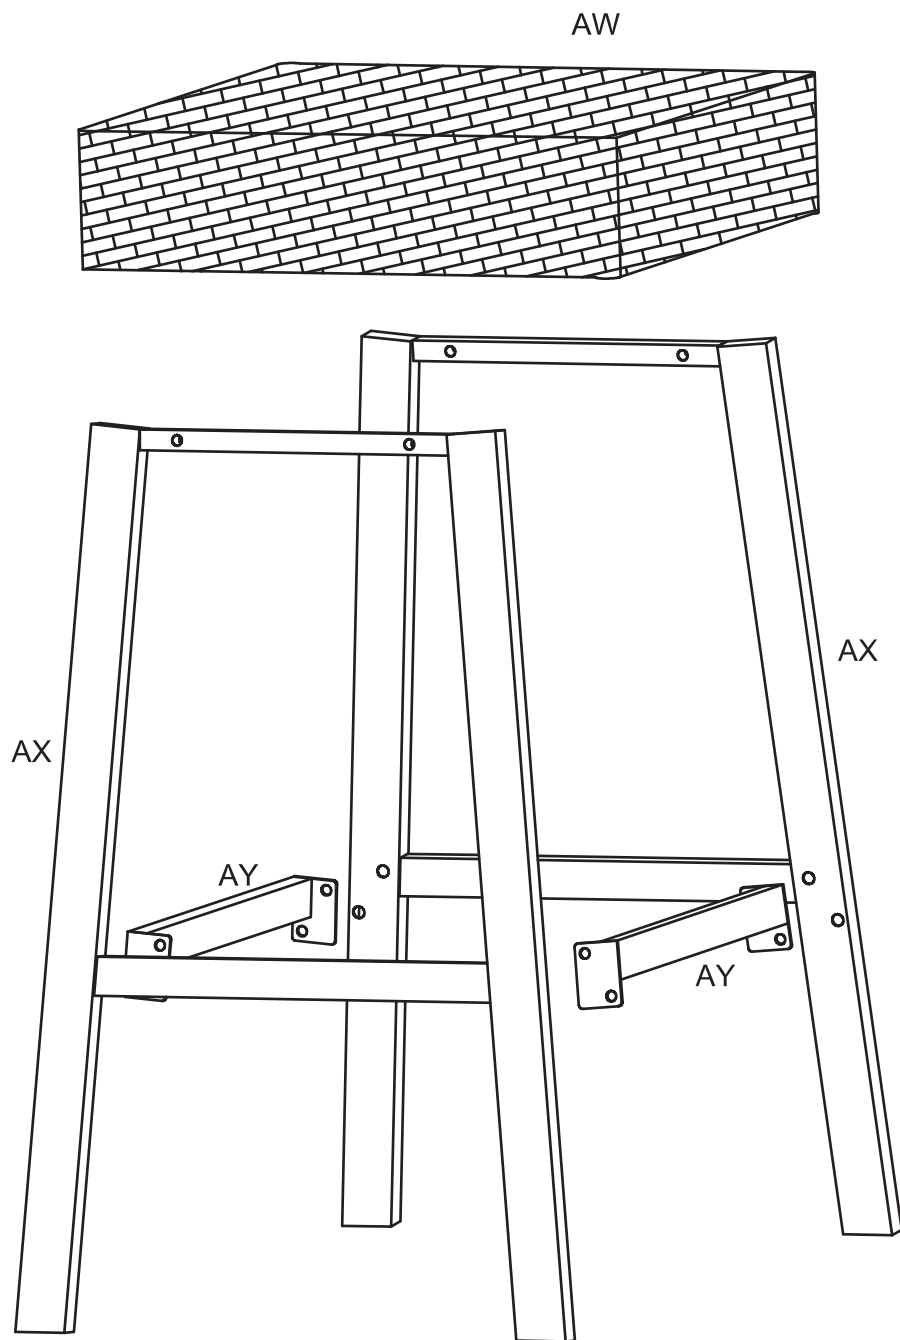











Pre-Assembly (continued)

Package Contents




 
 


 

 









Pre-Assembly (continued)

Package Contents

Item	Description	Qty.	Illustration
A	Post (with power switch, lights, speaker preassembled)	1	
B	Post (with lights, speaker preassembled)	1	
C	Back Panel	1	
D	Back Panel	1	
E	Side Panel	2	
F	Side Panel	1	
G	Side Panel	1	
H	Front Panel	1	
I	Front Panel	1	
J	Fixed Tube	1	
K	Fixed Tube	1	
L	Fixed Tube	1	
M	Shelf	1	
N	Shelf	1	
O	Shelf	1	
P	Shelf	1	
Q	Shelf	1	

  






 









Pre-Assembly (continued)

Package Contents

Item	Description	Qty.	Illustration
R	Support Piece	1	
S	Support Piece	1	
T	Support Piece	3	
U	Table Top	1	
V	Table Top	1	
W	Table Top	1	
X	Roof Post	1	
Y	Roof Post	1	
Z	Crossbar	1	
AB	Crossbar	1	
AC	Crossbar Connector	1	
AD	Roof Side Panel	2	
AE	Roof Side Panel	2	
AF	Roof Support Bar	2	
AG	Roof Support Bar	2	
AH	Roof Support Bar	2	
AI	Roof Support Bar	2	

 
Pre-Assembly (continued)

Package Contents


Item	Description	Qty.	Illustration
AJ	Upper Crossbeam Tube	1	
AK	Upper Crossbeam Tube	1	
AL	Upper Crossbeam Cover	1	
AM	Upper Crossbeam Cover	1	
AN	Roof Tube	2	
AO	Roof Tube	2	
AP	Roof Tube	6	
AQ	Roof Panel	8	
AR	Corner Connector	2	
AS	Corner Connector	2	
AT	Center Connector	6	
AU	Rubber Washer	2	
AV	AC Adapter	1	
AW	Seat	4	
AX	Chair Leg	8	
AY	Support Bar	8	
AZ	Connect Cable	1	

Assembly Instructions

 
1. Secure Side Panel (E) in between Post (A) and Back Panel (C) by M6 x 25 (BB). Fully tighten once all bolts in position.




A x 1

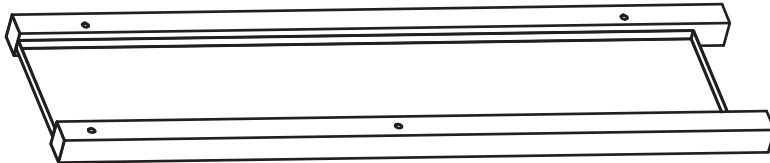 


C x 1

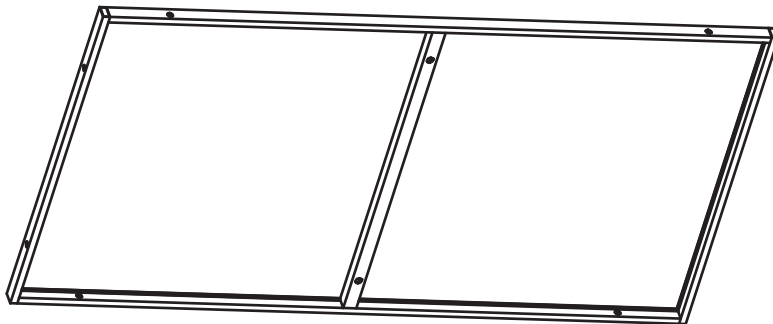 

E x 1


 


BB x 4

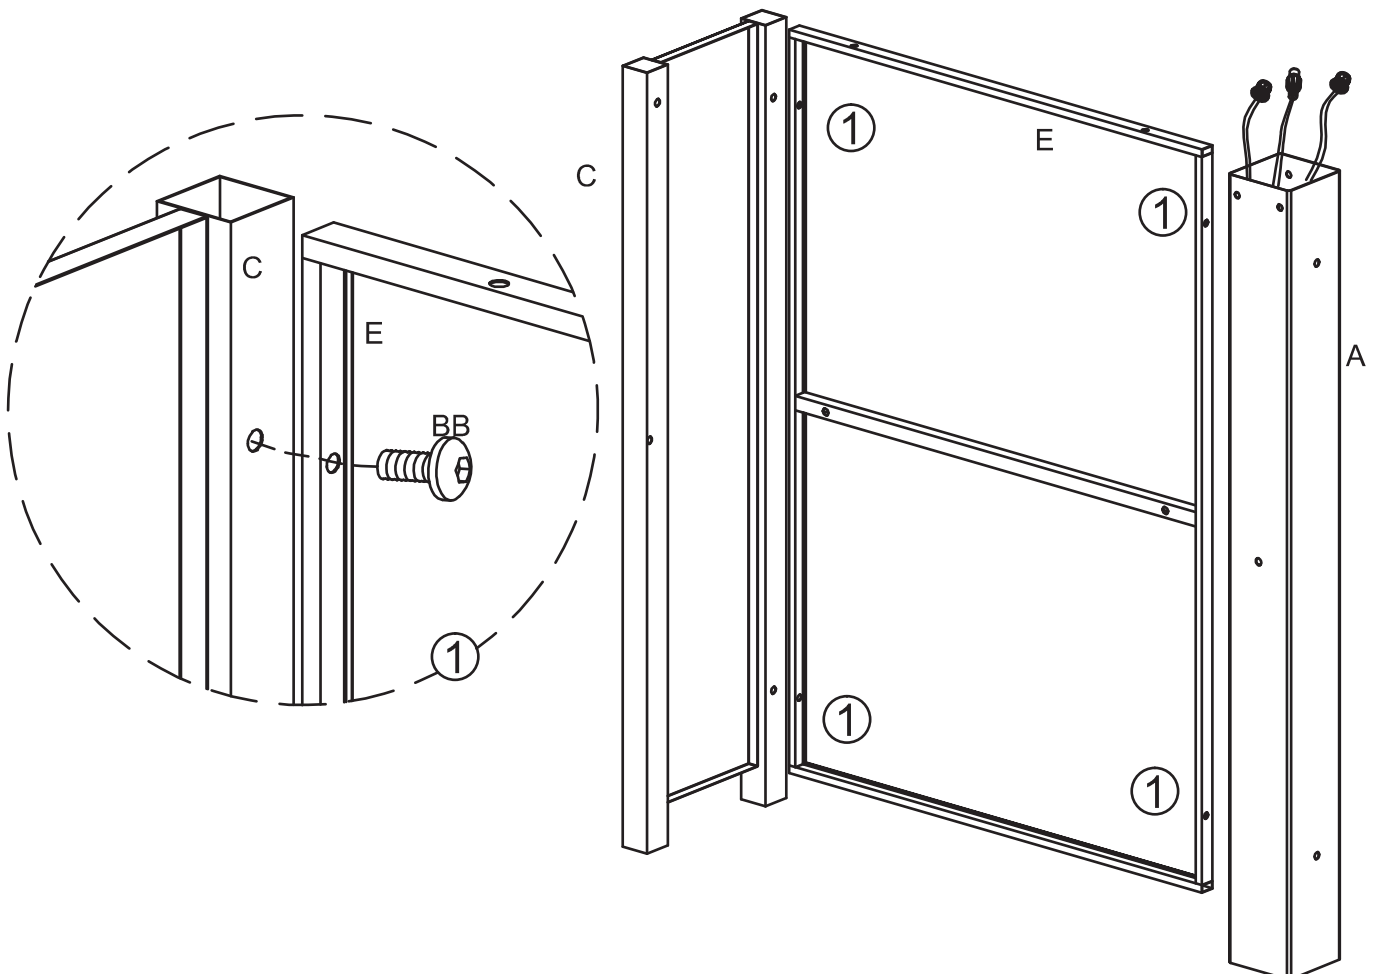 

Assembly Instructions

  
2. Secure Side Panel (E) in between Post (B) and Back Panel (D) by M6 x 25 (BB). Fully tighten once all bolts in position.

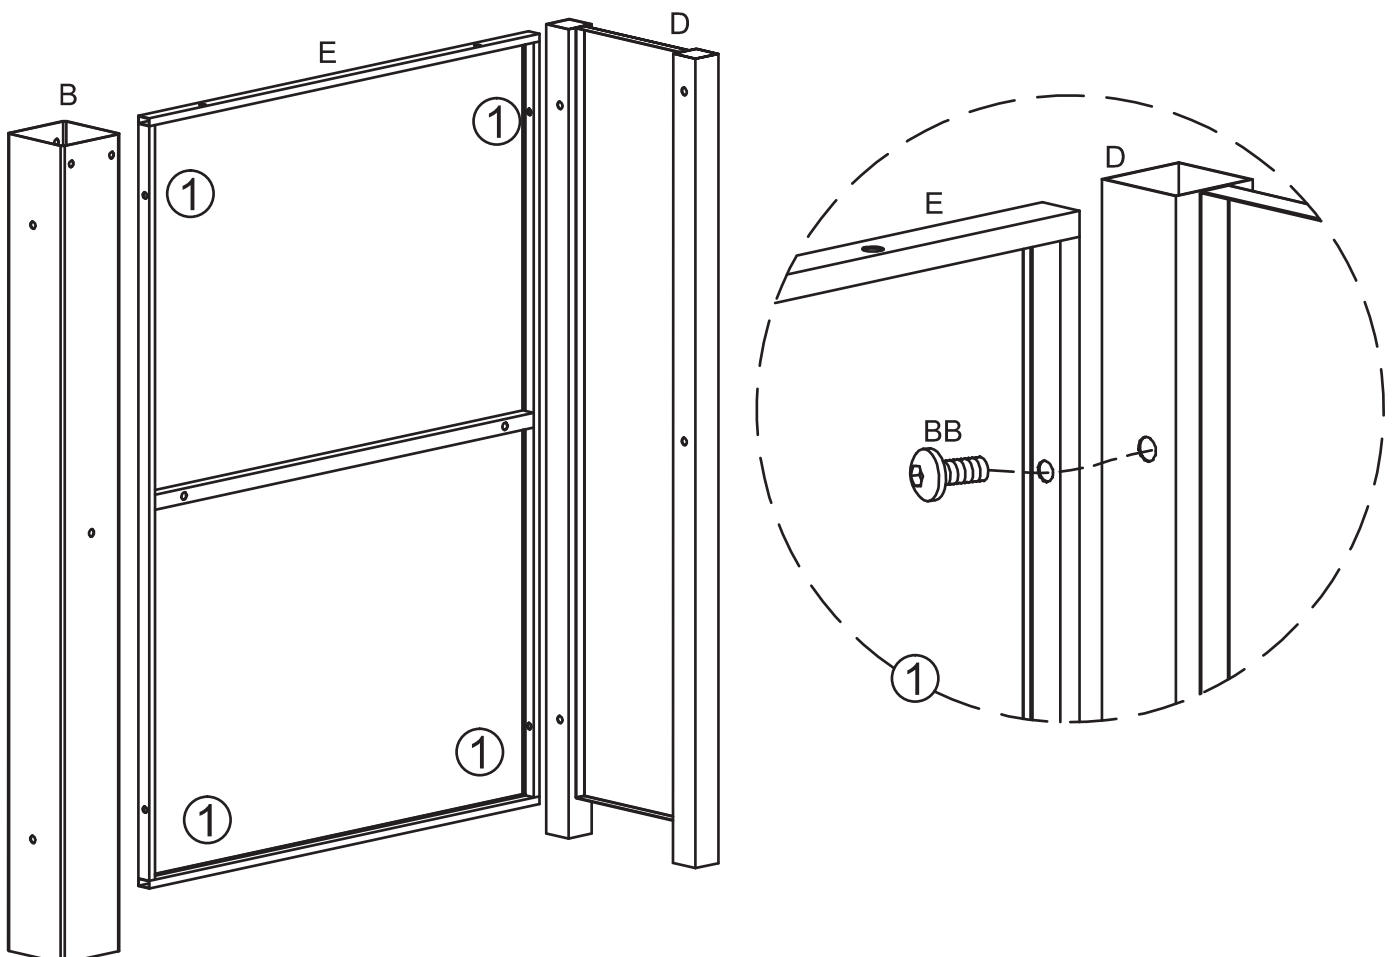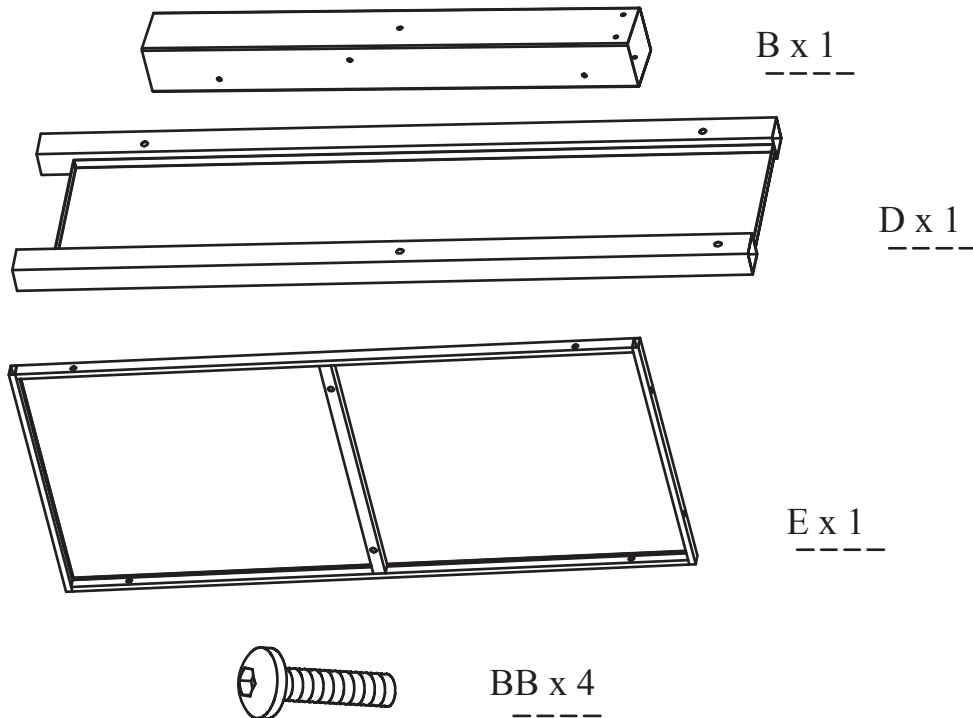


Assembly Instructions

3-1. Insert Crossbeam Connector (AC) into Crossbeam (Z), connect wires and insert wires into Crossbeam (Z). Please connect wires softly and slowly.

 
3-2. Insert Crossbeam (Z, AB) into Crossbeam Connector (AC) and secure by M6 x 15 (AA). Fully tighten once all bolts in position.

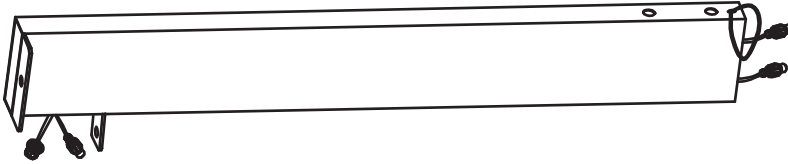


Z x 1

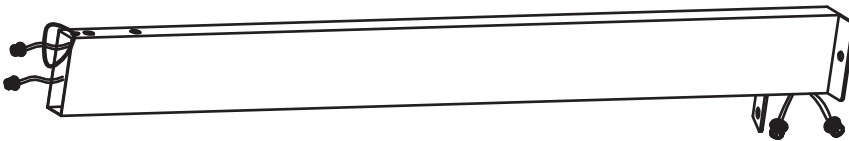 





AB x 1

 

AC x1

 


AA x 4

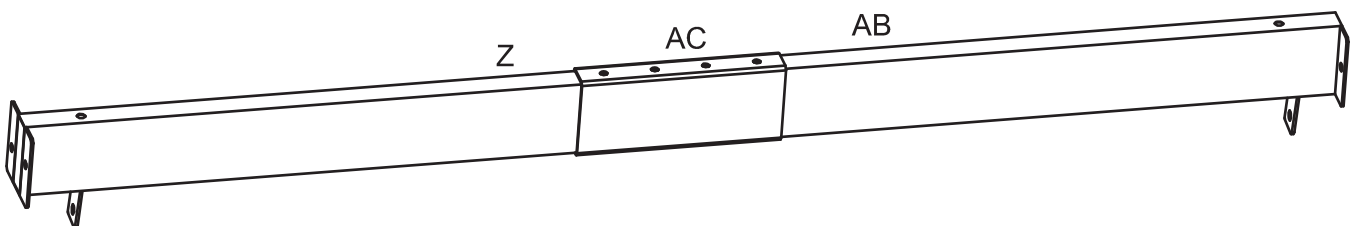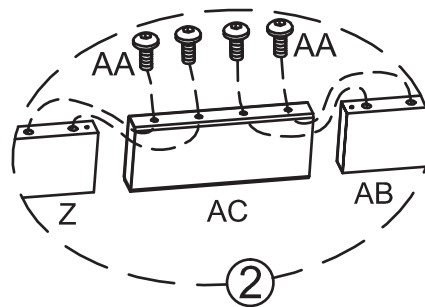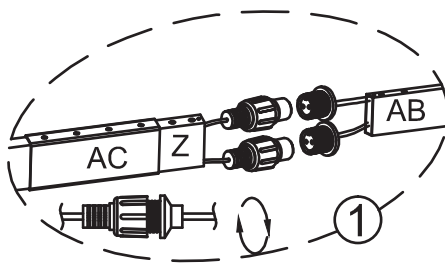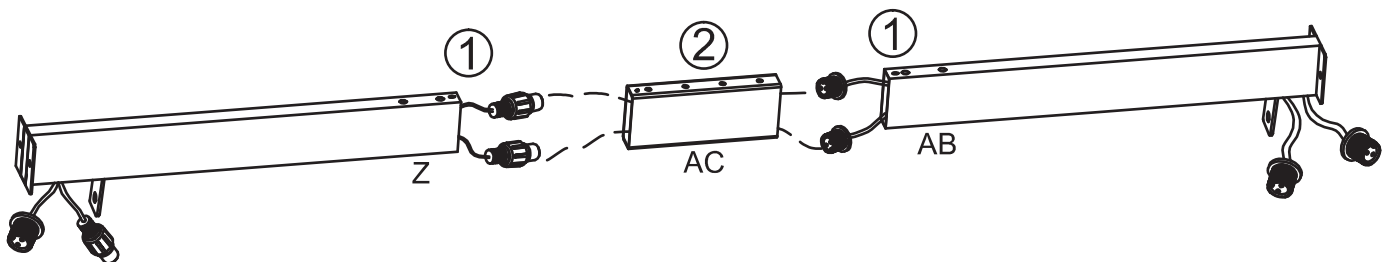    

Assembly Instructions

 
4. Secure Roof Support Bar (AH, AI) by M6 X 48 (EE) with Nut (II) then cover with Cap (JJ).



AF x 2



 
AG x 2




EE x 2



 II x 2




JJ x 2

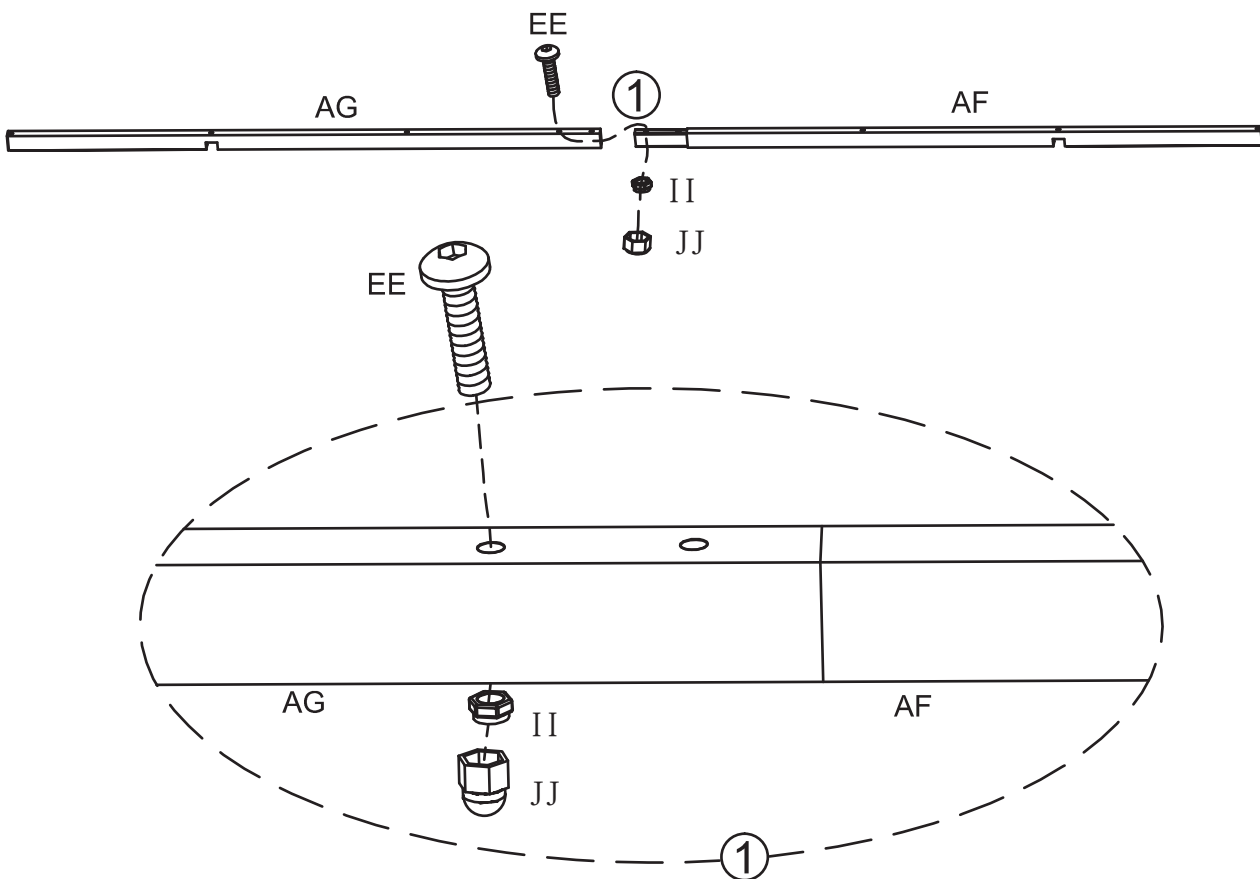 


Assembly Instructions

 
5. Secure Roof Support Bar (AH, AI) by M6 X 48 (EE) with Nut (II) then cover with Cap (JJ).



AH x 2

 


AI x 2

 


EE x 2



 II x 2




JJ x 2

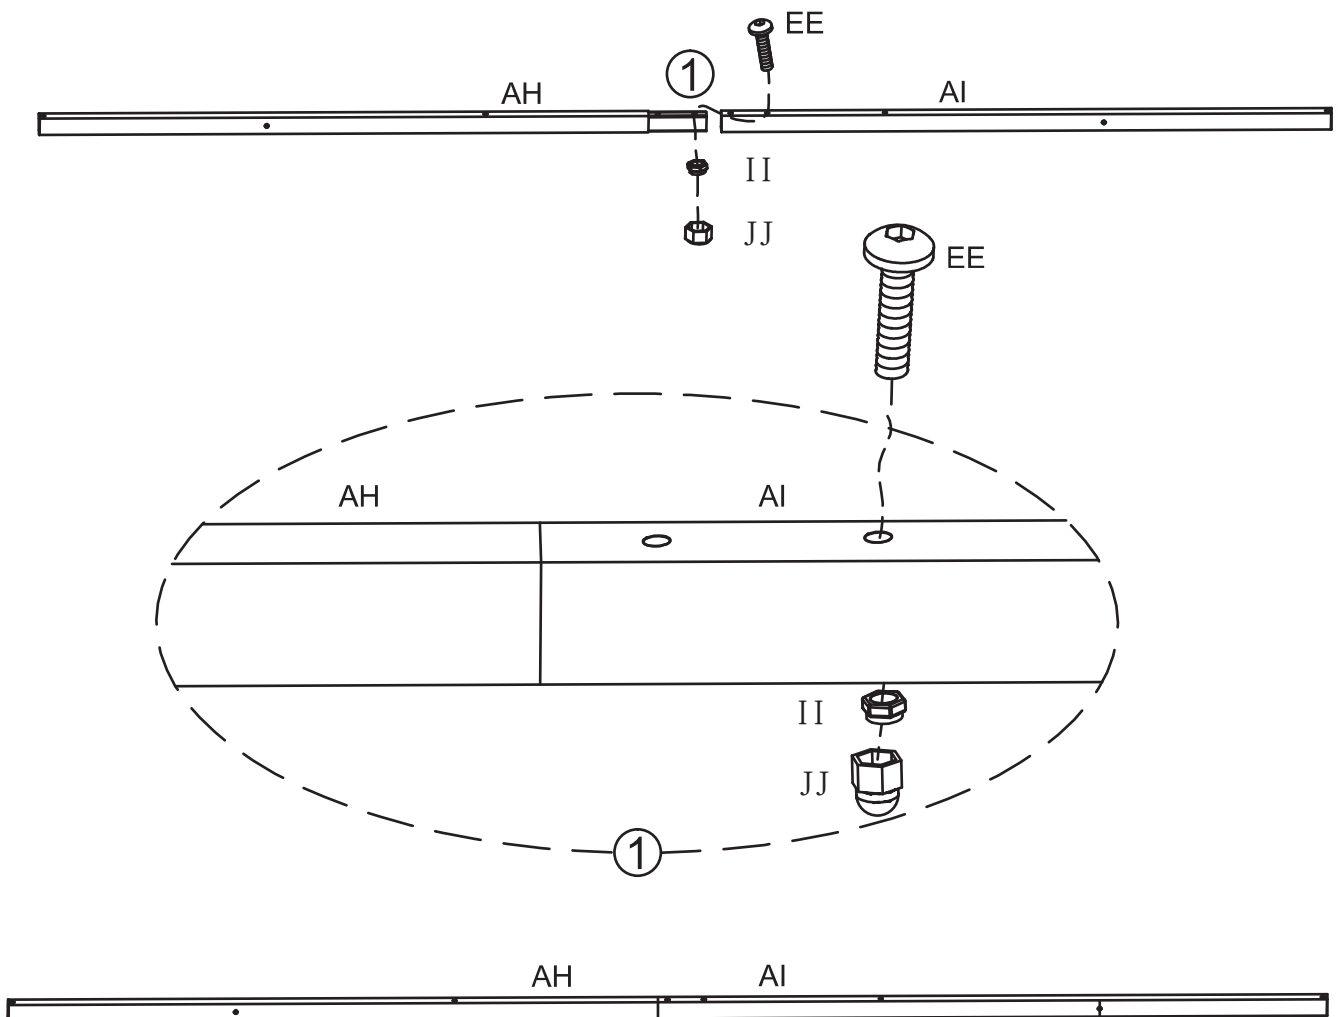 


Assembly Instructions

 
6. Secure Upper Crossbeam Tube (AJ, AK) by M6 x 15 (AA).
Fully tighten once all bolts in position.

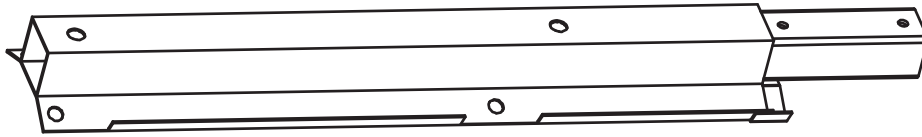


AJ x 1

 

AK x 1

 


AA x 2

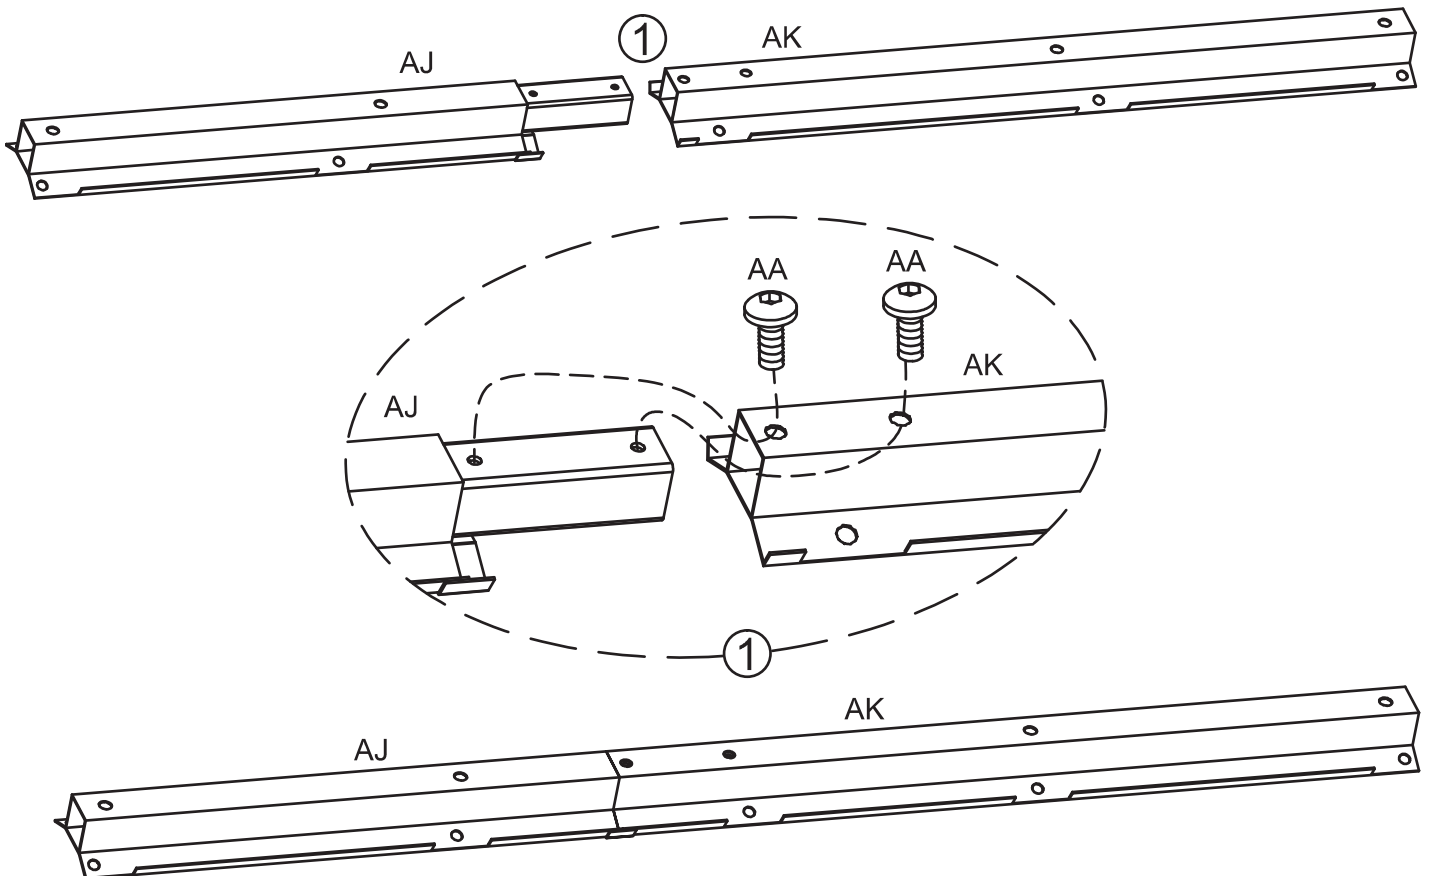 


Assembly Instructions

 
7. Secure Side Panel (F) and Post (A) by M6 x 25 (BB). Secure Side Panel (G) and Post (B) by M6 x 25 (BB). Fully tighten once all bolts in position.

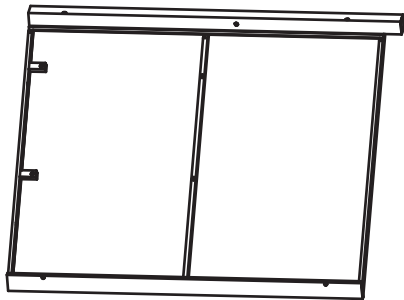




F x 1

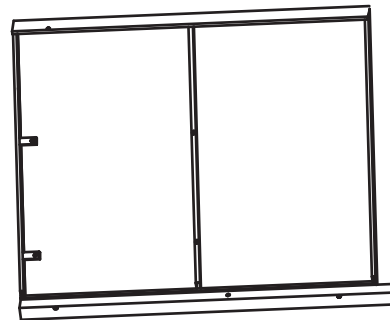 

G x 1

 


BB x 4

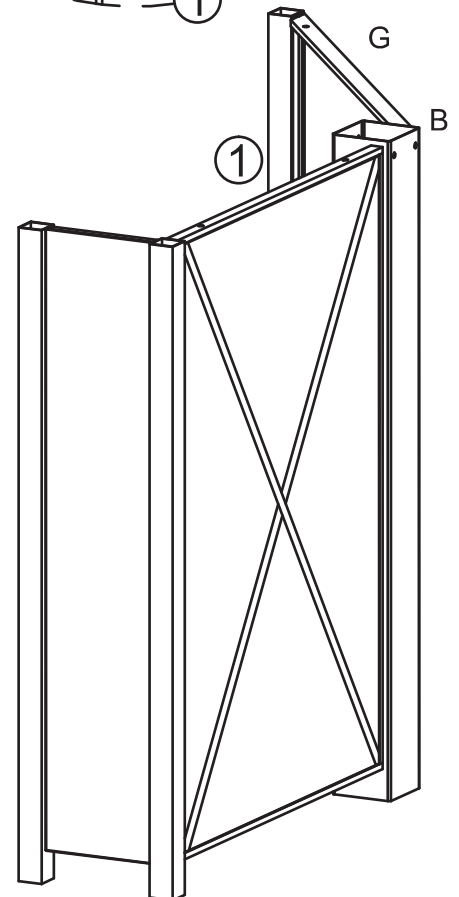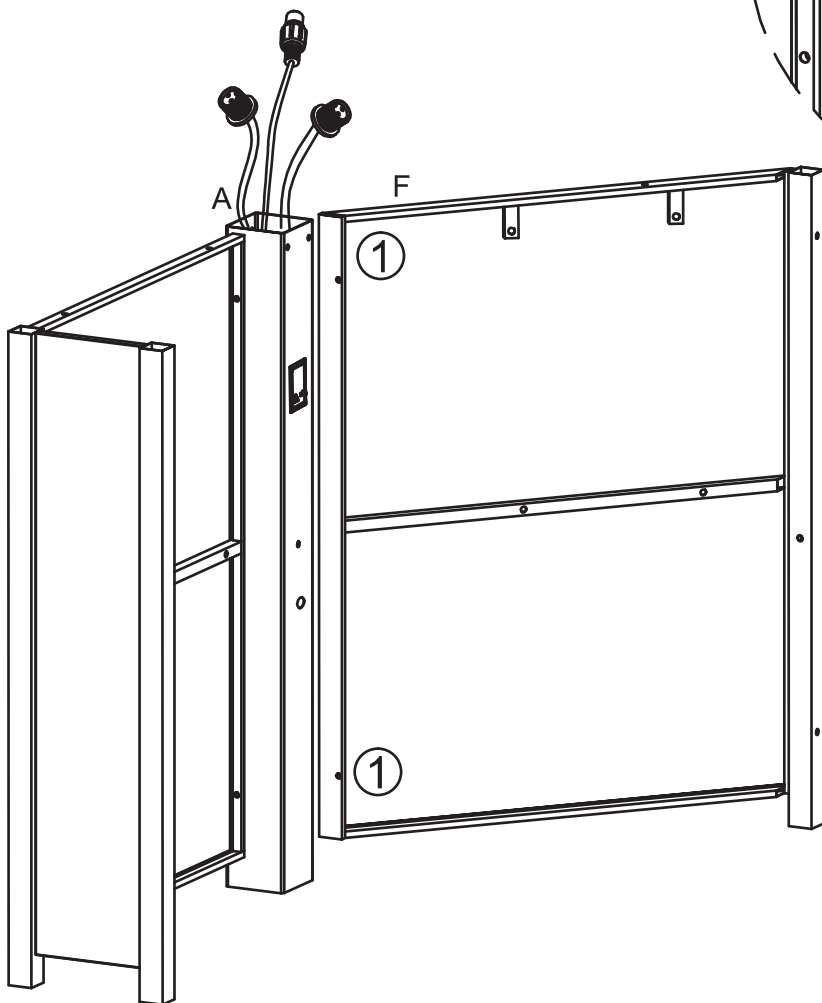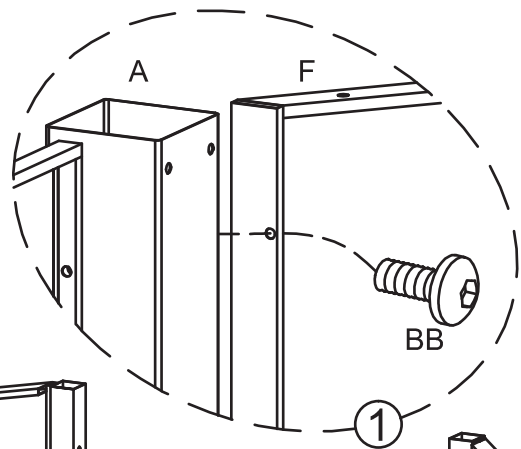   

Assembly Instructions


8-1. Secure Front Panel (H, I) by M6 x 35 (CC) with Nut (II) then cover by Cap (JJ). Fully tighten once all bolts in position.

 8-2. Secure Front Panel (I) and Side Panel (G) by M6 x 25 (BB) then secure Front Panel (H) and Side Panel (F) by M6 x 25 (BB). Fully tighten once all bolts in position.

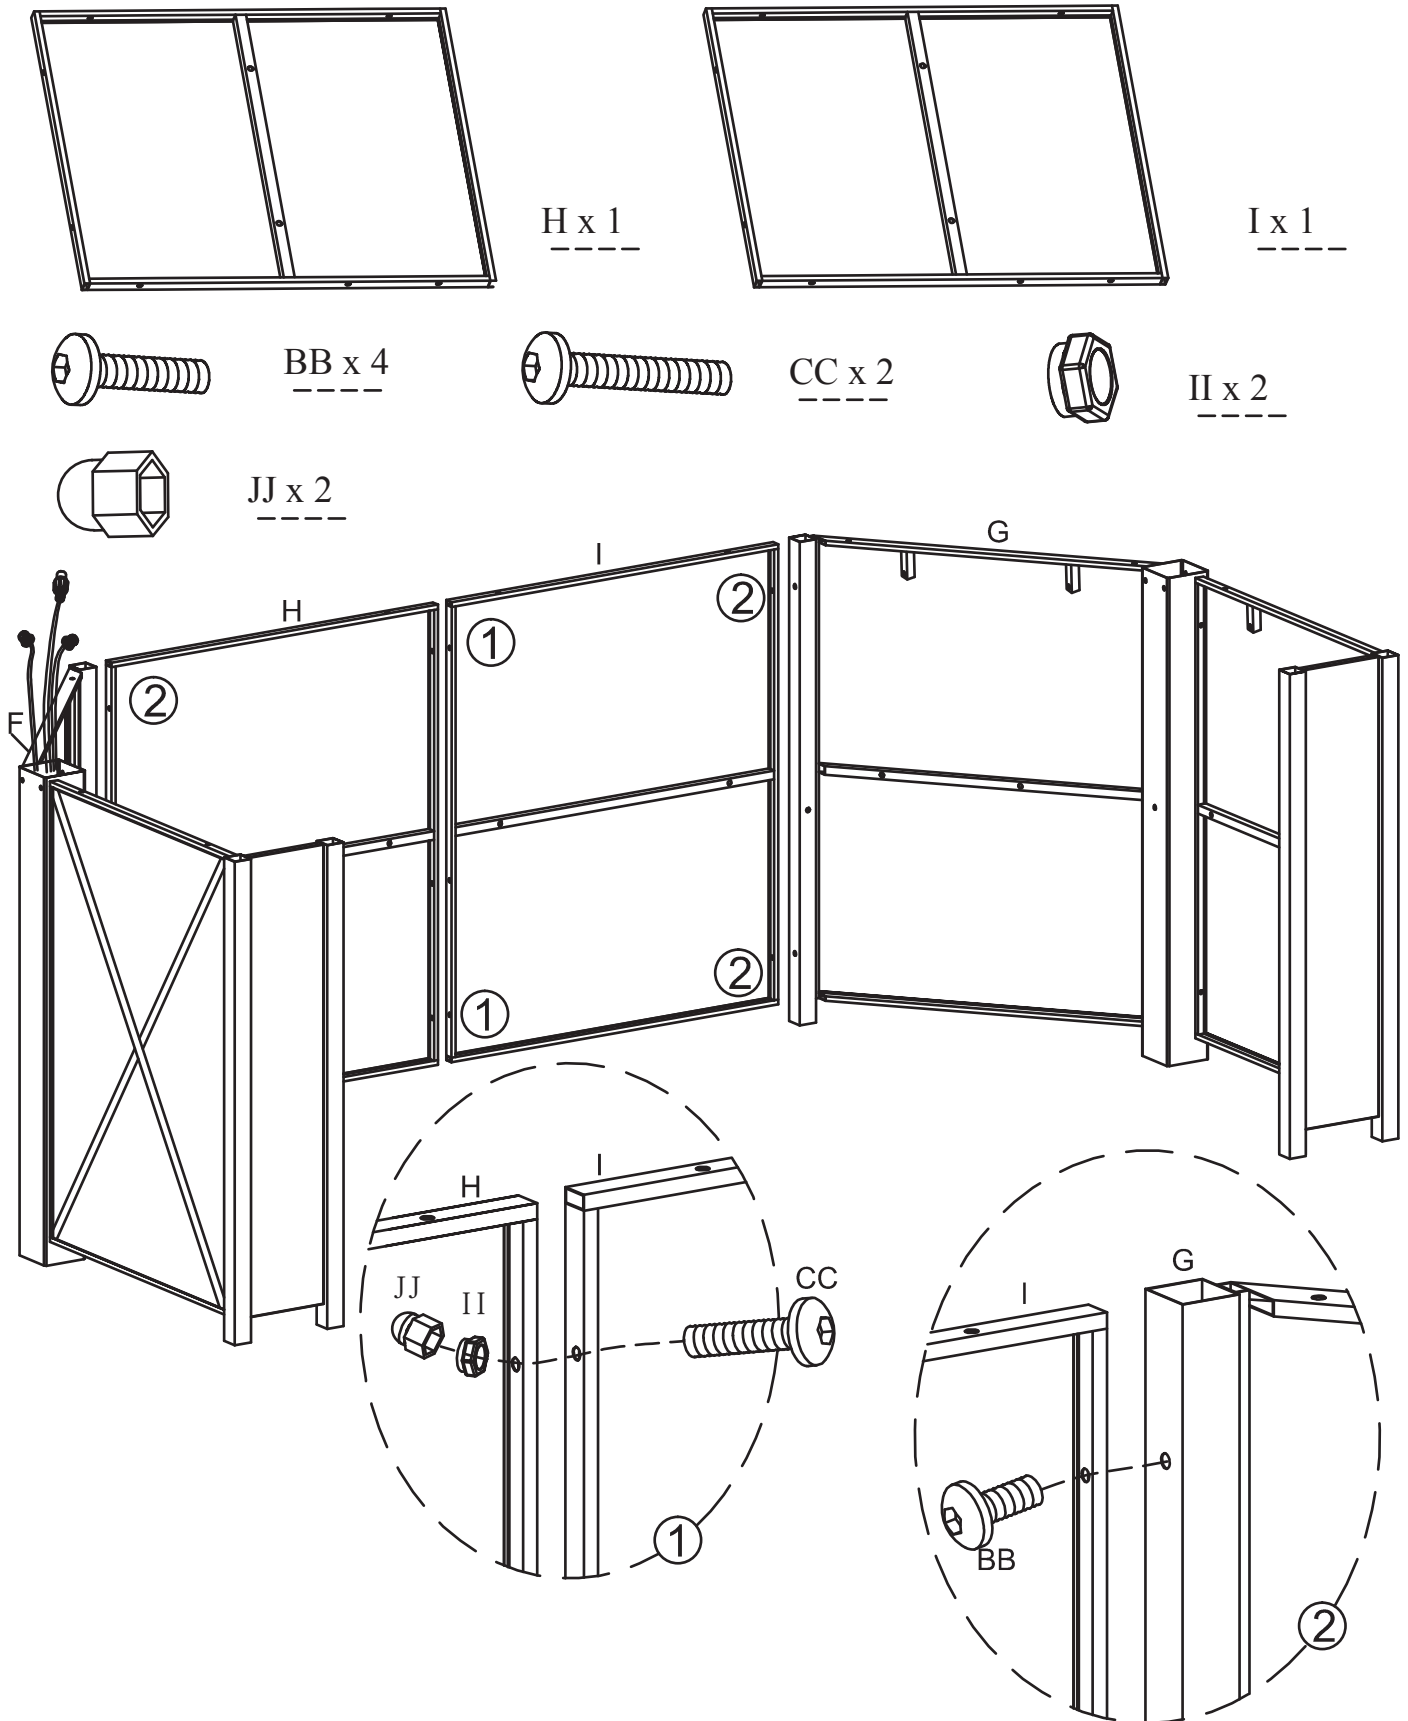

Assembly Instructions

 
- 9-1. Secure Fixed Tube (J, K) with Back Panel (C, D) by M6 x 15 (AA). Secure Fixed Tube (J, K) with Side Panel (F, G) by M6 x 15 (AA). Fully tighten once all bolts in position.
- 9-2. Secure Fixed Tube (L) in between Side Panel (F, G) by M6 x 15 (AA).

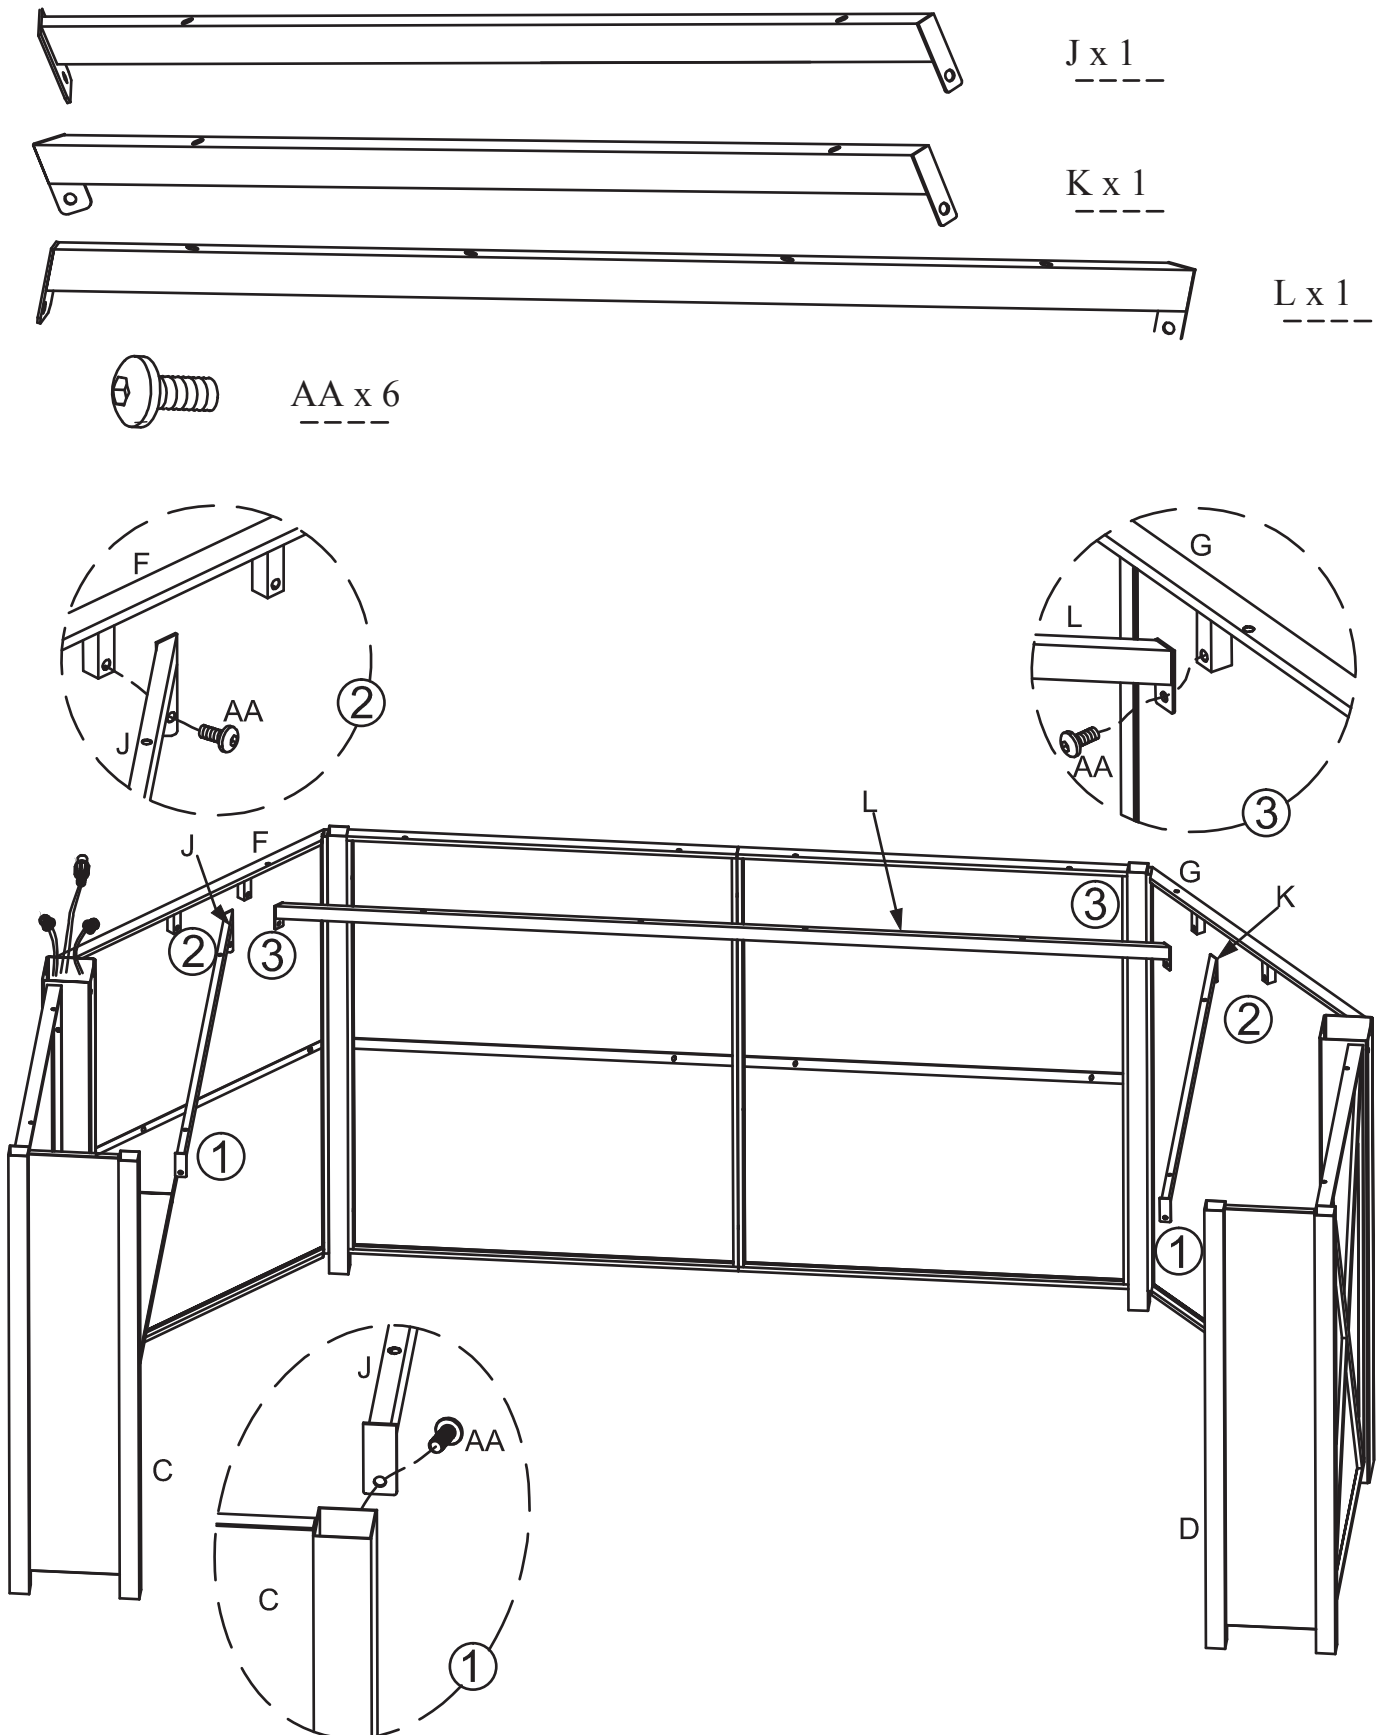

Assembly Instructions

10-1. Secure Shelf (N) on Back Panel (D) and Side Panel (E) by M6 x 15 (AA).
Fully tighten once all bolts in position.

 
10-2. Secure Shelf (M) on the Back Panel (C) and Side Panel (E) by M6 x 15 (AA).
Fully tighten once all bolts in position.

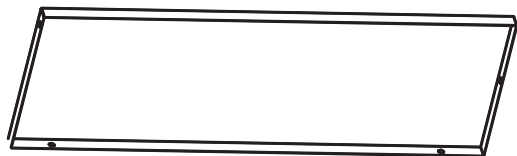


M x 1



 N x 1




AA x 6

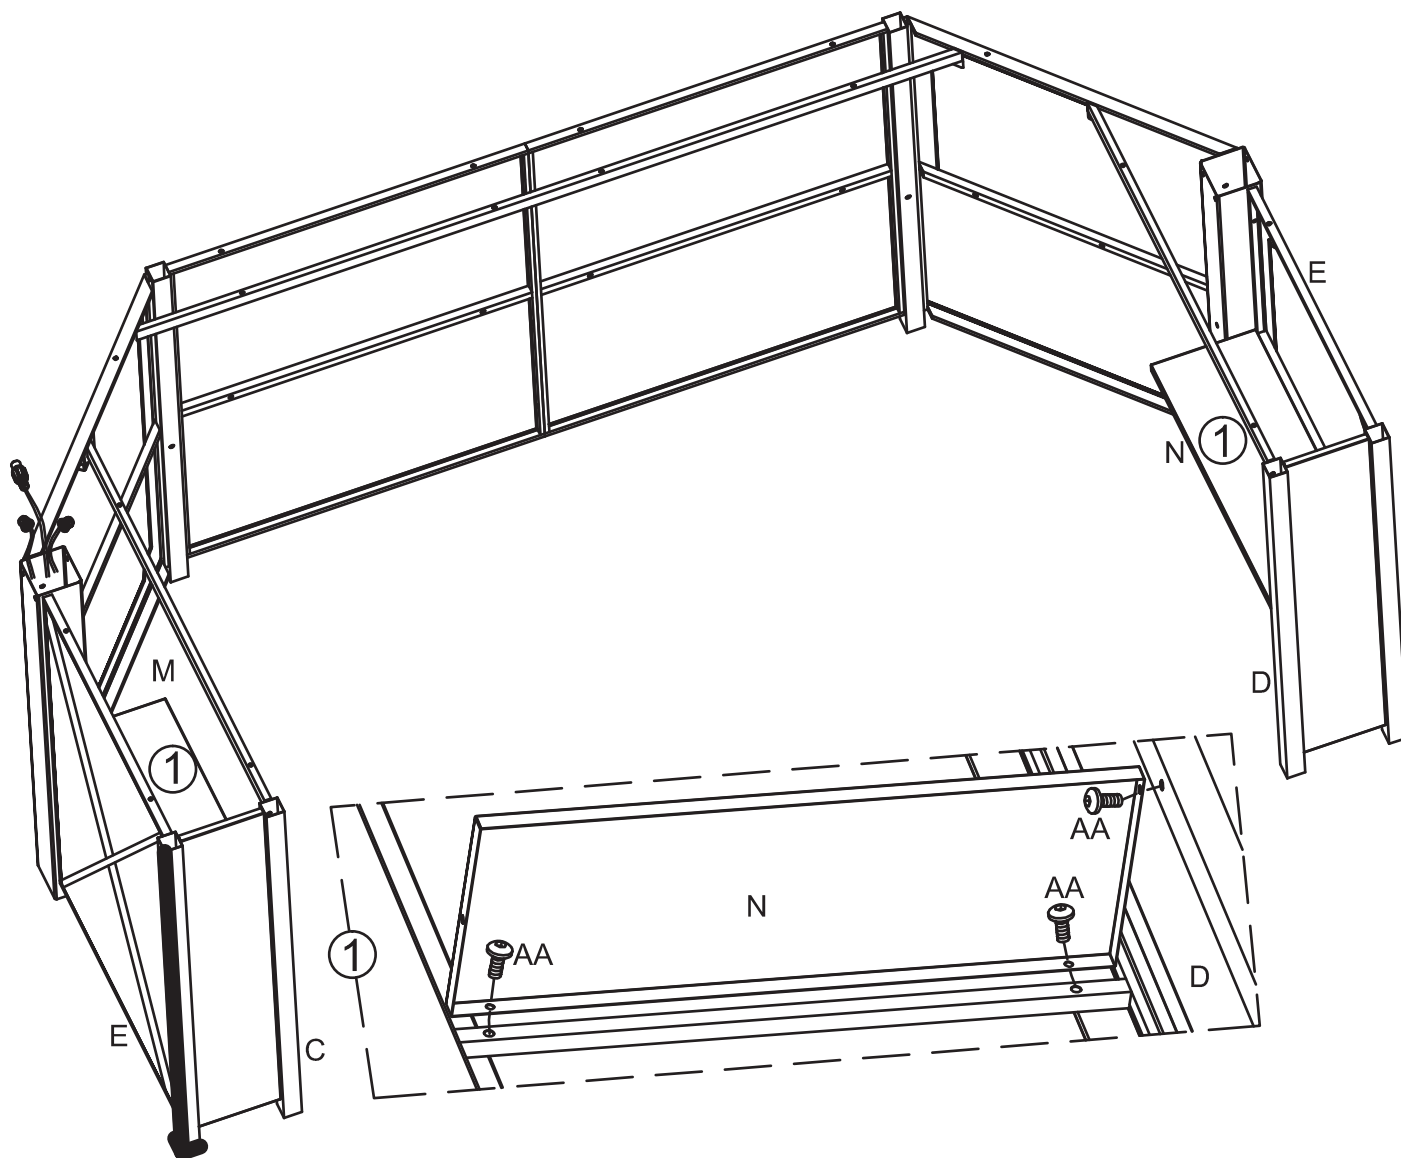 


Assembly Instructions

 
11. Secure Shelf (O) on Side Panel (F) and Post (A) by M6 x 15 (AA). Secure Shelf (P) on Side Panel (G) and Post (B) by M6 x15 (AA). Fully tighten once all bolts in position.

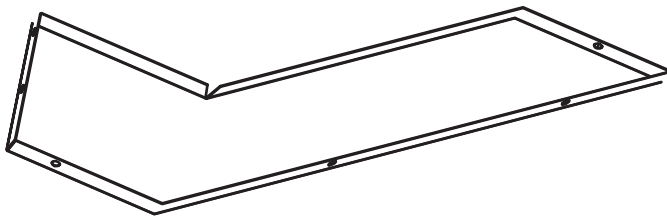


O x 1

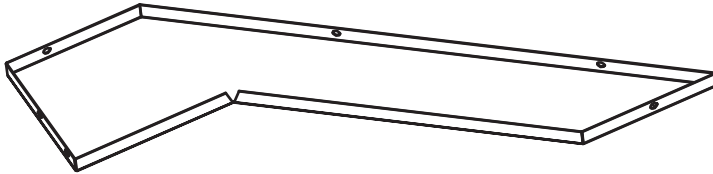 

P x 1

 


AA x 6

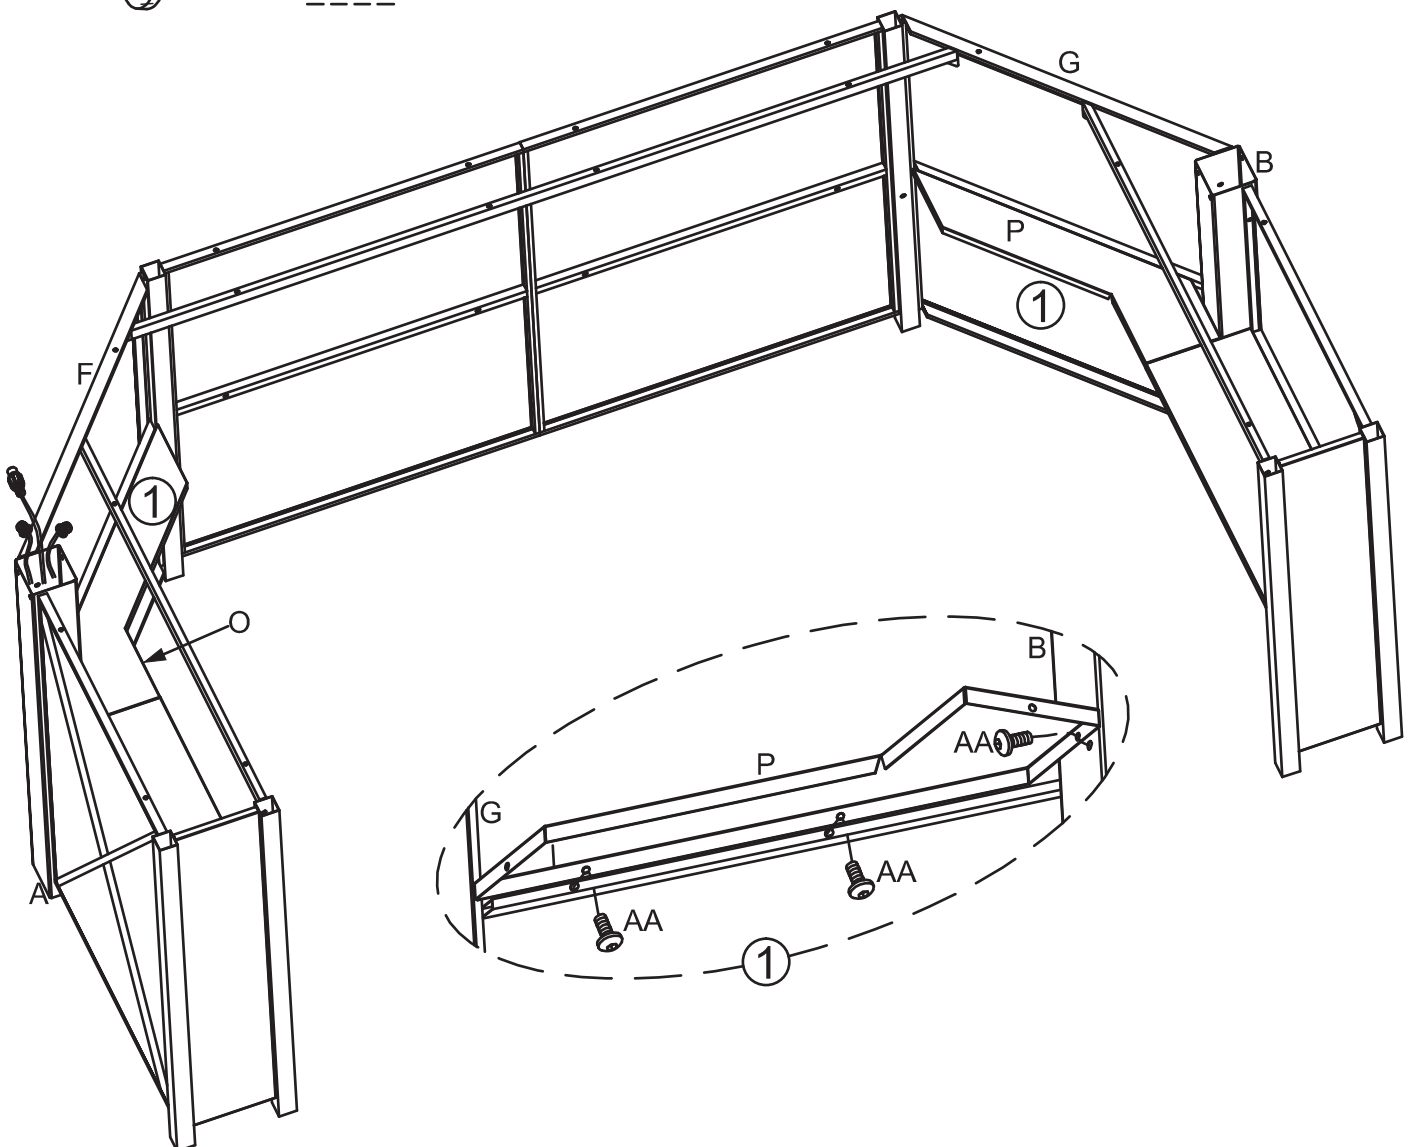 

Assembly Instructions

 
12. Secure Shelf (Q) on Front Panel (H, I) by M6 x 15 (AA). Fully tighten once all bolts in position.

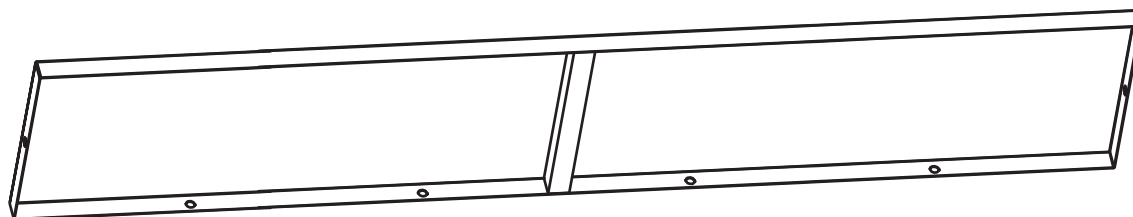

Q x 1



 AA x 4

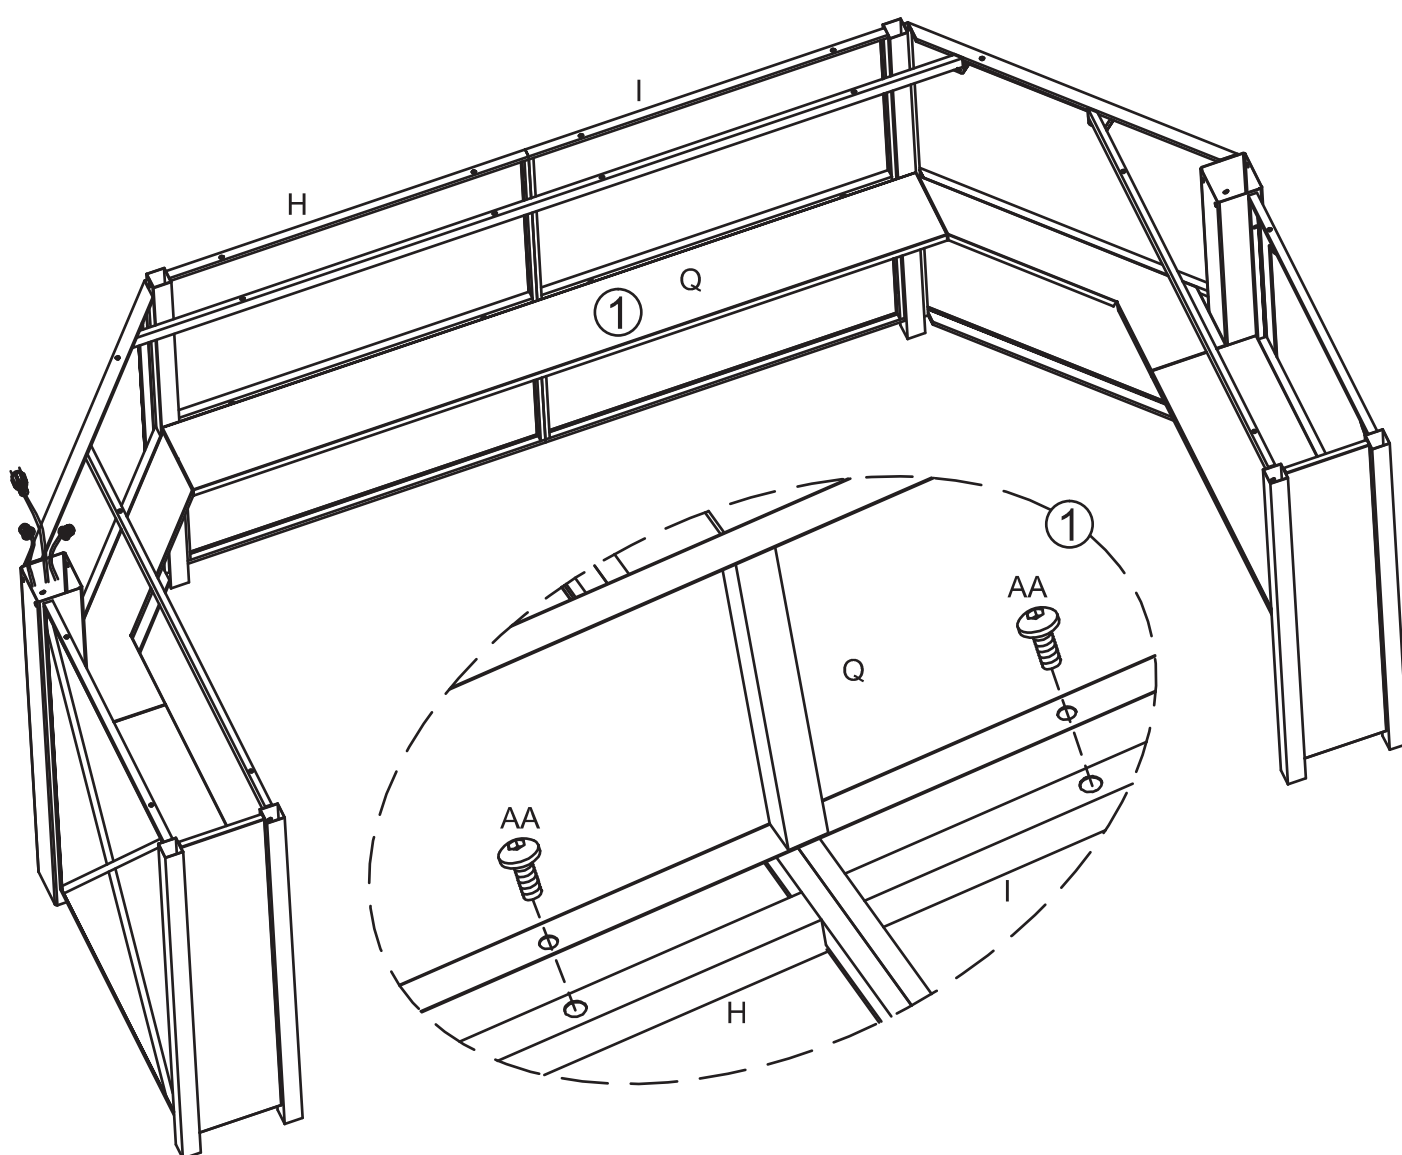


Assembly Instructions

13-1. Secure Support Piece (R, S) on Shelf (Q, O, P) by M6 X 15 (AA) with Nut (II) cover by Cap (JJ), then secure Support Piece (R, S) on Side panel (F, G) by M6 X 15 (AA).


13-2. Secure Support Piece (T) on Shelf (Q) by M6 X 15 (AA) then secure Support Piece (T) Front Panel (H, I) by M6 X 35 (CC) with Nut (II) then cover by Cap (JJ).

 13-3. Secure Support Piece (T) on Post (A, B) by M6 X 15 (AA) then secure Support Piece (T) on Shelf (M, O, N, P) by M6 X 15 (AA) with Nut (II) then cover by Cap (JJ).

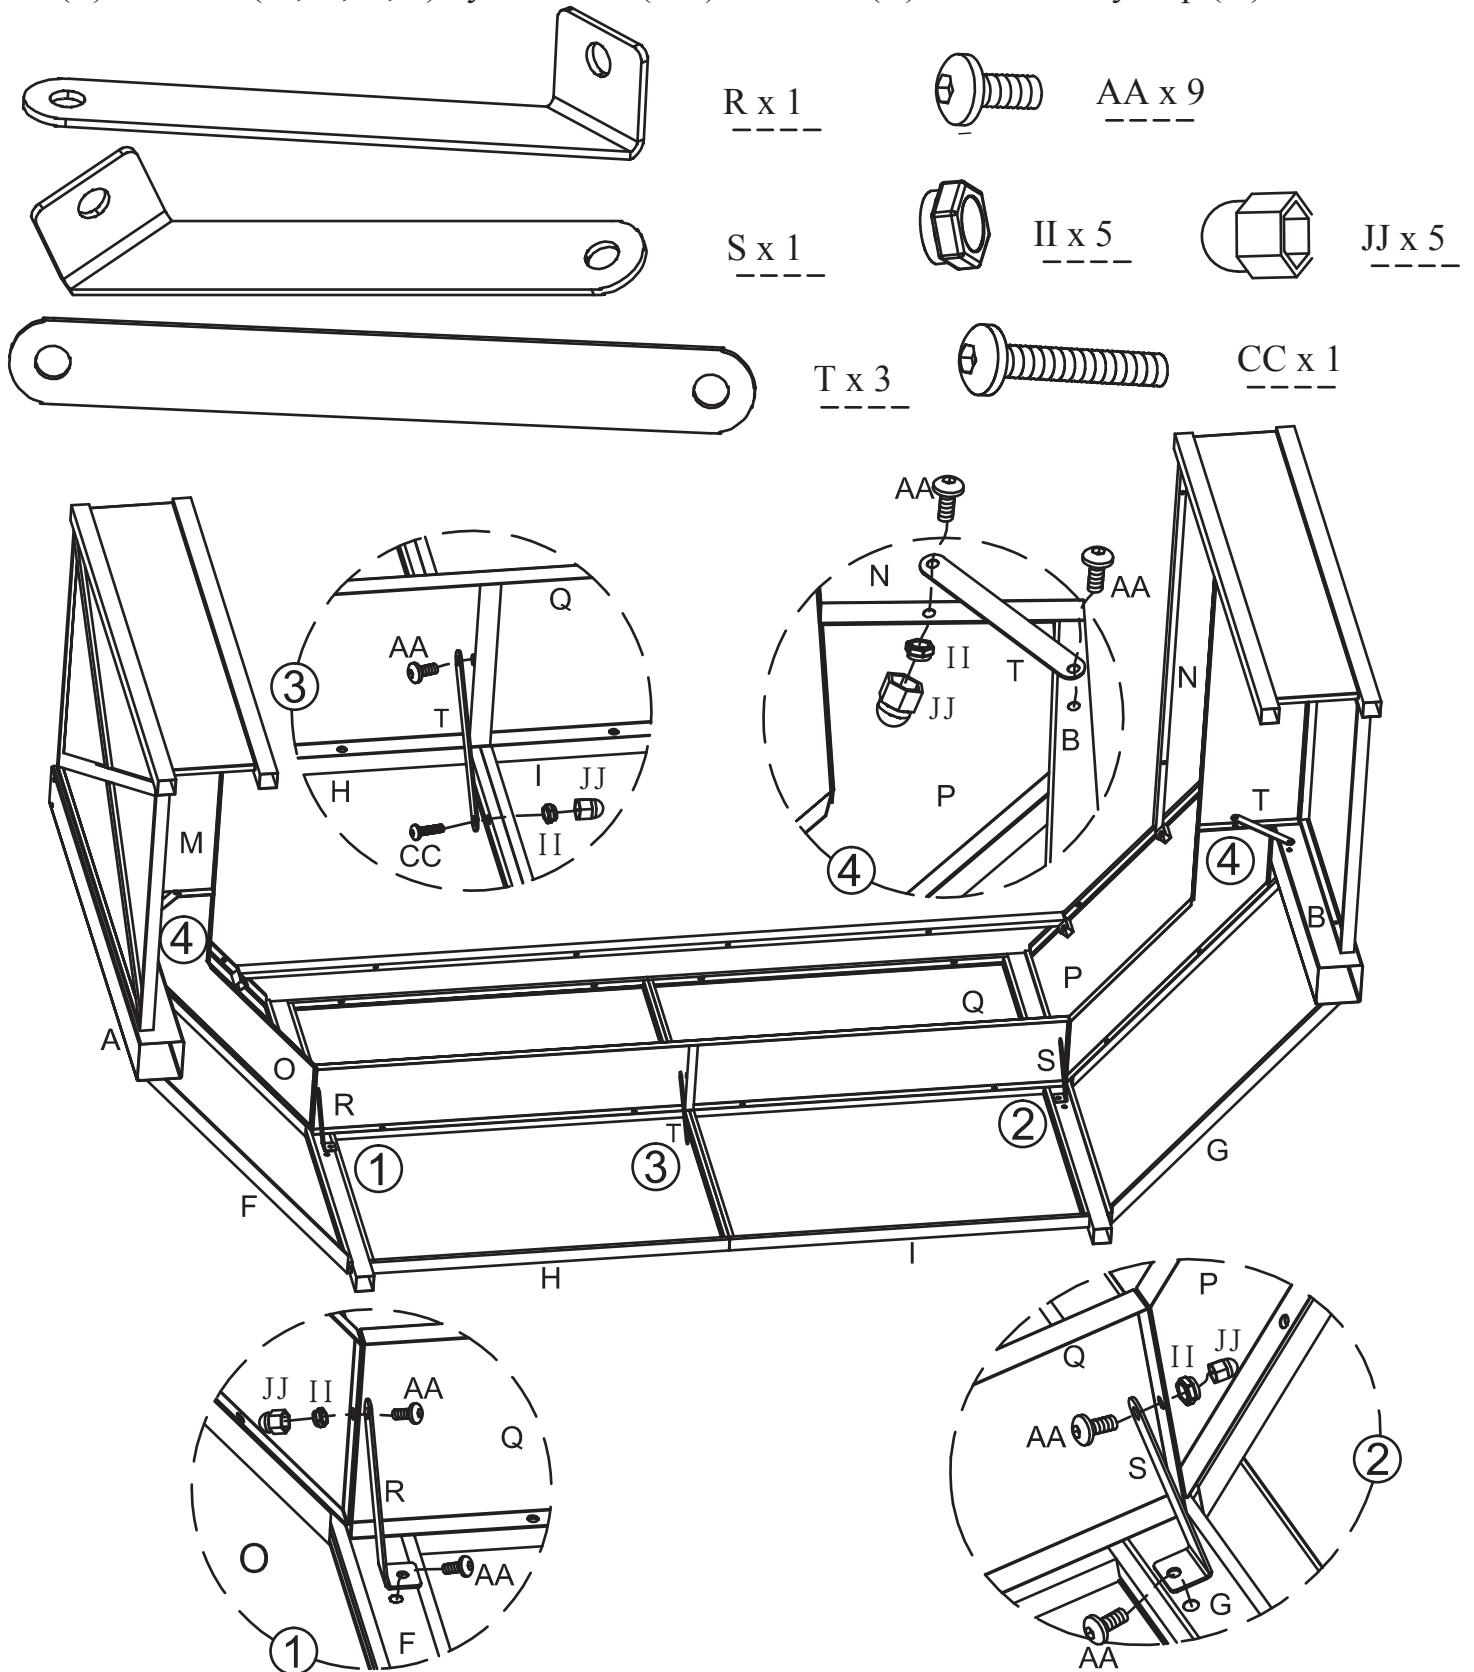


Assembly Instructions

 
14. Place Table Top (U, V, W) on the top of assembled frame then secure Side Panel (E, F, G) and Front Panel (H, I) with Table Top (U, V, W) by M6 x 25 (BB). Then secure Fixed Tube (J, K, L) with Table Top (U, V, W) by M6 x 45 (DD). Please at least two people move the table top.

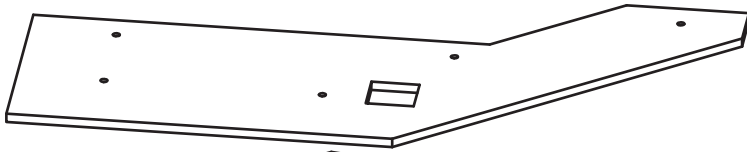


U x 1

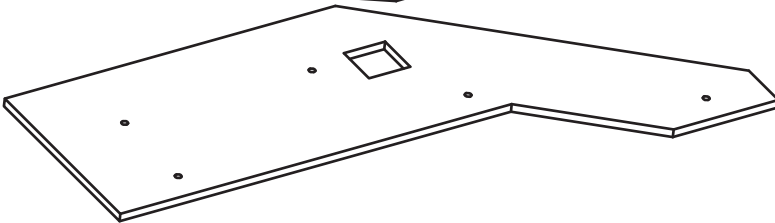 


V x 1

 


W x 1

 

BB x 10

 


DD x 8

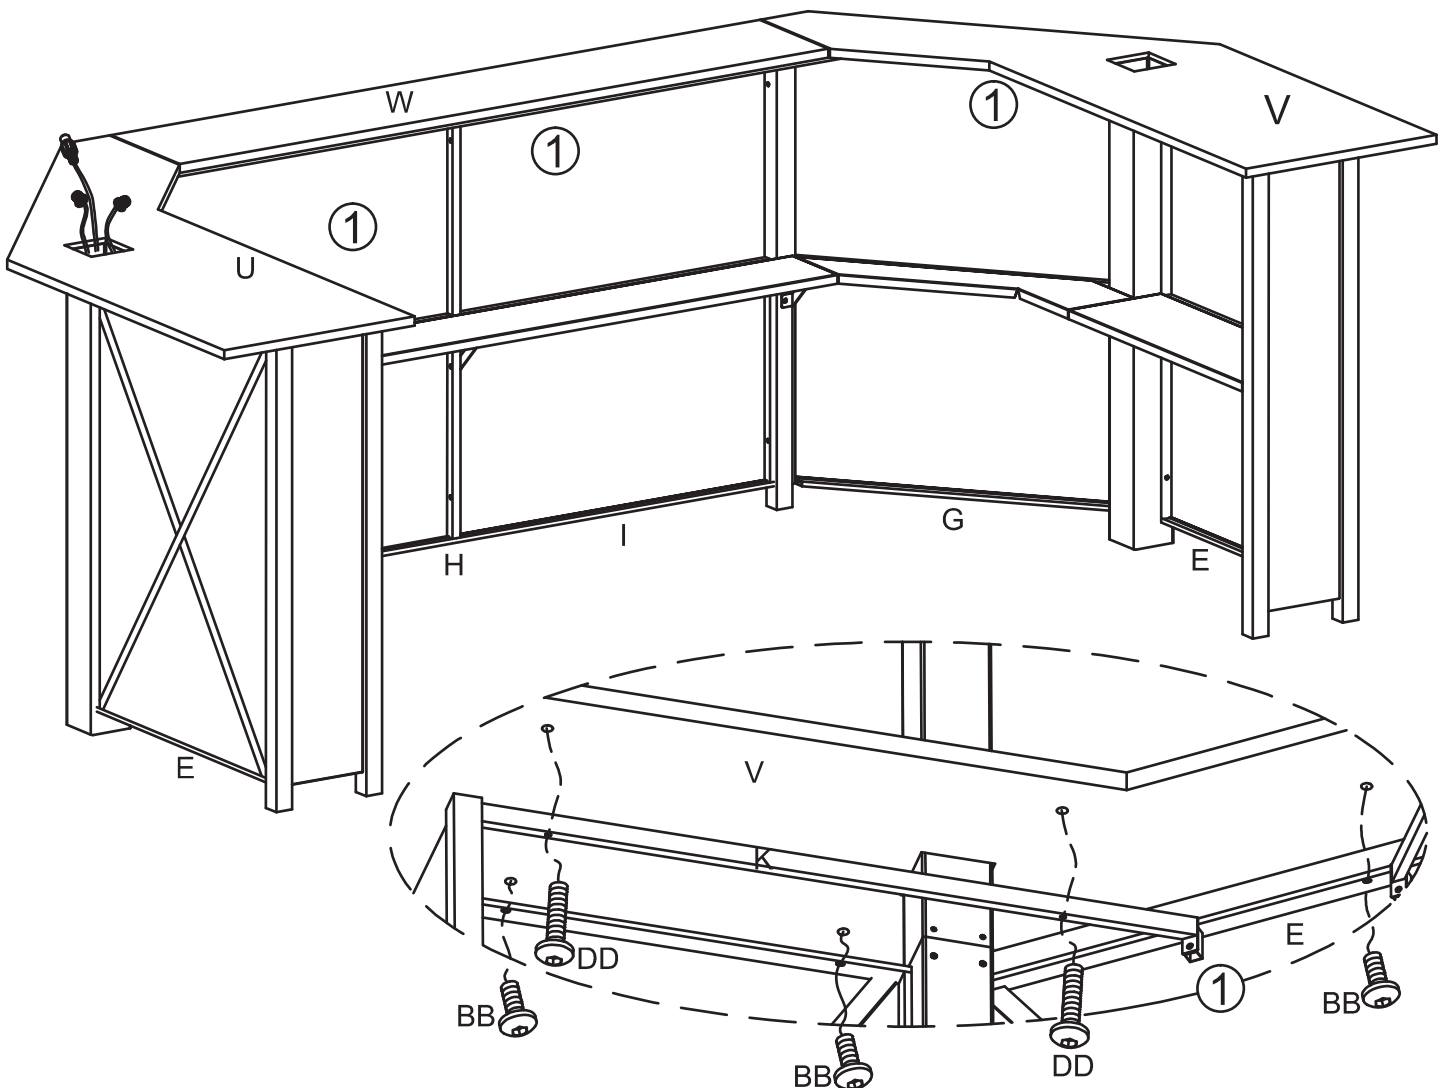 

Assembly Instructions

15-1. Insert Rubber Washer (AU) into Roof Post (X) then connect wires. Insert Roof Post (X) into Post (A) secure by M6 x 15 (AA).

 
15-2. Insert Rubber Washer (AU) into Roof Post (Y) then insert Roof Post (Y) into Post (B) secure by M6 x 15 (AA).

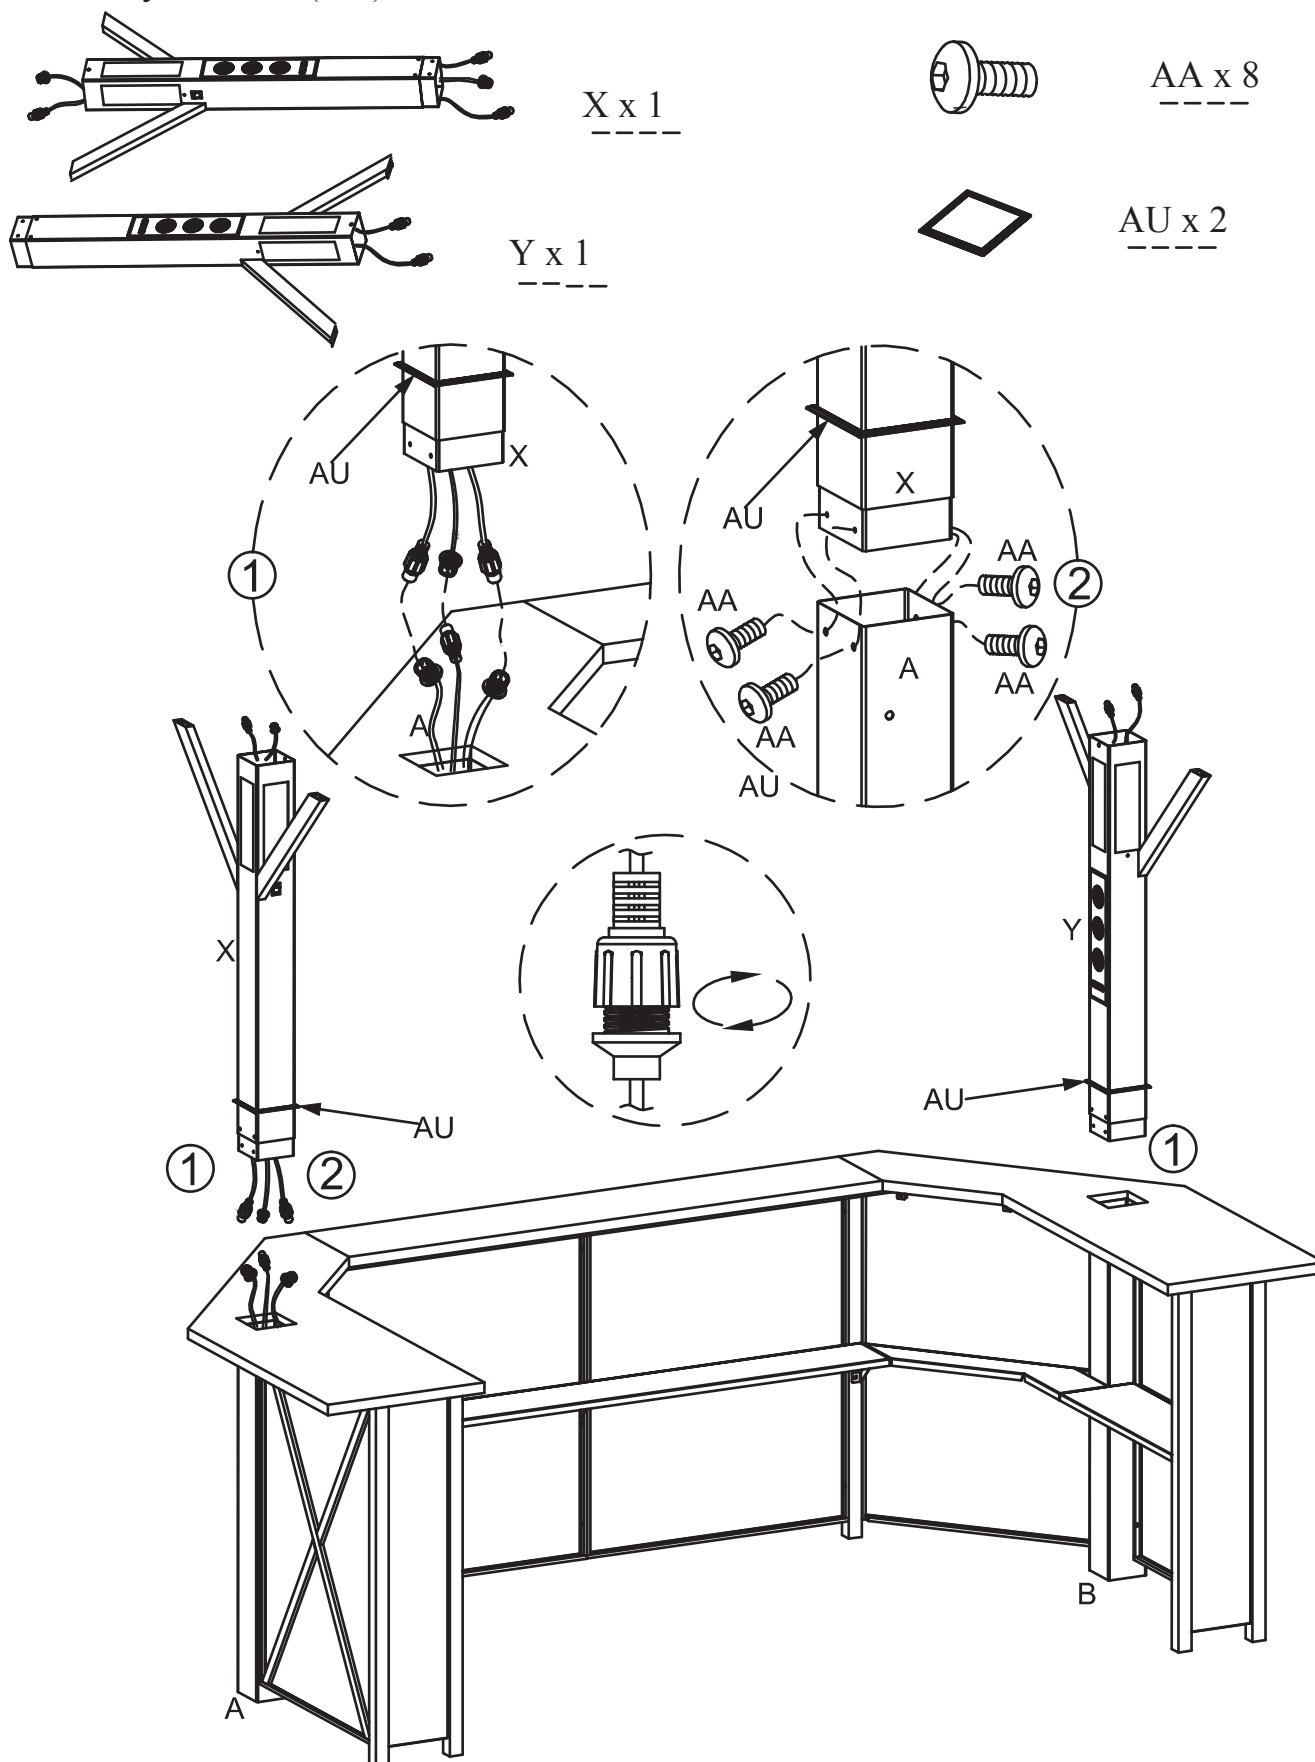

Assembly Instructions

16-1. Secure Roof Side Panel (AD, AE) by M6 X 58 (GG) with Nut (II) then cover by Cap (JJ).





 
16-2. Secure Roof Side Panel (AD, AE) with Roof Post (X, Y) by M6 X 65 (HH).

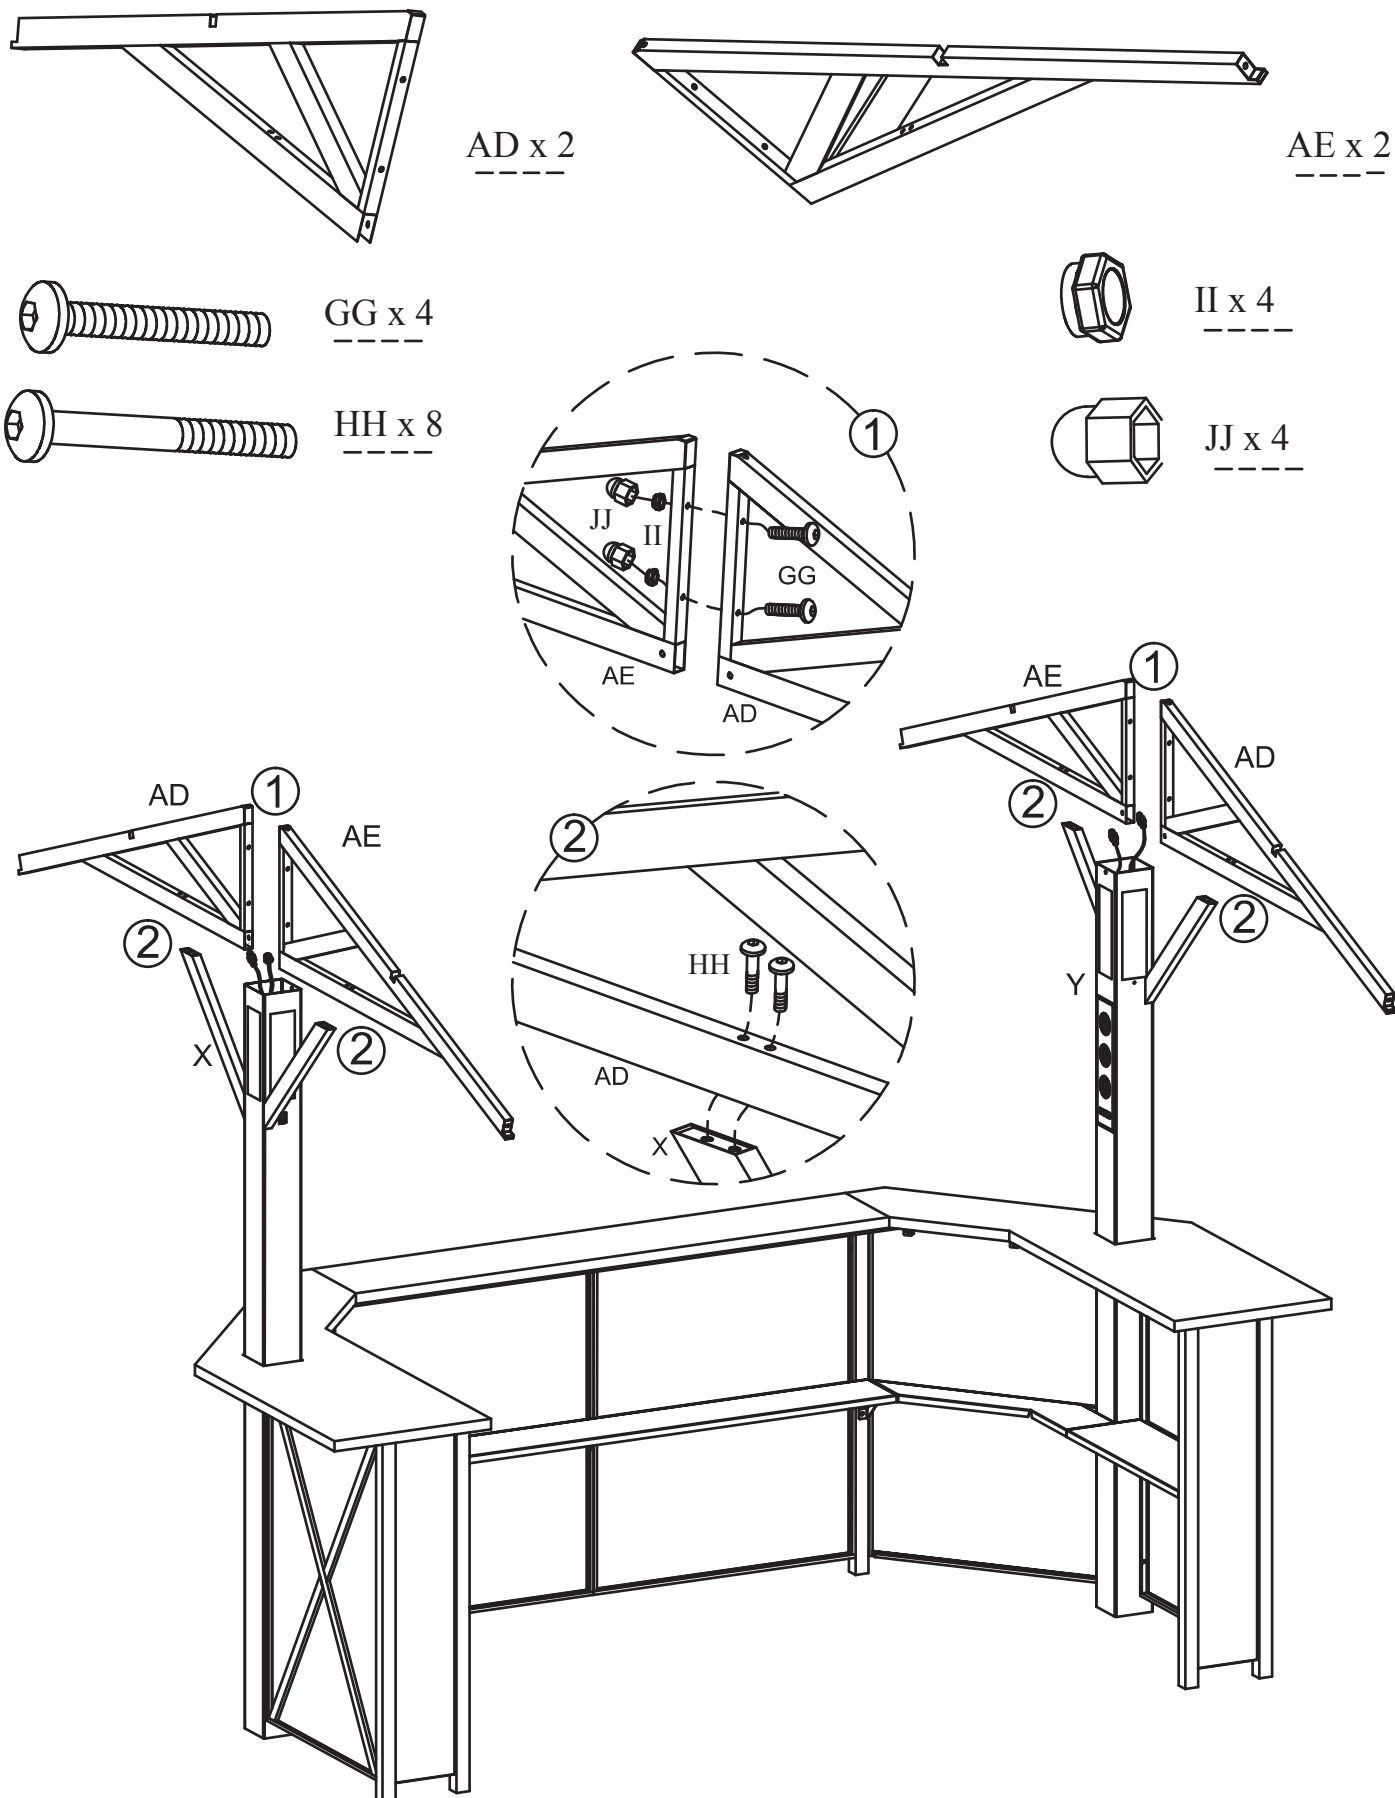

Assembly Instructions


17-1. Connect two sides of Crossbeam (Z, AB) wires with Roof Post (X, Y) wires. Please connect wires softly and slowly.

     17-2. Secure Crossbeam (Z, AB) and Roof Side Panel (AD, AE) with Roof Post (X, Y) by M6 X 15 (AA).

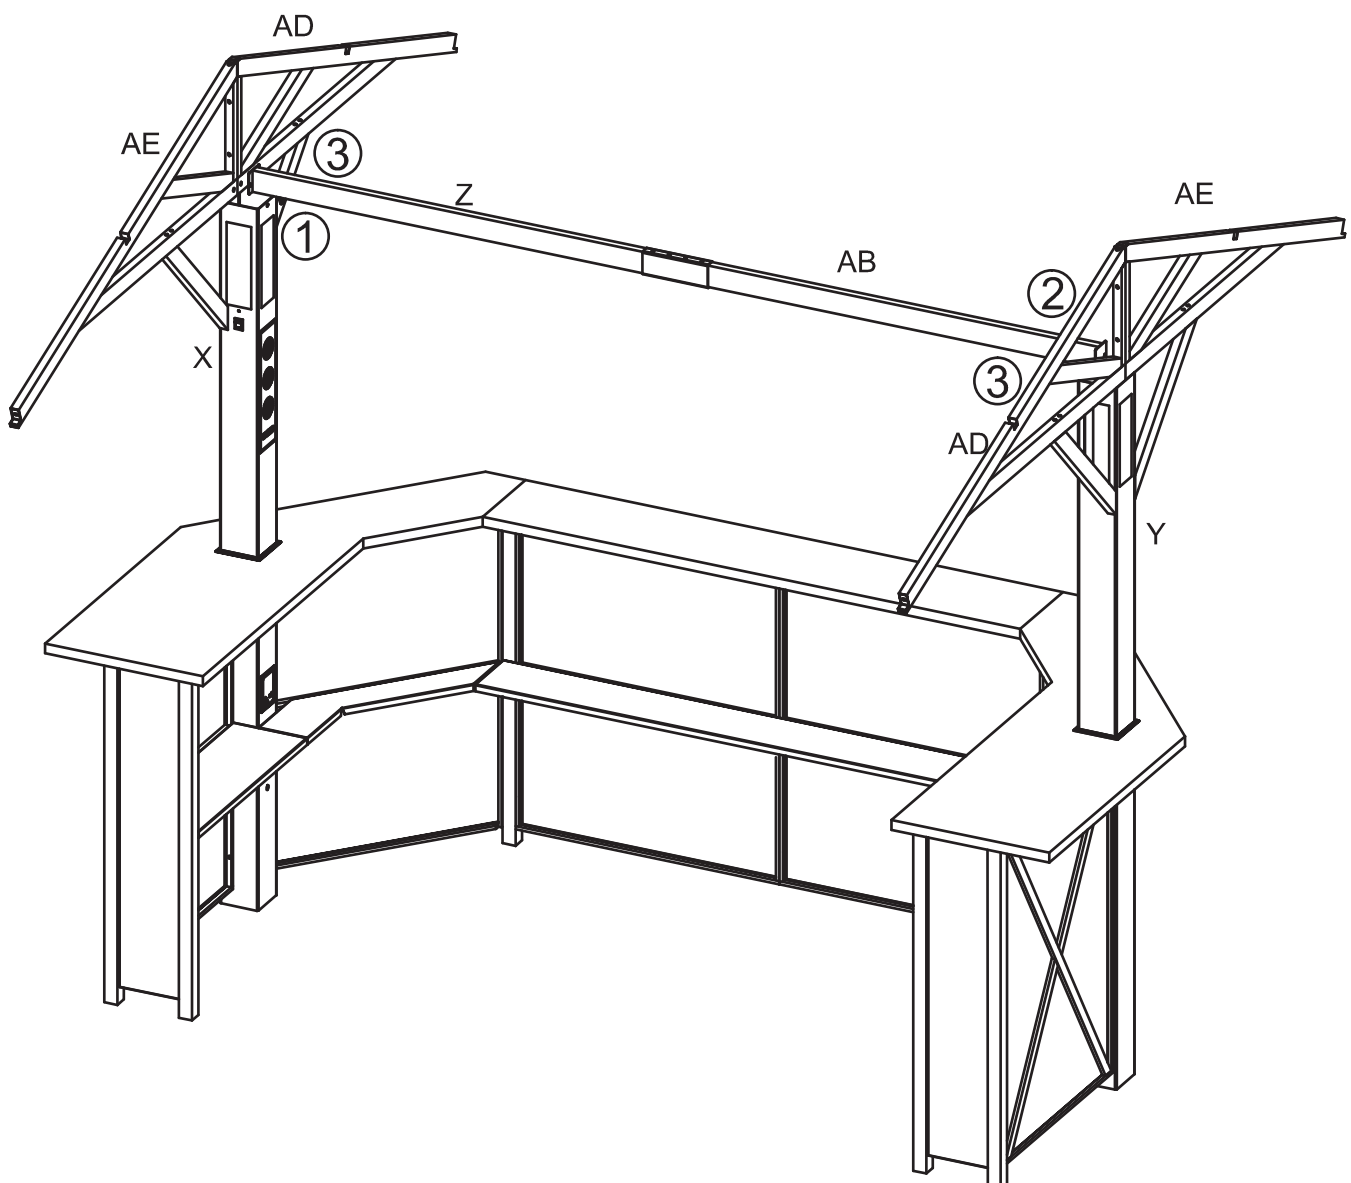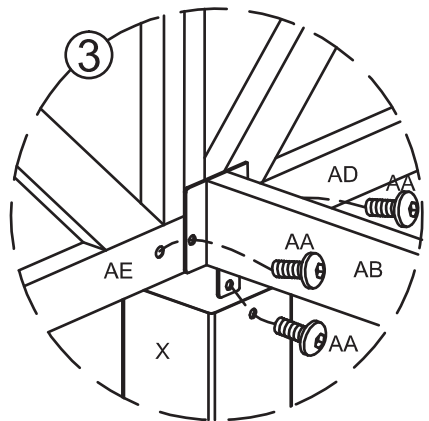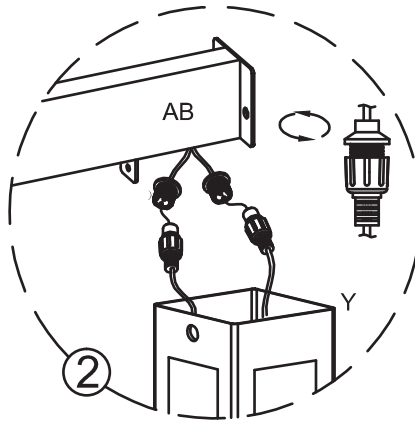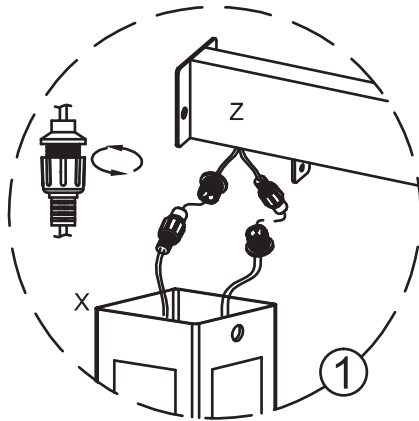


Assembly Instructions

 18. Connect AC Adapter on the bottom of Post (A) and plug into outlet. Then turn on the switch for testing (If it does not work please check all the wires again). Then disconnect AC Adapter (AV) for next step.

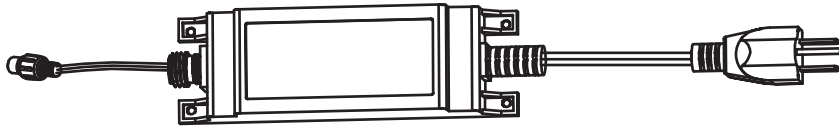


AV x 1

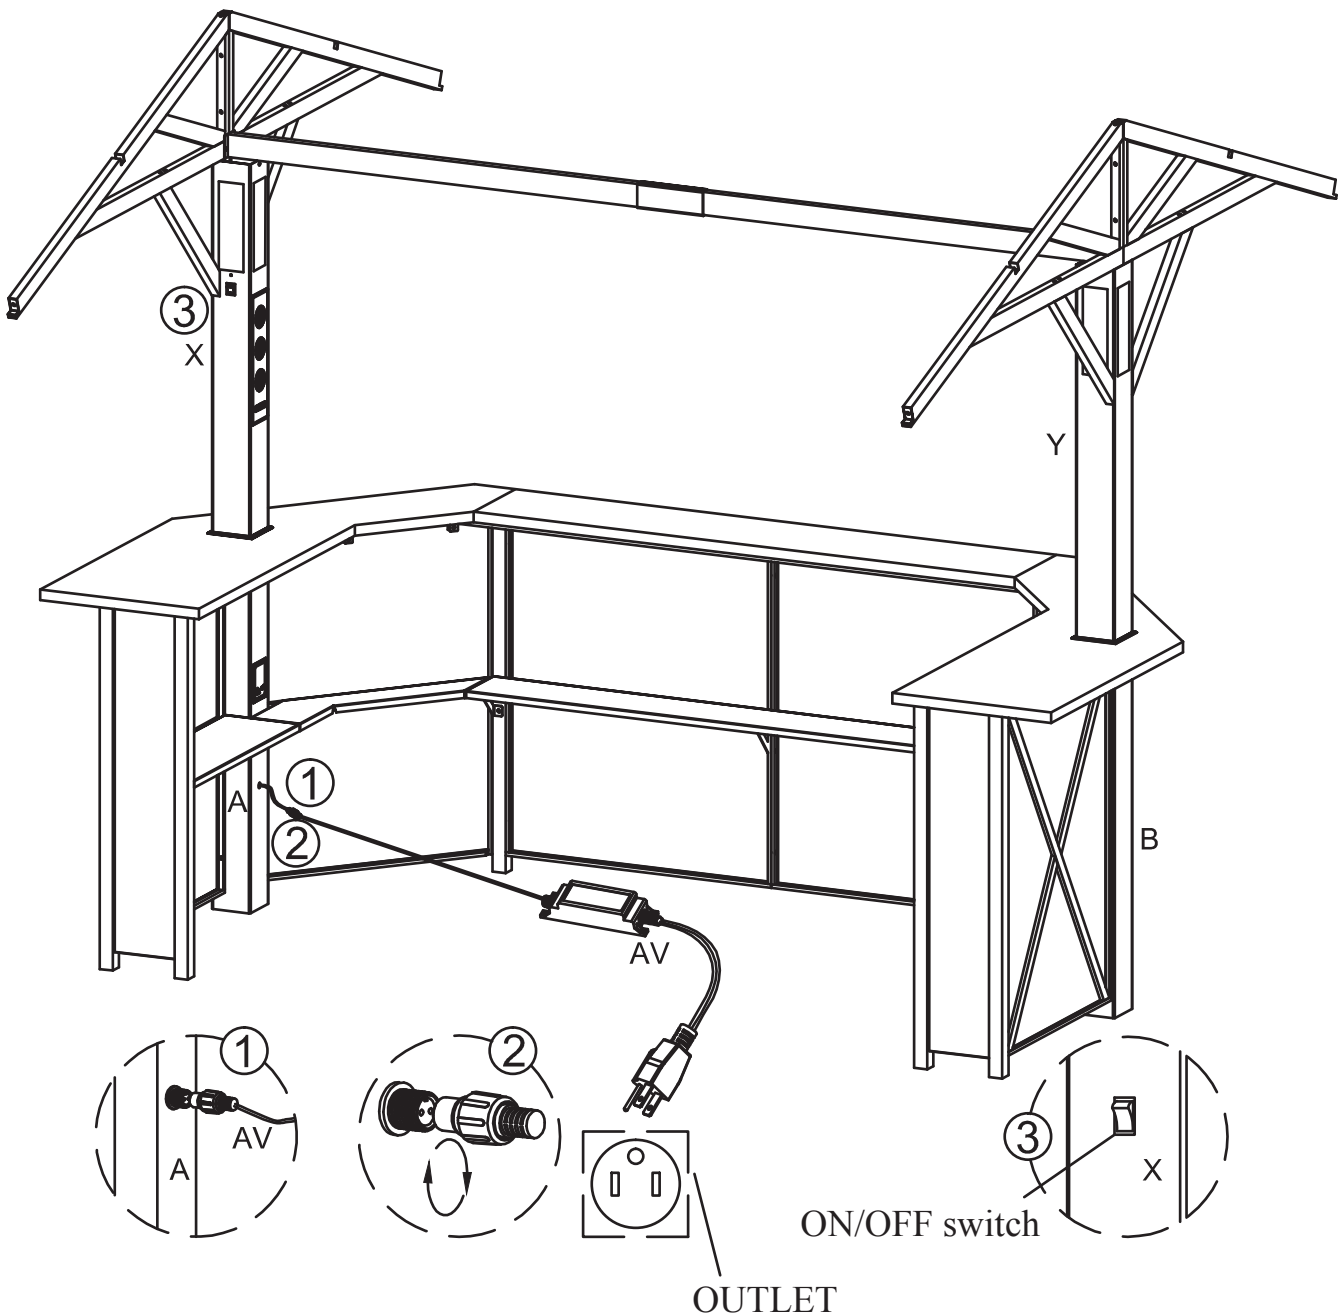 

Assembly Instructions


19-1. Secure two sides of Roof Support Bar (AF, AG) with Roof Side Panel (AD, AE) by M6 x 35 (CC). Fully tighten once all bolts in position.

 19-2. Secure two sides of Roof Support bar (AH, AI) with Roof Side Panel (AD, AE) by M6 x 35 (CC). Fully tighten once all bolts in position.

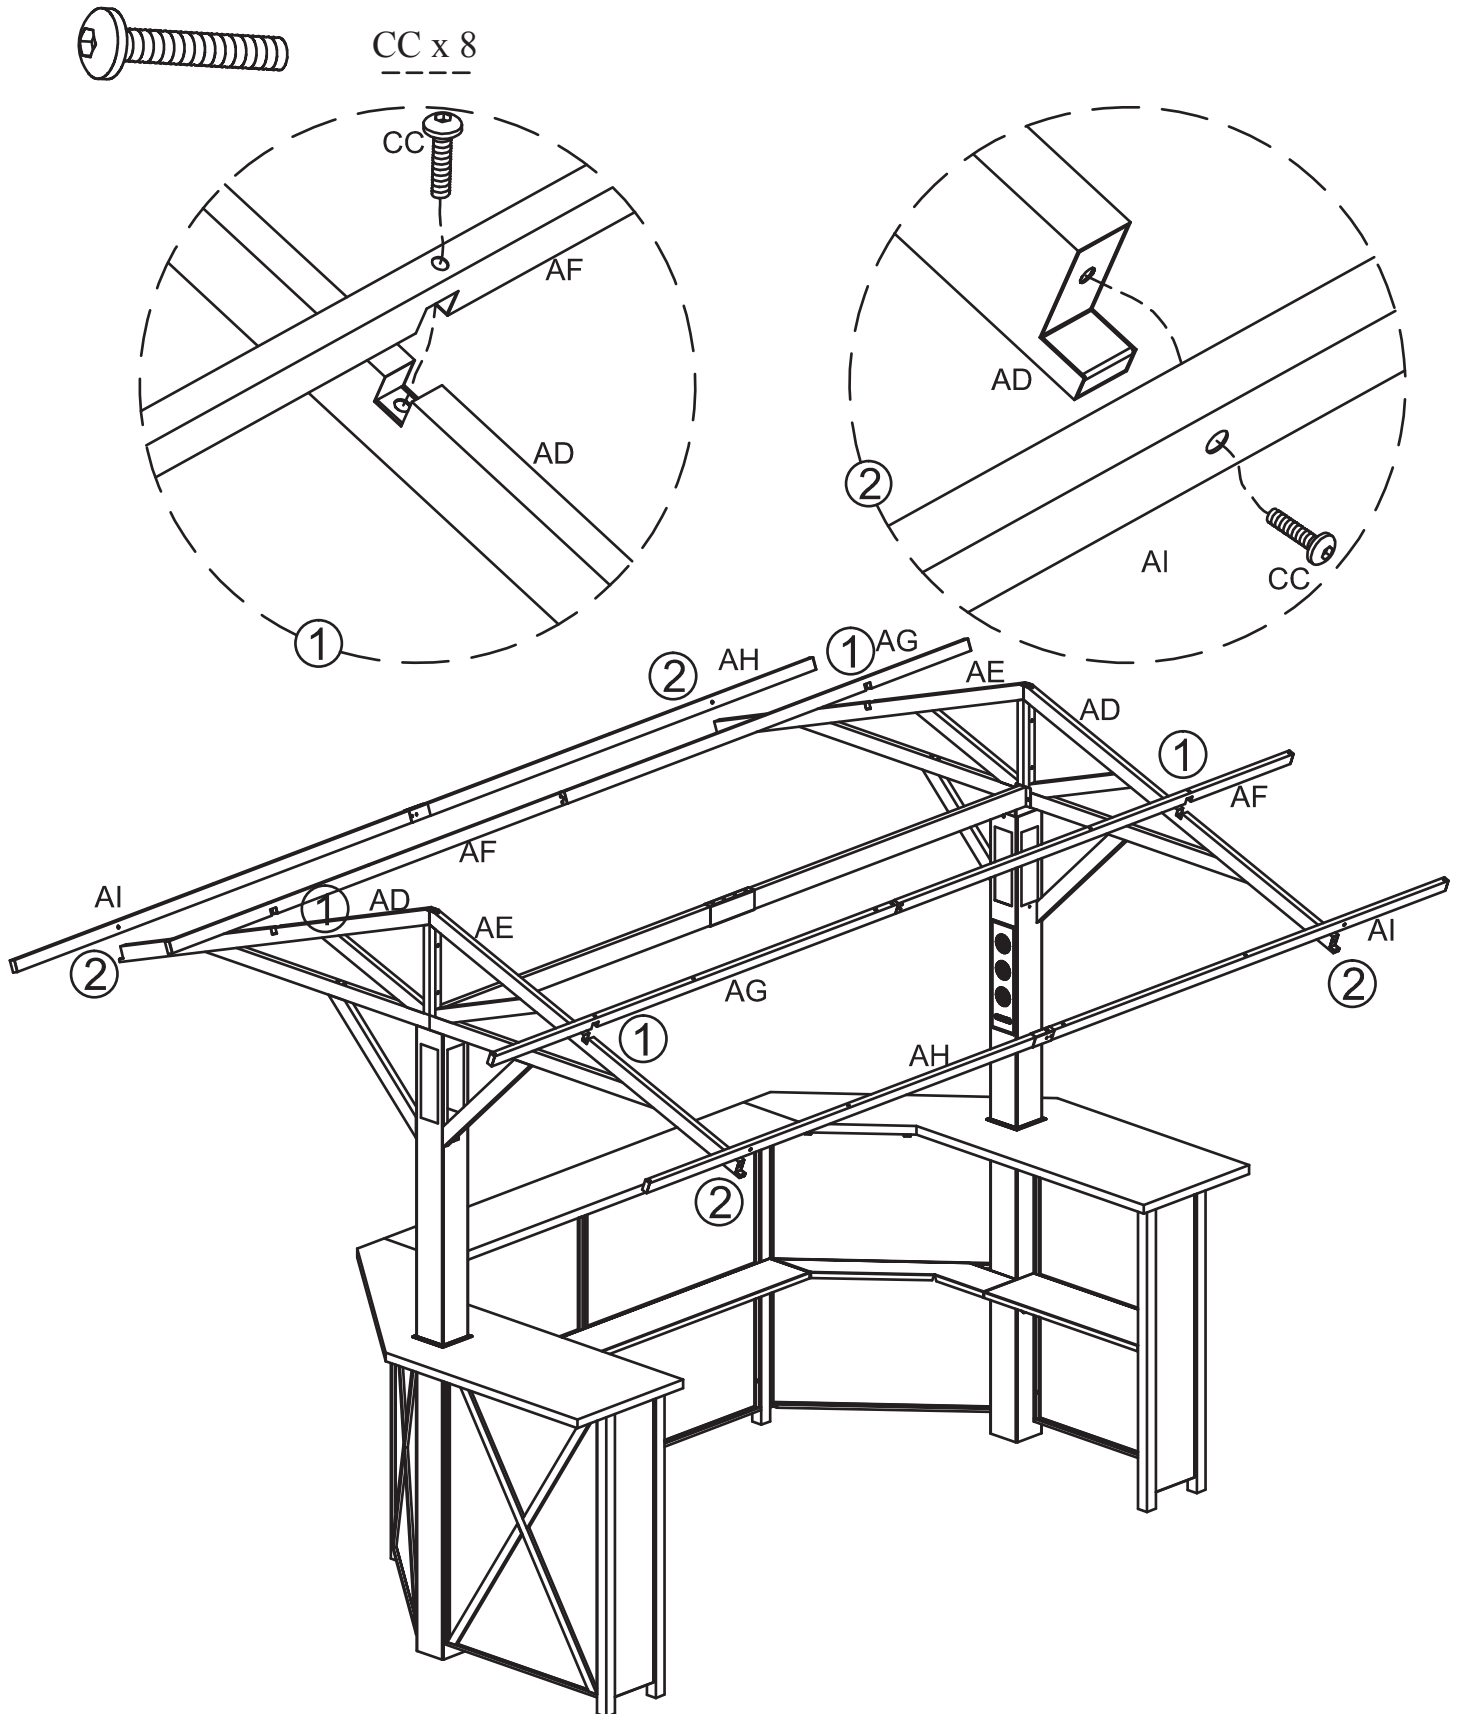


Assembly Instructions

 20. Secure Upper Crossbeam Tube (AJ, AK) with Roof Side Panel (AD, AE) by M6 X 15 (AA). Fully tighten once all bolts in position.



AA x 4

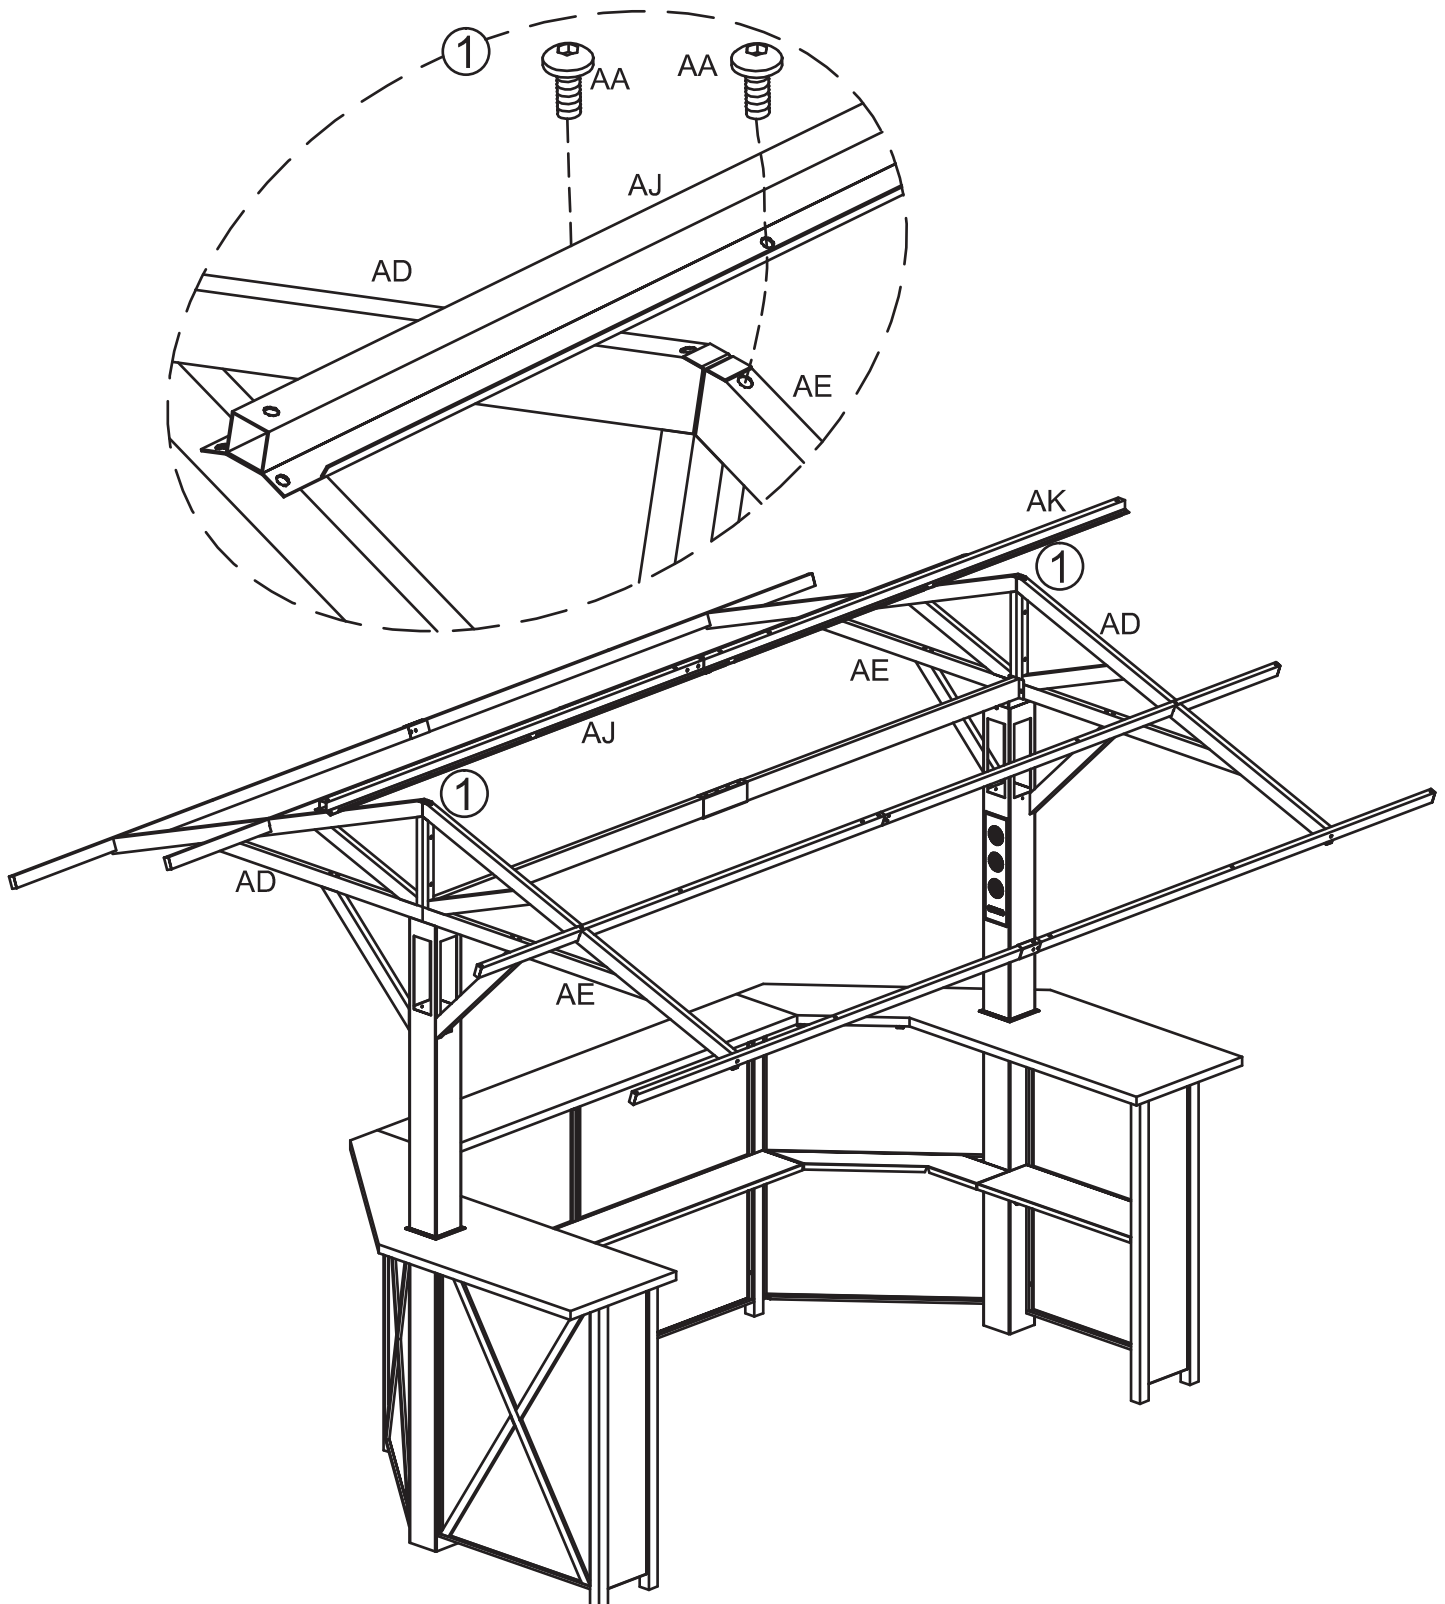 

Assembly Instructions

 
21. Place Upper Crossbeam Cover (AL, AM) on the top of Upper Crossbeam Tube (AJ, AK) then secure by M6 X 15 (AA).





AL x 1



AM x 1




AA x 4

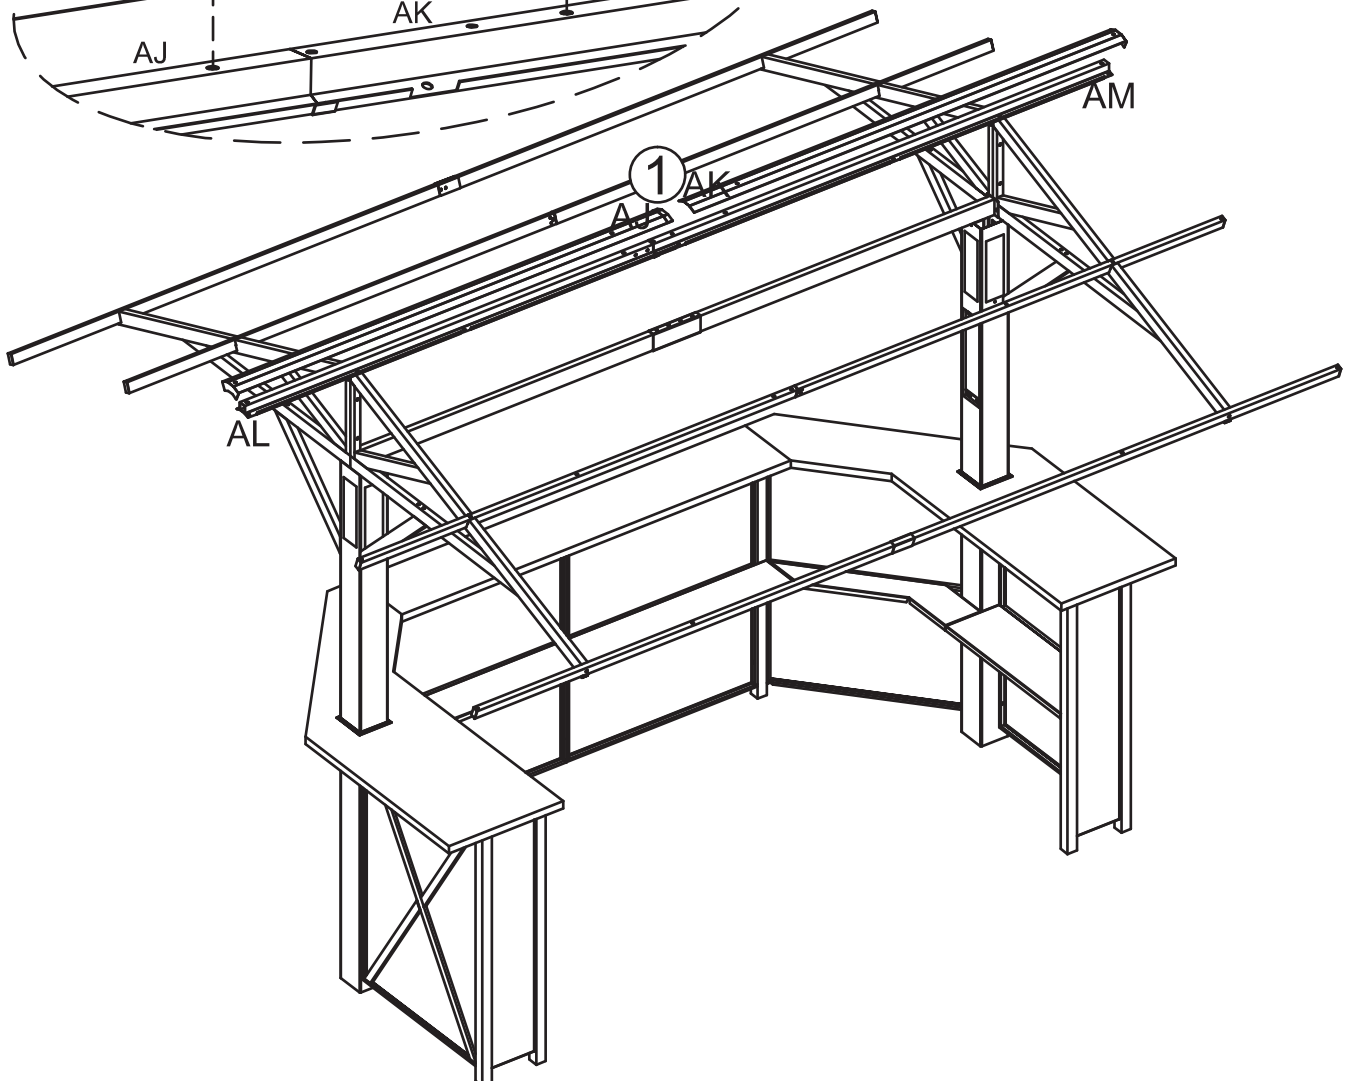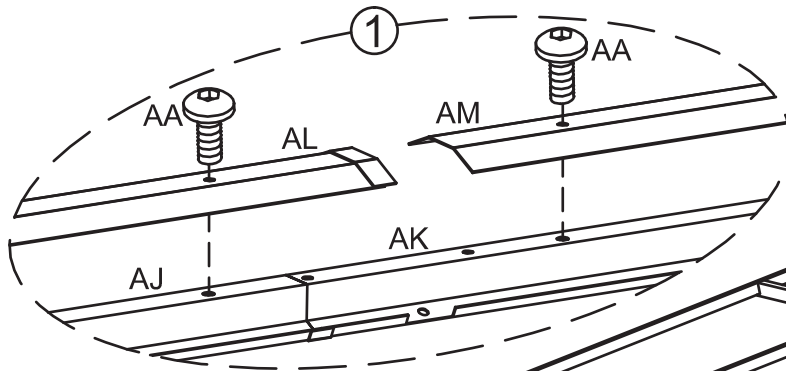  

Assembly Instructions

 22. Secure Upper Crossbeam Tube (AJ, AK) with Roof Tube (AN, AO, AP) by M6 X 15 (AA). Then secure Roof Support Bar (AF, AG, AH, AI) with Roof Tube (AN, AO, AP) by M6 X 55 (FF).


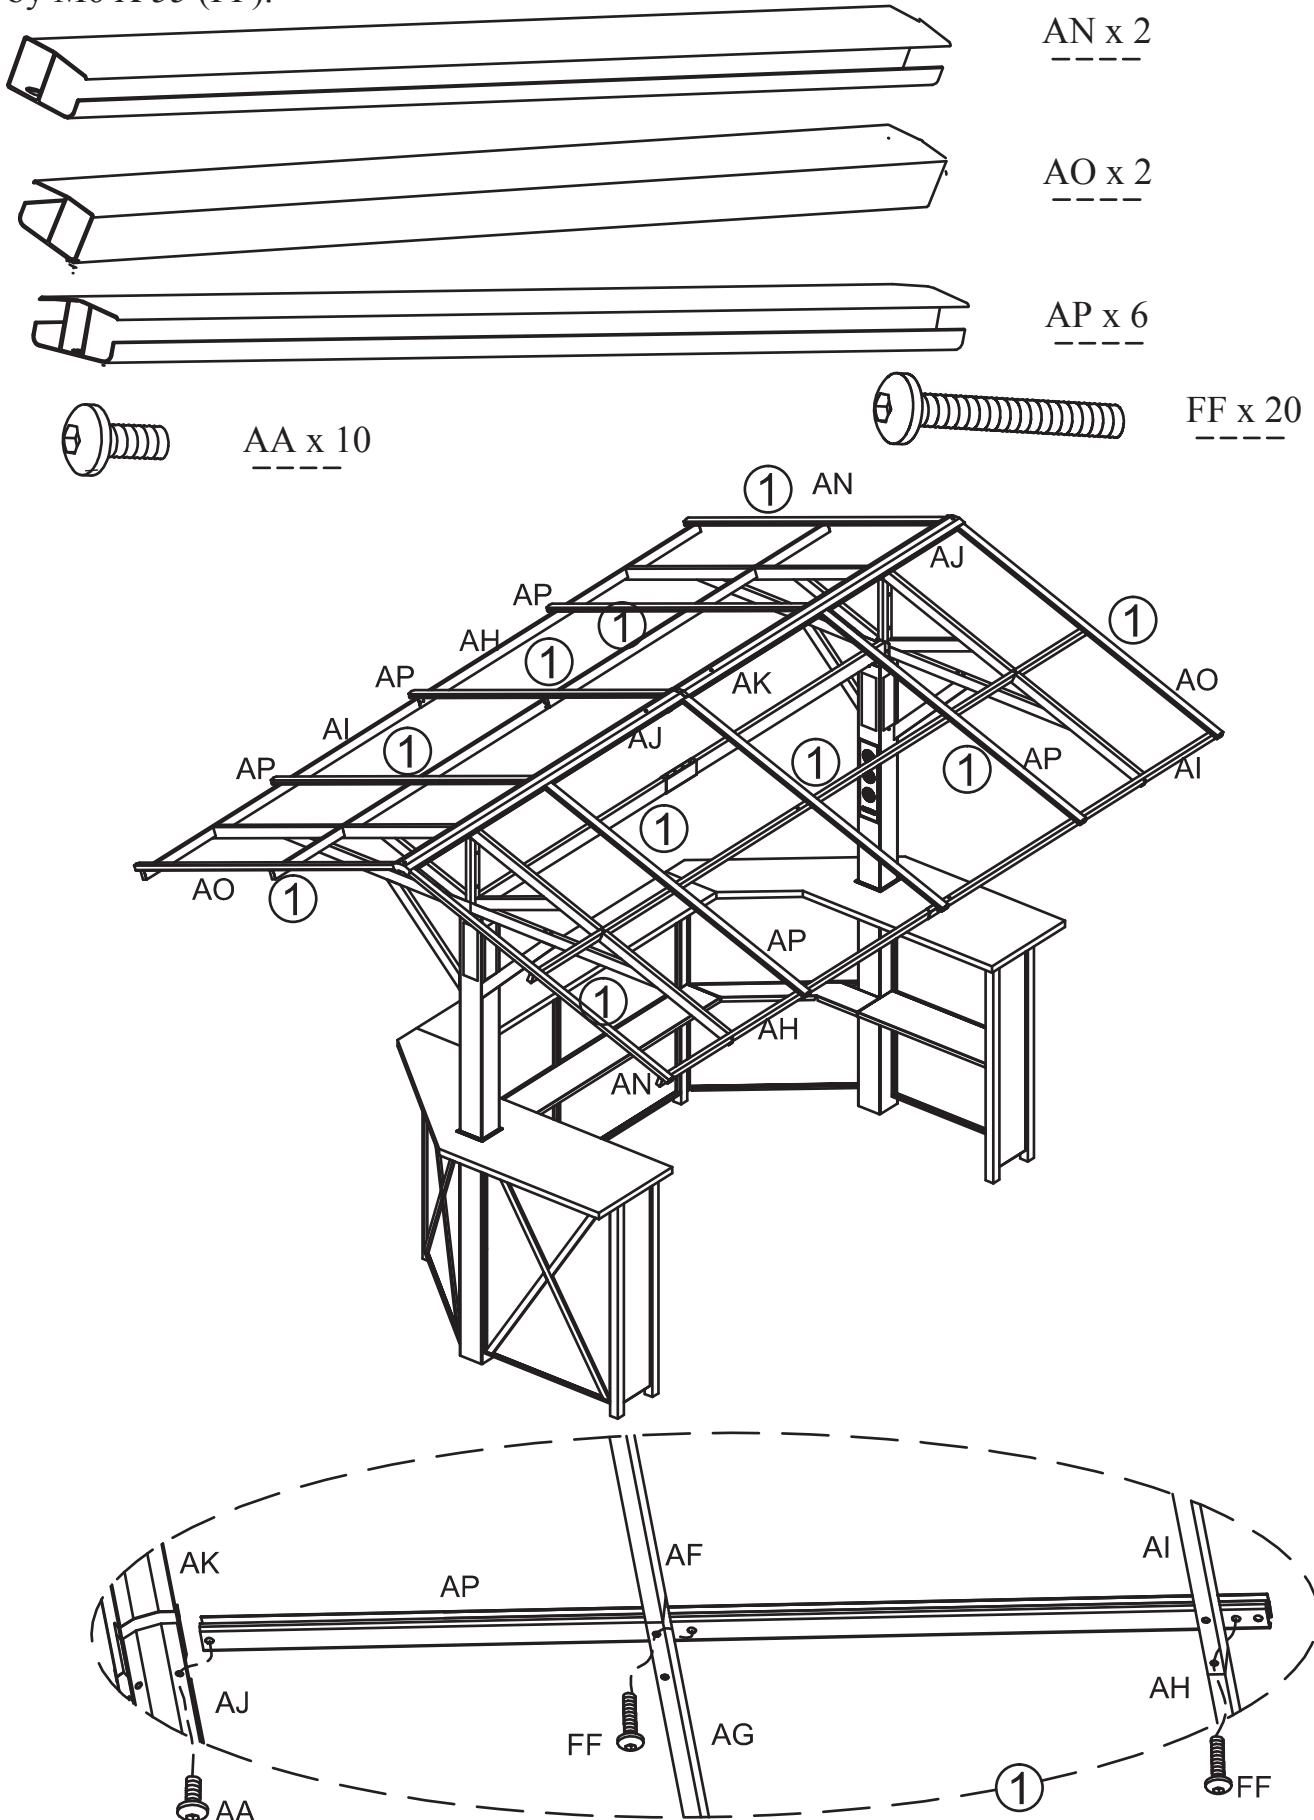


Assembly Instructions

23-1. Peel of the protection sheet from Roof Panel (AQ). Insert Roof Panel (AQ) into in between Roof Tube (AN & AP) then secure Centre Connector (AT) with Roof Tube (AP) by M6 x 15 (AA).



23-2. Insert Roof Panel (AQ) in between Roof Tube (AP) then secure Corner Connector (AS) with Roof Tube (AN) by M6 x 15 (AA).

  23-3. Secure Corner Connector (AR, AS) with Roof Tube (AO, AN) by M6 x 15 (AA). Please hold the roof panel until roof panel secure by connector to avoid slide off.

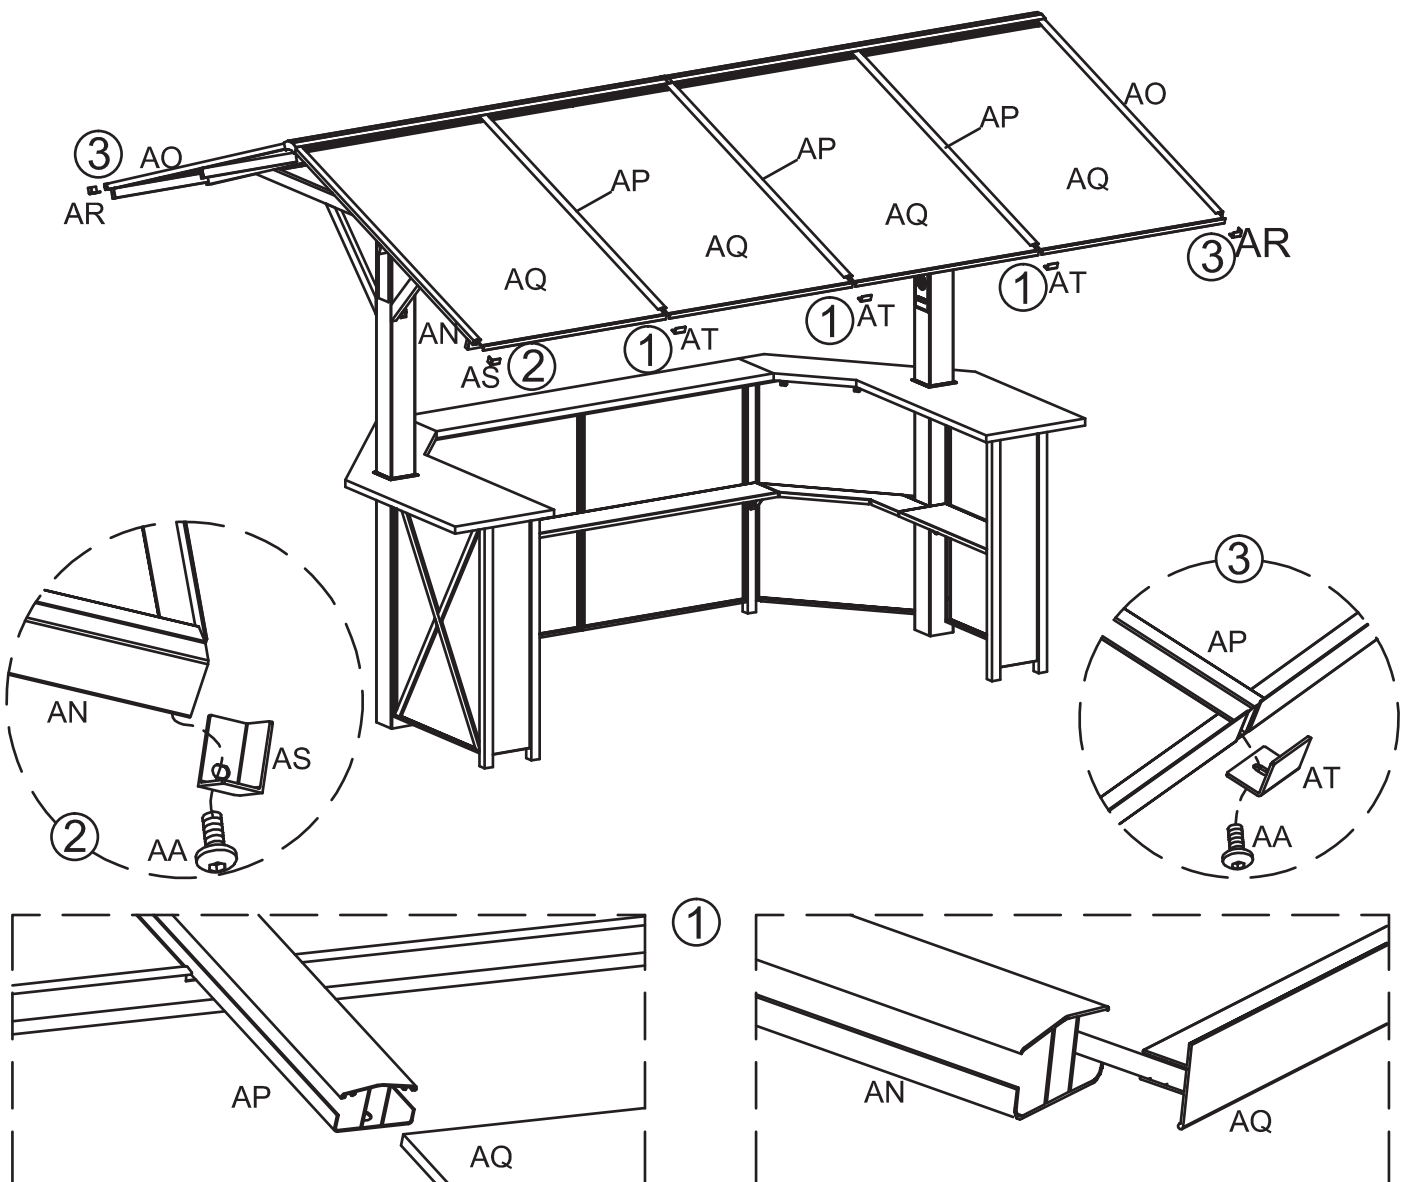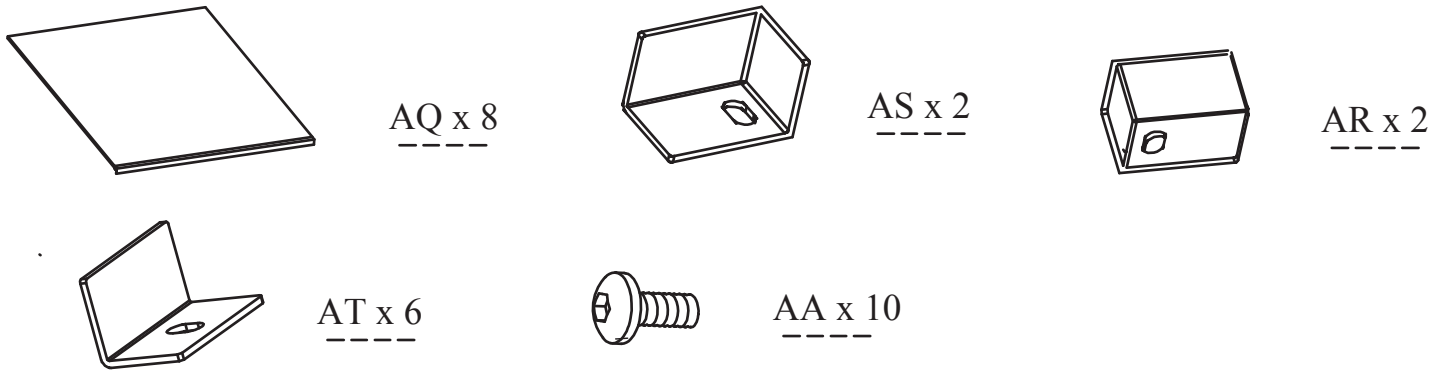

Assembly Instructions

  
24. Connect AC Adapter on the bottom of Post (A) and plug into outlet. Then turn on the switch.

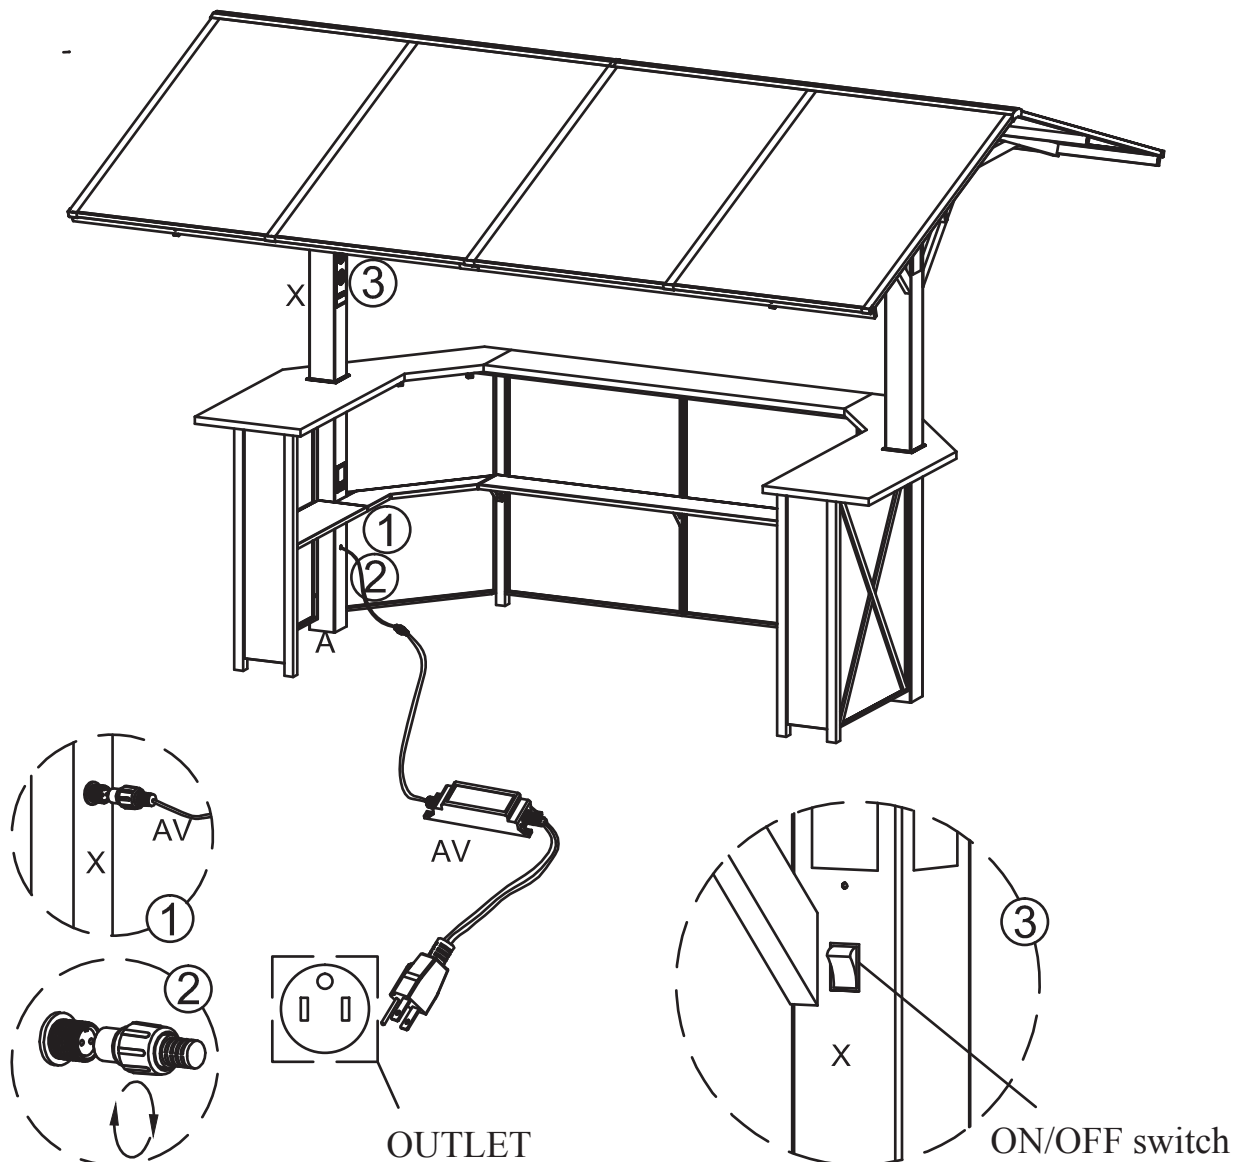
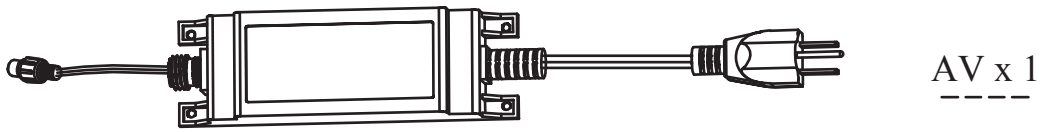


Assembly Instructions

25. Turn on the audio controller switch and there are 3 ways to play the music:

 
1. AUX (see figure 1)
2. MicroSD (see figure 2)
3. Bluetooth (see figure 3)

 AZ x 1

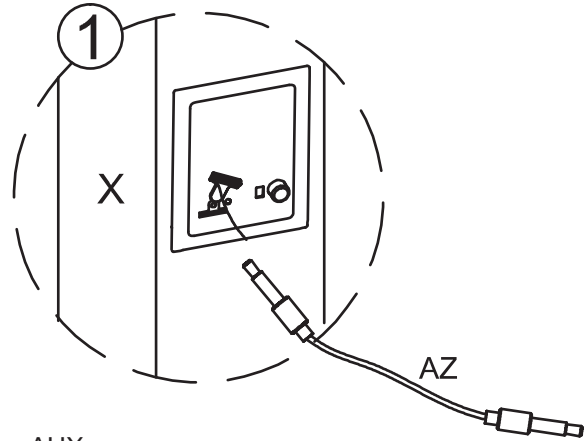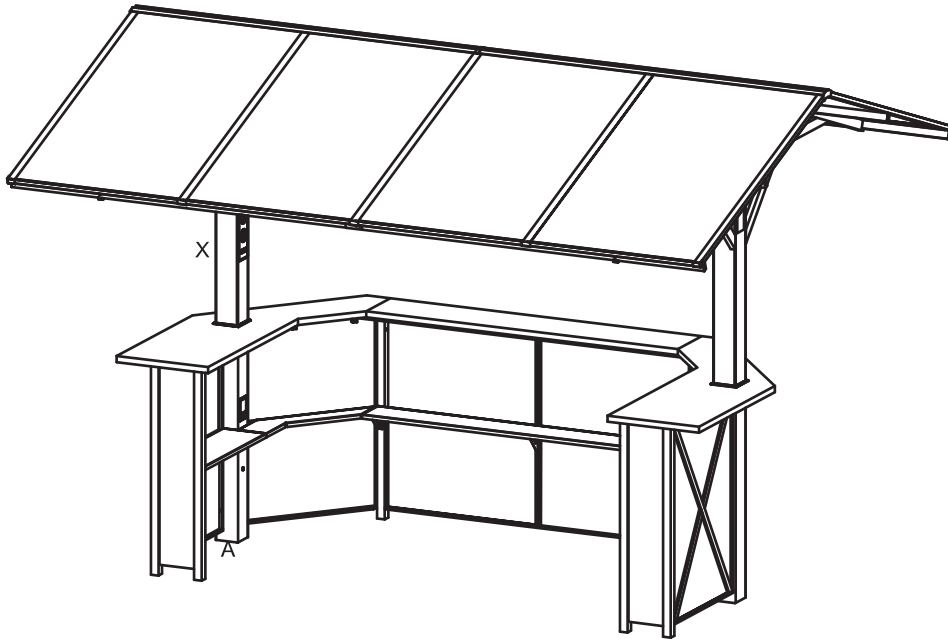  


AUX:

 1. Turn on unit by pushing the black ON/OFF Button. The Red LED light will blink (until you connect your device).
2. Use connect wire (AC) to connect your output device, the Red LED light will turn solid Blue light.
3. When your play music the Blue LED light will keep solid.

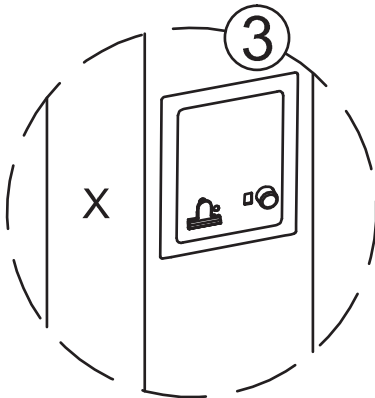

Bluetooth:

 1. Turn on unit by pushing the black ON/OFF Button. The Red LED light will blink (until you connect your wireless device).
2. On your device, turn Bluetooth on. Set your device to search "GAZEBO", select "GAZEBO" to pair your device, the Red LED light will turn solid once you are connected.
3. When you play music the Red LED light will continue to blink.

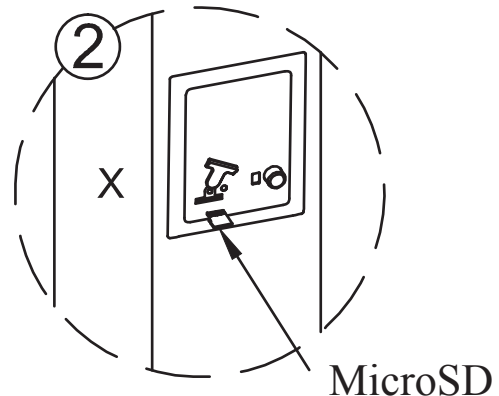


MicroSD:

1. Turn on unit by pushing the black ON/OFF/ Button. The Red LED light will blink (until you insert your MicroSD)
2. Insert MicroSD, the Red LED light will turn solid Blue light.
3. When you play music the Blue LED light will continue to blink.

Assembly Instructions

 
26. Secure Chair Leg (AX) with Seat (AW) underneath by M6 X 35 (CC) then secure Support Bar (AY) with Chair Leg (AX) by M6 X 15 (AA).

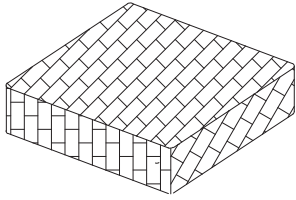


AW x 4



 
AY x 8

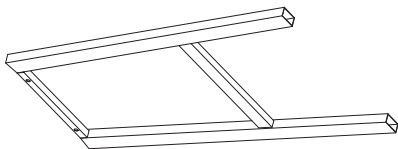




AX x 8

 

AA x 32

 

CC x 16

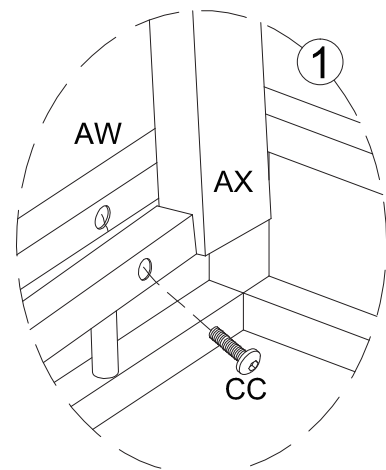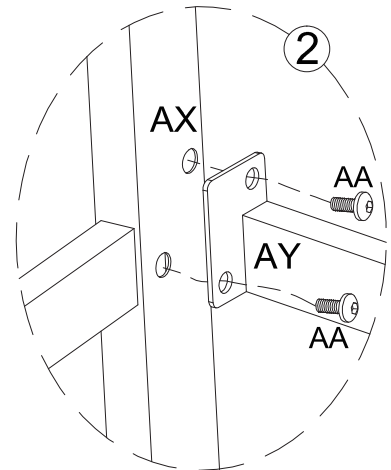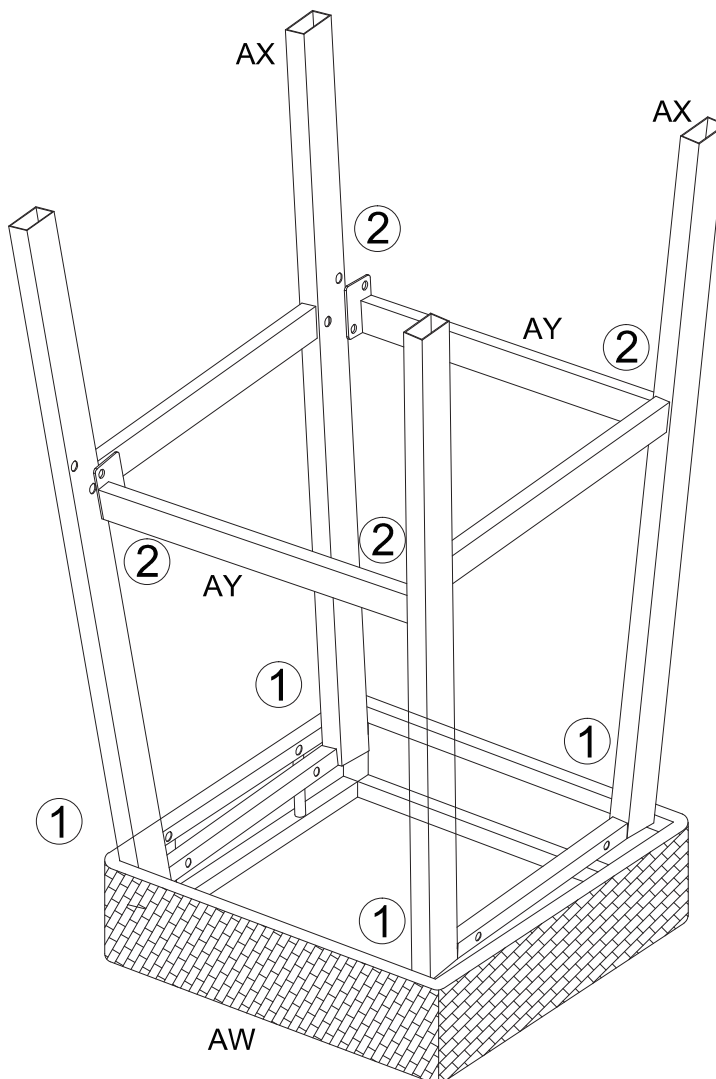   

Assembly Instructions

Instruction of Replace Speakers

 
1. Take off speaker cover then release bolts.

Take out speaker slowly then disconnect wires.

Warning: Please make sure the power is disconnect

2. Connect all wires with new speaker, secure speaker on the post. Place back speaker cover.

Warning: This speaker is special design for this product only. Do not replace any other product or modified.

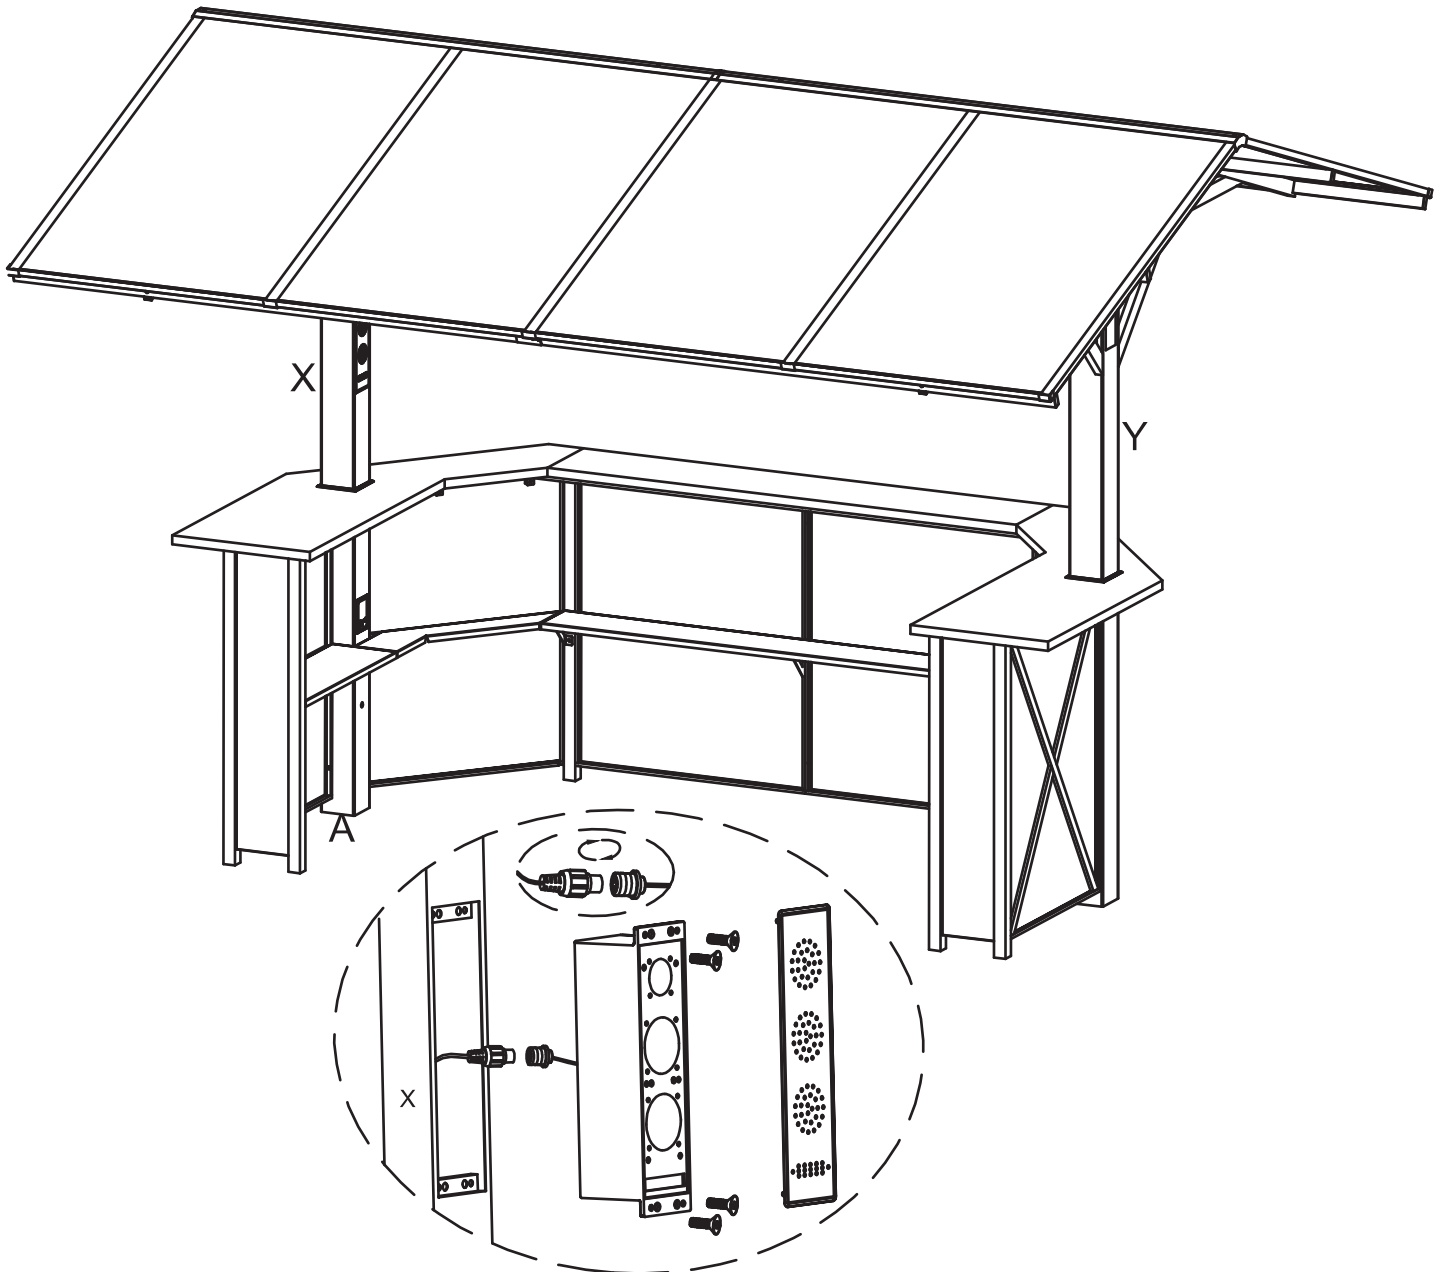

Assembly Instructions

Instruction of Replace Audio Controller

 
1. Take off audio controller cover then release bolts.

Take out audio controller box slowly then disconnect wires.

Warning: Please make sure the power is disconnect



2. Connect all wires with new audio controller, secure audio controller box on the post.
Place back audio controller cover.

Warning: This audio controller is special design for this product only. Do not replace any other product or modified.

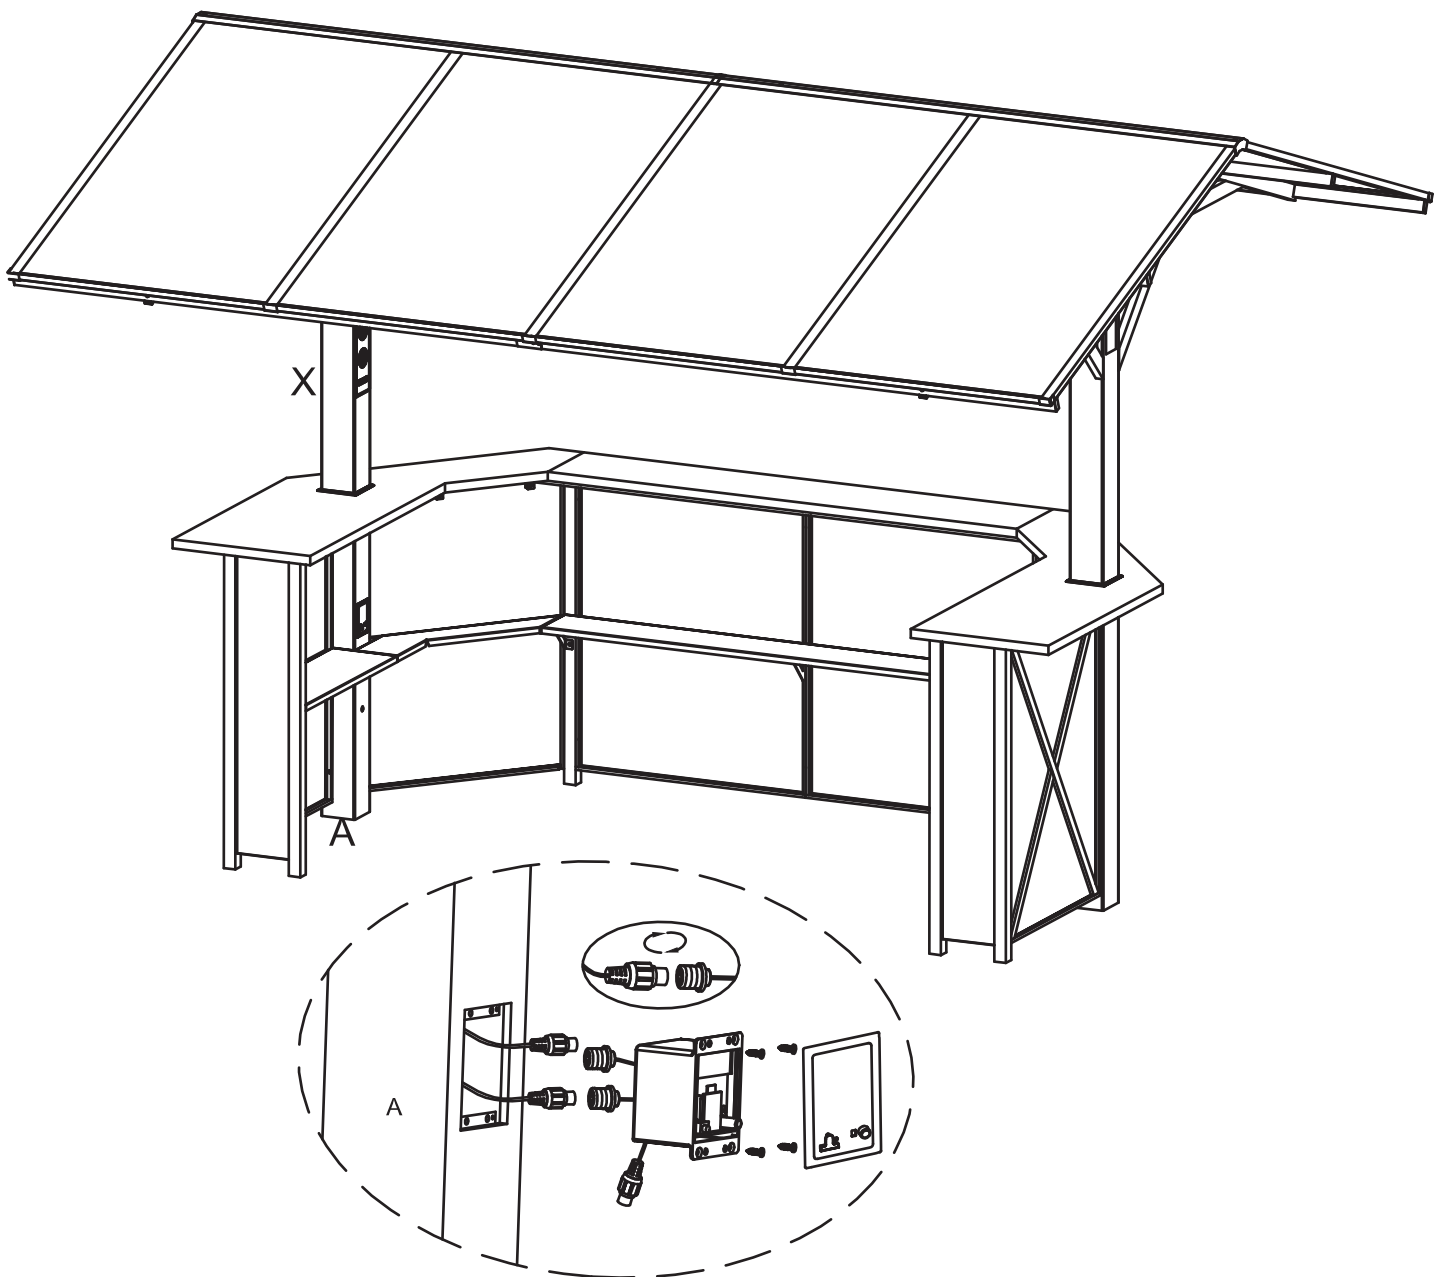

Instruction of LED

 
 
1. Disconnect crossbeam wires and roof post wires.
2. Release LED lights in counterclockwise.

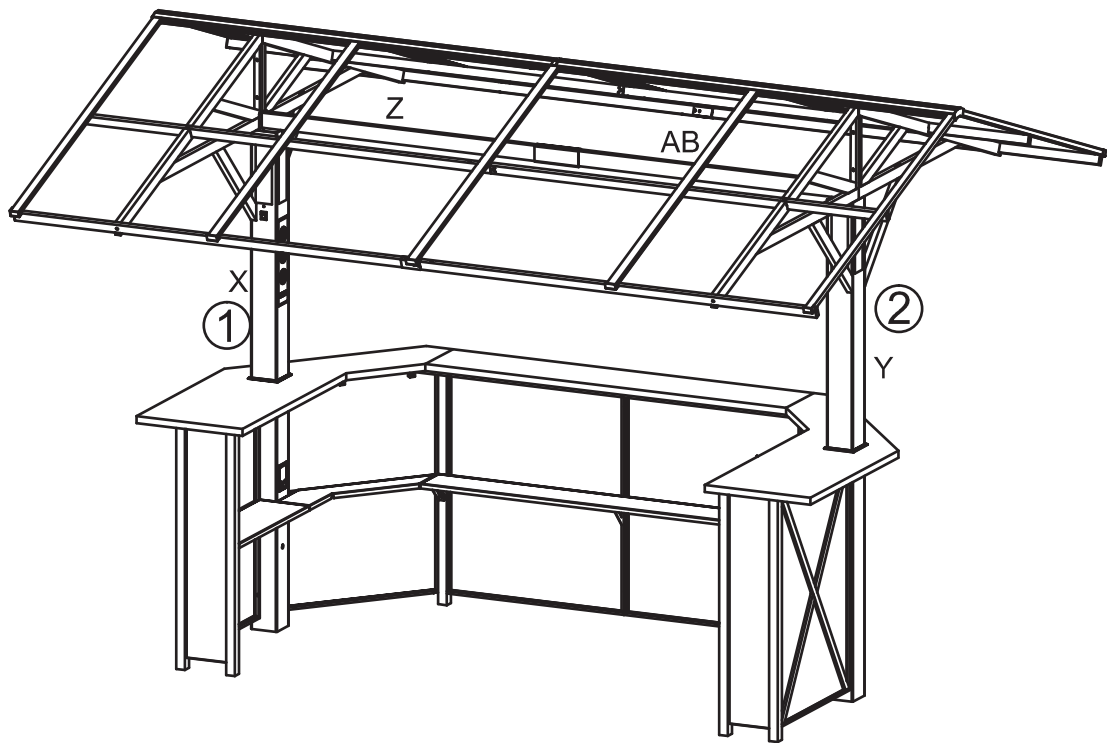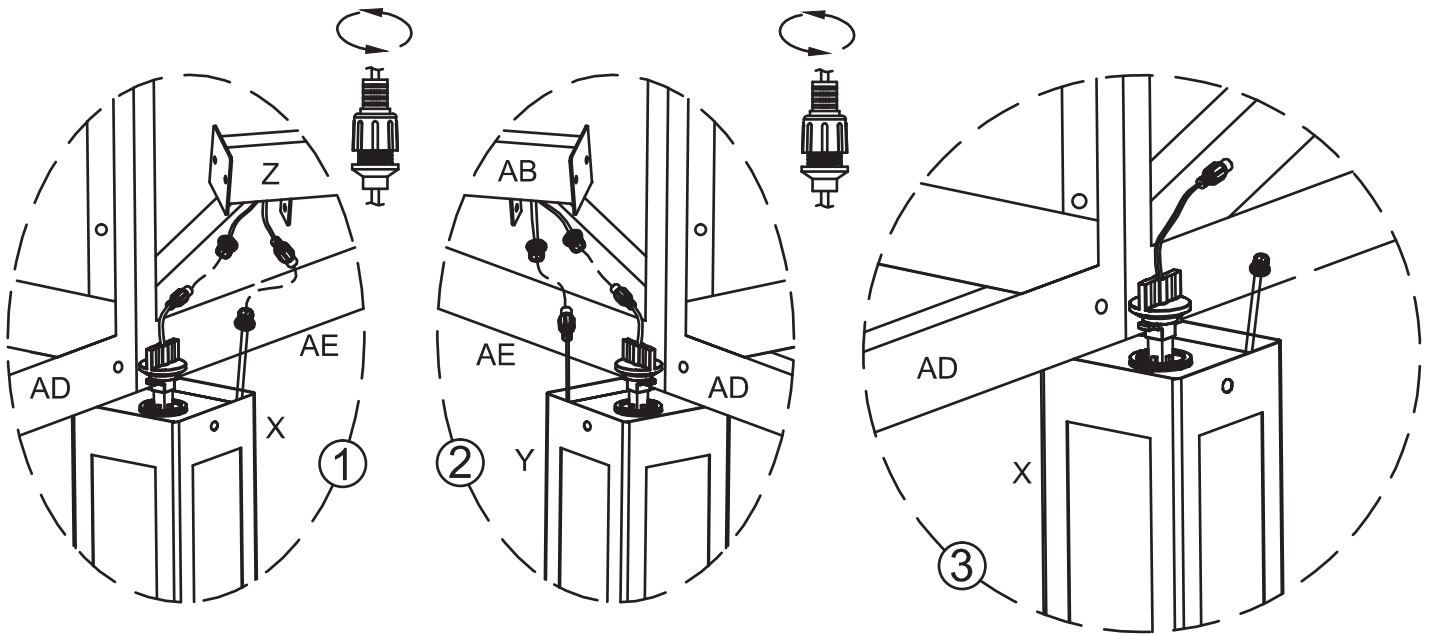

Assembly Instructions

Instruction of LED

  3. Replace New LED lights and tighten in clockwise.
Connect all the wires.

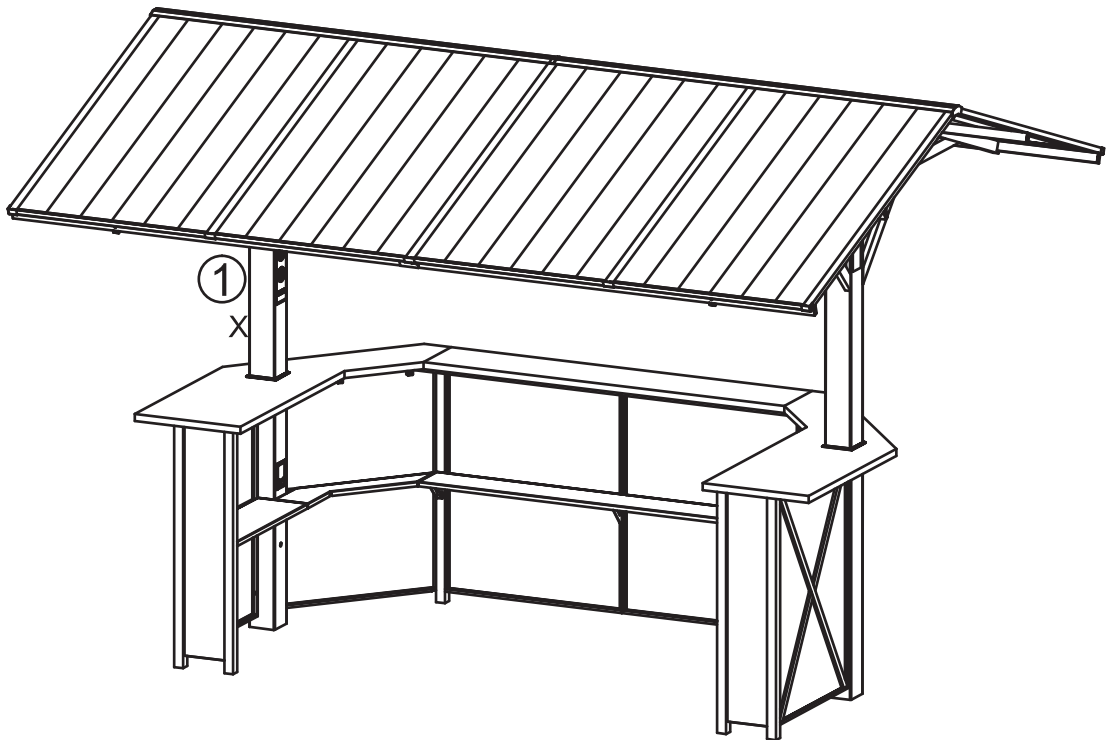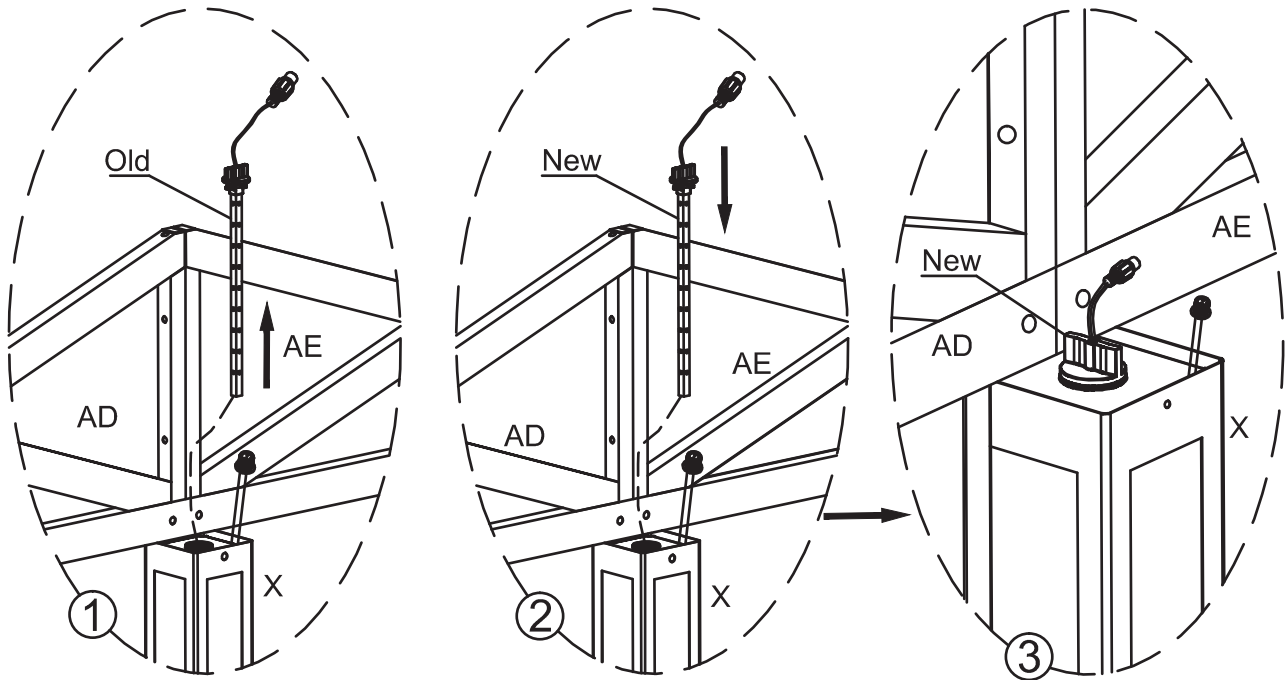




Assembly Instructions

Instruction of Adujust Marble

Disconnect Bolt (BB), Insert Bolt (B) into Side Panel (F) and washer(MM) with Table Top (U).



   MM x 10

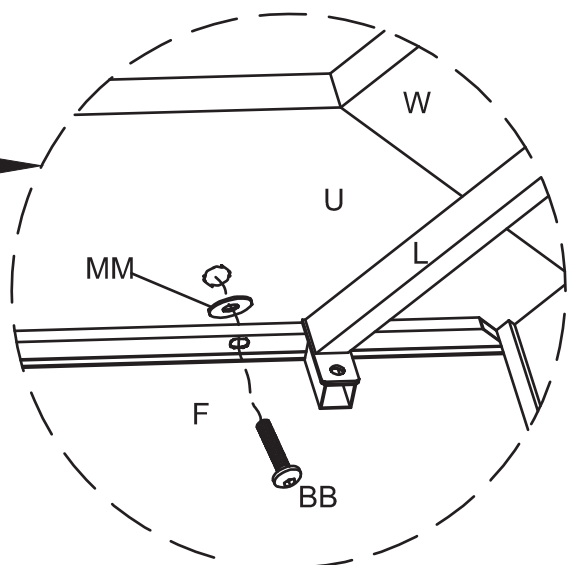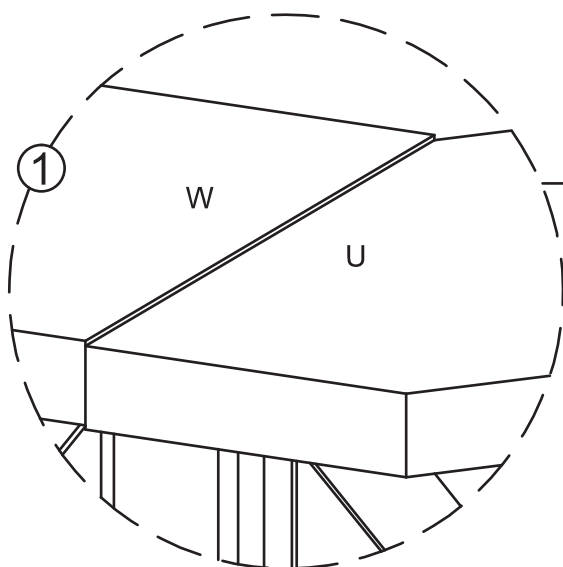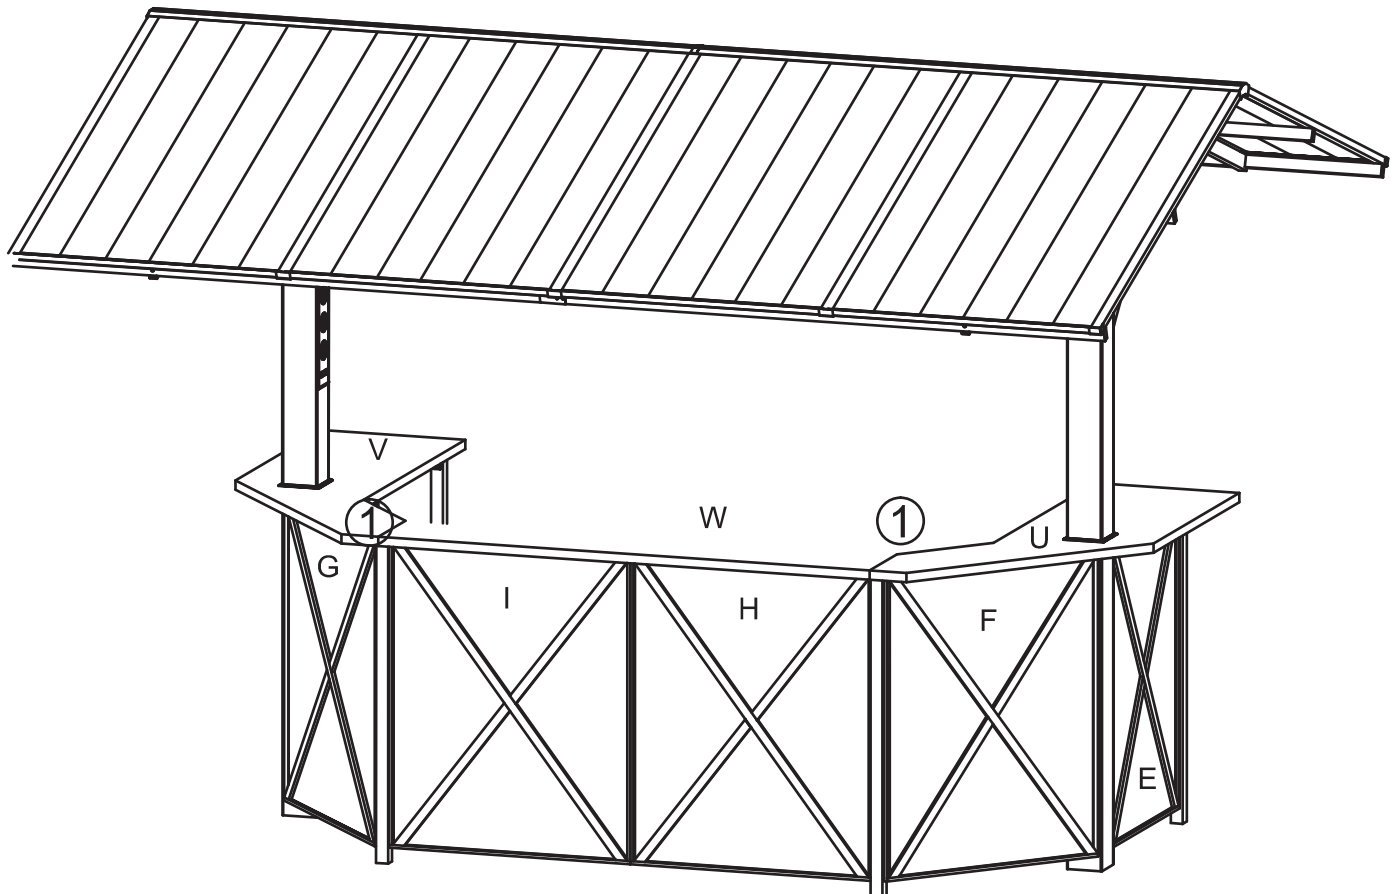

Solutions to Common Speaker

Phenomenon Problems	Solutions
Several unsuccessful connection attempts	<ol style="list-style-type: none"> 1. Ensure the speakers is in standby mode and turn off connection with all Bluetooth devices. 2. Or restart.
Volume too low or sound distorted	<ol style="list-style-type: none"> 1. Or reboot change to Turn off the power for 10 seconds. 2. Or restart.
Discontinuous sound for music playing	Move the speaker closer or remove obstacles between speaker and your music playing device. Make sure the distance in between umbrella and device within 10m.
Indicator light not work	<ol style="list-style-type: none"> 1. Check power supply voltage. 2. Or restart.

Important Notes

WARNING!

Permanent hearing loss may result from long-term exposure to sound at high volumes. Use as low a volume as possible. The volume level may vary based on conditions such as the device you are using, its reception and volume settings, and the environment. Please read below prior to using this product.

None of the components can be replaced or repaired by users. If any parts of your product require replacement for any reason please contact customer service center. Comply with all of the instructions.

Clean the product with a dry cloth.

Do not place the product in a humid environment.

Do not place the product in any liquid.

Do not install the product near a heat source, such as radiator, heater, furnace, or other heating equipment.

Remove batteries when not in use for extended periods of time.

Do not attempt to modify the product in any way.

Works with ANY device with Bluetooth connectivity



WATER
RESISTANT



NO TOOLS
REQUIRED



STEREO SOUND



MicroSD Remote Control Instruction

*****This Remote Control only use for MicroSD*****



0 - 9 Number:

Select the number of song from your music list

FCC ID: 2AC7TGAZEBO60W

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.



BOND VAST INDUSTRIAL LIMITED



No. 174 Ding Tan Pi Tan Vill Lutsao Hsiang, Chla Yi Hsien, Tai Wan, ROC

FAX: 886-5-3651 522

CUSTOMER SERVICE HOT LINE: 1-800-961-9838

SERVICE HOURS: MONDAY - FRIDAY 9:00AM - 5:00PM (PACIFIC TIME)

E-MAIL: CUSTOMERSERVICE@BONDVAST.COM

sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: customerservice@bondvast.com or Call toll-free: 1-800-961-9838

Made in / Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

sears.com

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com