

# DOREL ASIA

---


## GRANITE TOP KITCHEN CART

**Model No:**

DA6439-2G

**UPC CODE:**

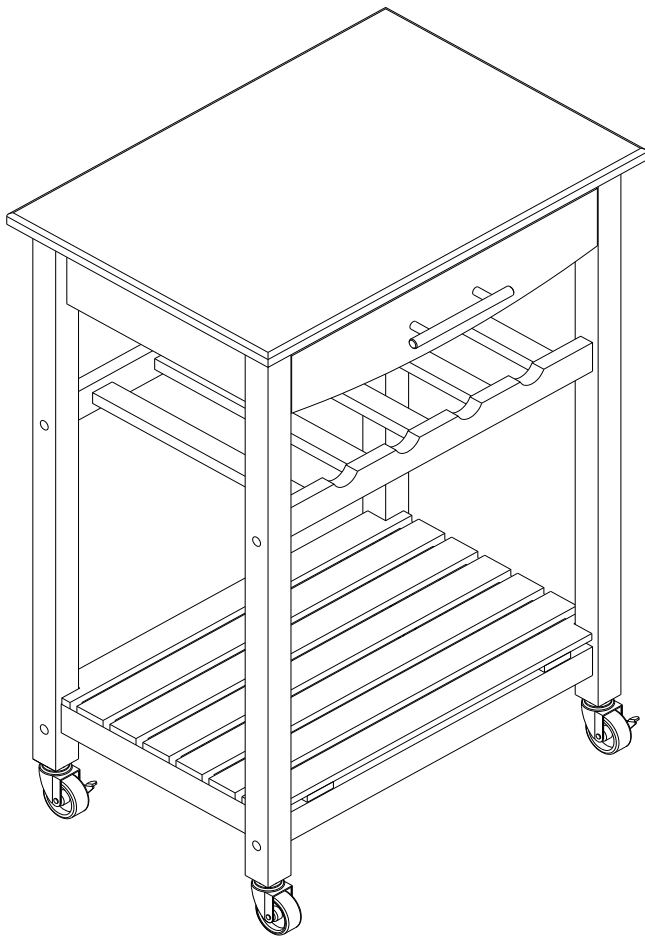 0-65857-16521-0



**NOTE:**

THIS INSTRUCTION BOOKLET  
CONTAINS **IMPORTANT** SAFETY  
INFORMATION. PLEASE READ AND  
KEEP FOR FUTURE REFERENCE.

**Lot number:**

(TAKEN FROM CARTON)

---

**Date of purchase:**

\_\_\_\_ / \_\_\_\_ / \_\_\_\_.

**DO NOT RETURN PRODUCT TO THE STORE.**

If a part is missing or damaged, contact our customer service  
department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980

E-Mail: [das@dorel.com](mailto:das@dorel.com)

Fax #: 514-353-7819

## CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!



**CALL 1-800-295-1980**

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

**Customer Service Department No. 413  
12345 Albert-Hudon Boulevard, Suite 100  
Montreal, Quebec  
Canada H1G 3L1**

**E-MAIL: [das@dorel.com](mailto:das@dorel.com)**

## NOTE

- \* Ensure that all parts and components are located before beginning assembly.
- \* Assemble on a soft surface to prevent damage to the product finish.
- \* DO NOT use the unit if it is damaged or broken.
- \* DO NOT use power tools.
- \* Caution: Adult assembly required.
- \* Assembly will require 2 people.
- \* Estimated assembly time: 30 minutes.
- \* Phillips head screwdriver (not provided) is required for assembly.



## WARNING

- \* DO NOT use the kitchen cart as a seating surface.
- \* DO NOT place any type of electrical appliance on the unit.
- \* DO NOT place any pots or pans containing hot liquids on the unit.
- \* DO NOT place any item on the top panel weighing more than 30 lbs.
- \* DO NOT place any item on the kitchen cart with dimensions exceeding those of the top panel.
- \* Before moving the kitchen cart remove all products off the top panel and make sure the caster wheels are in the unlocked position.
- \* To prevent damage to the caster wheels, gently lift the kitchen cart when sliding it over raised edges on the floor.
- \* After placing the kitchen cart in the desired location, lock the caster wheels to prevent movement.

## CARE AND CLEANING

Dust regularly with a soft, lint-free cloth to prevent soil build-up. A damp cloth may be used occasionally to clean surface. Dry immediately. Do not use any abrasives that may damage finish. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

## MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

## LIMITED WARRANTY

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

 











**WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.**

# GRANITE TOP KITCHEN CART

## DA6439-2G
















### HARDWARE LIST

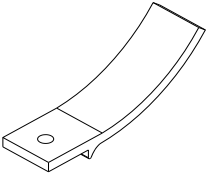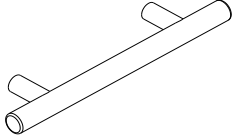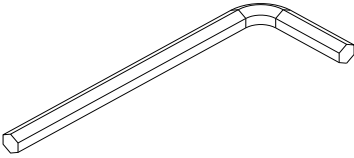       1	 Ø6 x 50mm HEX SOCKET HEAD BOLT 12 PCS	2	 Ø10 x 13mm BARREL NUT 12 PCS
3	 Ø5.8 x 30mm WOOD DOWEL 8 PCS	4	 Ø6 x 20mm HEX SOCKET HEAD BOLT 3 PCS
5	 Ø4 x 25mm SCREW 8 PCS	6	 PLASTIC DRAWER STOPPER 1 PC
7	 Ø4 x 12mm SCREW 1 PC	8	 HANDLE 1 PC
9	 Ø4 x 20mm BOLT 2 PCS	10	 ALLEN KEY 1 PC

# GRANITE TOP KITCHEN CART
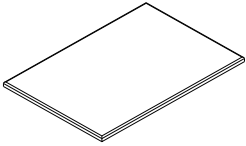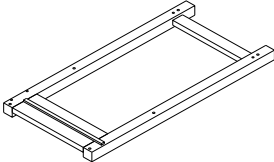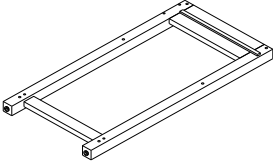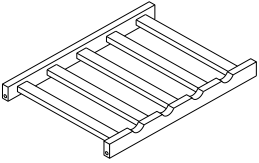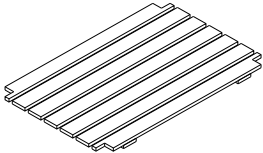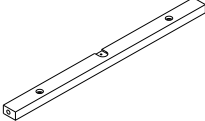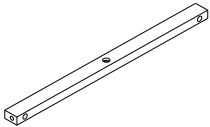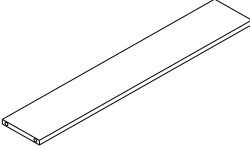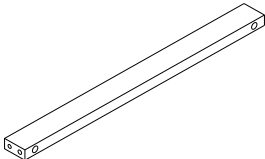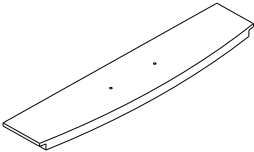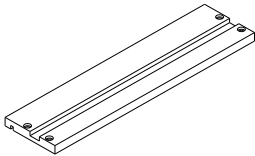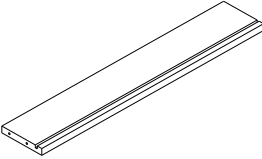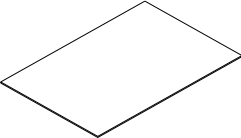               
## DA6439-2G

### PARTS LIST

<b>A</b> 	<b>B</b> 	<b>C</b> 
<b>GRANITE TOP PANEL</b> 1 PC	<b>LEFT FRAME</b> 1 PC	<b>RIGHT FRAME</b> 1 PC
<b>D</b> 	<b>E</b> 	<b>F</b> 
<b>WINE RACK</b> 1 PC	<b>BOTTOM PANEL</b> 1 PC	<b>TOP FRONT RAIL</b> 1 PC
<b>G</b> 	<b>H</b> 	<b>I</b> 
<b>TOP BACK RAIL</b> 1 PC	<b>BACK PANEL</b> 1 PC	<b>BOTTOM RAIL</b> 2 PCS
<b>J</b> 	<b>K</b> 	<b>L</b> 
<b>DRAWER FRONT PANEL</b> 1 PC	<b>DRAWER SIDE PANEL</b> 2 PCS	<b>DRAWER BACK PANEL</b> 1 PC
<b>M</b> 	<b>N</b> 	<b>O</b> 
<b>DRAWER BOTTOM PANEL</b> 1 PC	<b>CASTER</b> 2 PCS	<b>LOCK CASTER</b> 2 PCS

# GRANITE TOP KITCHEN CART

## DA6439-2G

### STEP 1

Attach plastic drawer stopper (6) to top front rail (F) with screw (7) using a Phillips screwdriver (not included).

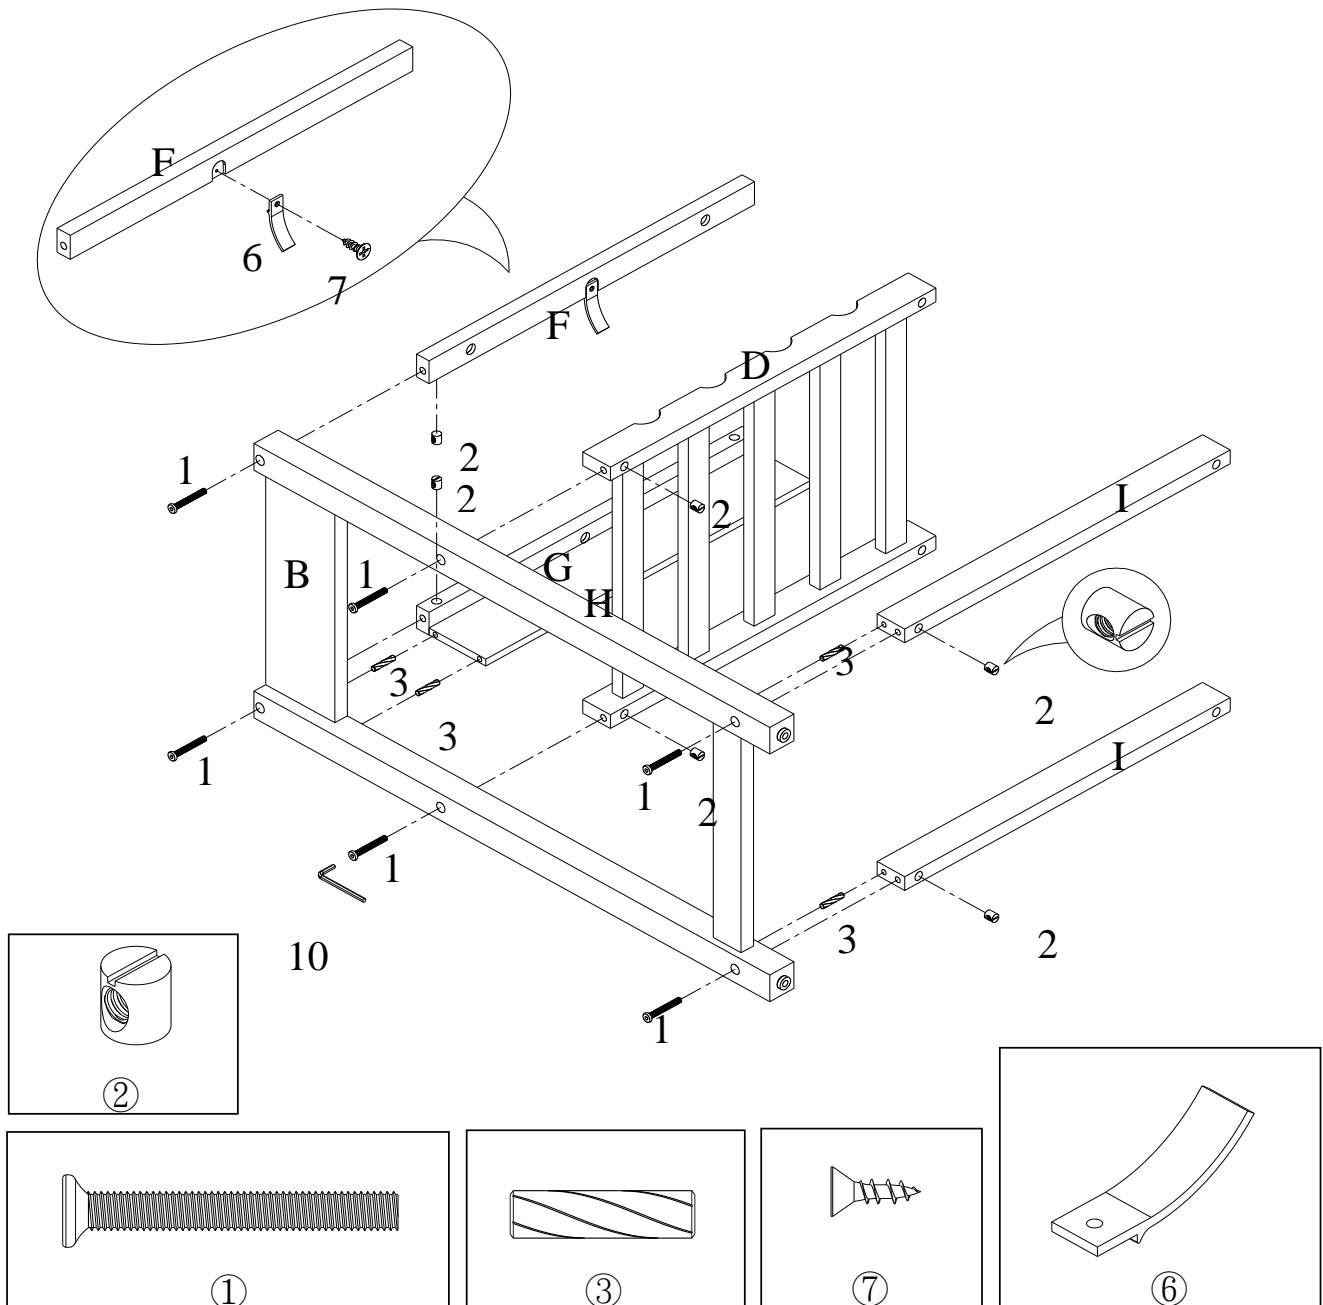 
Attach top front rail (F) and top back rail (G) to the left frame (B) with hex socket head bolts (1) and barrel nuts (2). Use Allen key (10) to tighten bolts.

Attach wine rack (D) to the left frame (B) with hex socket head bolts (1) and barrel nuts (2). Use Allen key (10) to tighten bolts.

Insert wood dowels (3) into the holes of bottom rails (I). Attach bottom rails (I) to the left frame (B) with hex socket head bolts (1) and barrel nuts (2). Use Allen key (10) to tighten the bolts.

Insert the wood dowels (3) into the back panel (H) and then attach the back panel (H) to the left frame (B).

NOTE : DO NOT fully tighten the bolts.







# GRANITE TOP KITCHEN CART

## DA6439-2G

### STEP 2

Repeat Step 1 to attach the top front rail (F), top back rail (G), wine rack (D), back panel (H) and bottom rails (I) to the right frame (C) with hex socket head bolts (1), barrel nuts (2) and wood dowels (3). Use Allen key (10) to tighten the bolts.

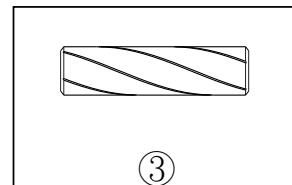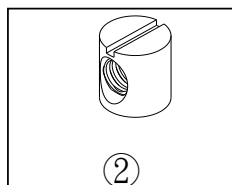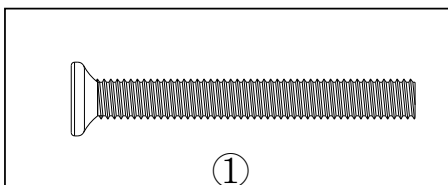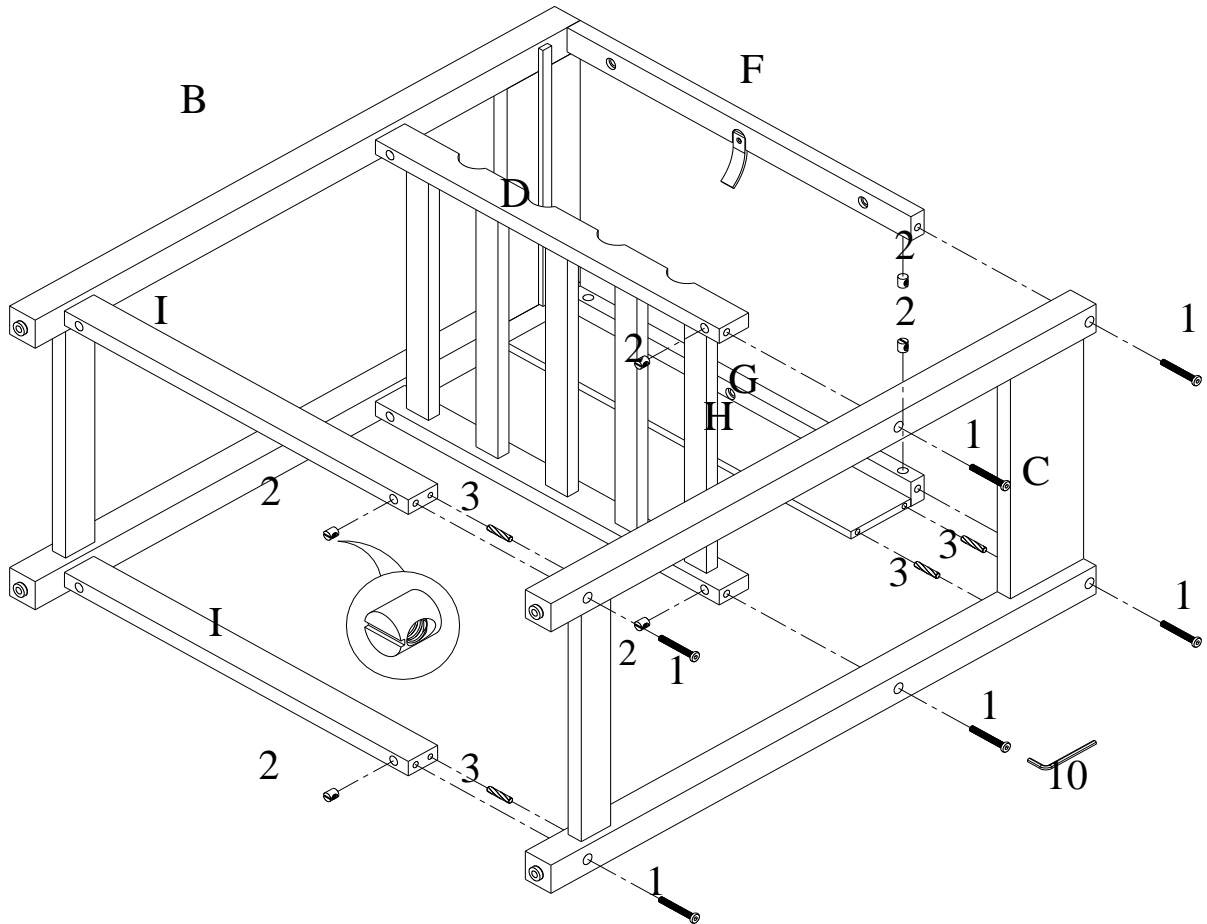    NOTE : DO NOT fully tighten the bolts.




# GRANITE TOP KITCHEN CART

## DA6439-2G

### STEP 3

Place the unit upside down on a clean, smooth surface.

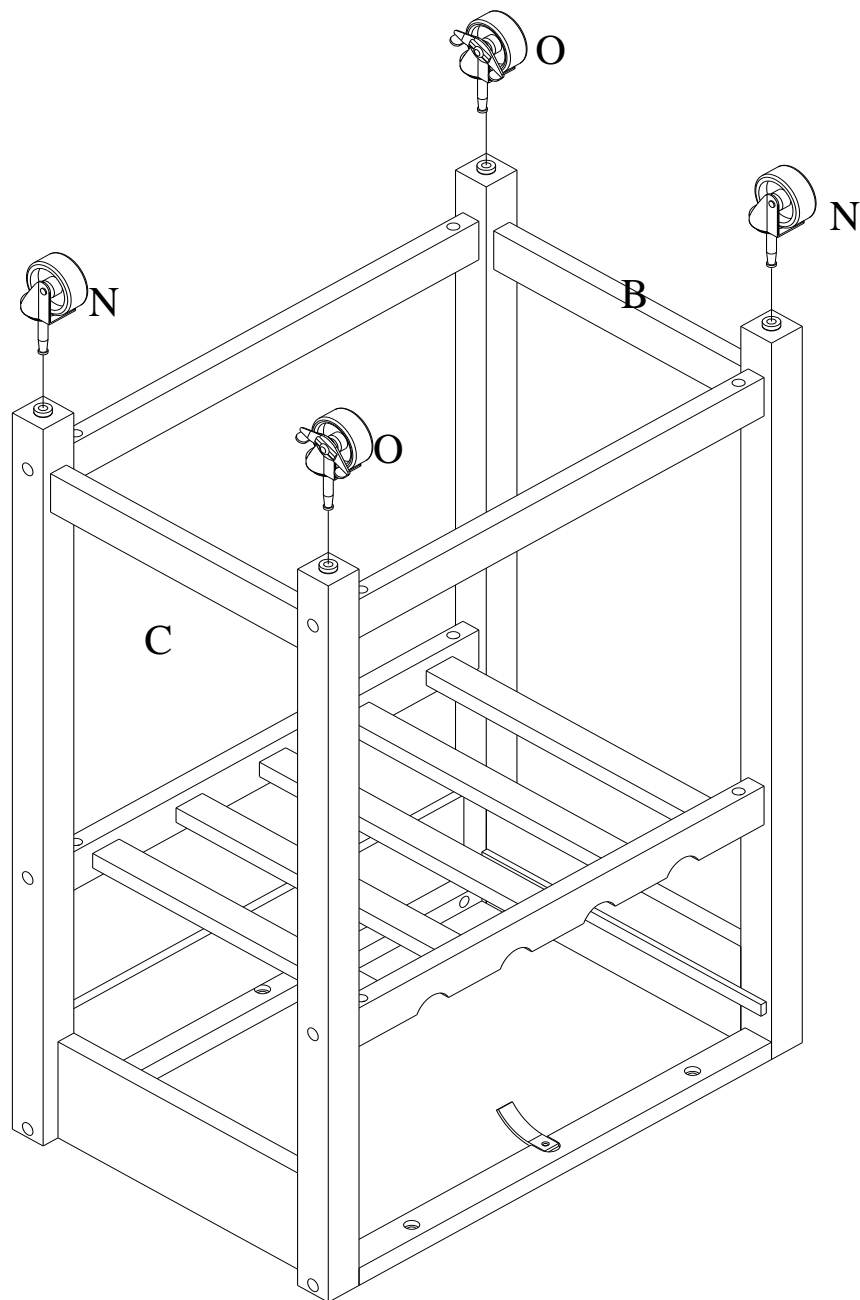 Attach casters (N) and lock casters (O) to the left frame (B) and the right frame (C) as shown.





# GRANITE TOP KITCHEN CART

## DA6439-2G

### STEP 4

Place the granite top panel (A) on a clean, smooth surface.

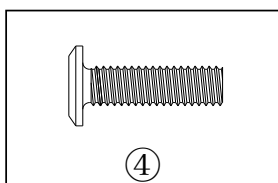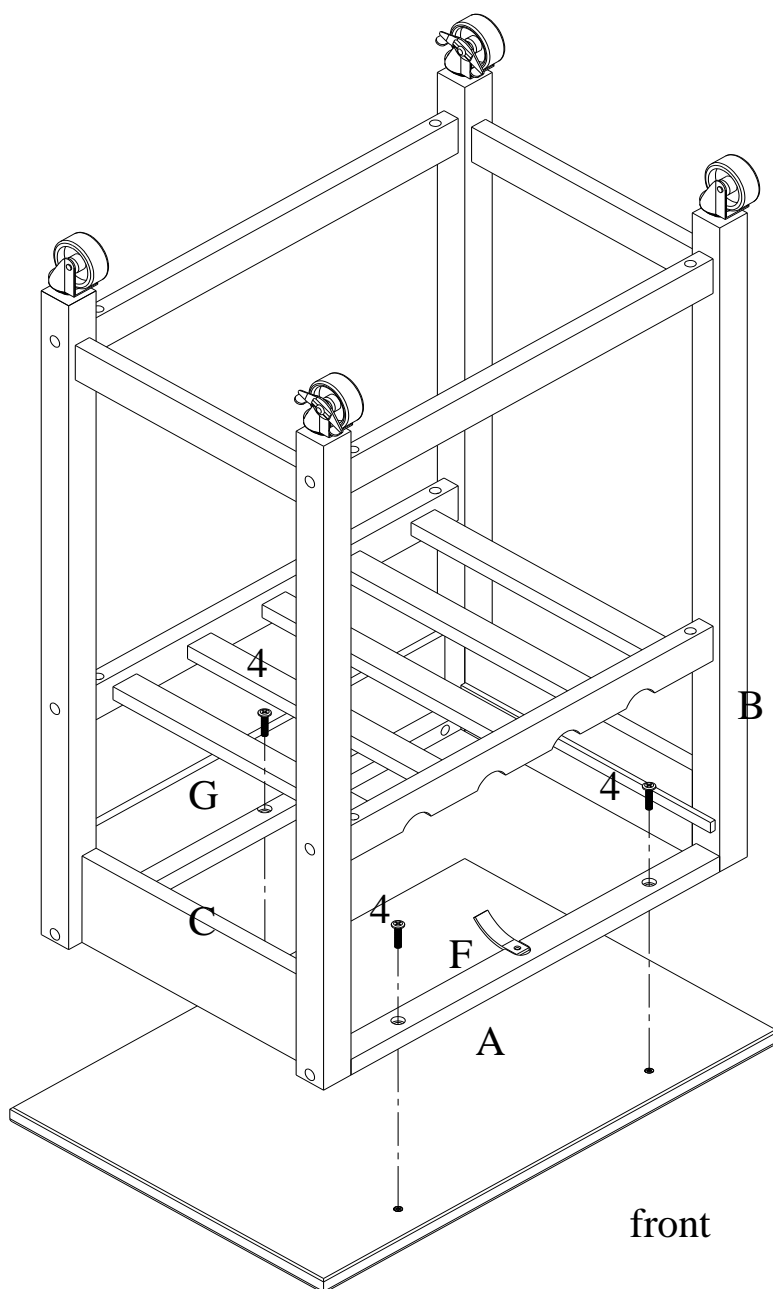  Attach the unit to the granite top panel (A) with hex socket head bolts (4). Use Allen Key (10) to tighten the bolts (4).





# GRANITE TOP KITCHEN CART

## DA6439-2G

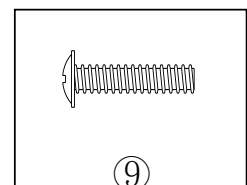 
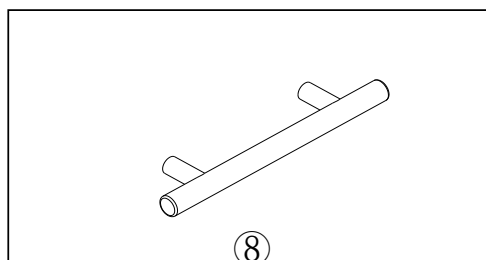 
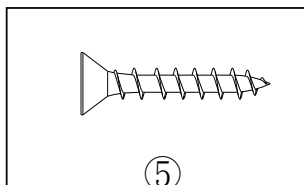 
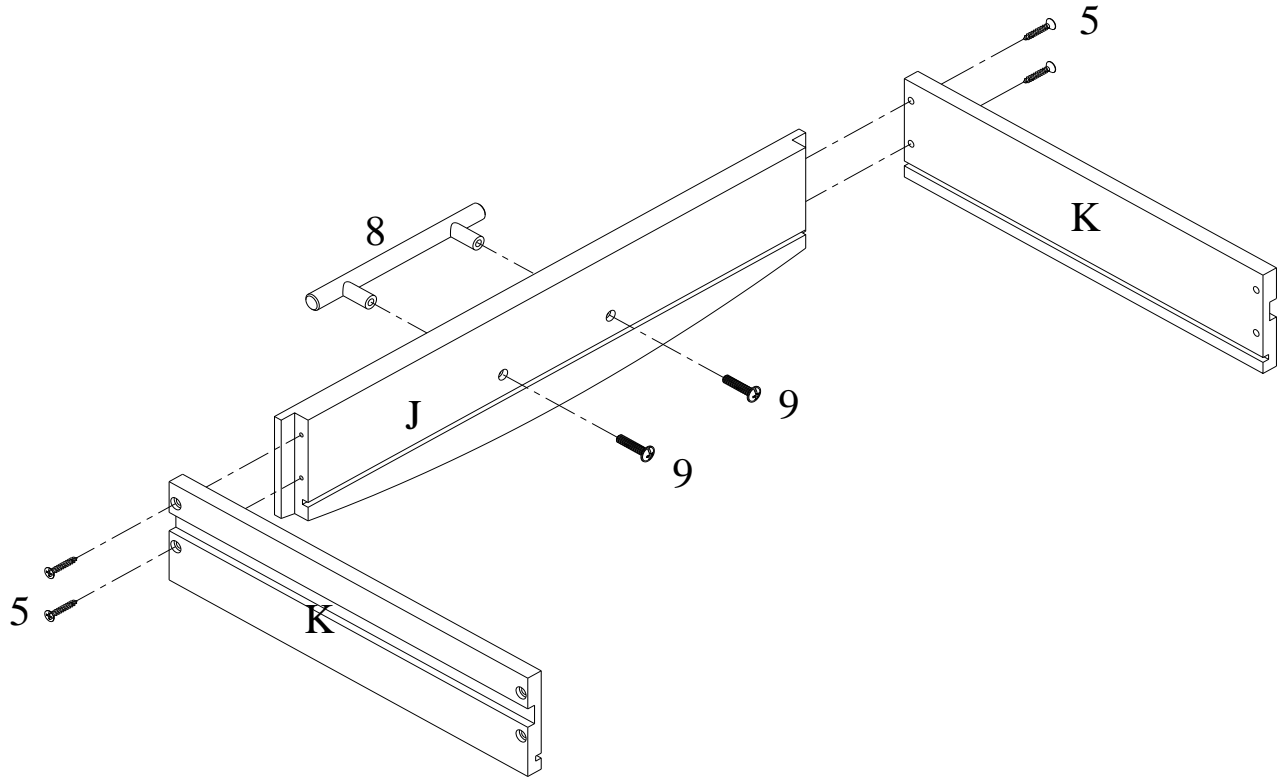 
### STEP 5

Attach the drawer side panels (K) to drawer front panel (J) with screws (5).

Attach the handle (8) to drawer front panel (J) with screws (9).

Use a Phillips head screwdriver (not included) to tighten them.

NOTE: Do not fully tighten the bolts.



# GRANITE TOP KITCHEN CART

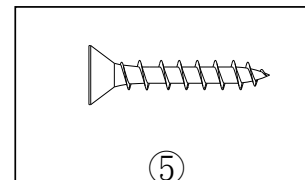 
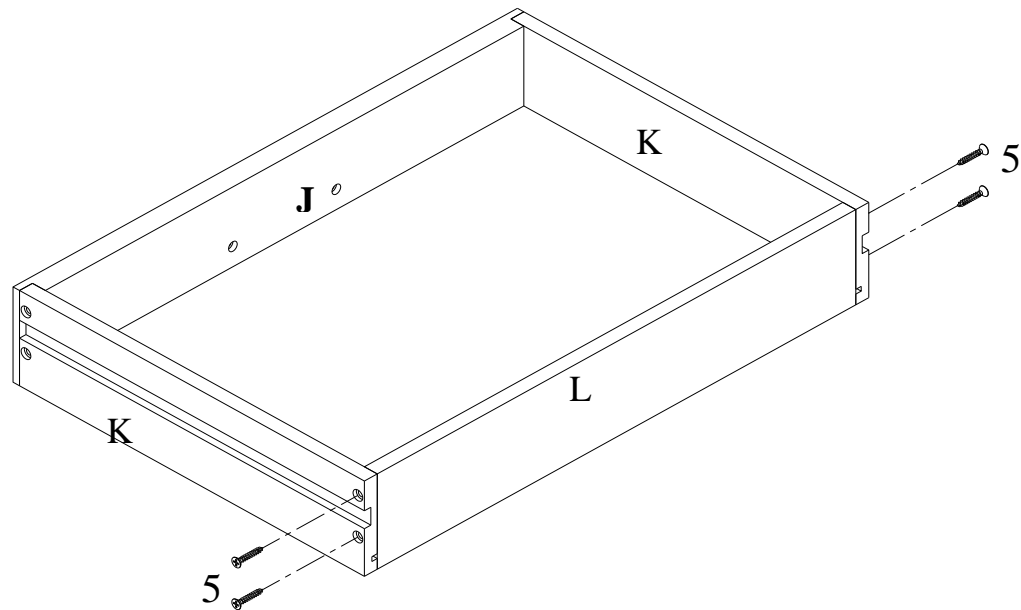 
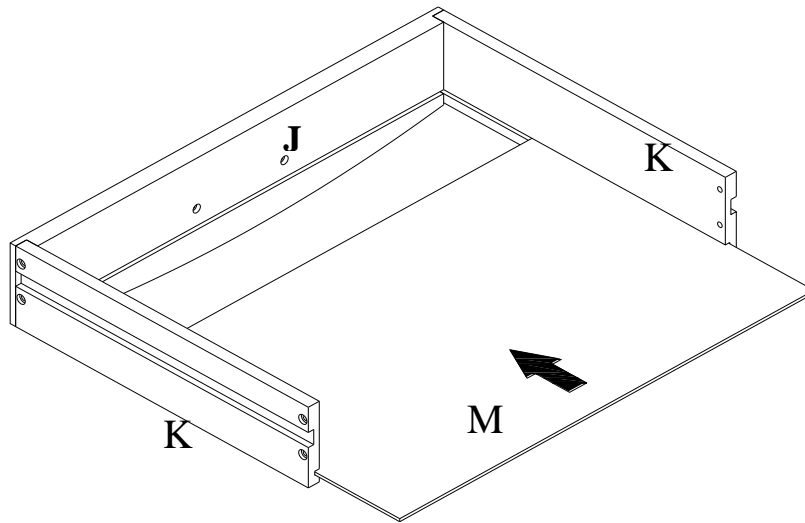 
## DA6439-2G

### STEP 6

Slide the drawer bottom panel (M) into the grooves of the drawer frame.

Attach drawer back panel (L) to the drawer side panels (K) with screws (5). Use a Phillips screwdriver (not included) to tighten them.

NOTE: Fully tighten all bolts and screws previously installed.




# GRANITE TOP KITCHEN CART

## DA6439-2G

### STEP 7

Turn the kitchen cart upright.

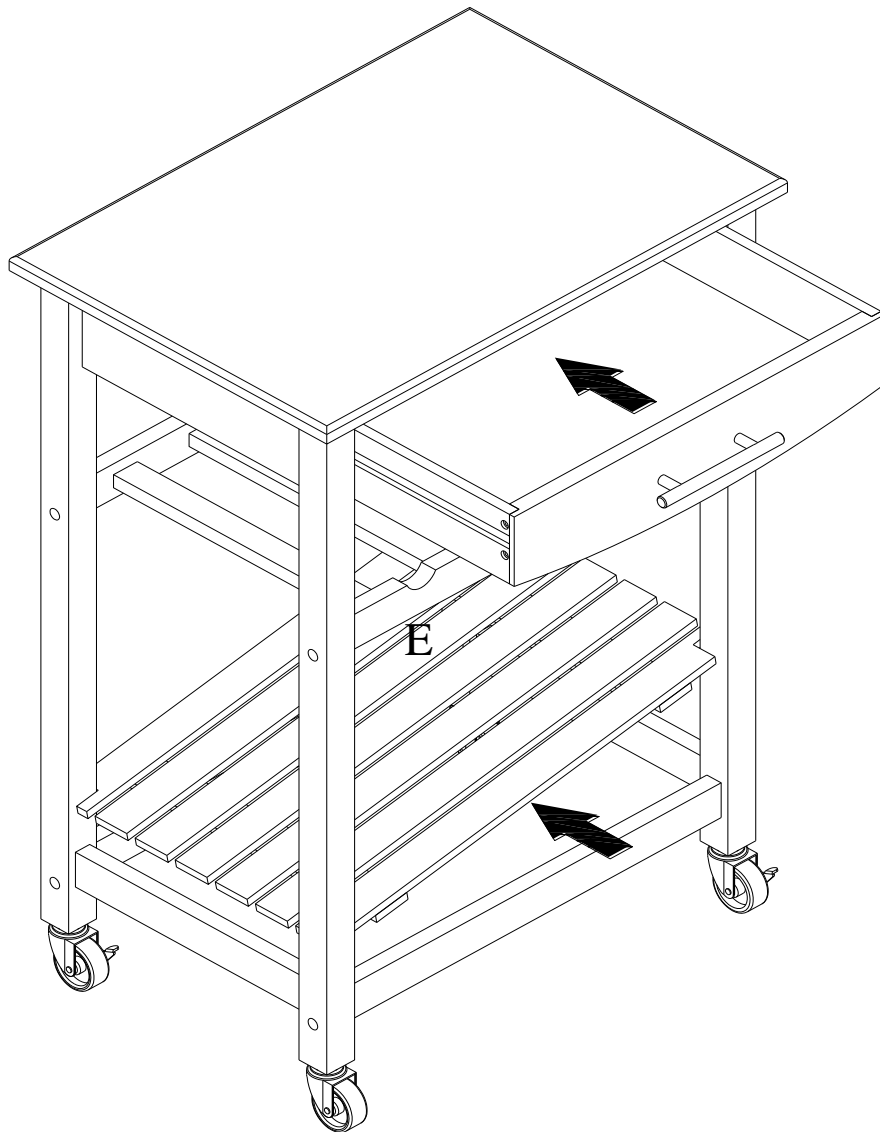 Insert the assembled drawer. Place the bottom panel (E) as shown.




# GRANITE TOP KITCHEN CART

## DA6439-2G



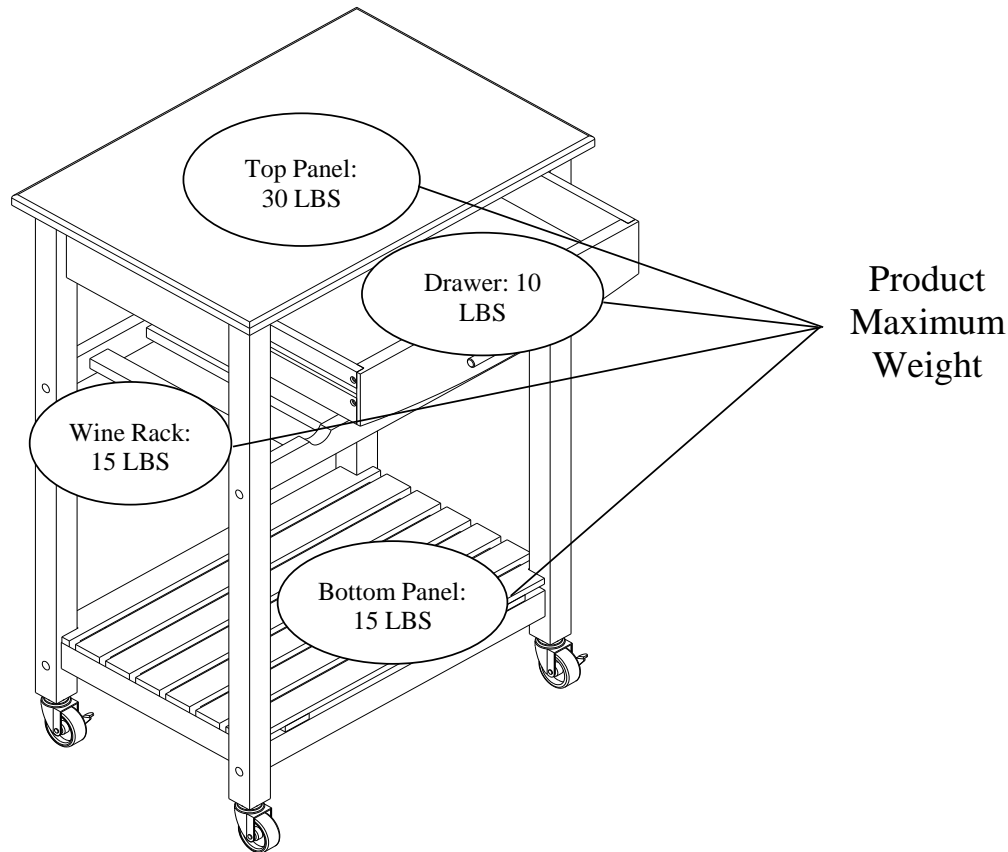 **CAUTION:** This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.



That's it ! You've finished assembling your kitchen cart.

### **DO NOT RETURN PRODUCT TO THE STORE.**

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980  
E-Mail: [das@dorel.com](mailto:das@dorel.com)  
Fax #: 514-353-7819

# Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980	Email: <a href="mailto:das@dorel.com">das@dorel.com</a>
Customer Service Fax Number 514-353-7819	

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:

(including area code)

Date & Place of Purchase:

Part(s) description and quantity (Please be sure to list model number or SKN number):